


KNIGHT OF FIRMAMENT
HP072



CP-ASSY-HP072#-A3-20211201


Installation Reminder

• Prepare tools:

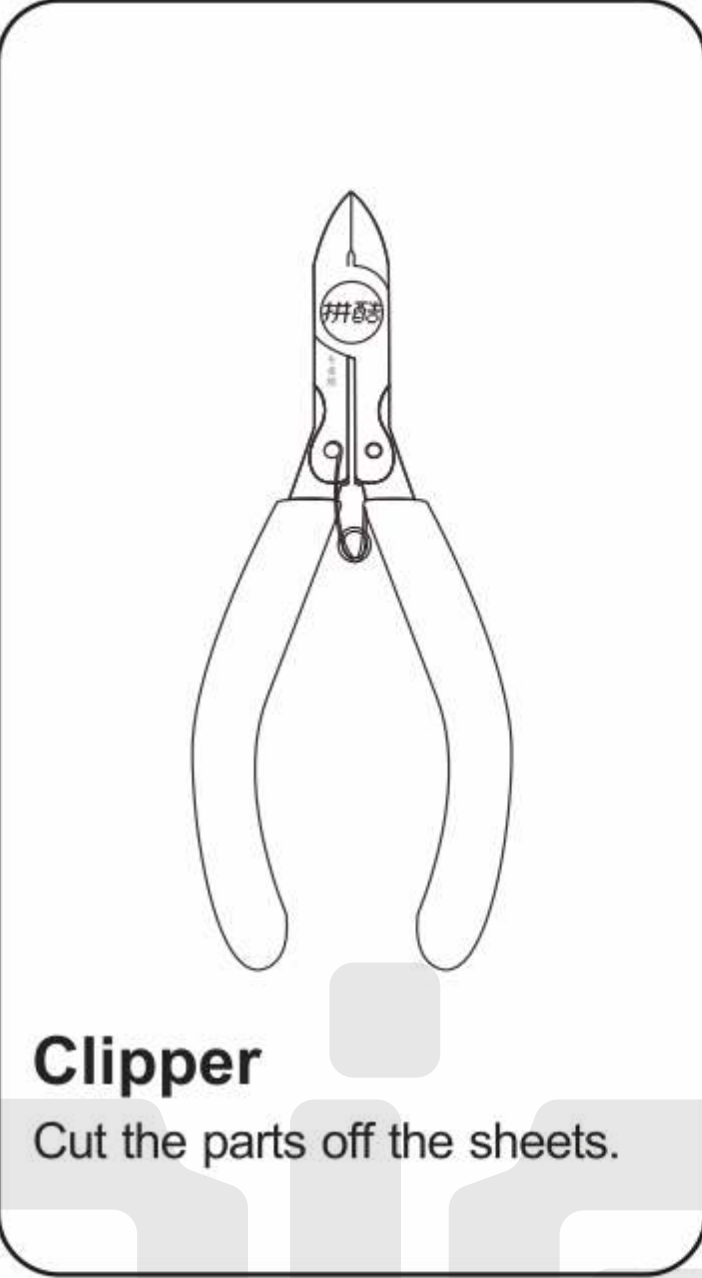

Clipper

Cut the parts off the sheets.

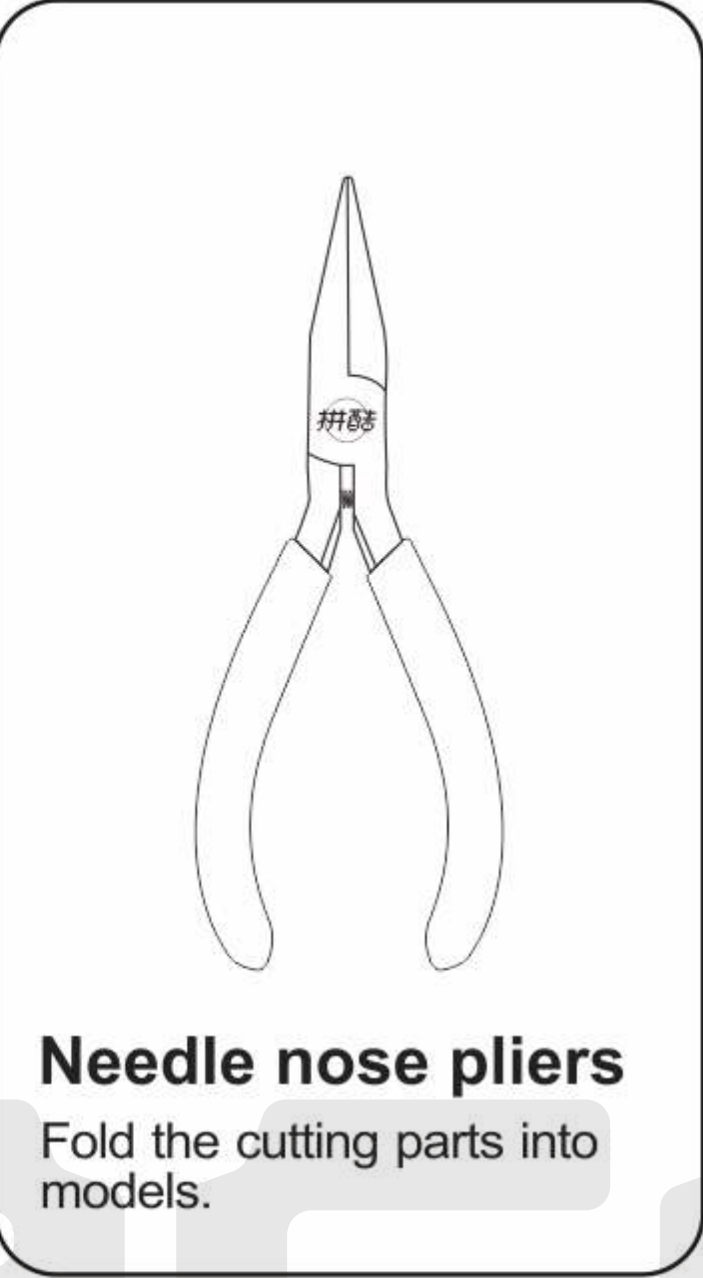

Needle nose pliers


Fold the cutting parts into models.

It is recommended to use piececool authentic assembly tools to build or fix the design. It is tailor made for the metal pieces and user friendly.

WARNING – Please handle metal sheets with care. The parts may have sharp edges that could cut or scratch skin. Keep away from children.


• Installation Method:

a. Remove the parts

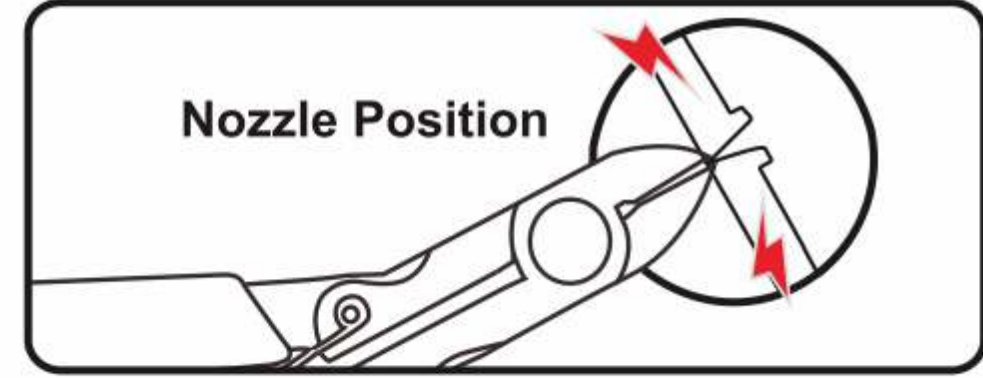


Please use the clipper to cut the nozzle position and remove the parts.

d. Retaining the parts

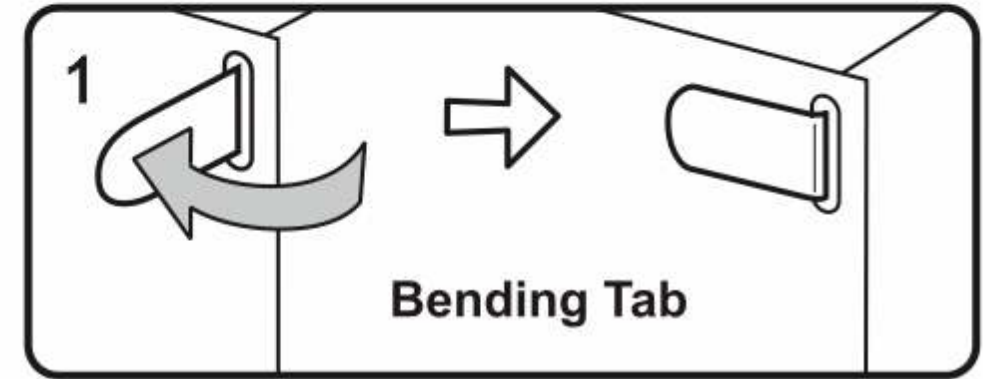


Insert the hole, bending tab with angle 90°

b. Identify the parts

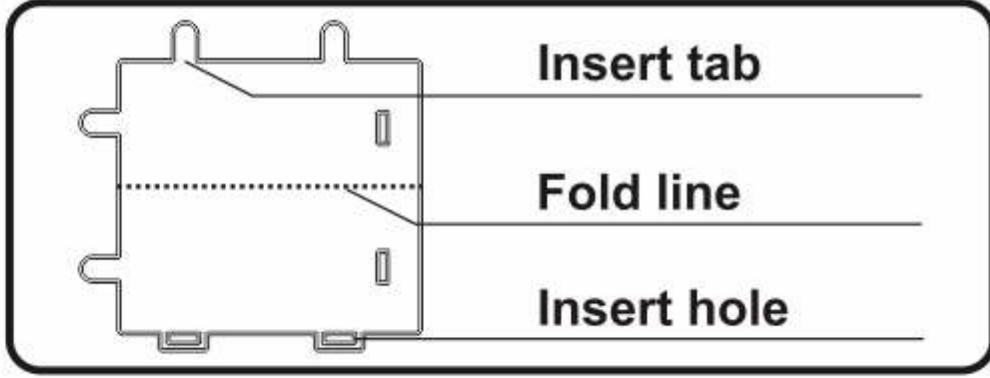

Identify the insert tab, fold line and the insert hole.

c. Folding the parts

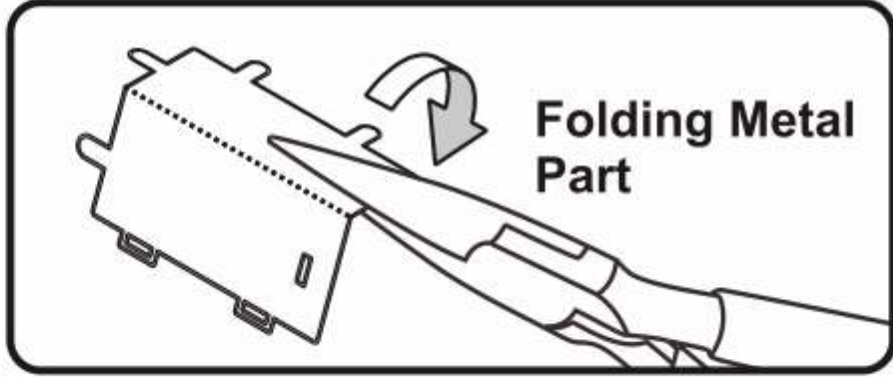

Please use the needle nose pliers to fold the cutting parts into models.

• Attention:


- E** Engraved / Color side
- NE** Non-engraved / Silver side
- !** Attention Point
- !** Keep the parts symmetrical

When cutting metal parts, please do not cut the “insert tab” as “nozzle position”. Only cut the parts of the current step when cutting the parts. Do not cut all the parts at one time to avoid loss.


When encountering the parts of the folding line, please pay attention to the front and back of the metal sheet and the direction of the folding. According to the direction indicated in the instruction, cut lightly and fold slowly. It is best to fold it once. Do not fold it repeatedly to avoid damage to the parts.

Assembly Guide



Step01

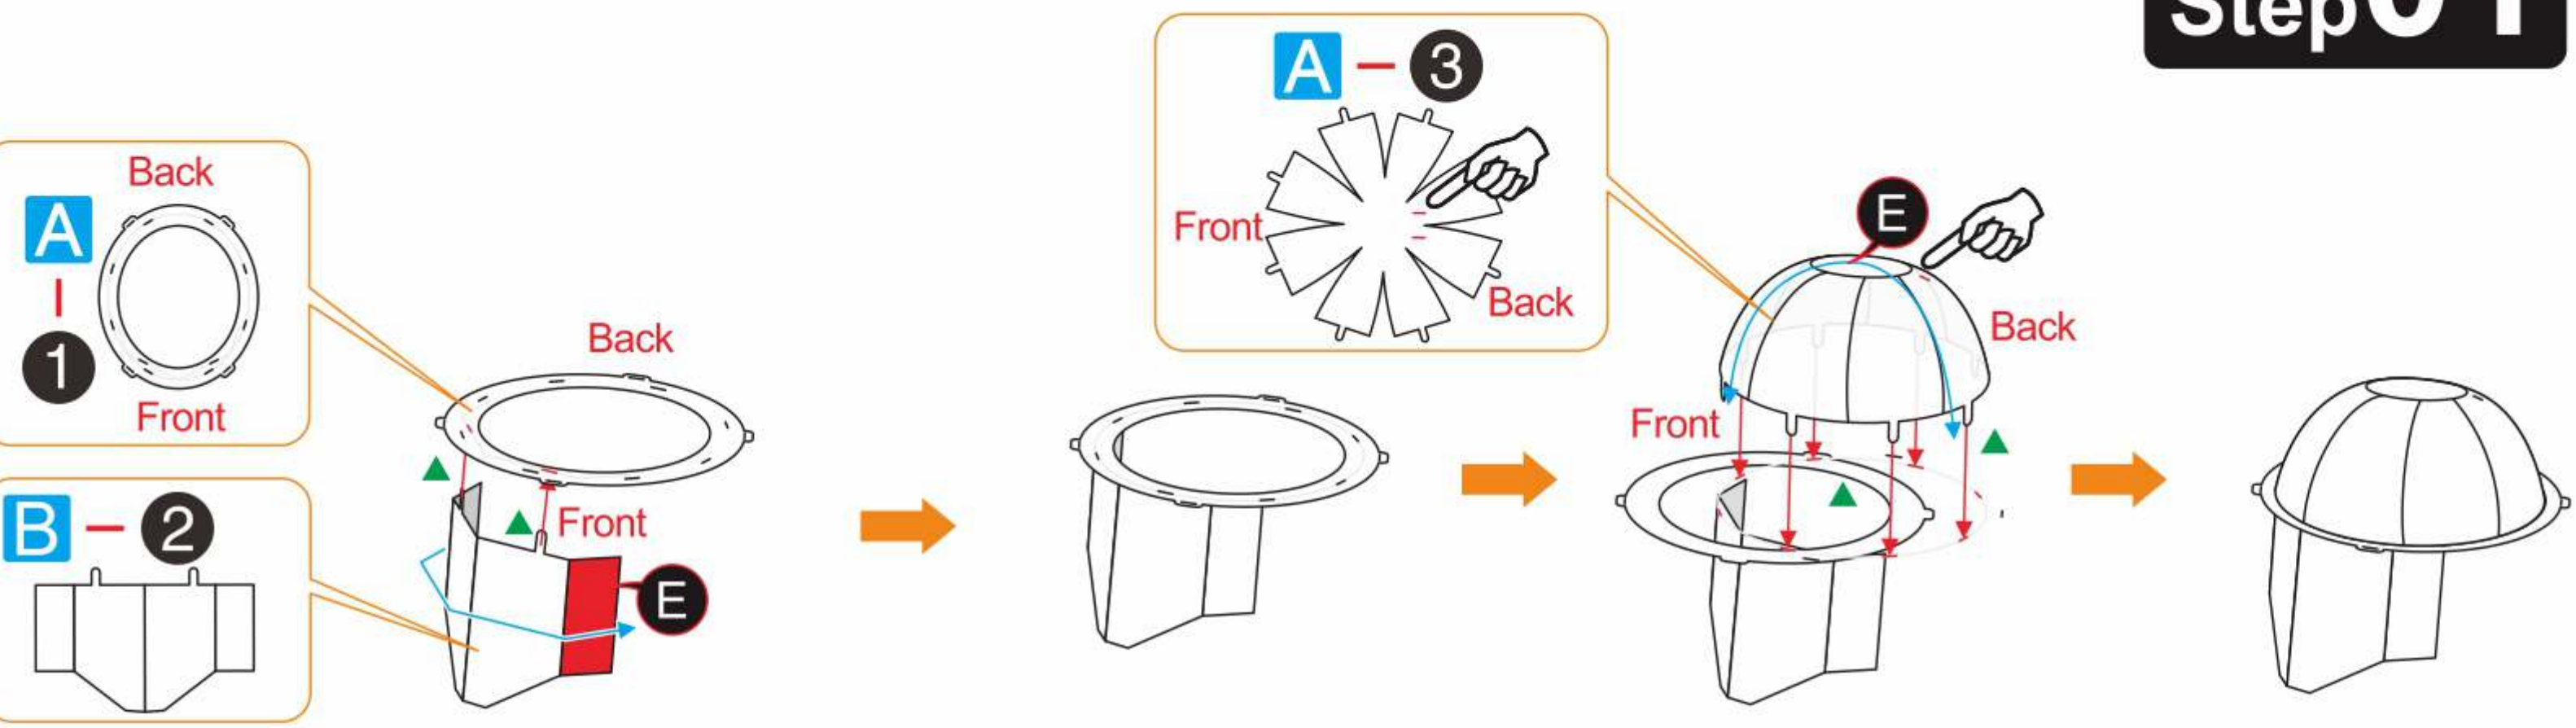


Step02

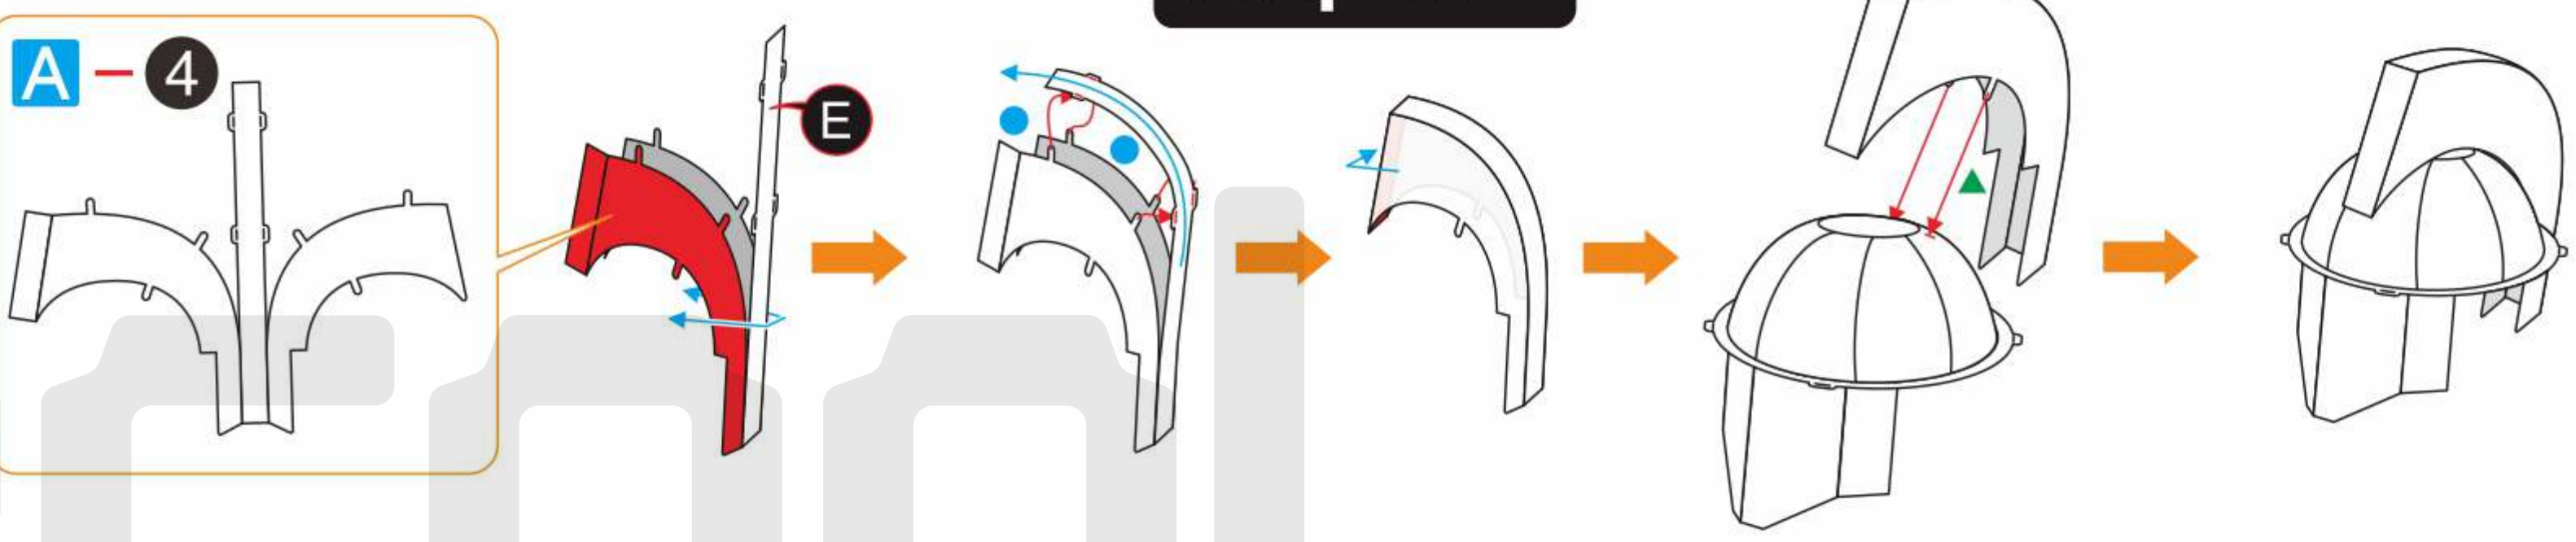


Step03

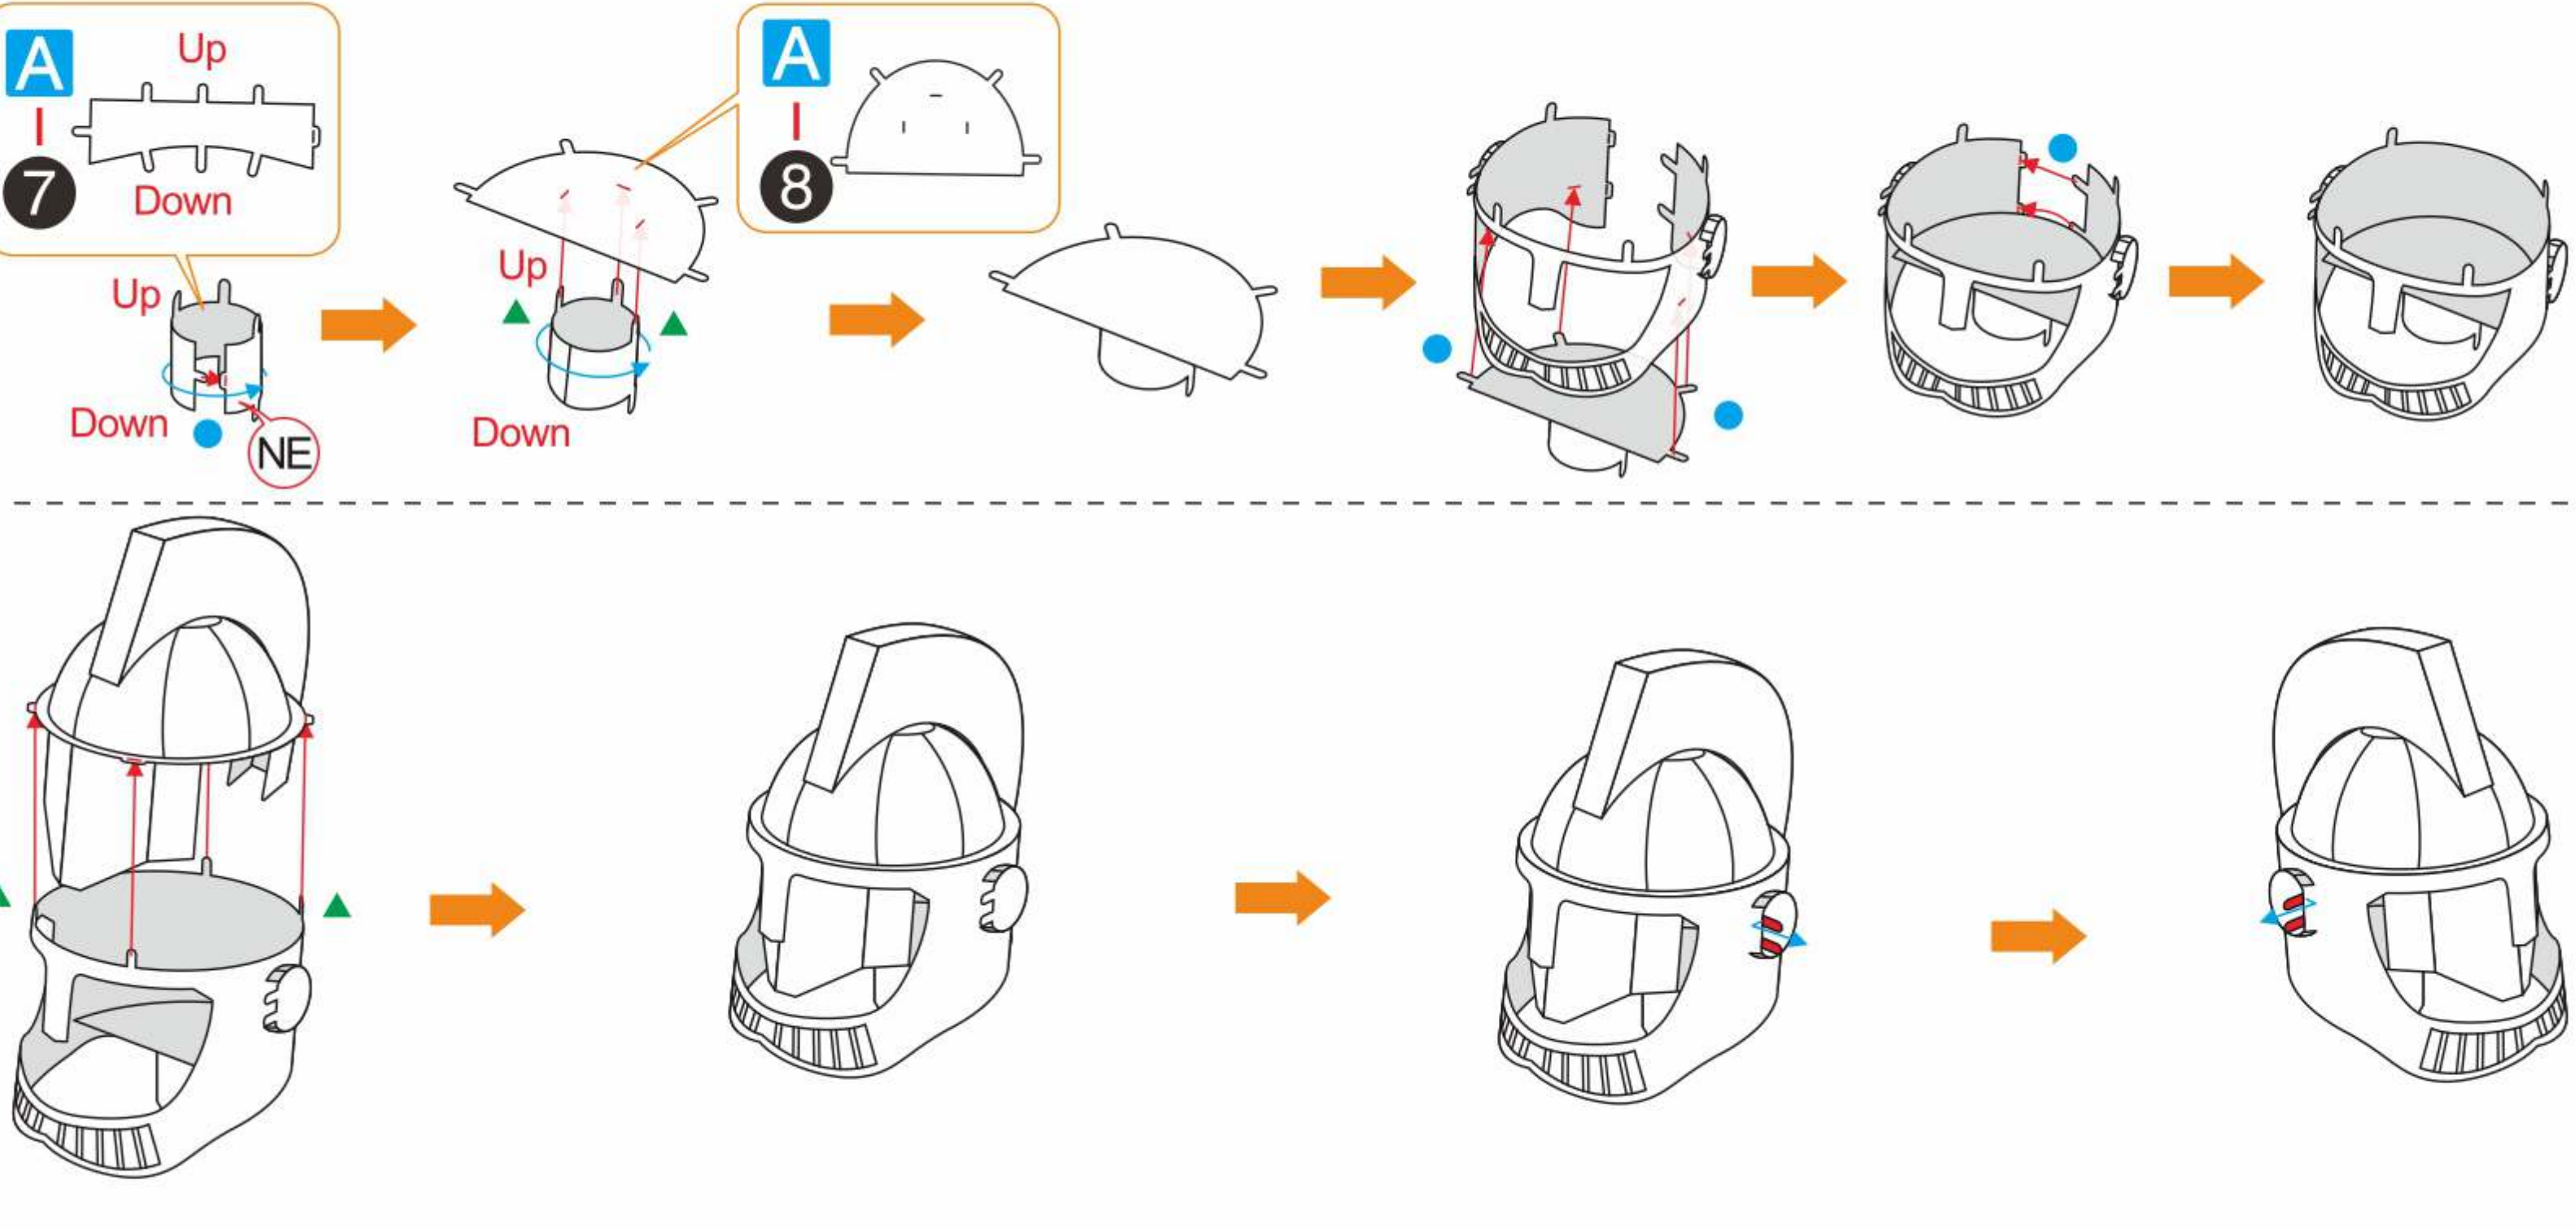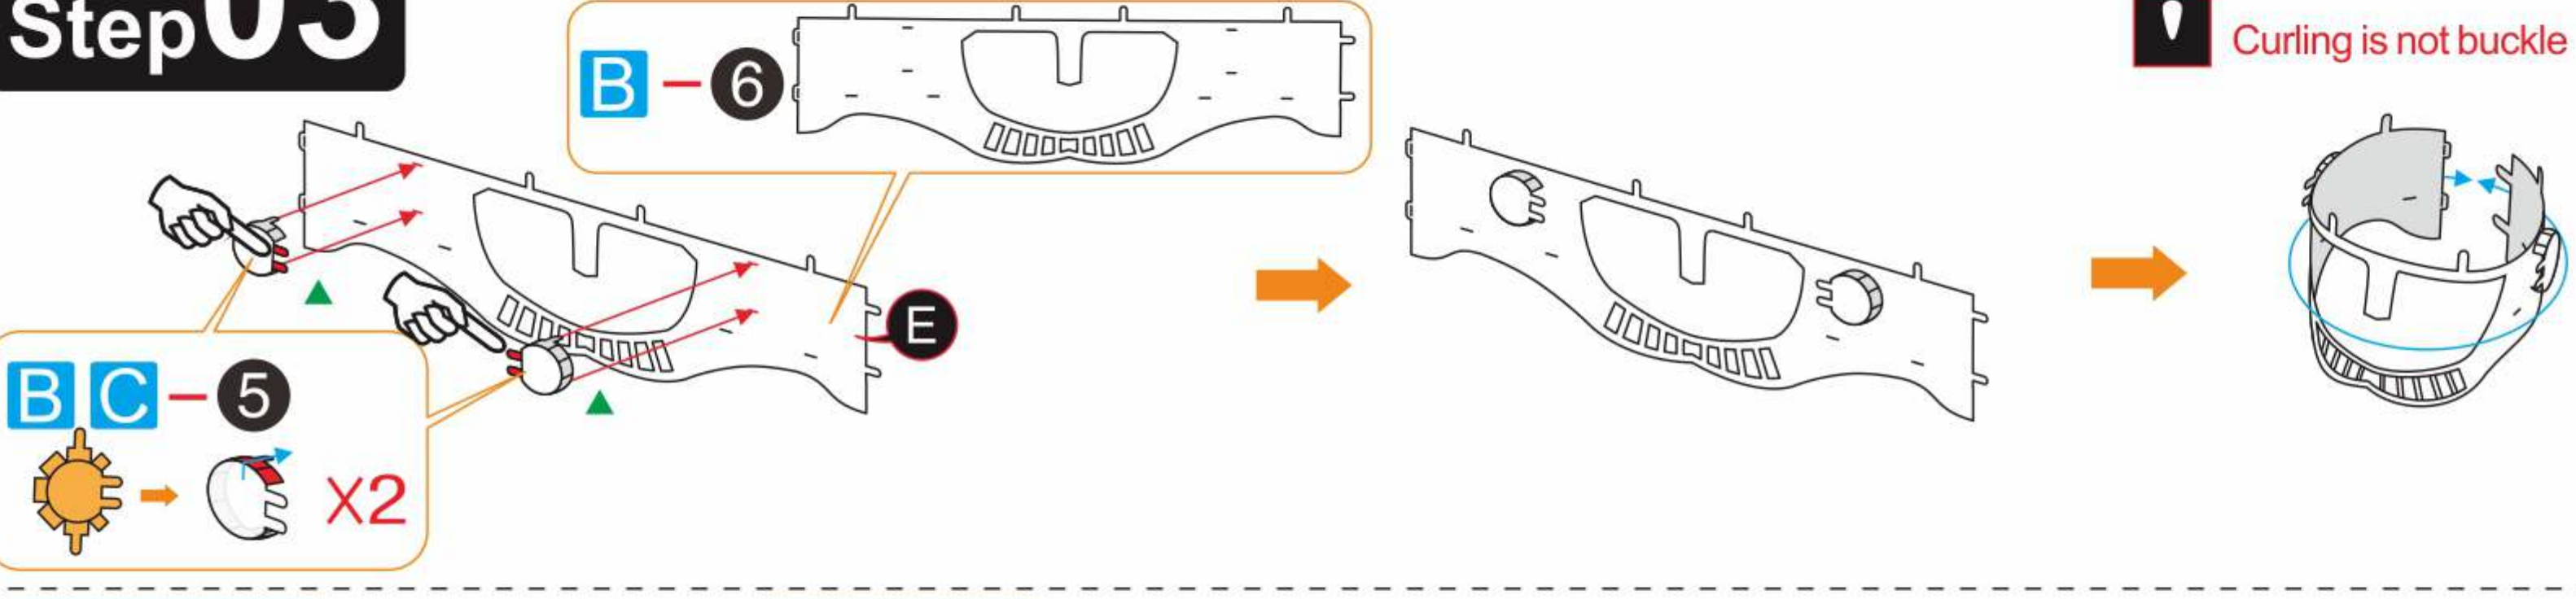


Step04

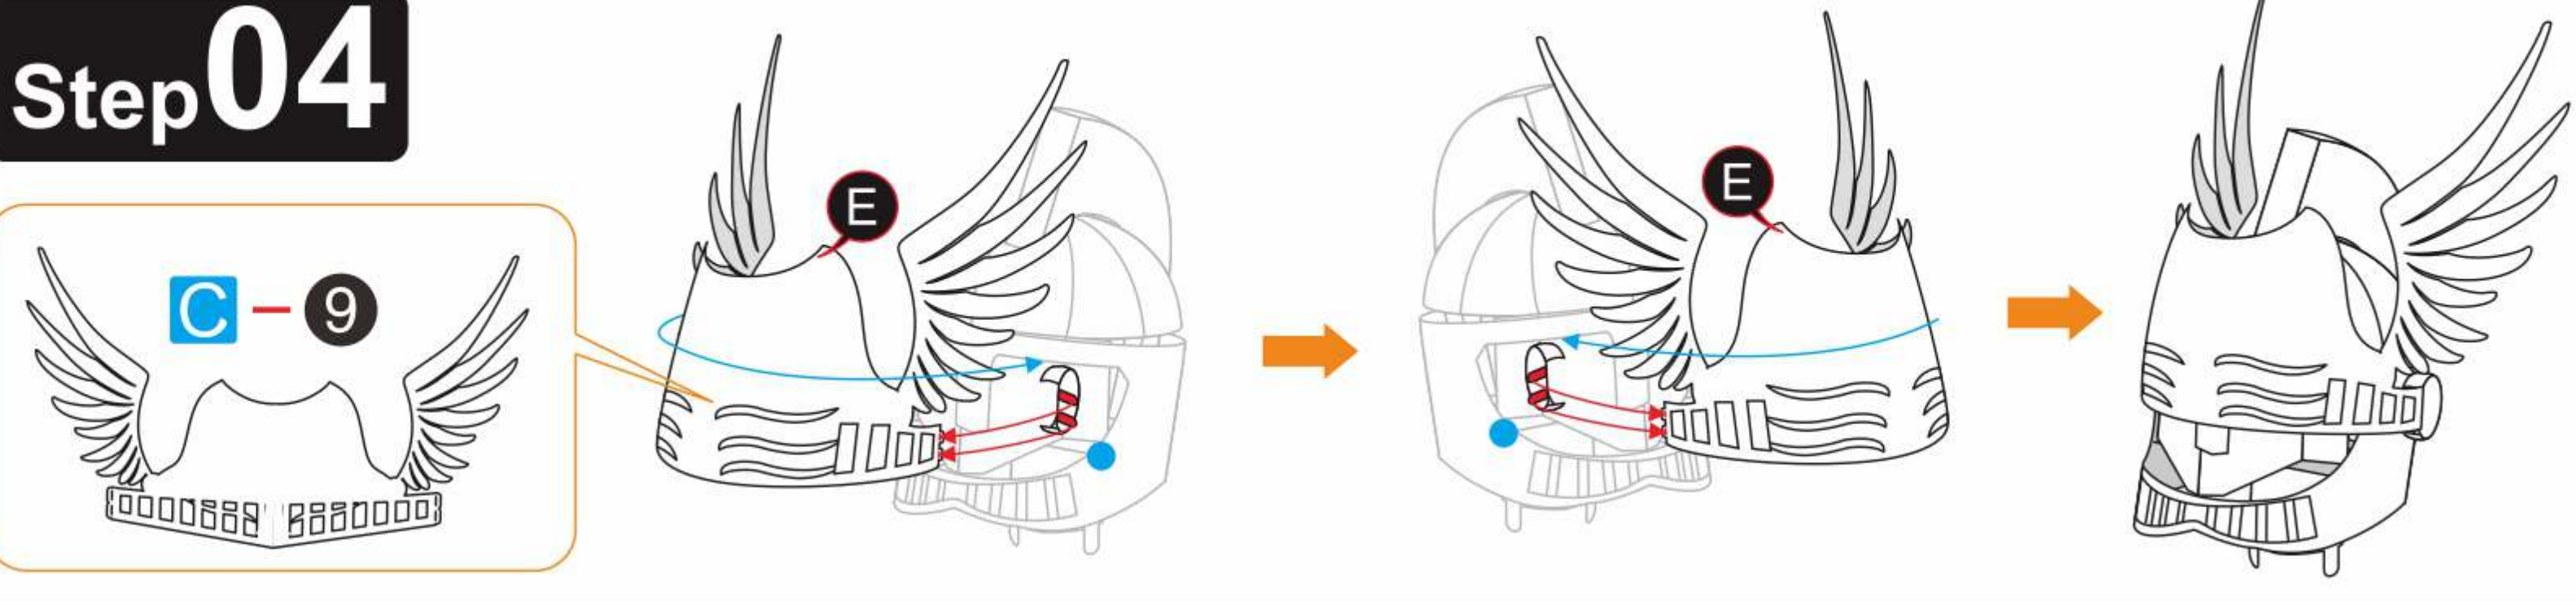


Step05

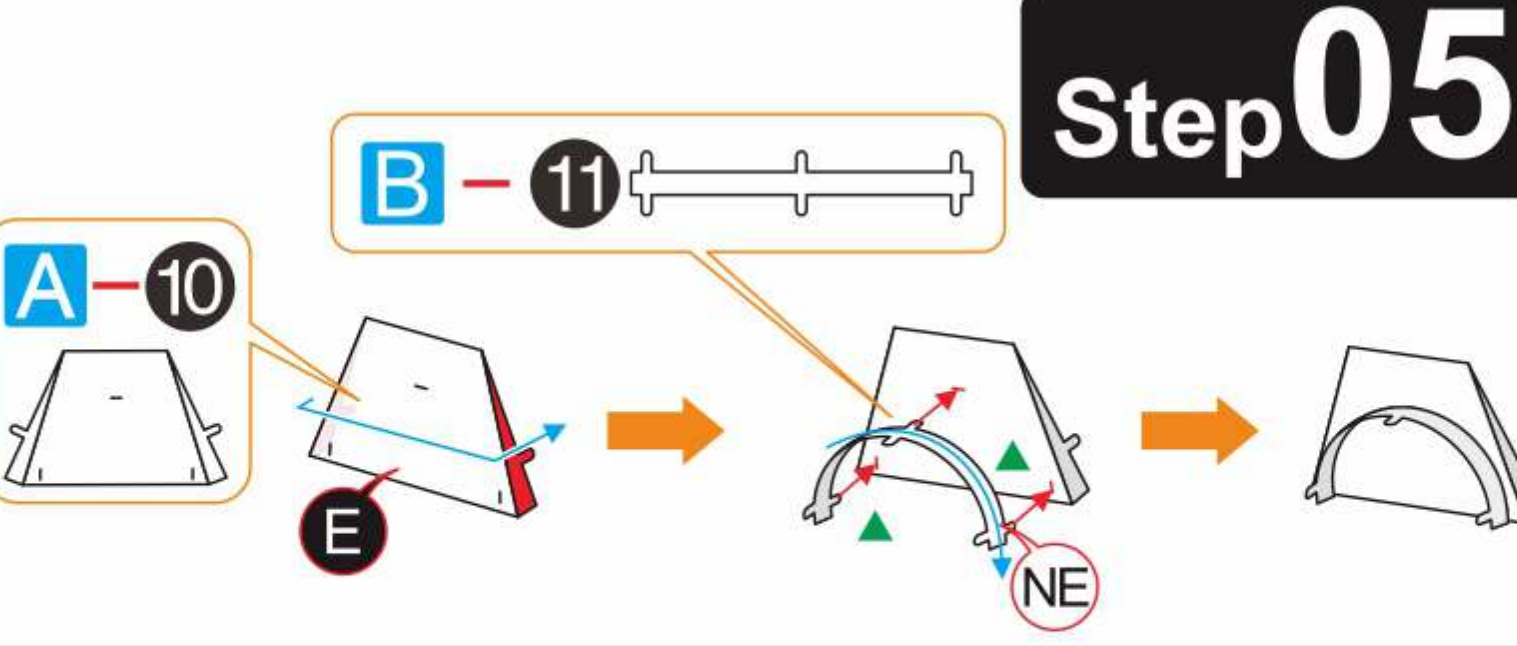




Step06

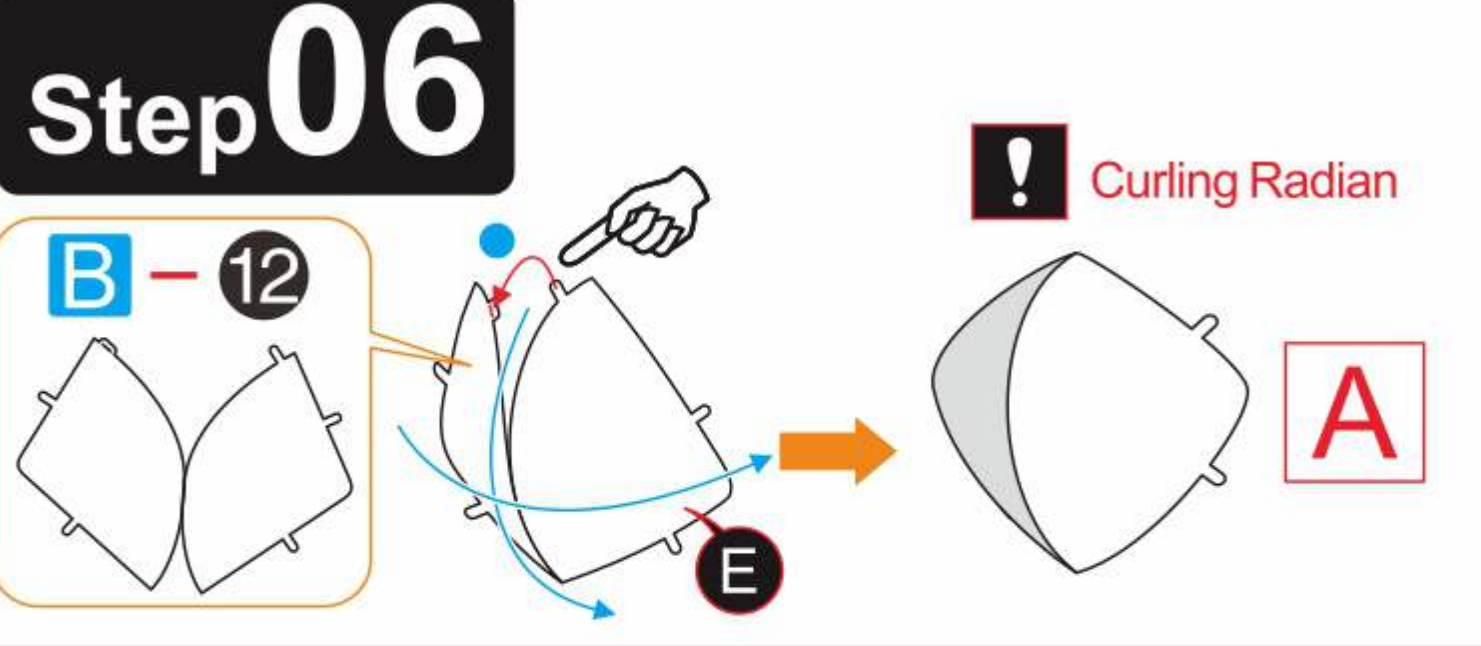


Step07

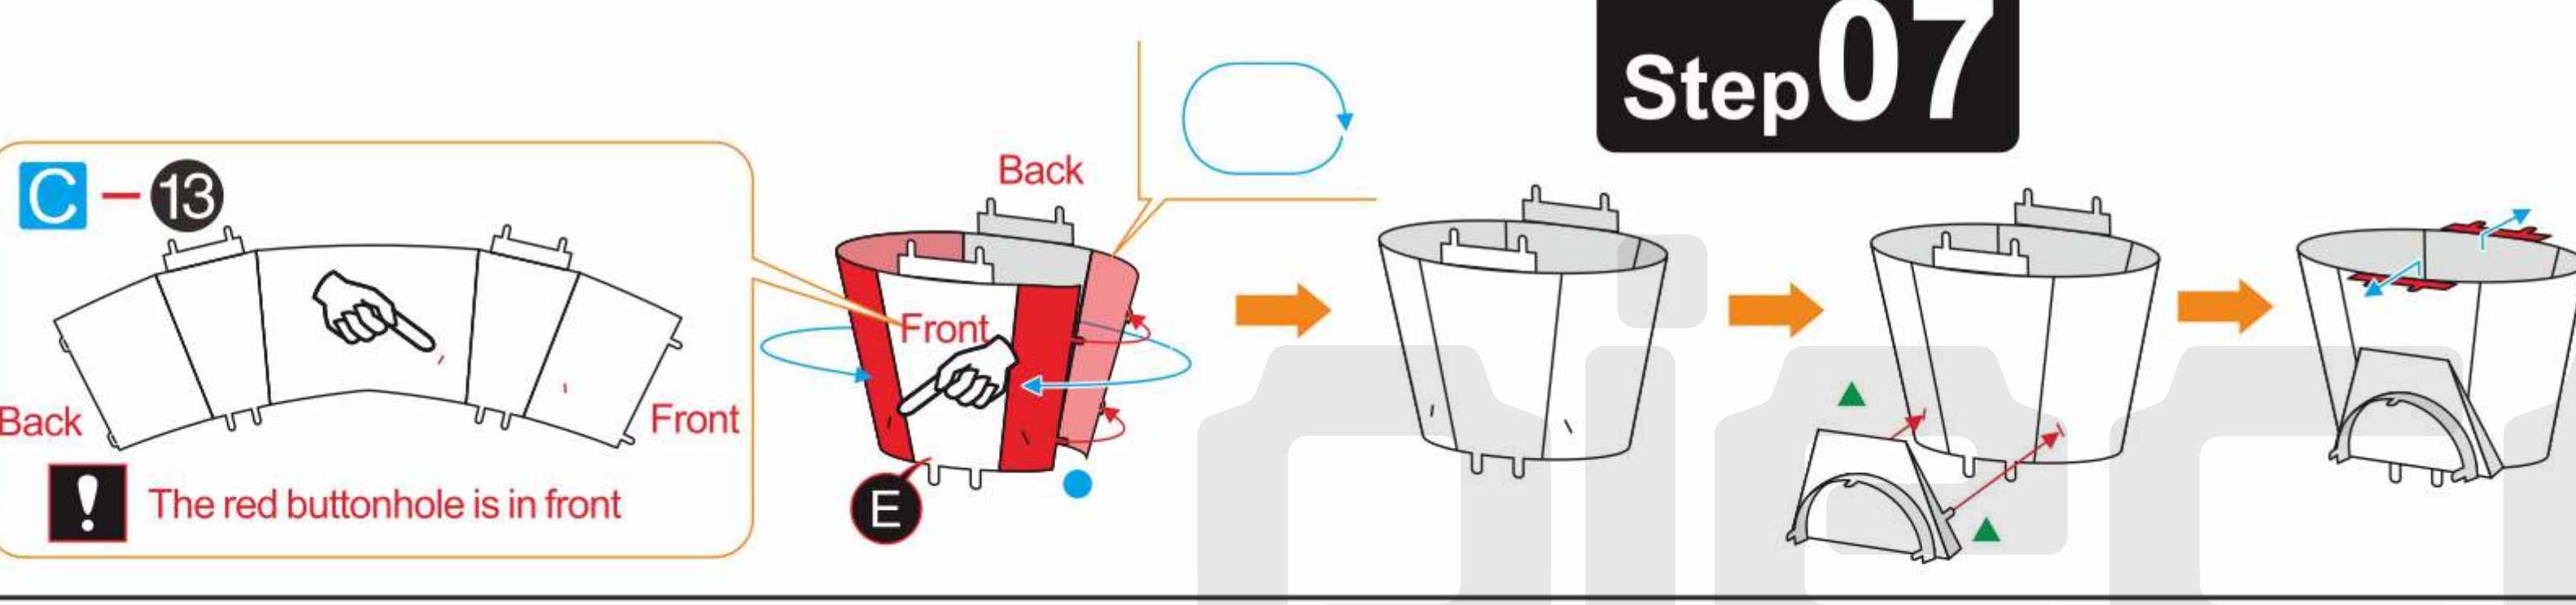


Step08

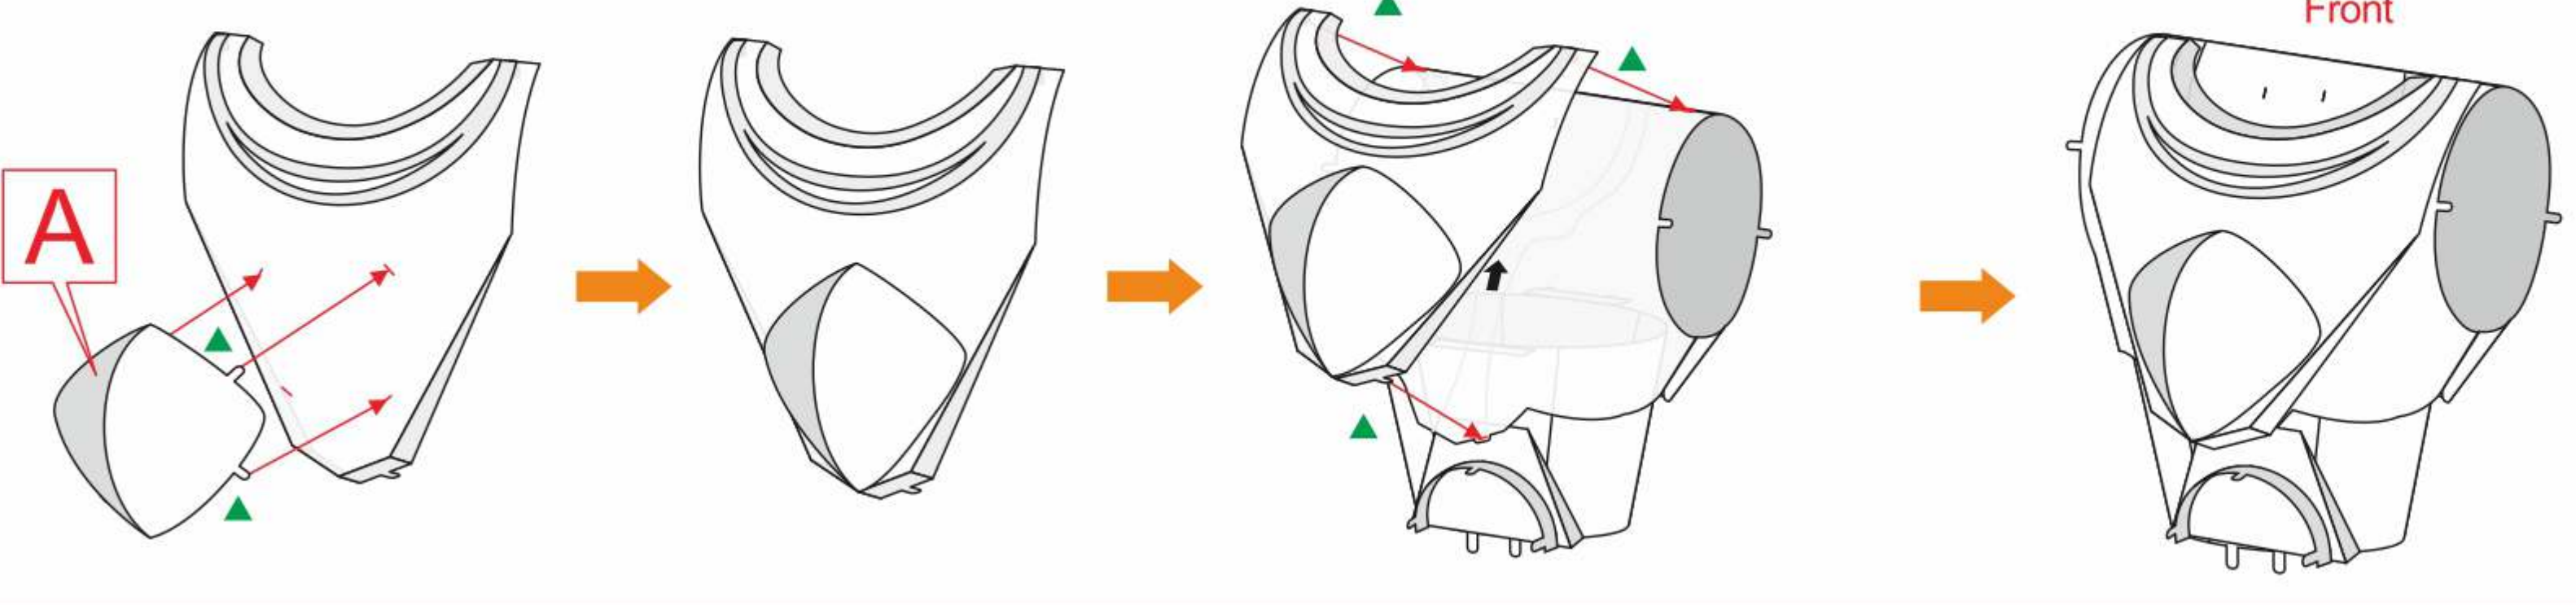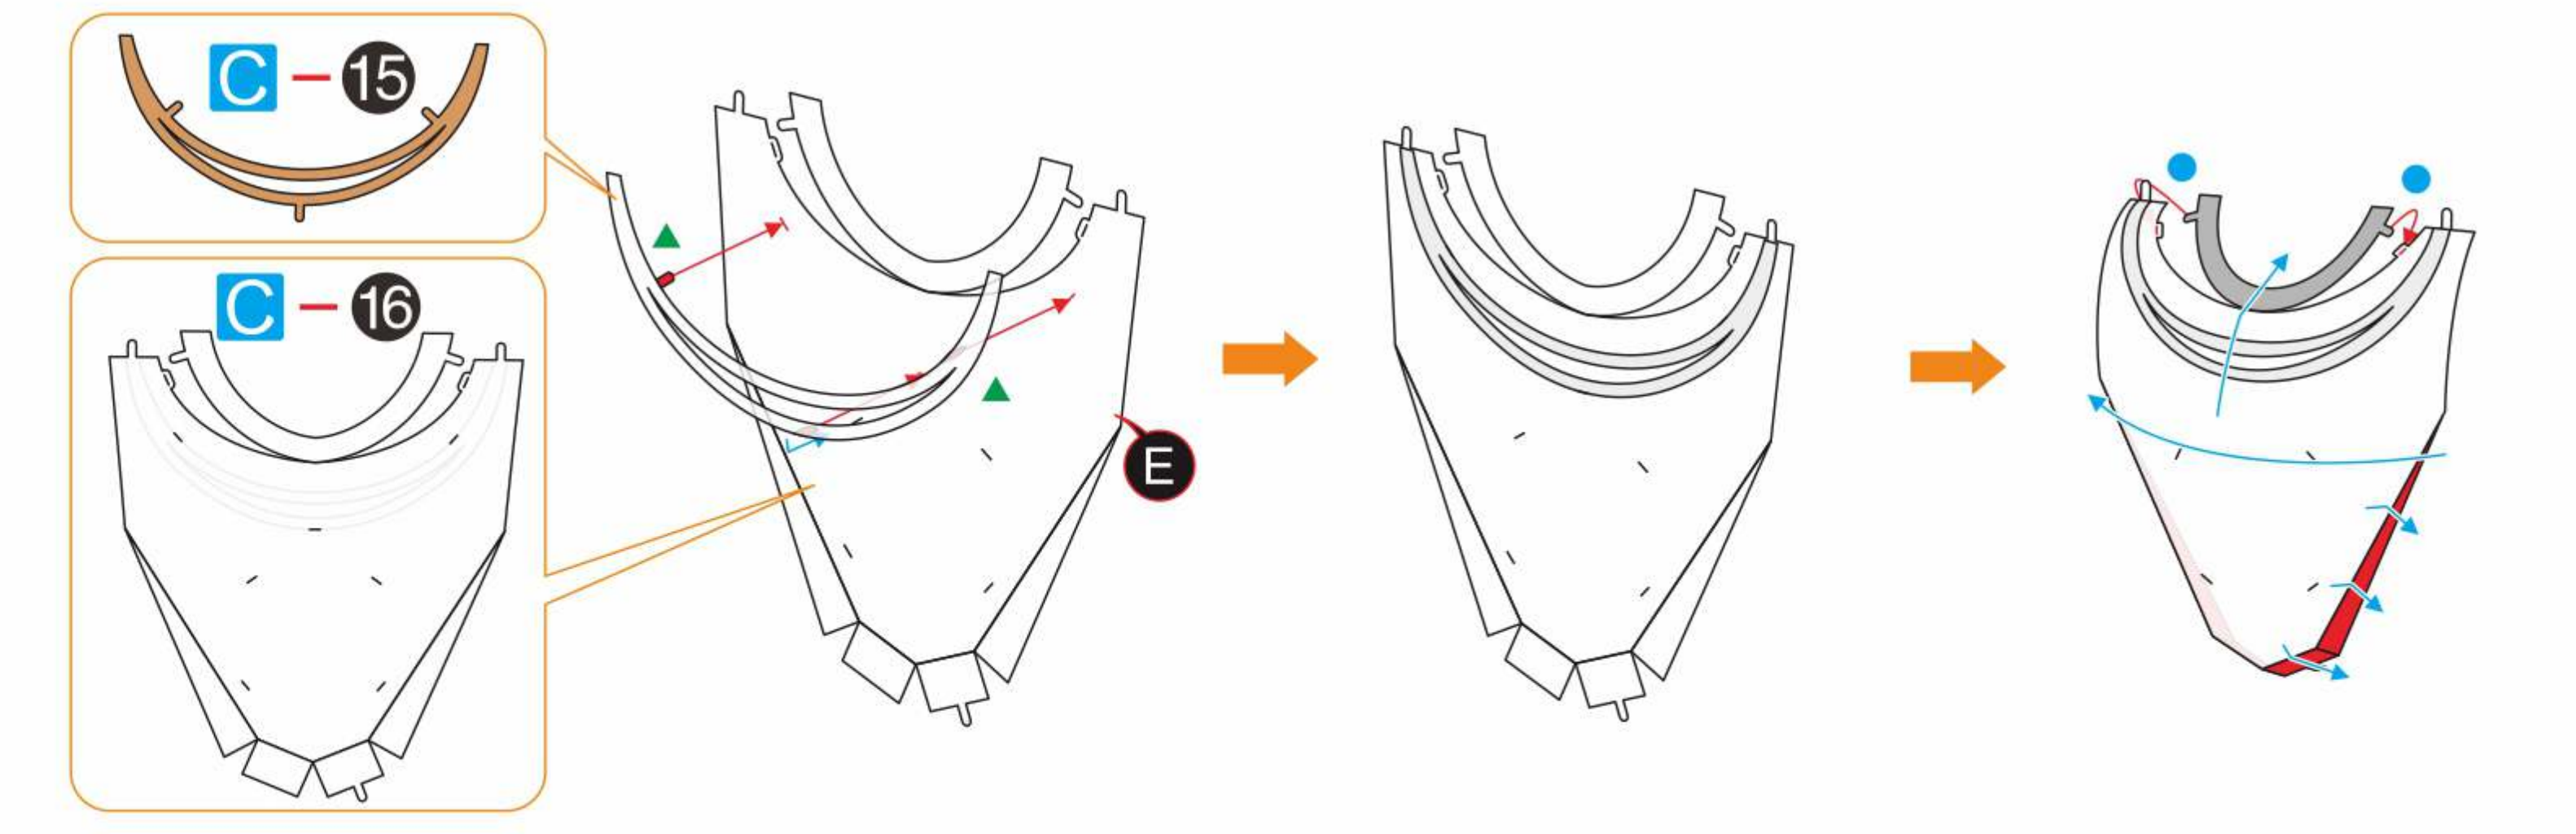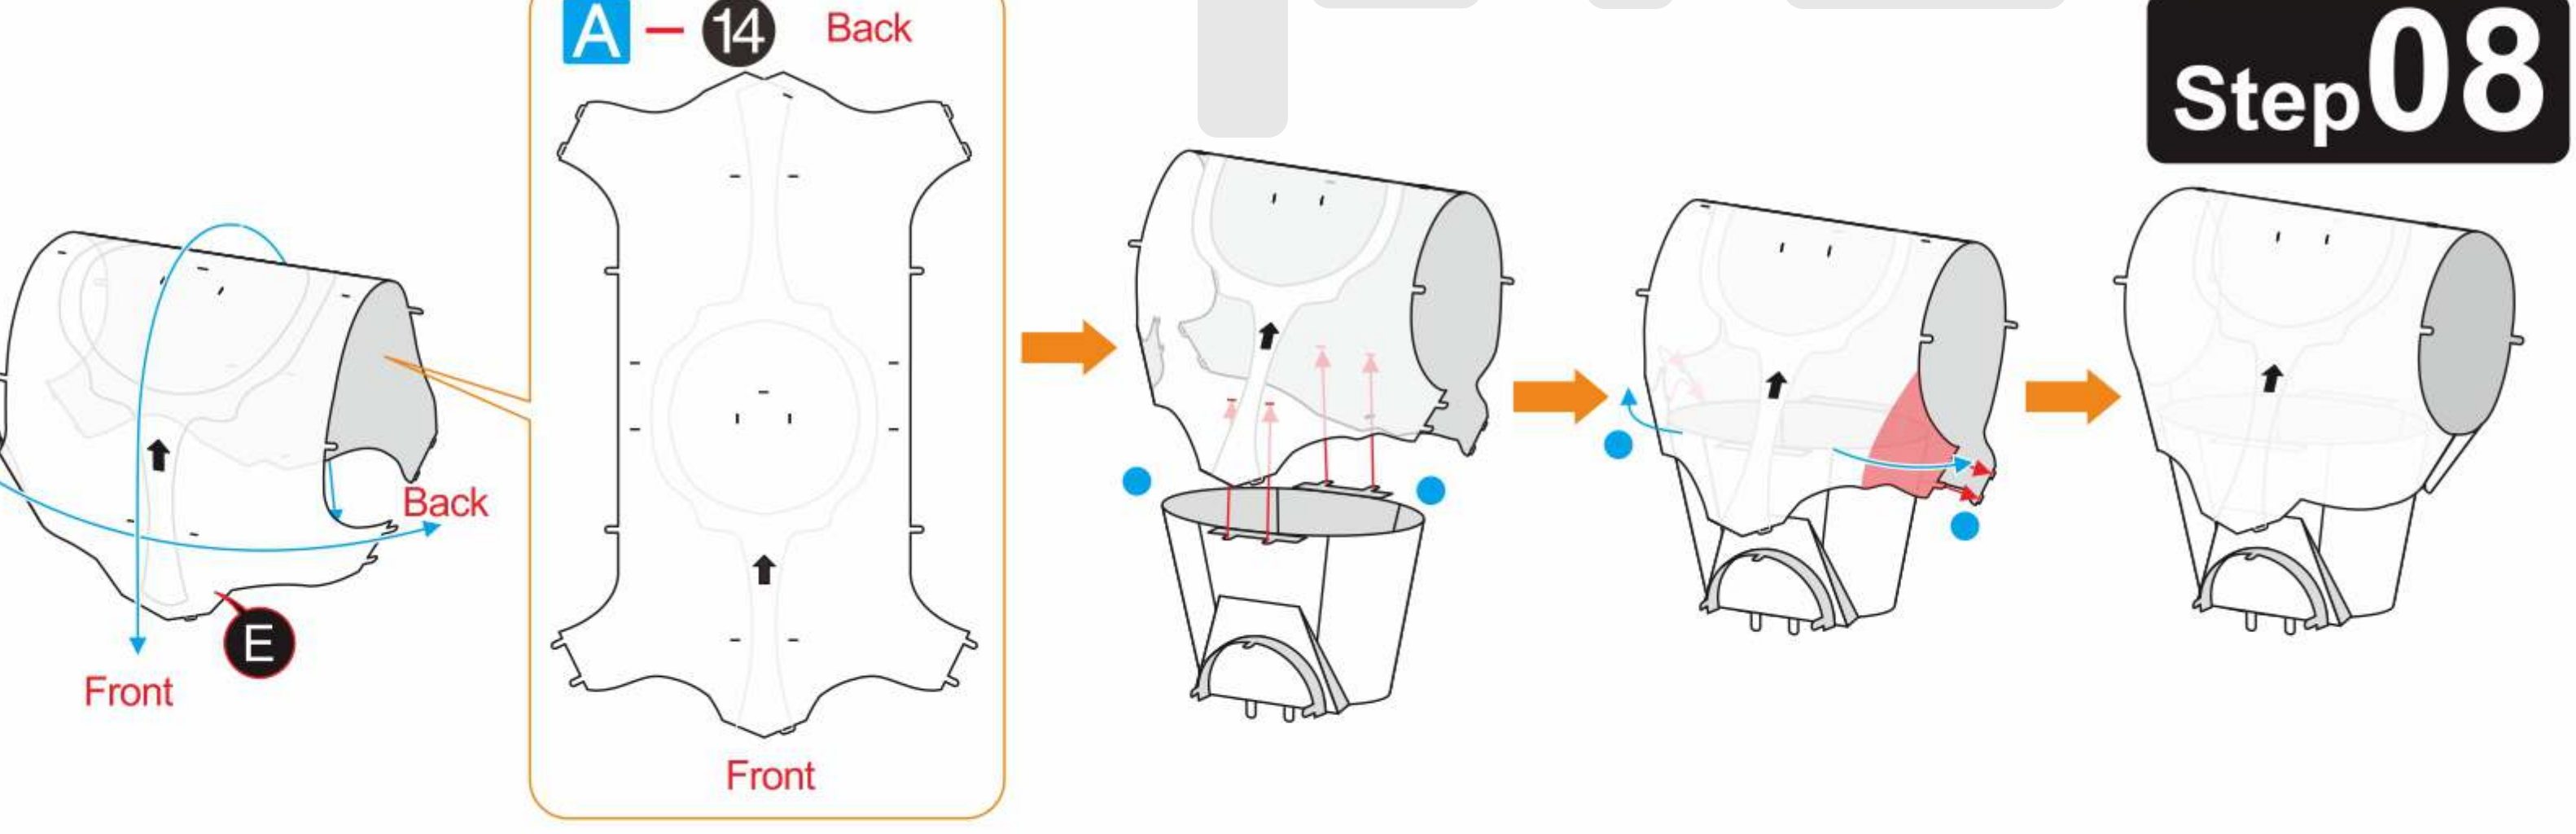


Step09

















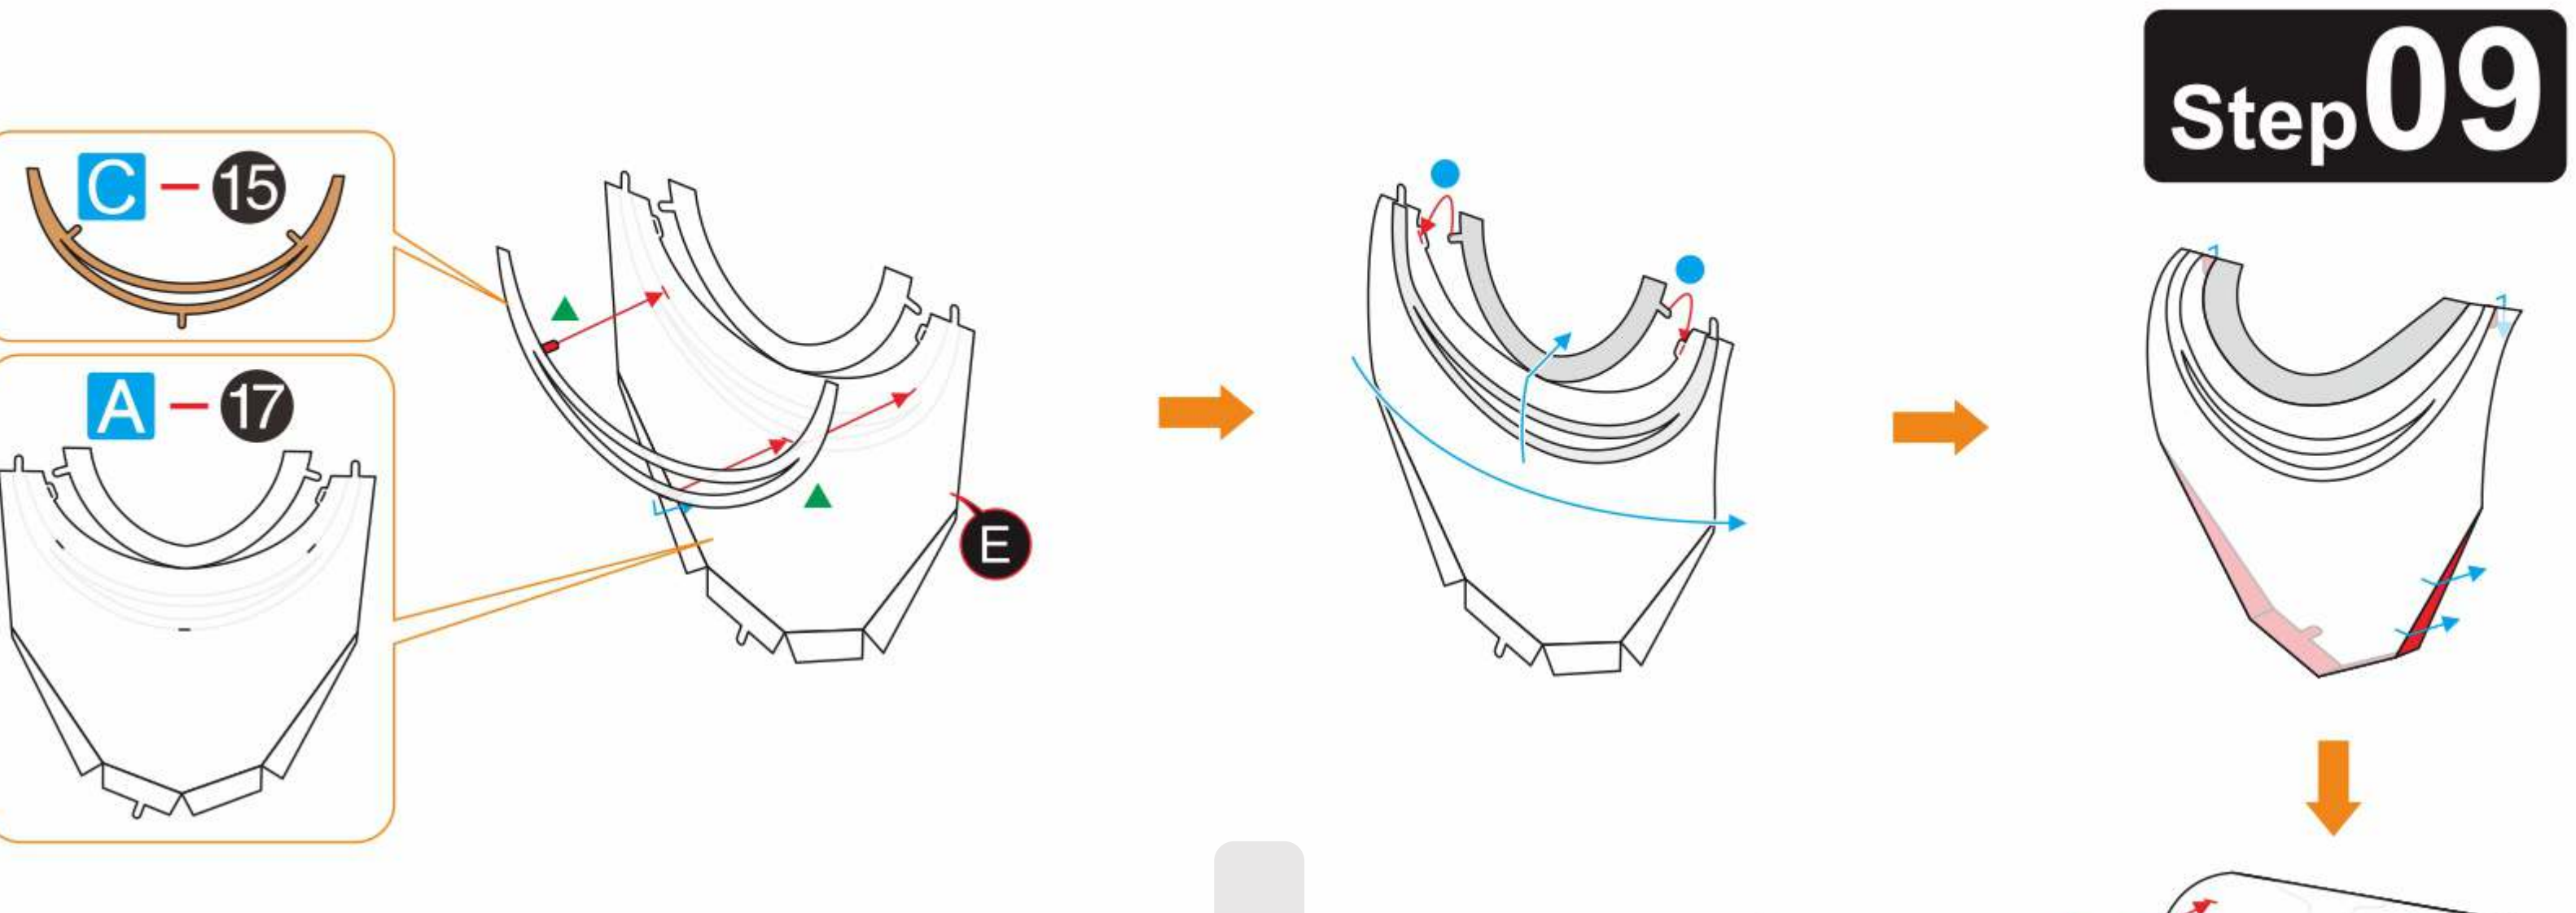













Step10
















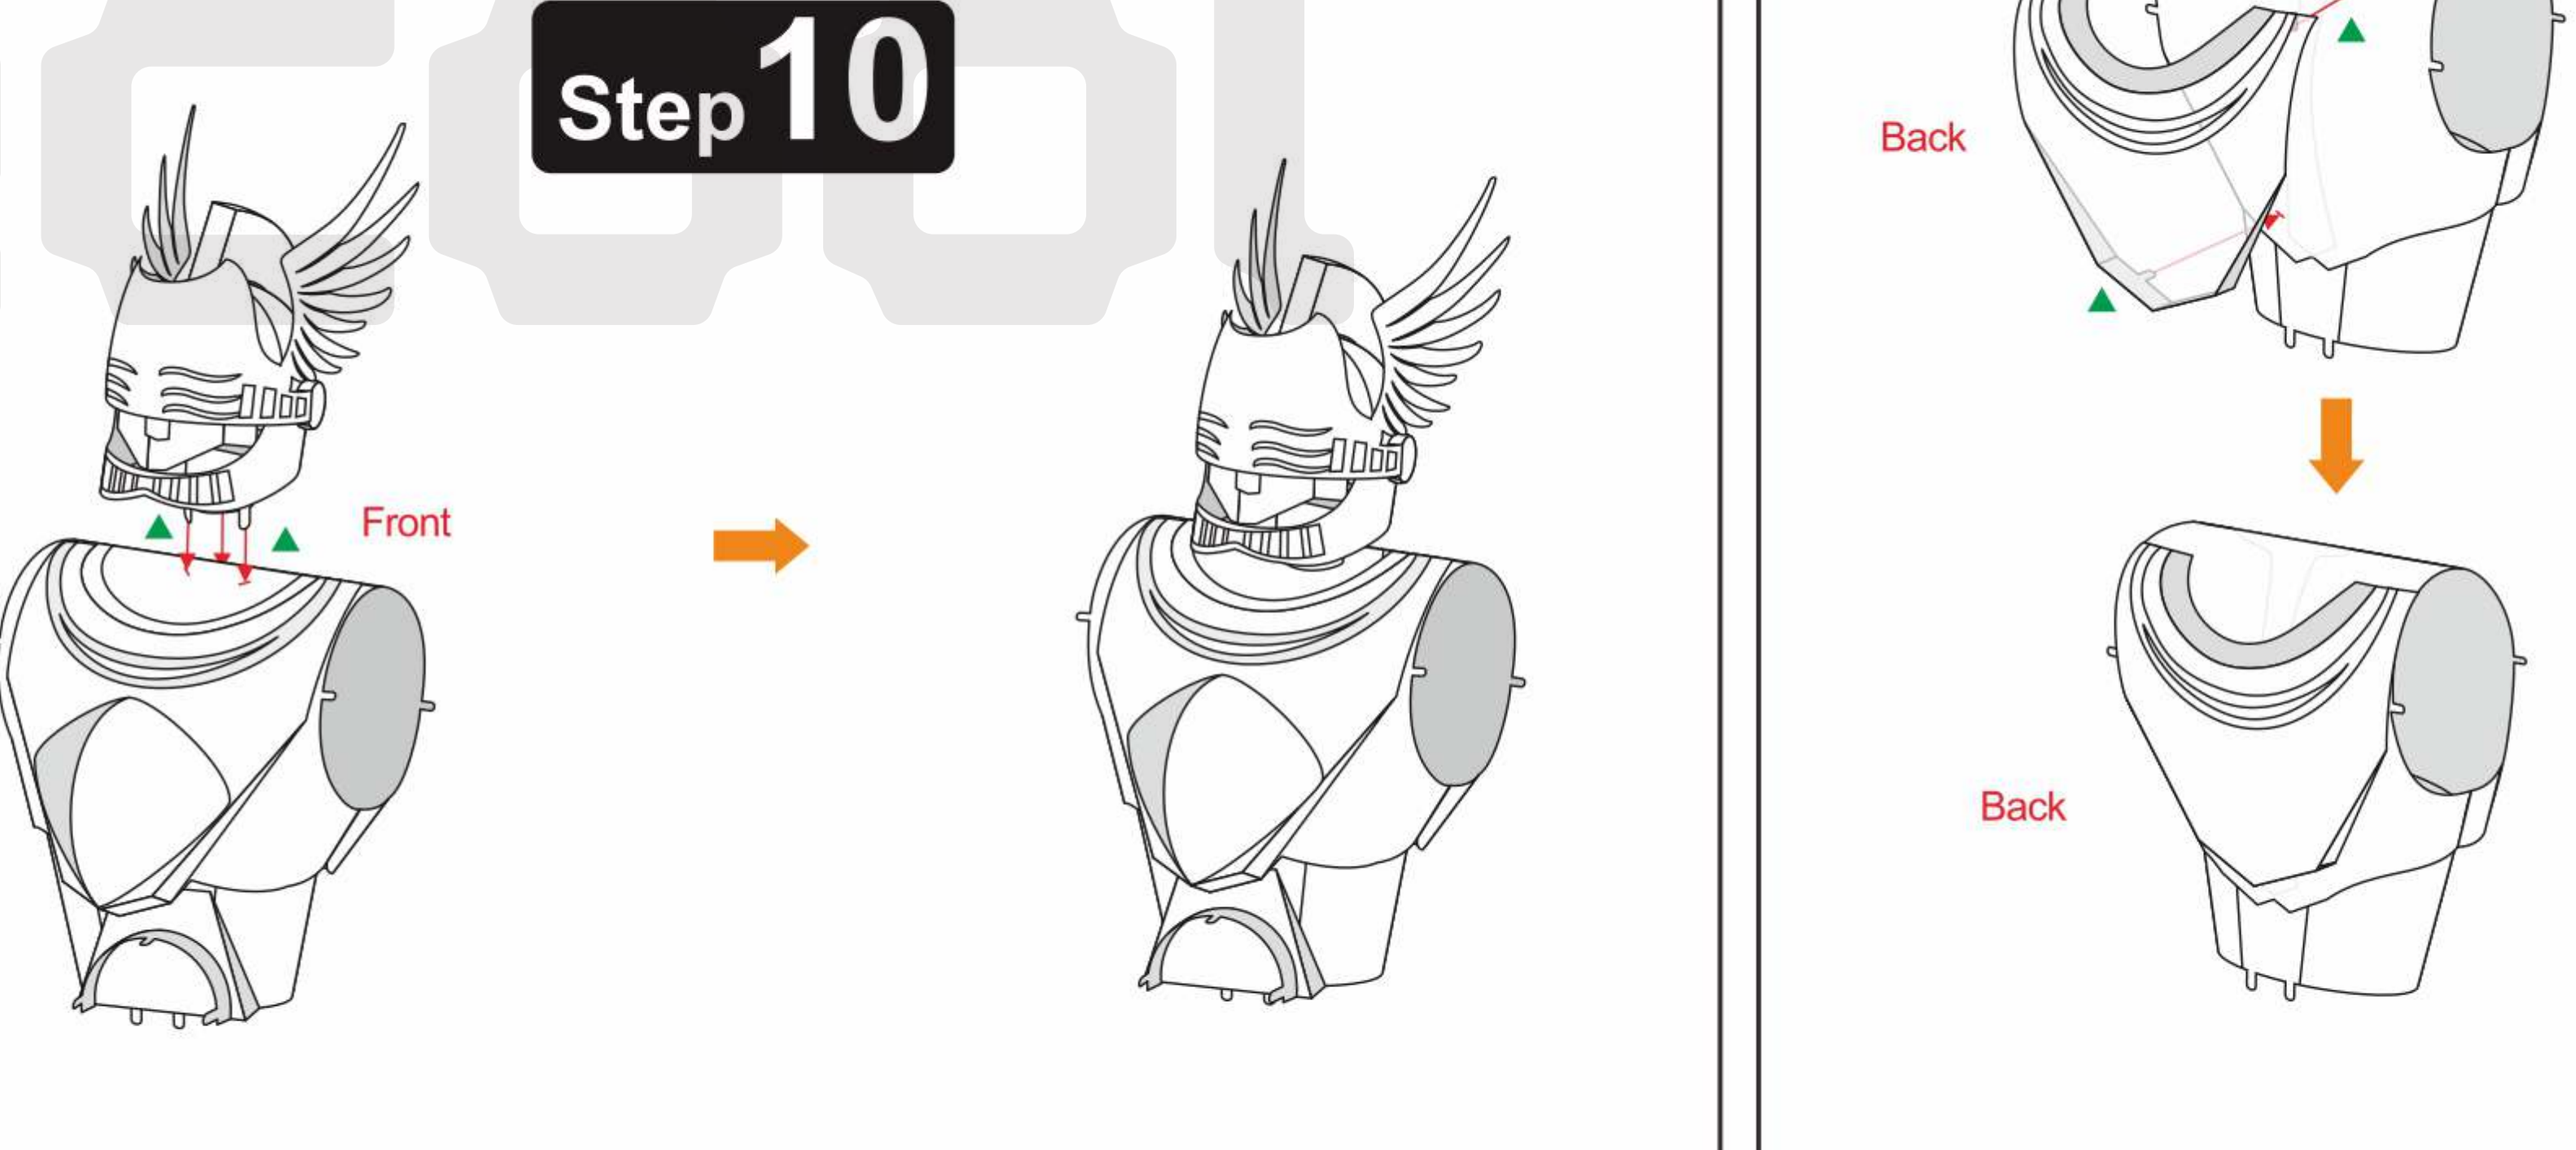


Step11

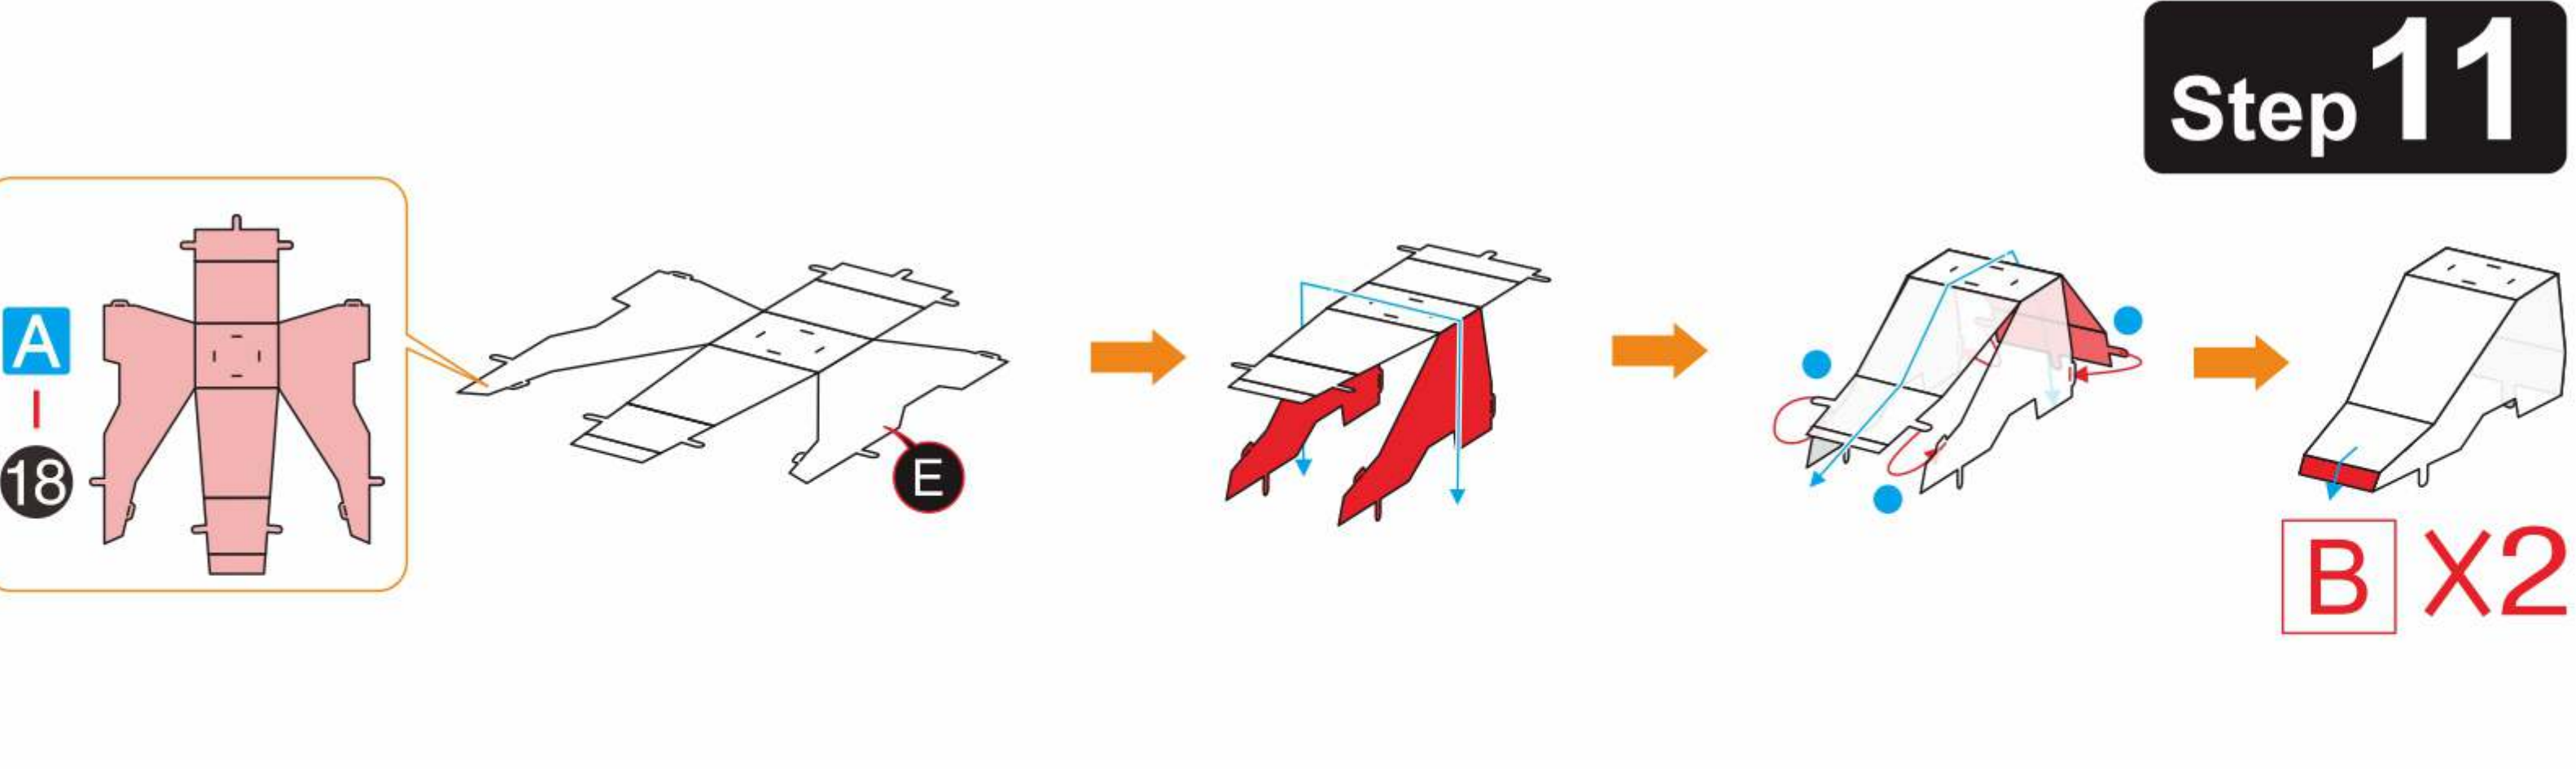


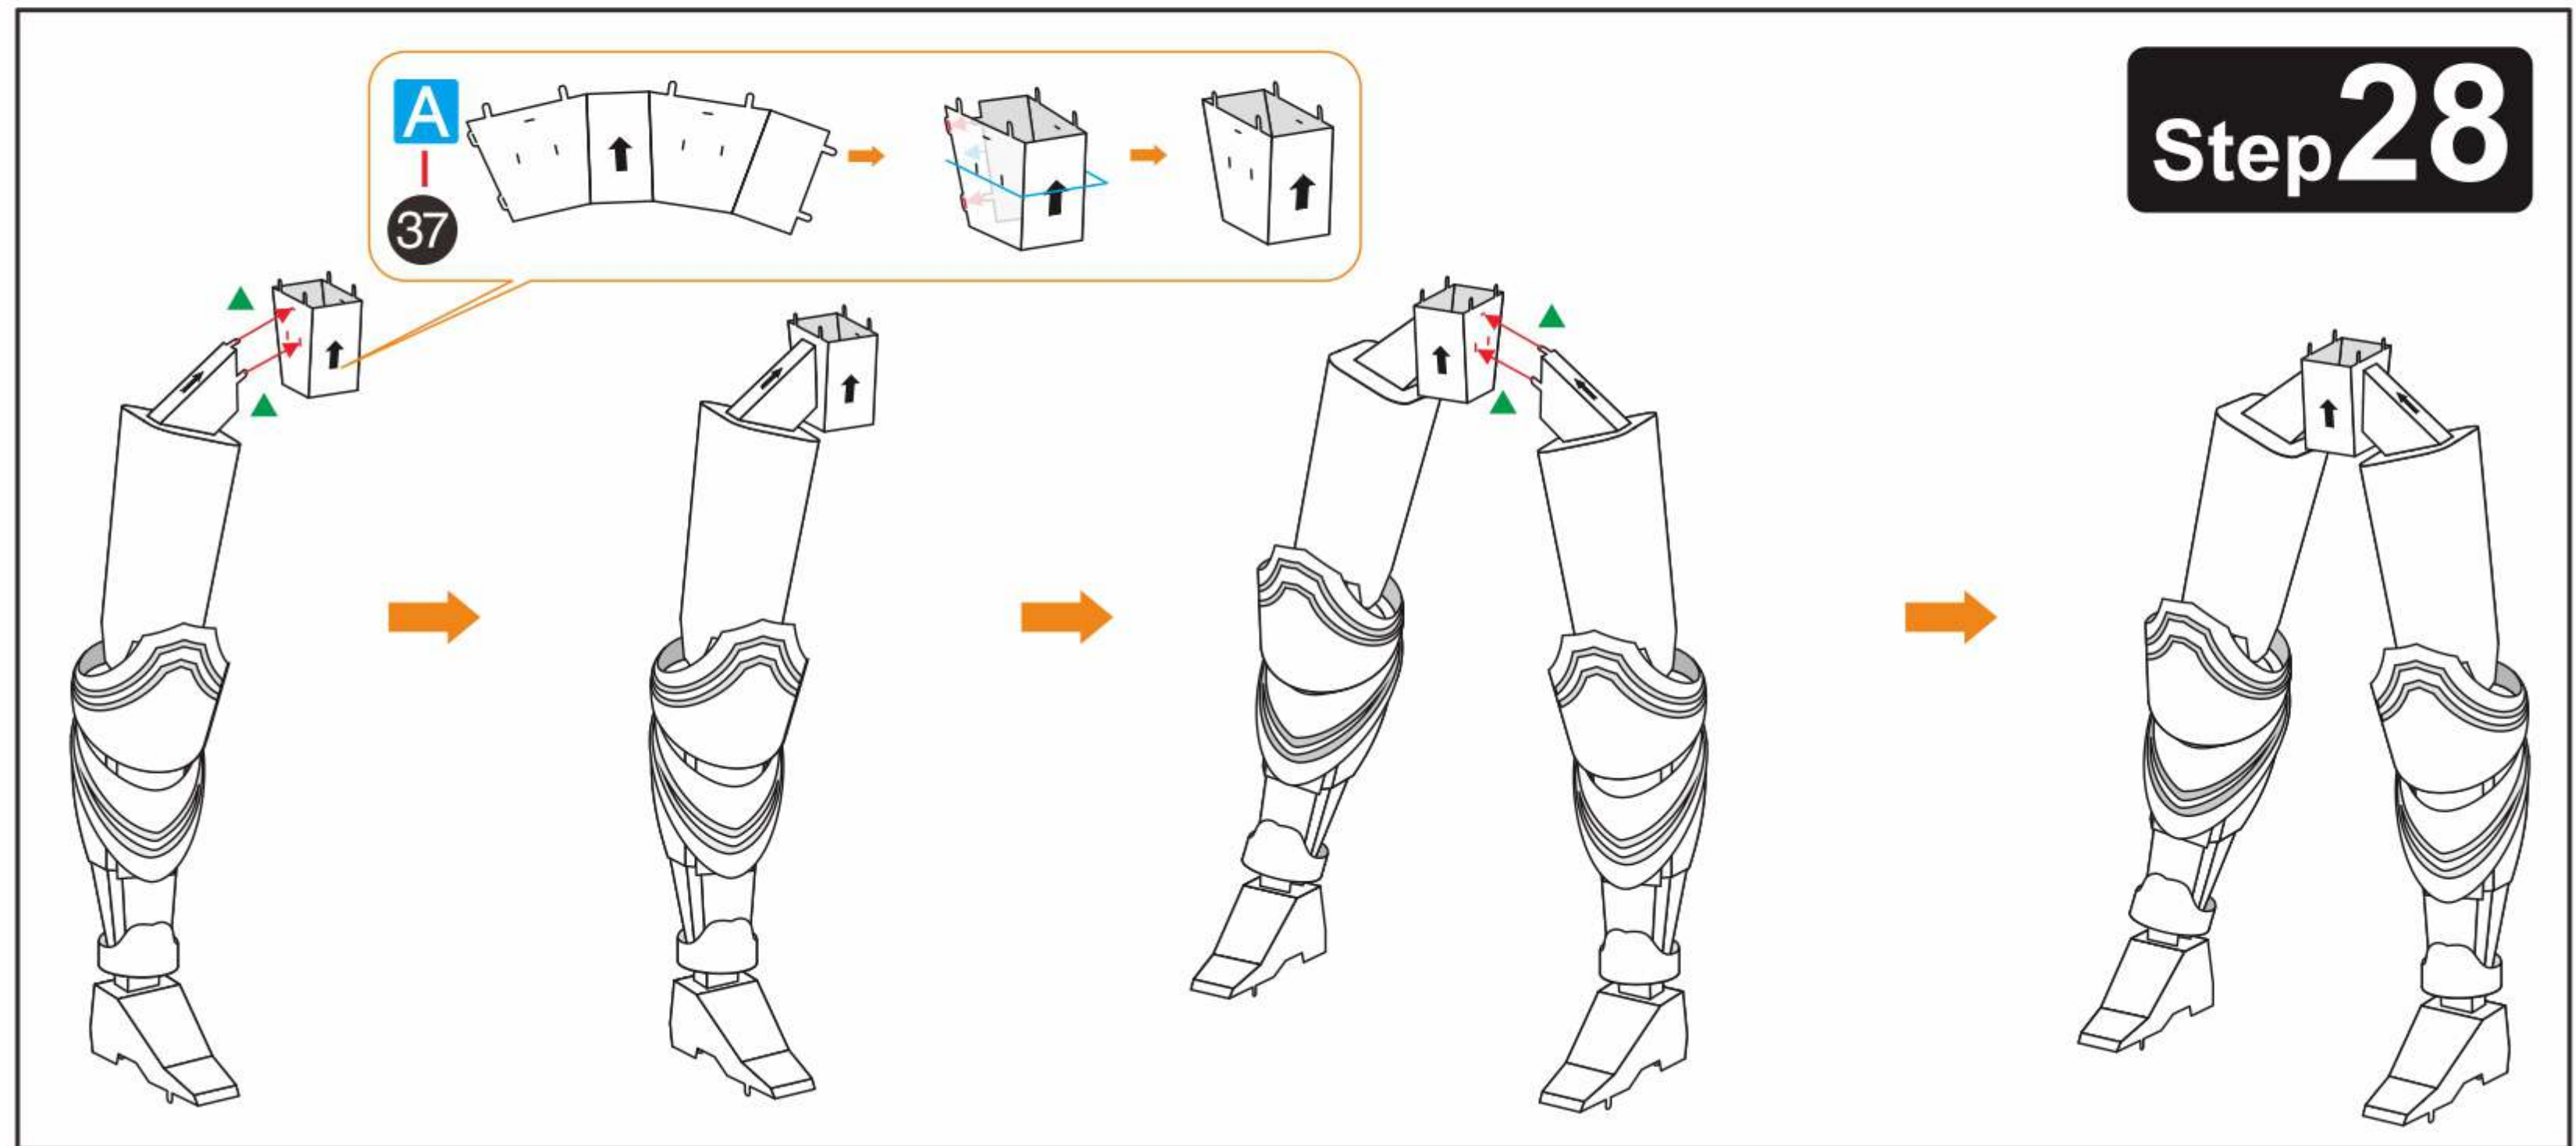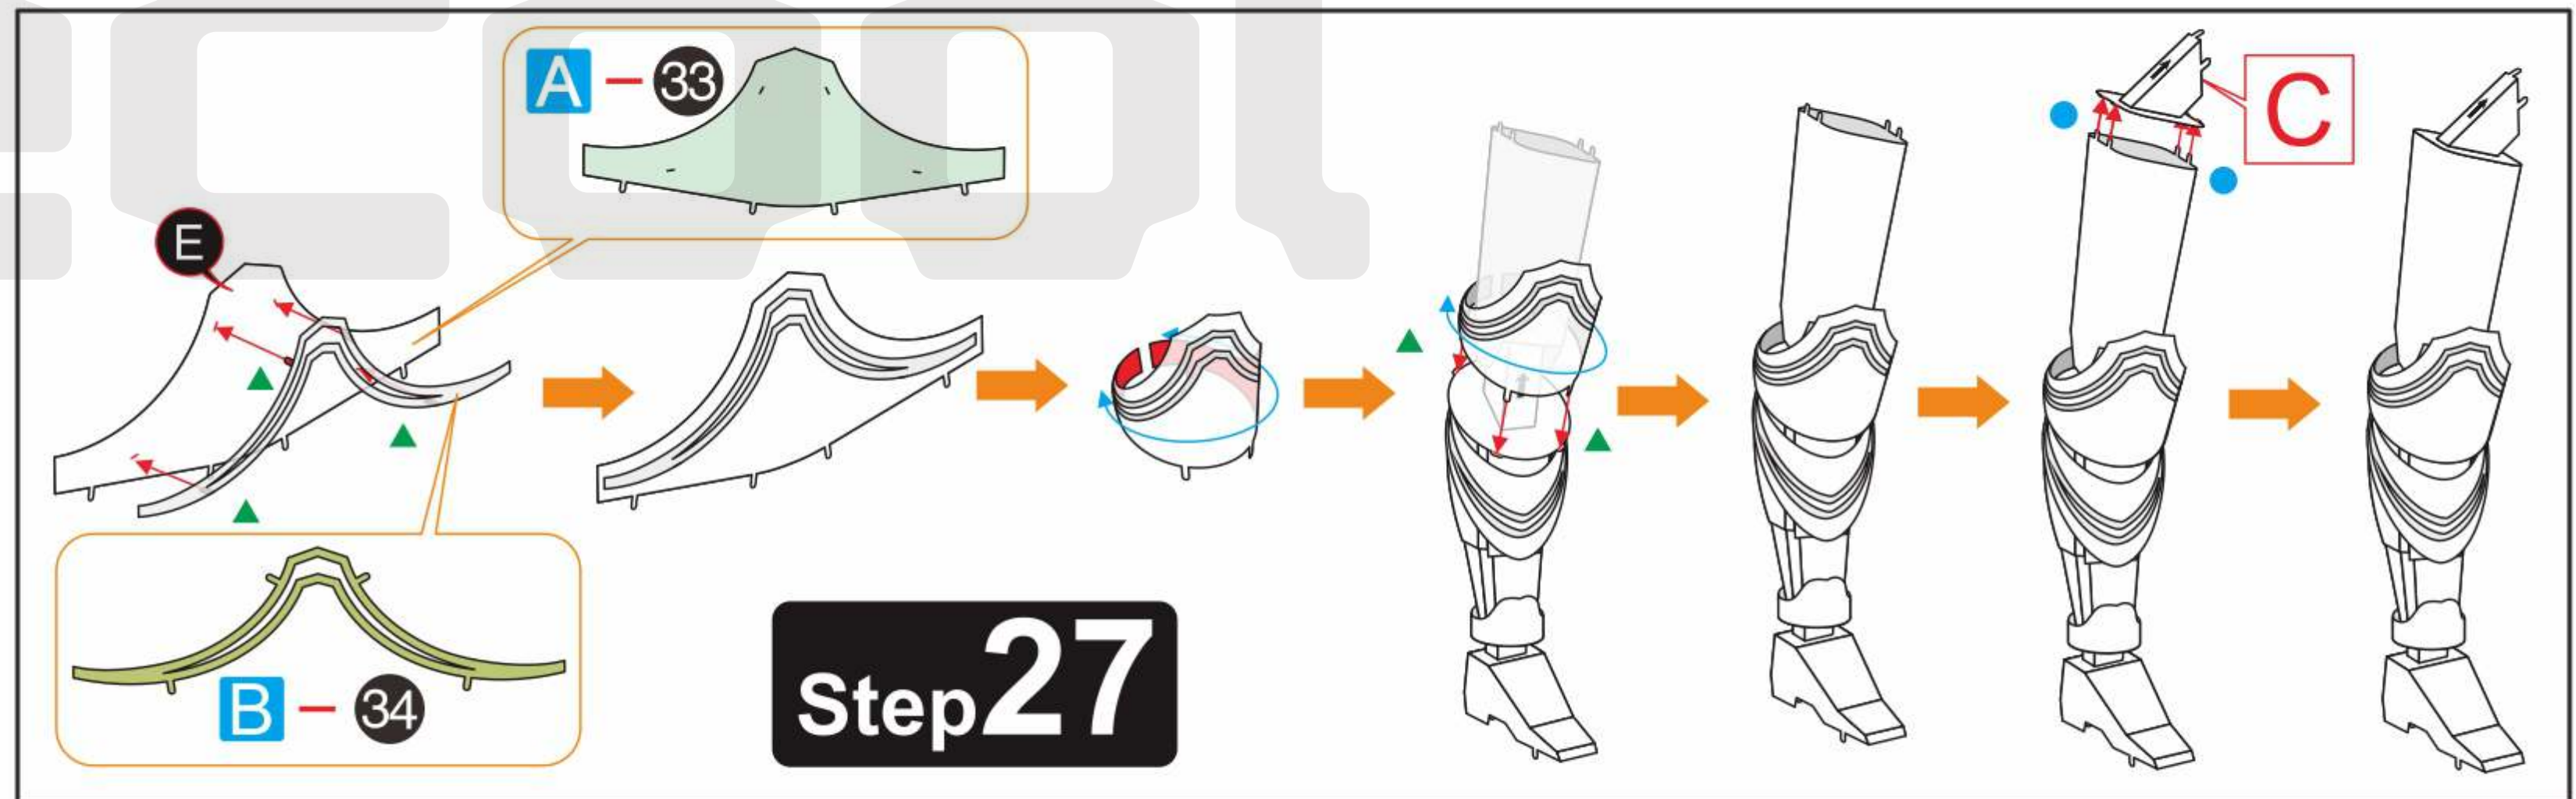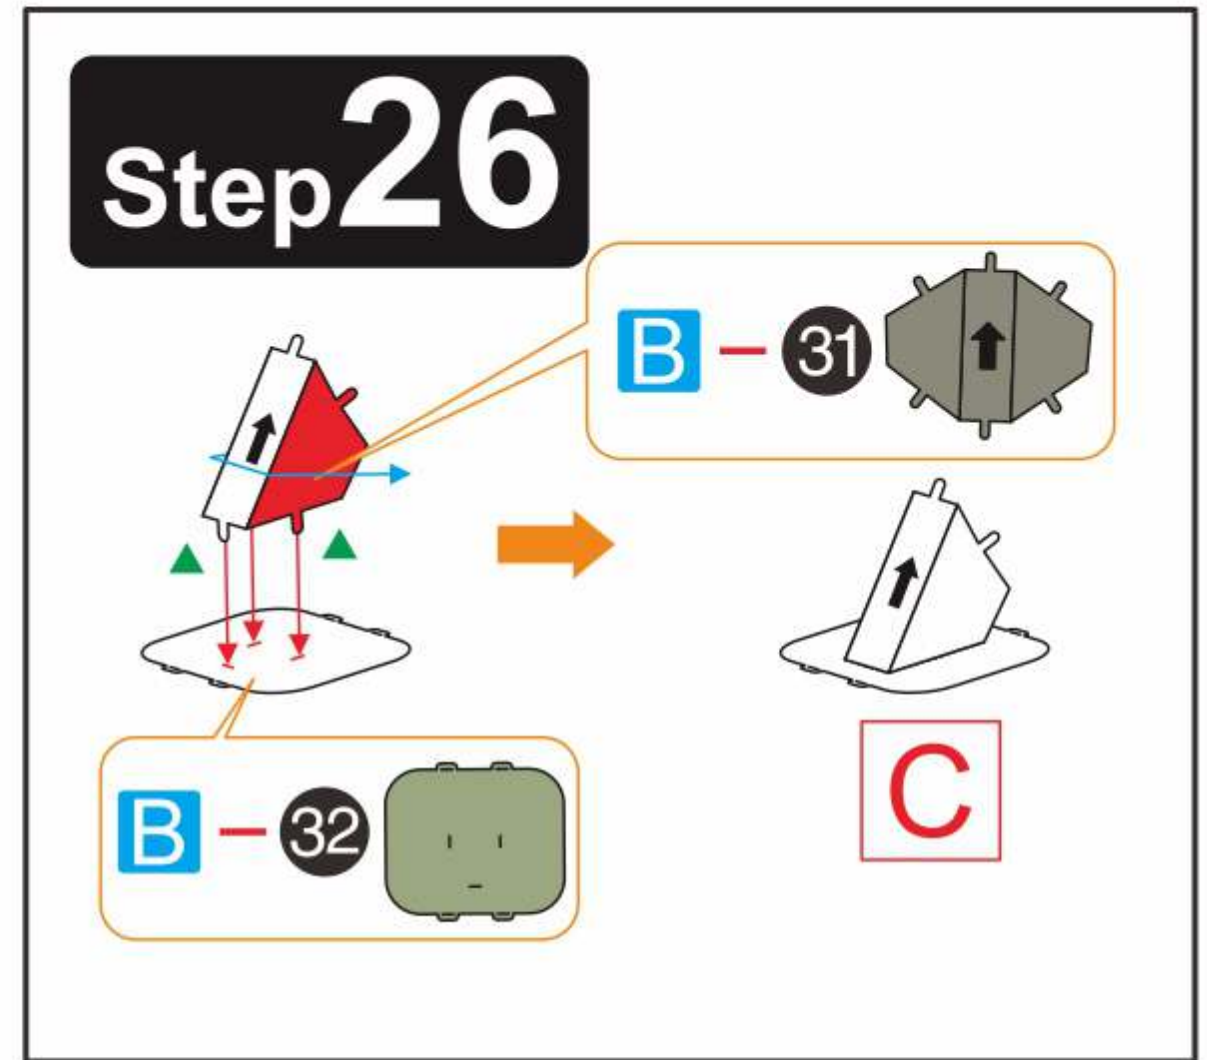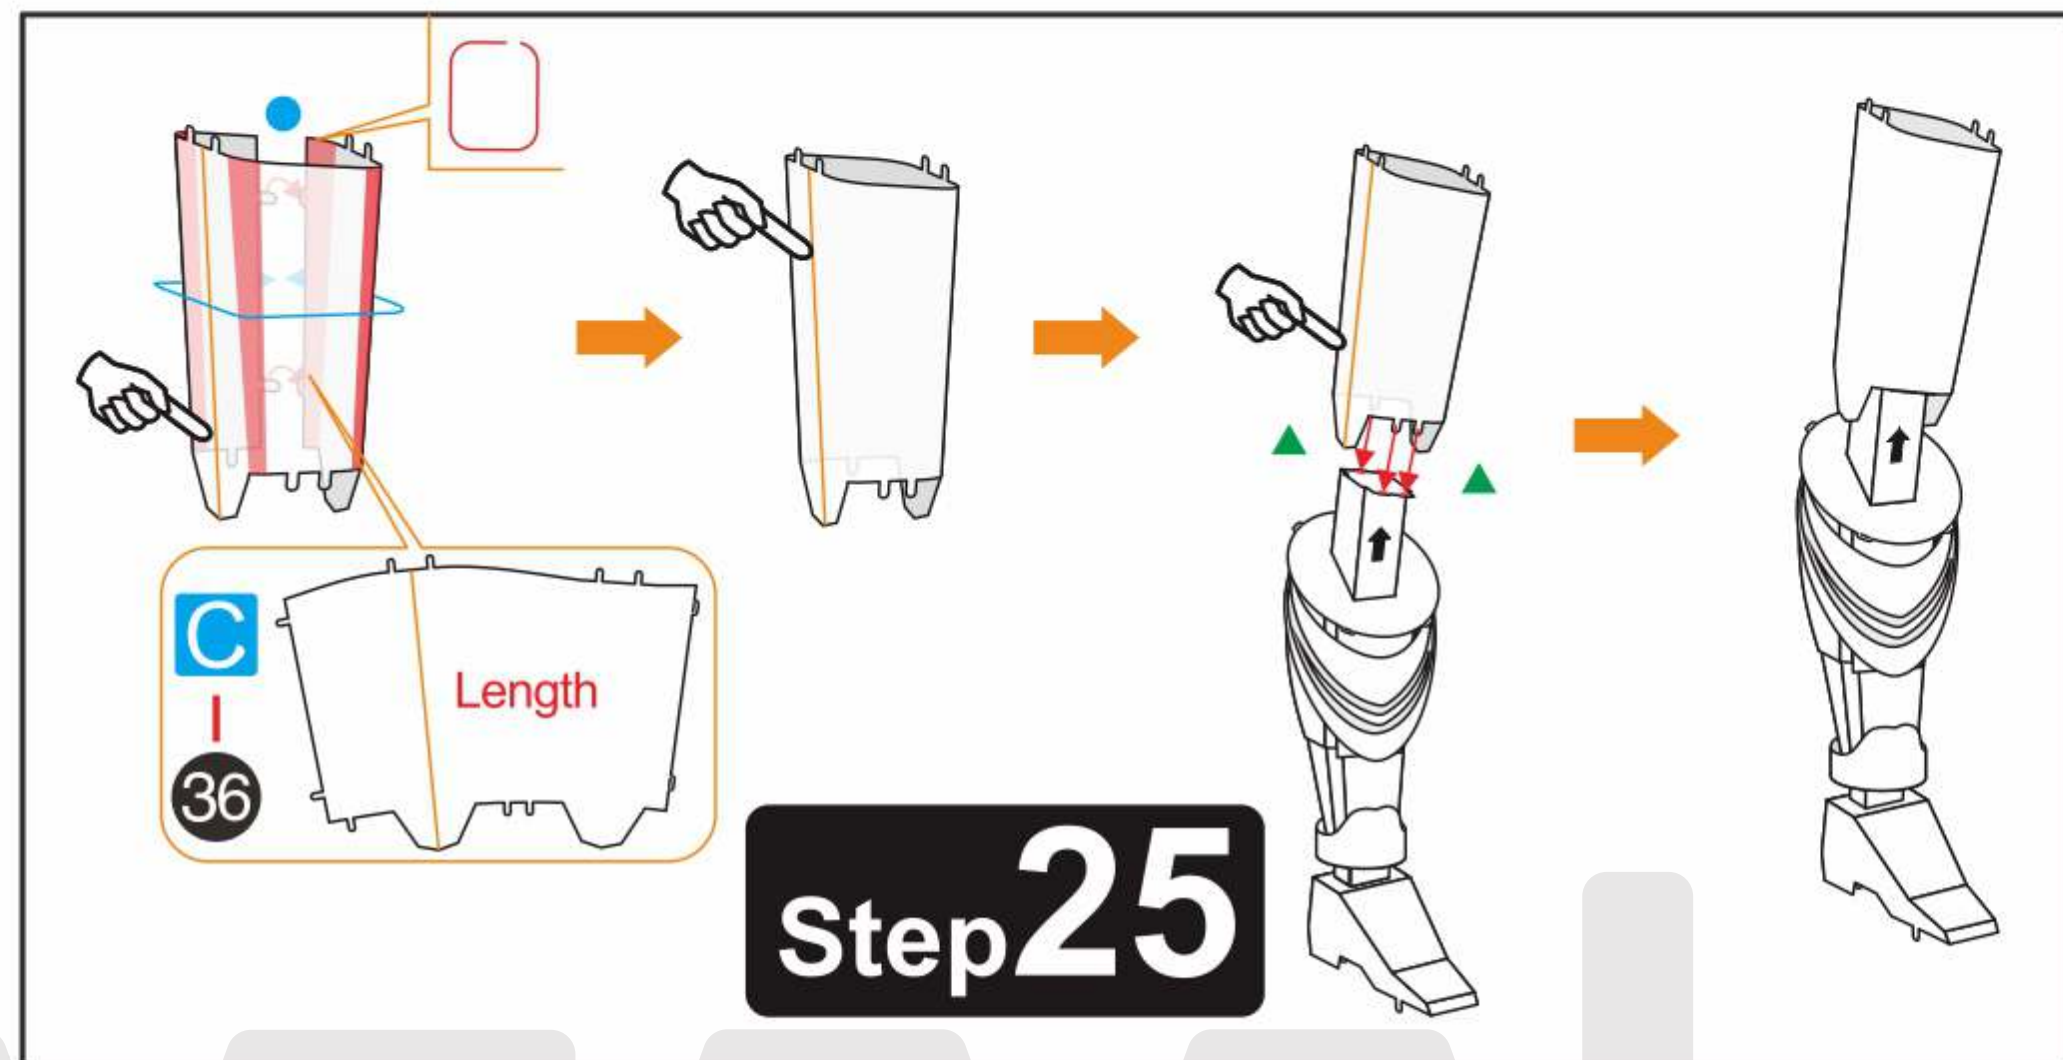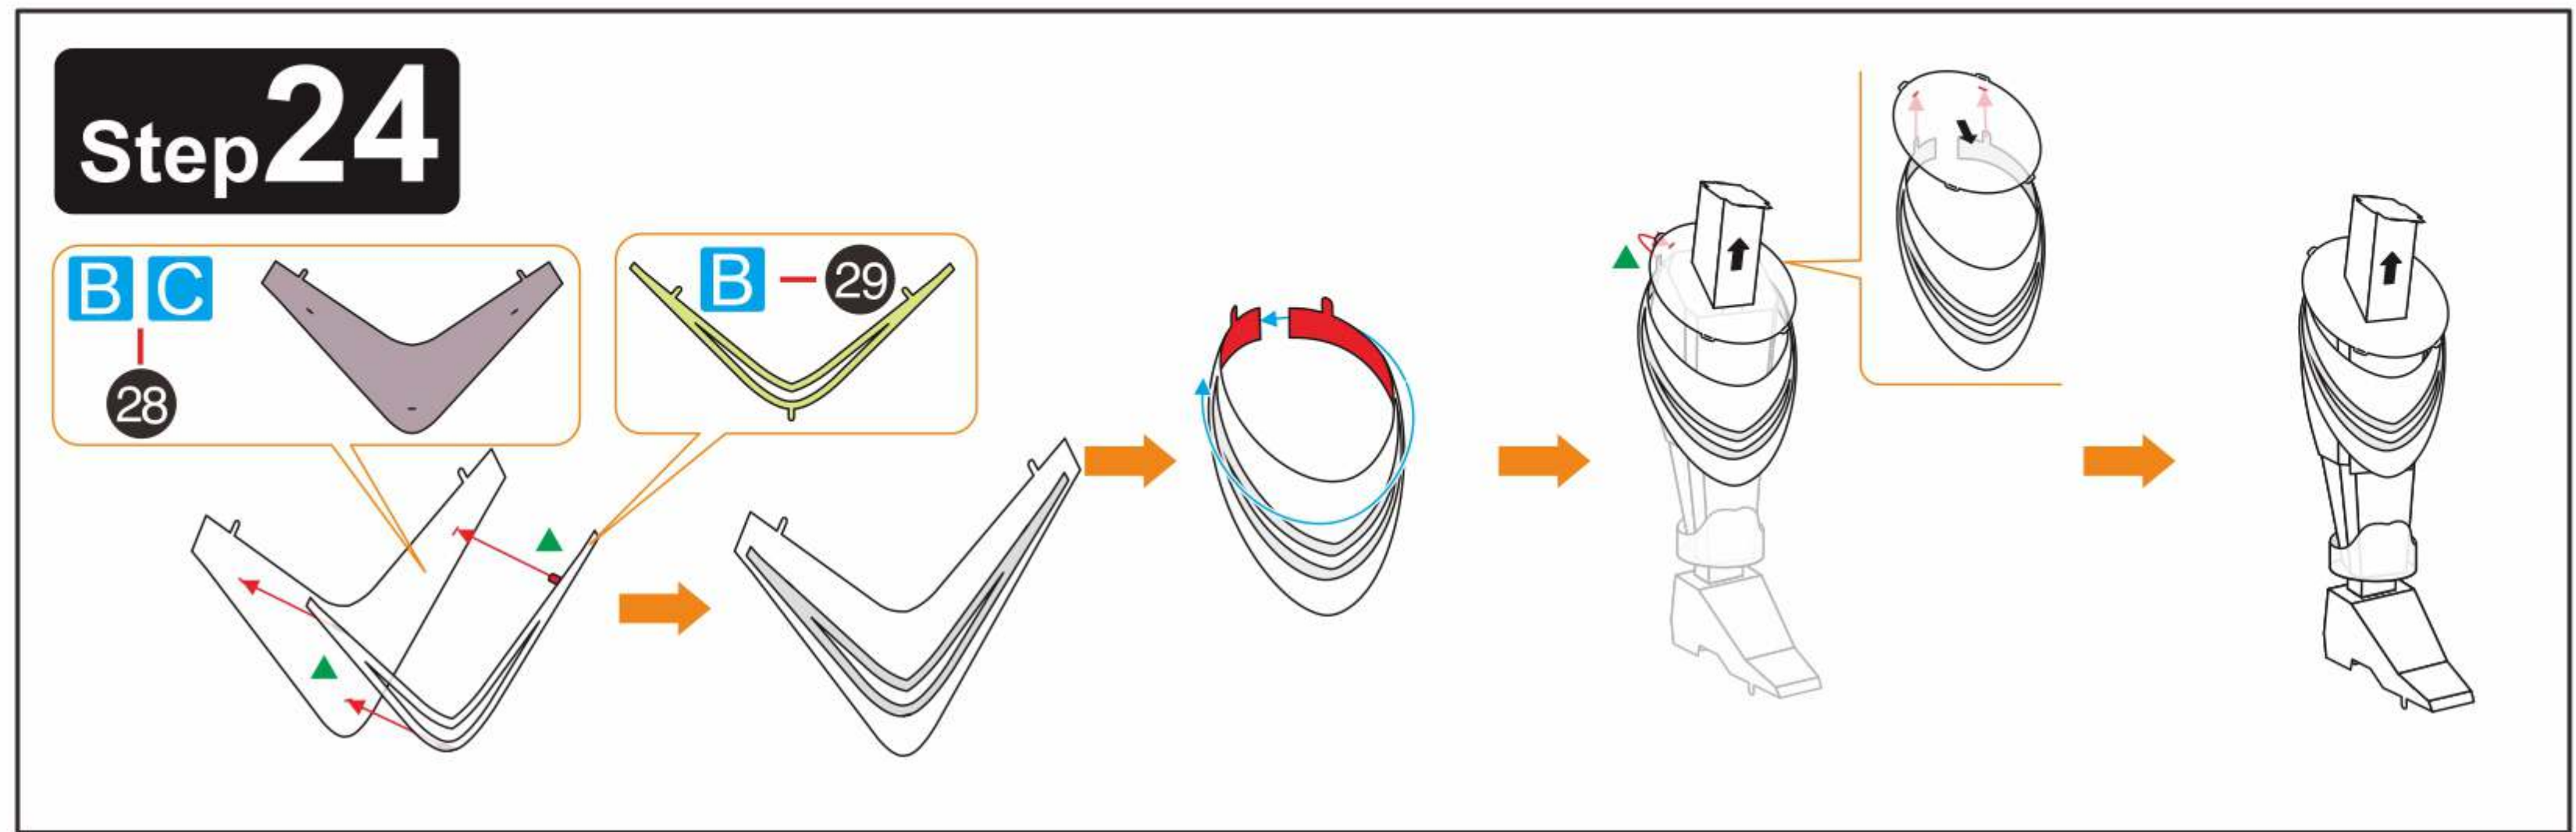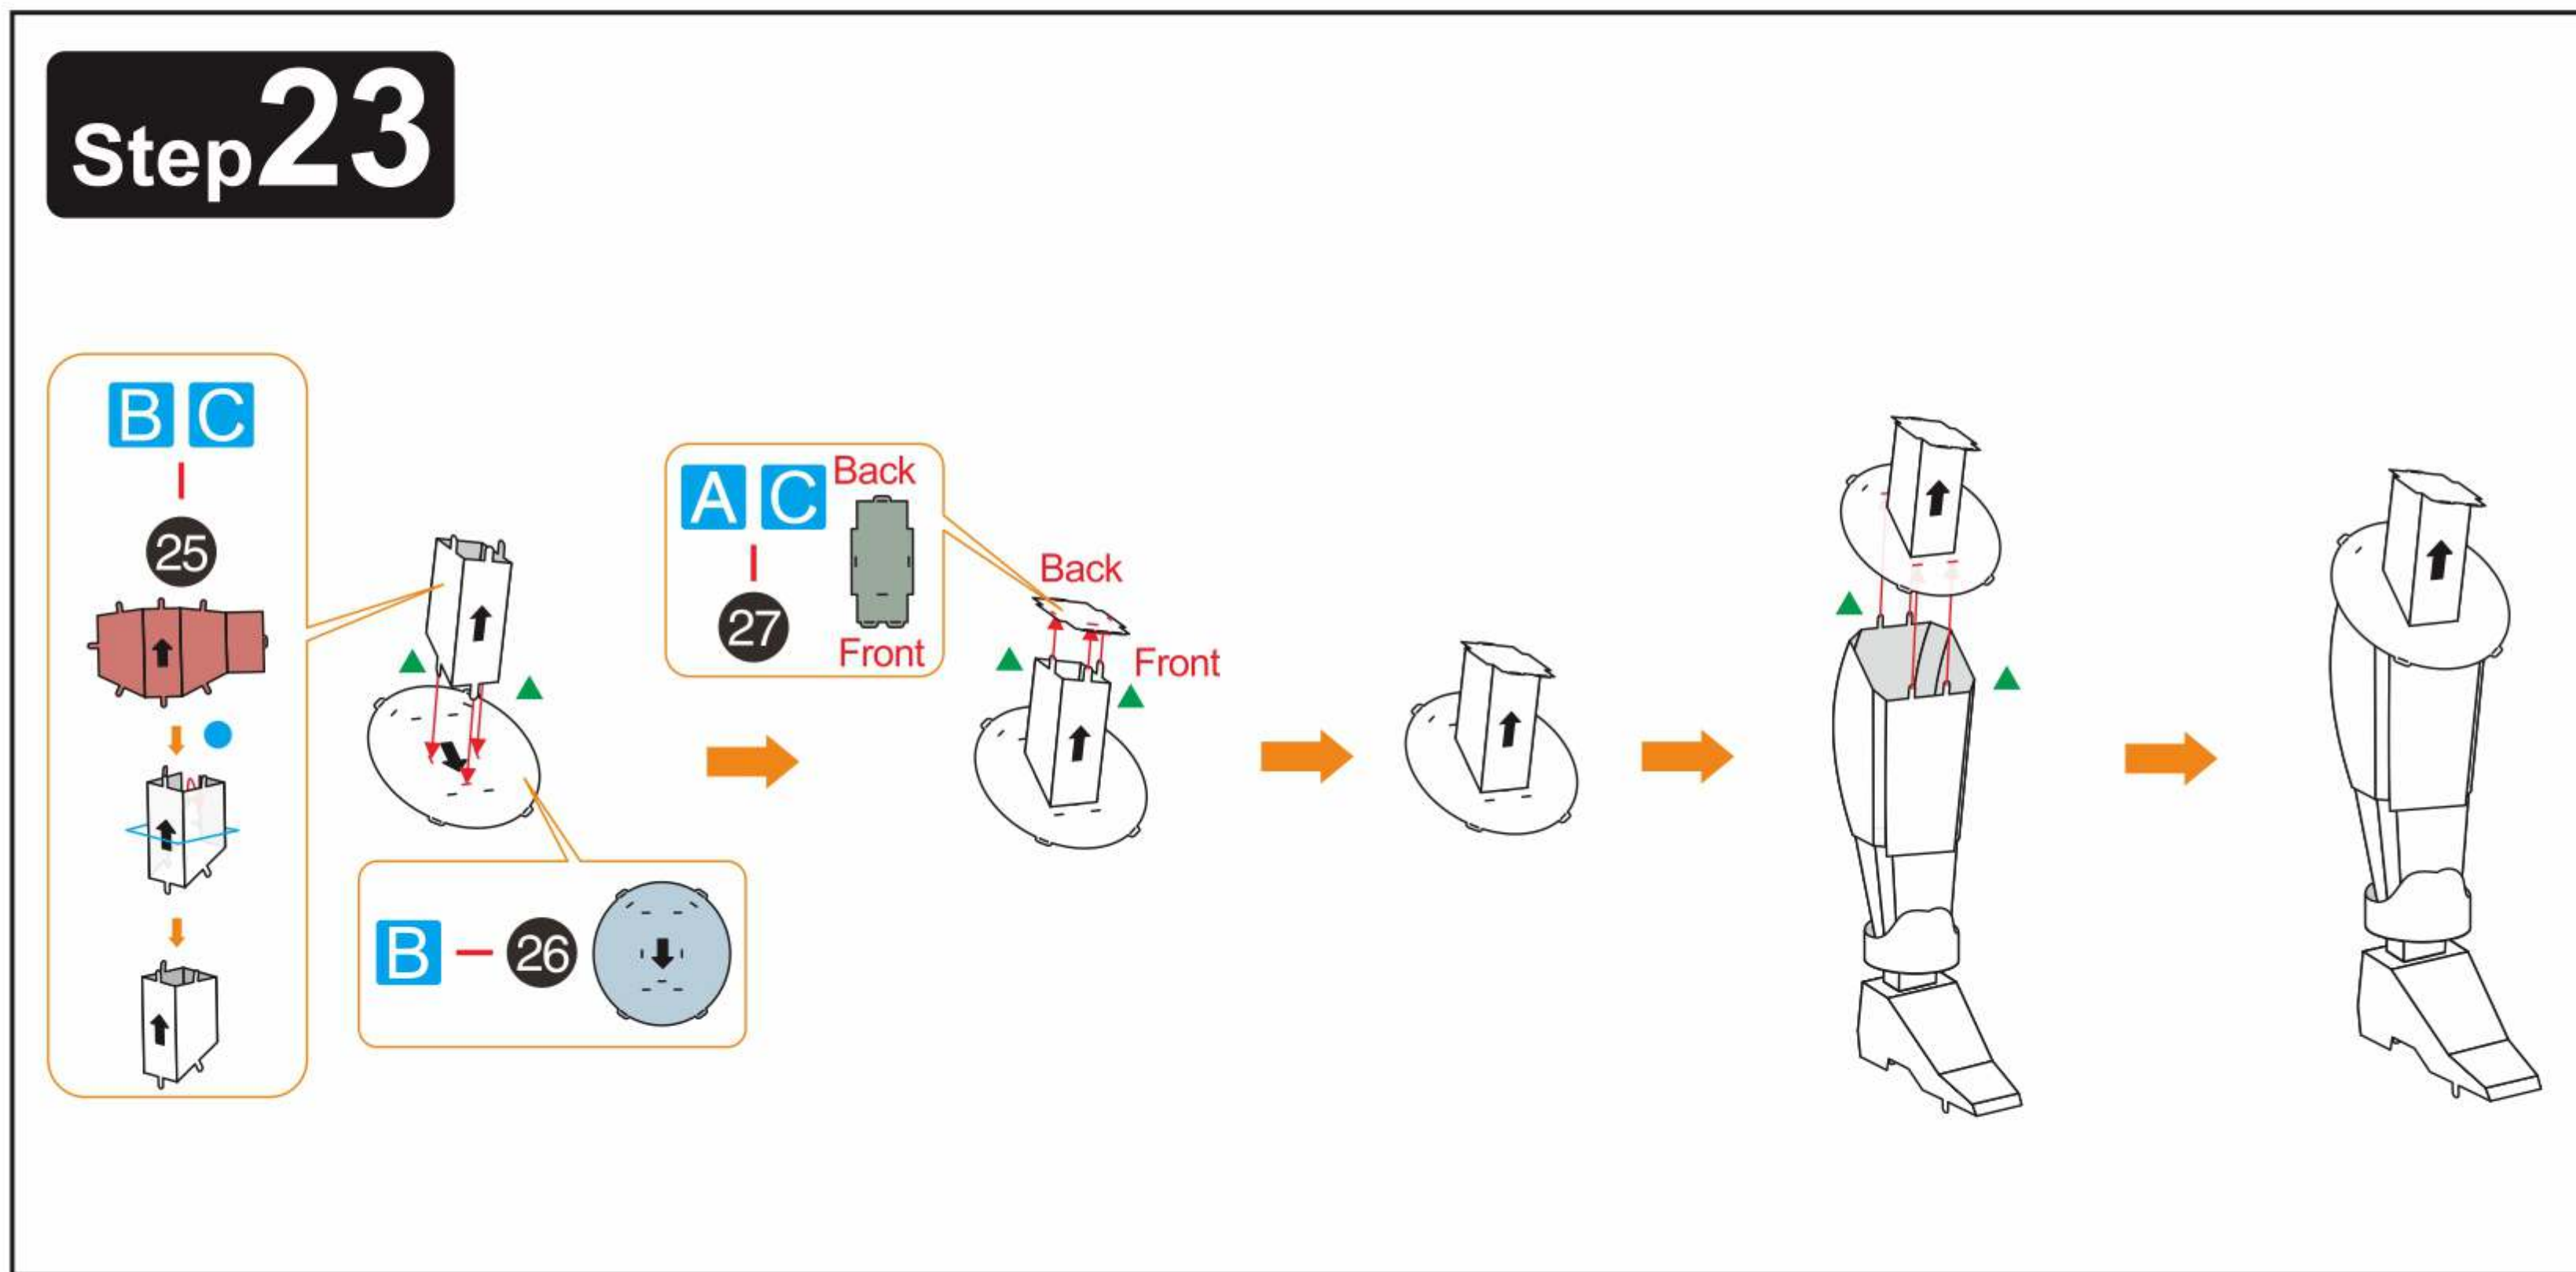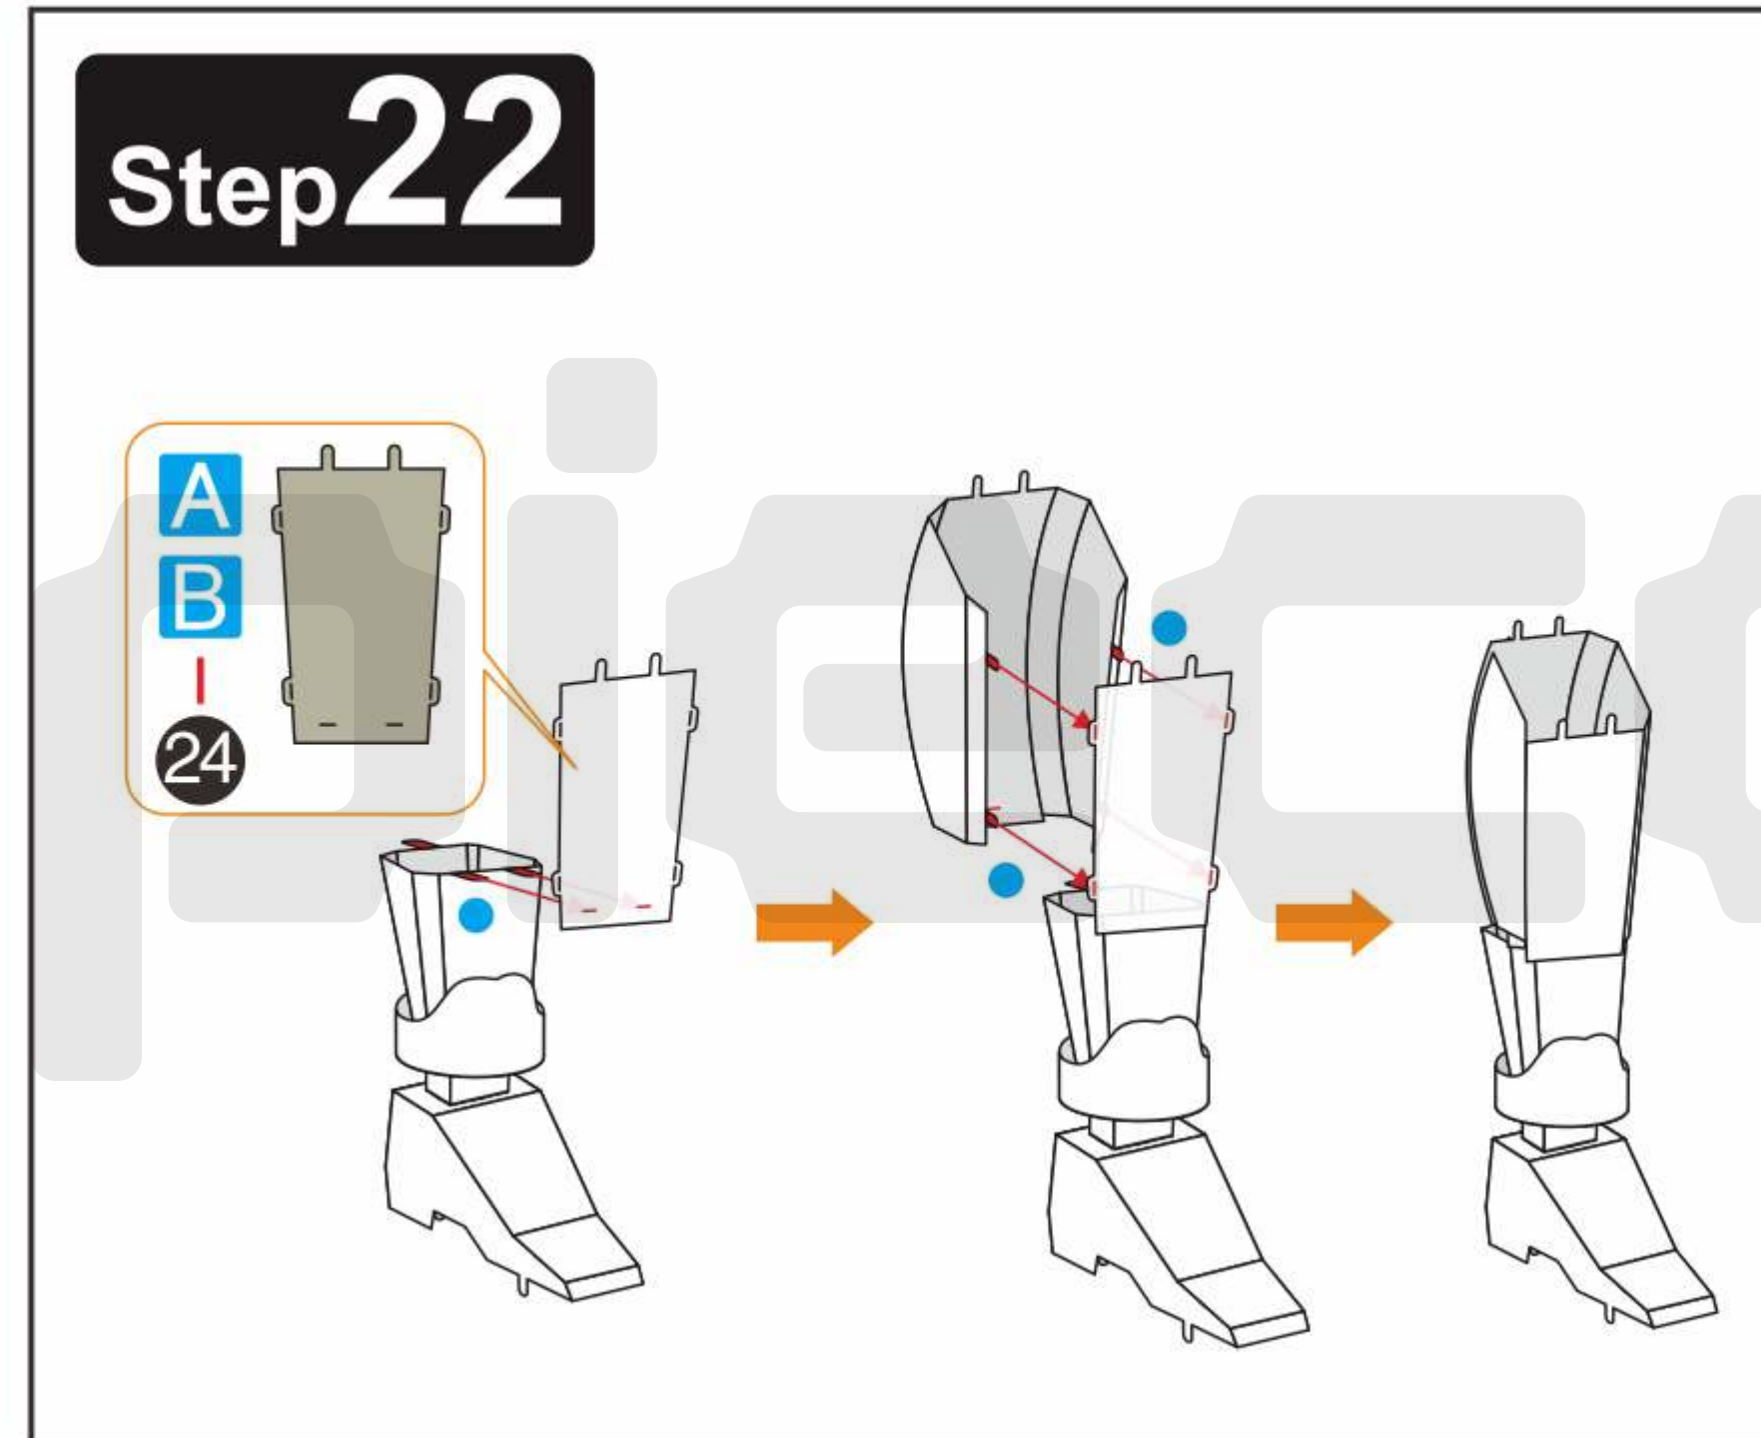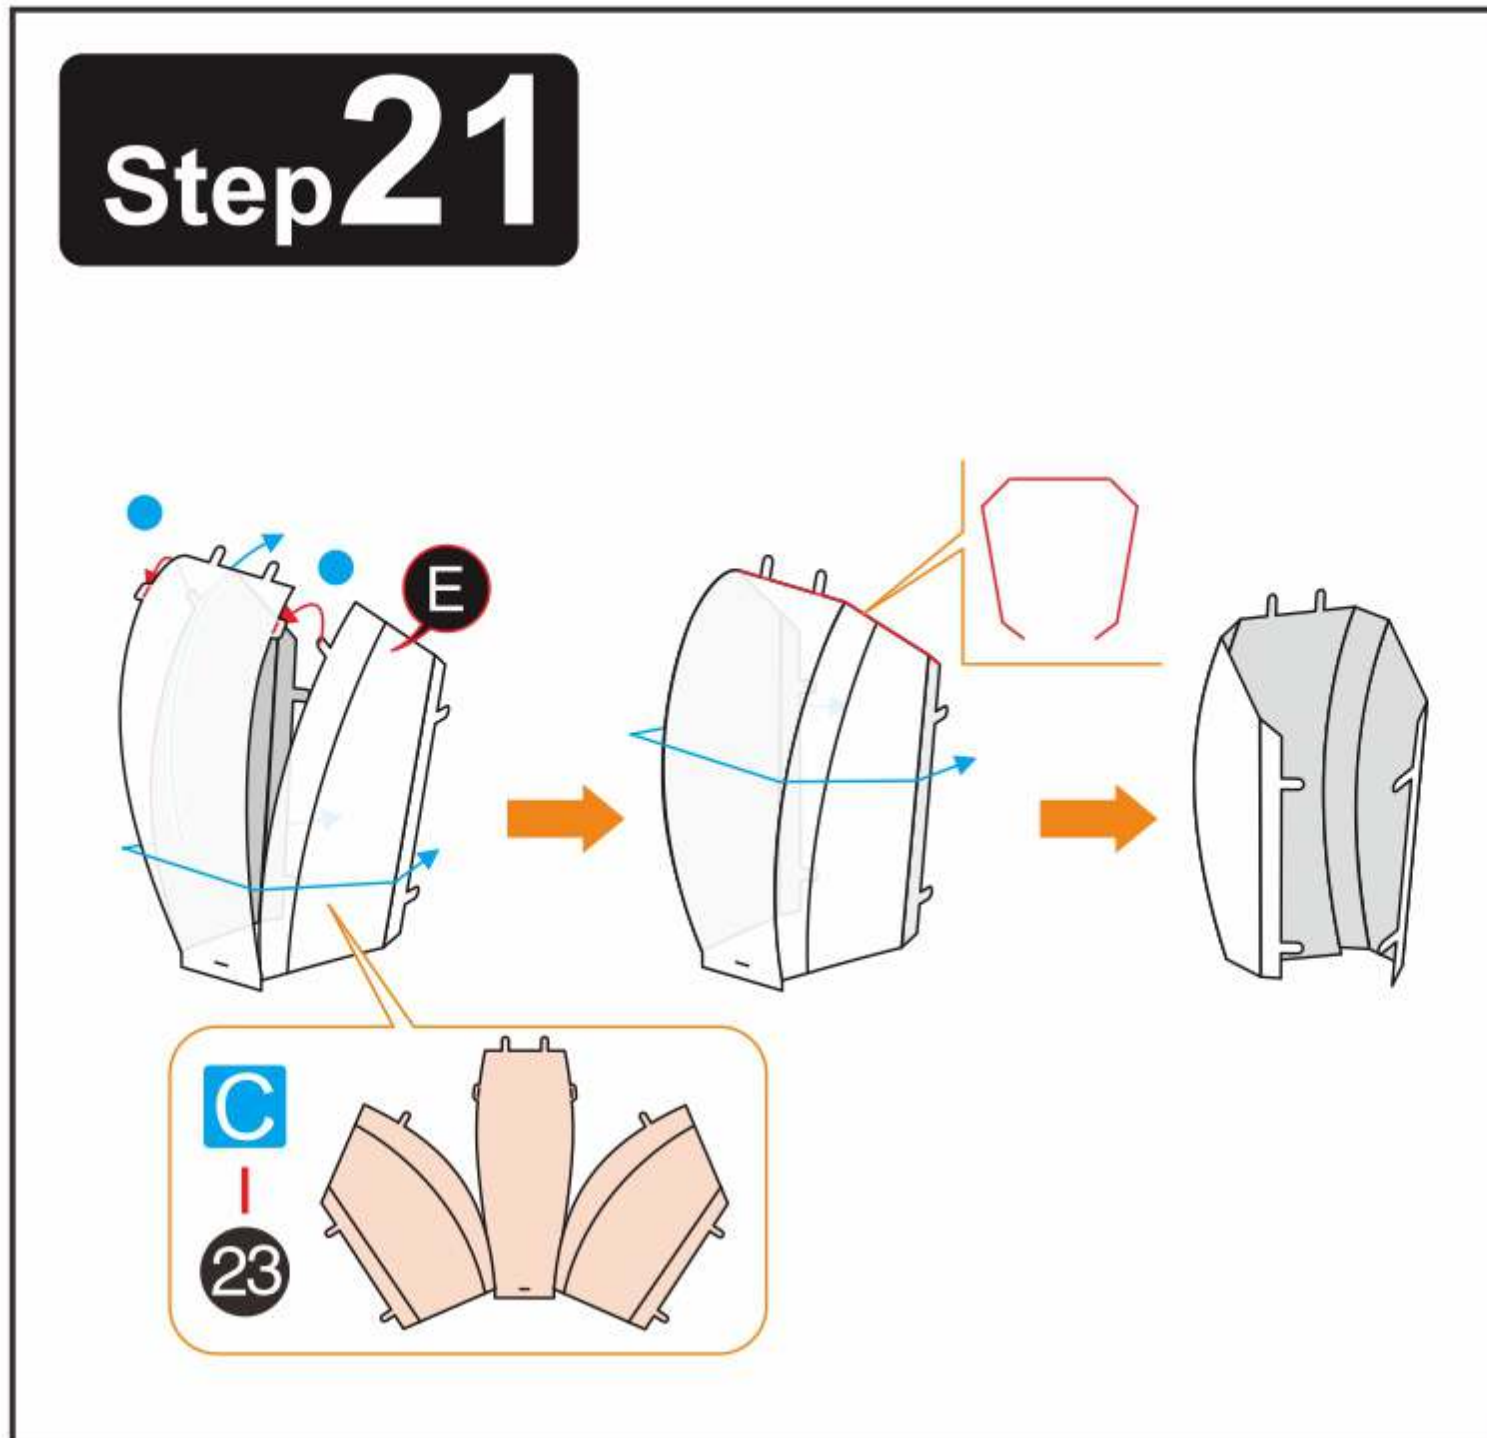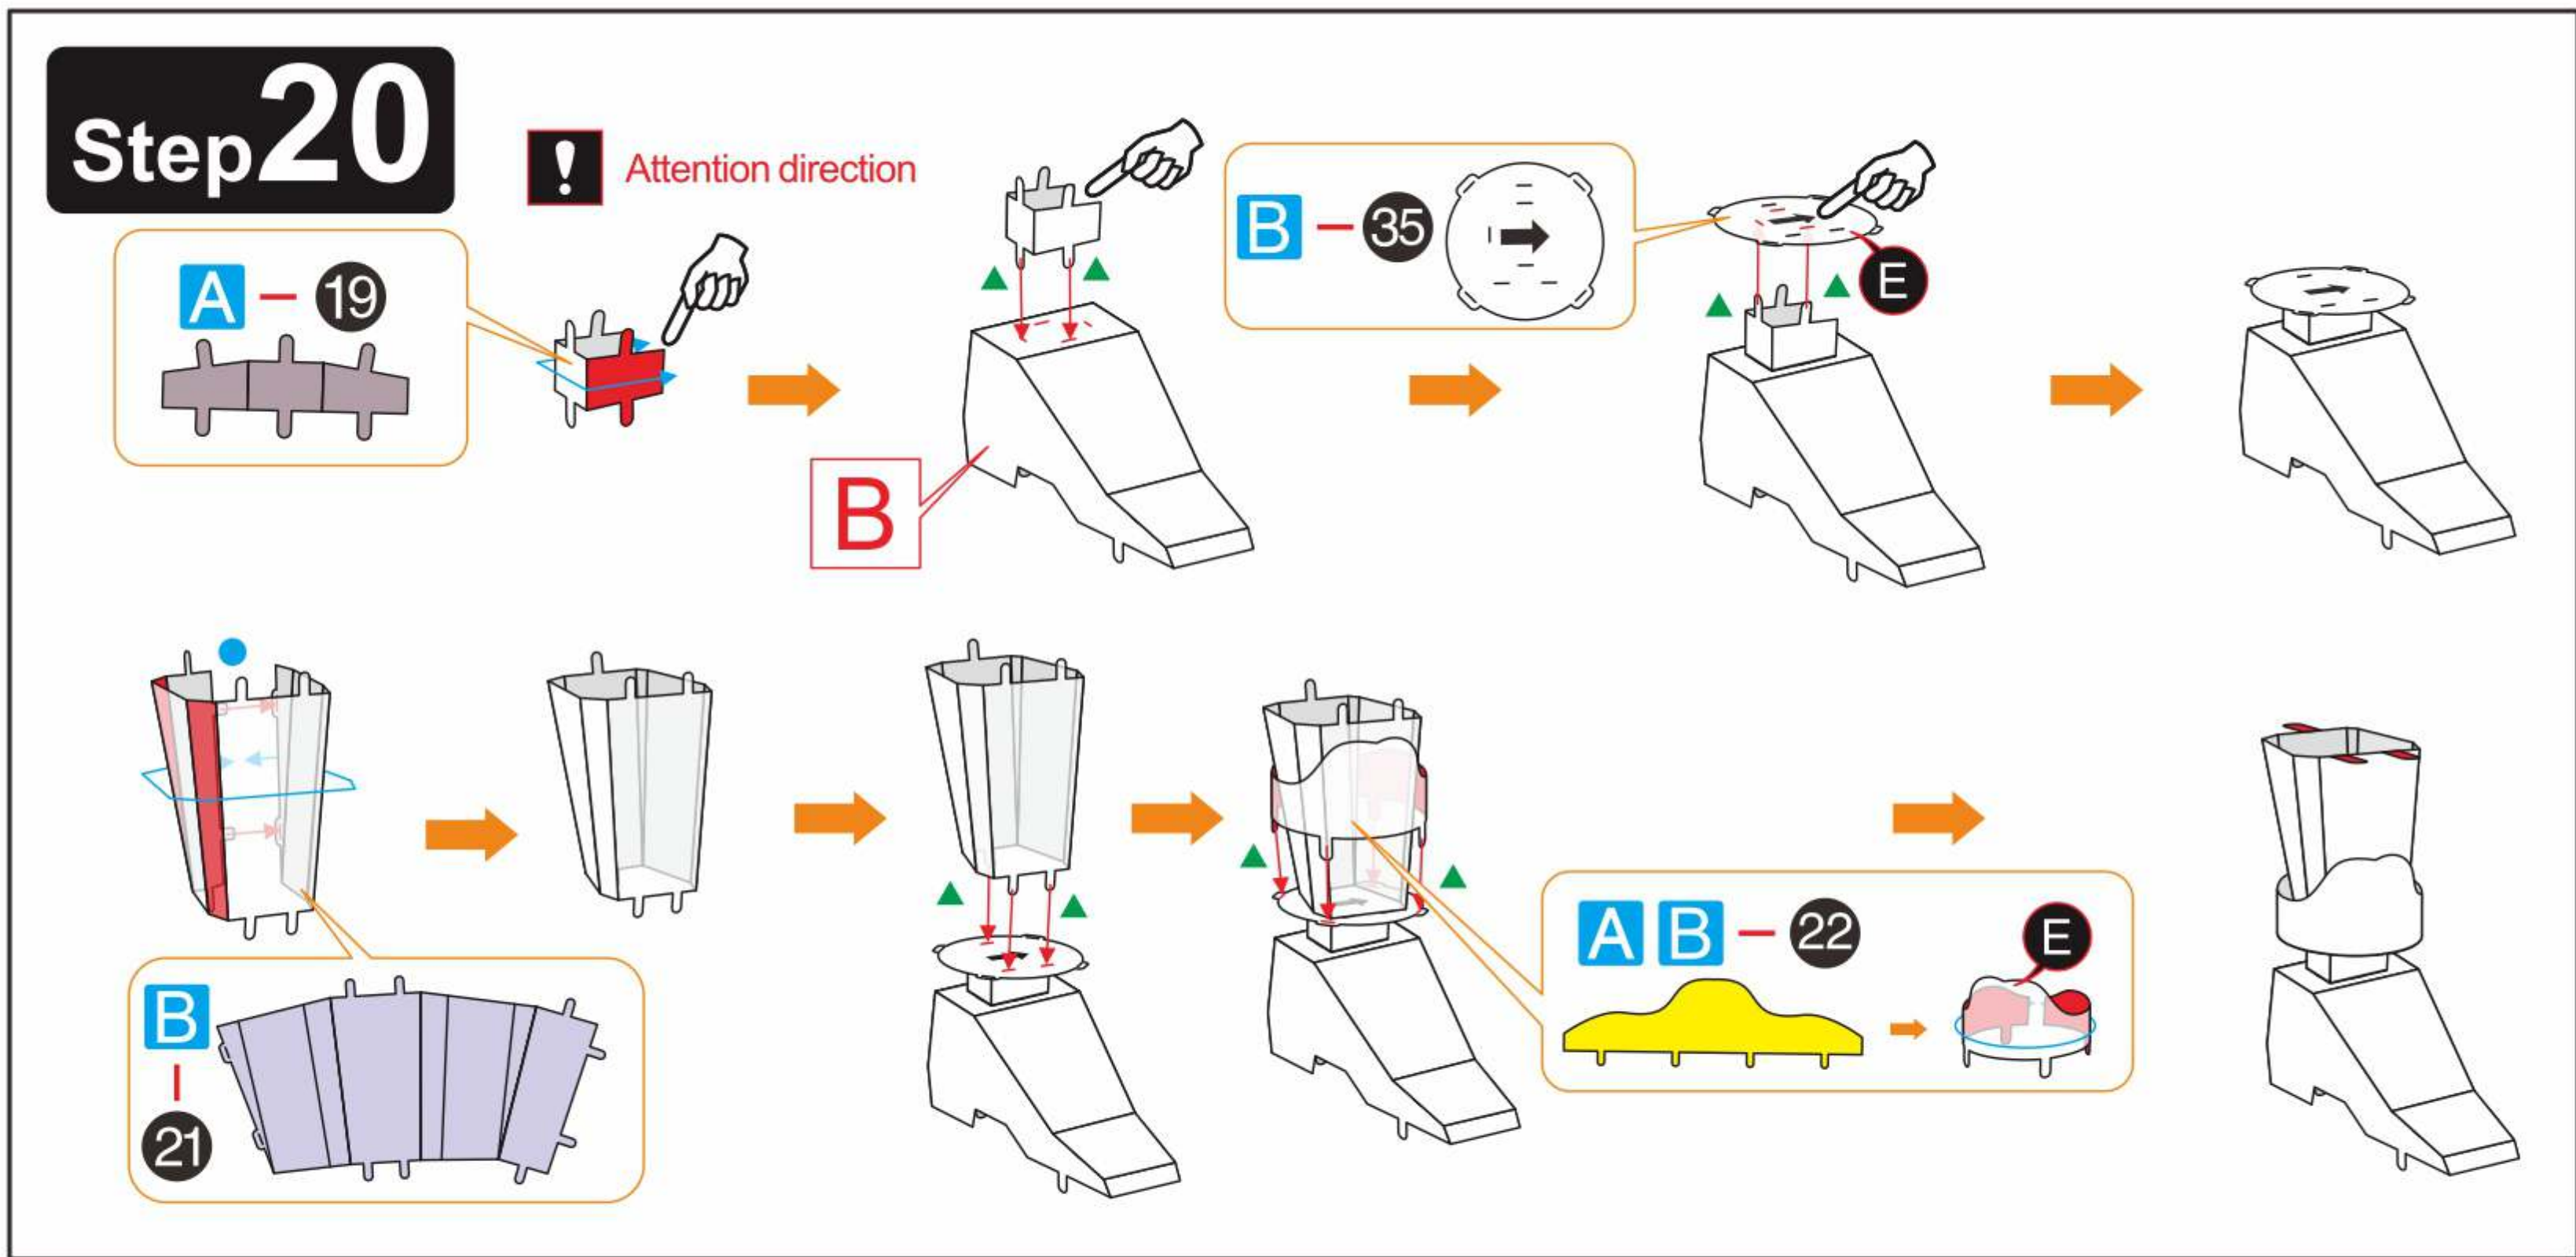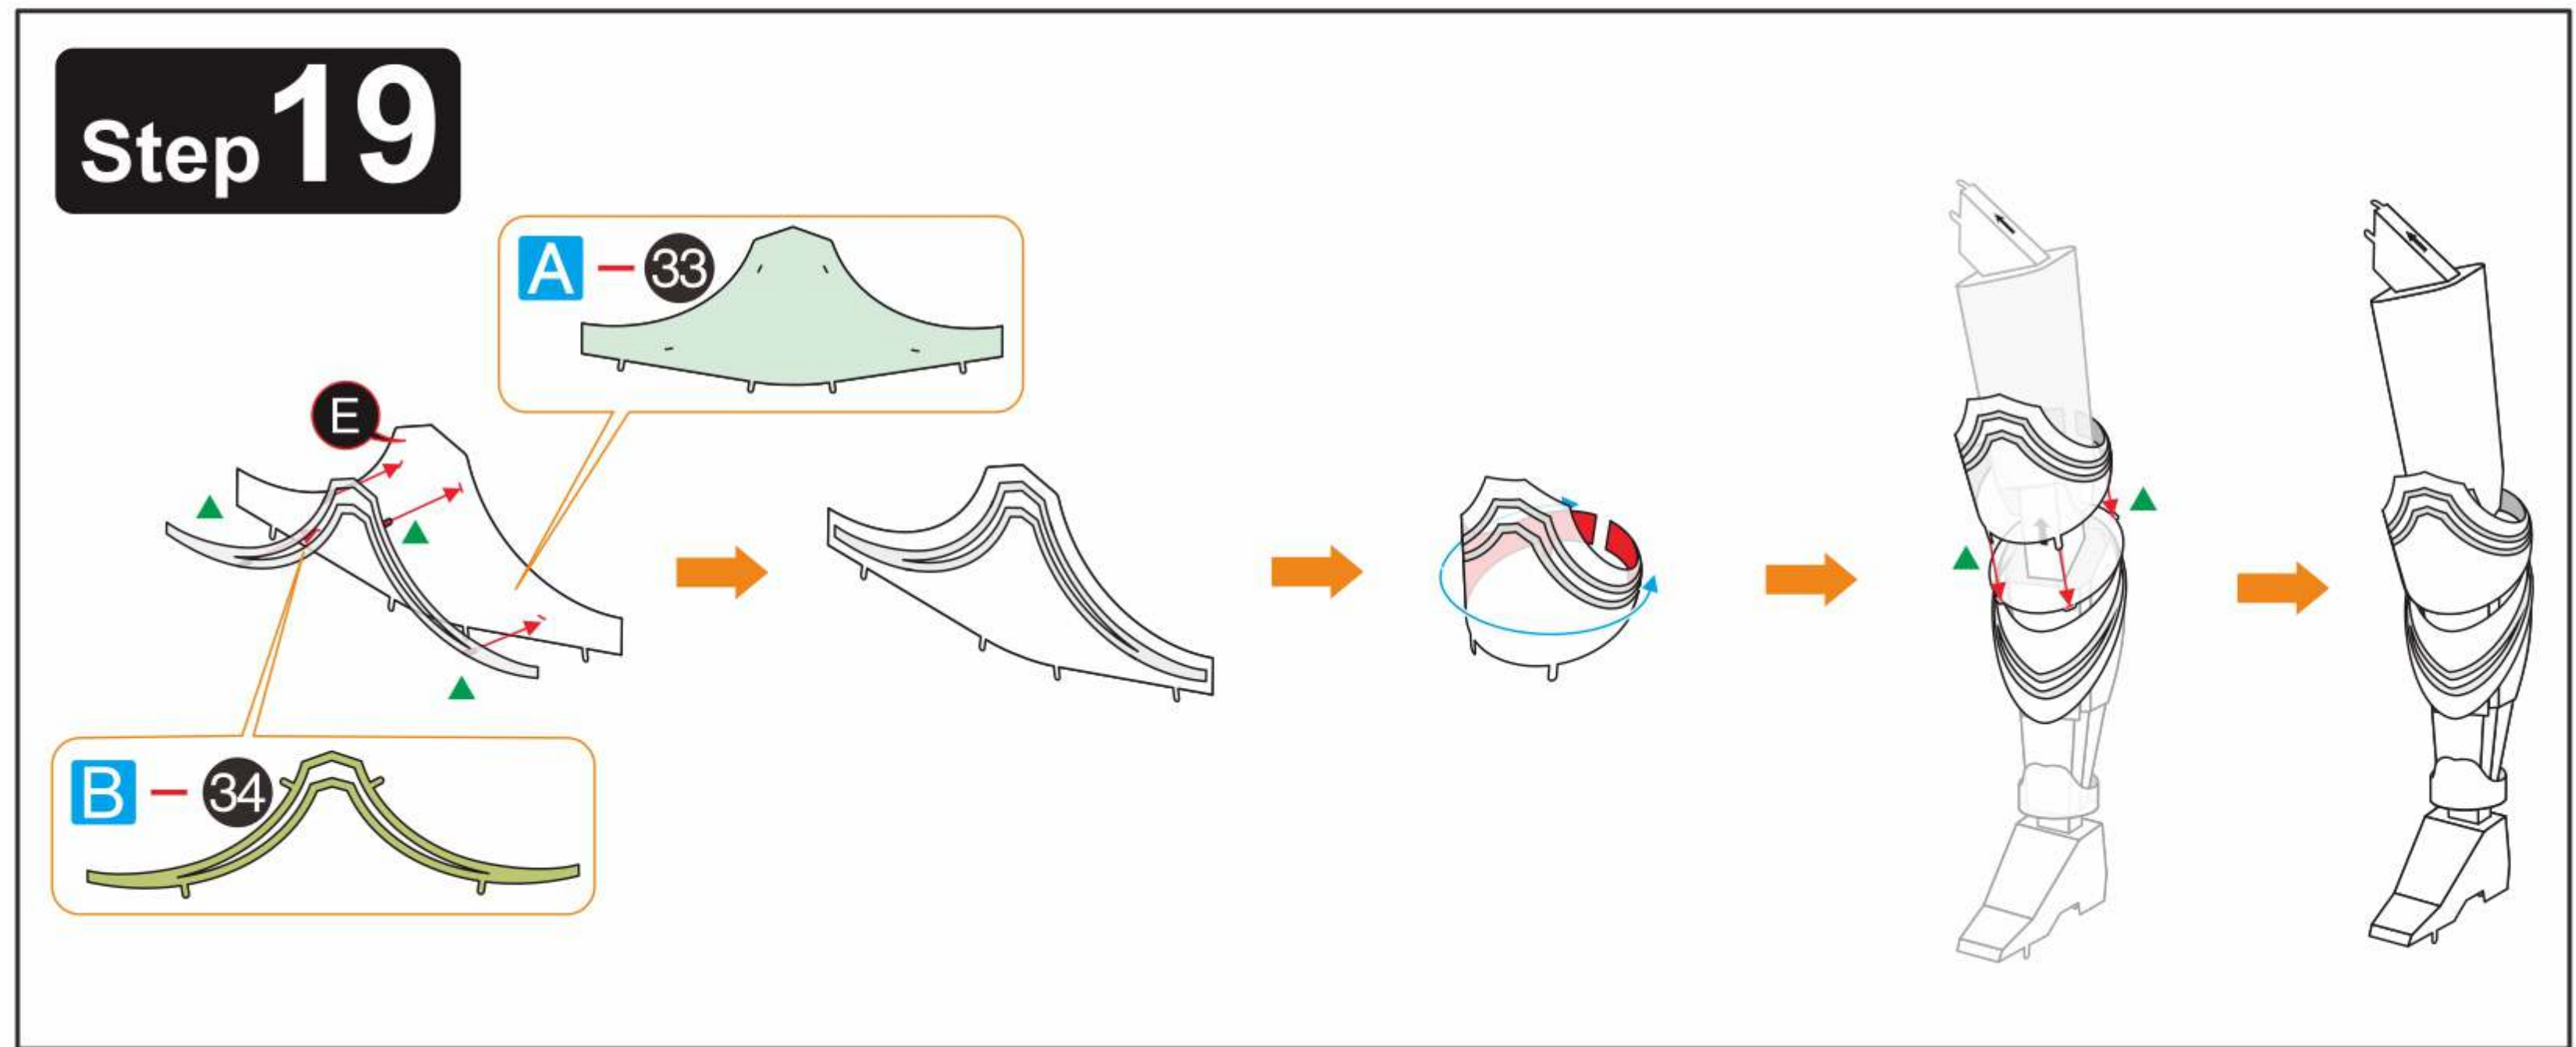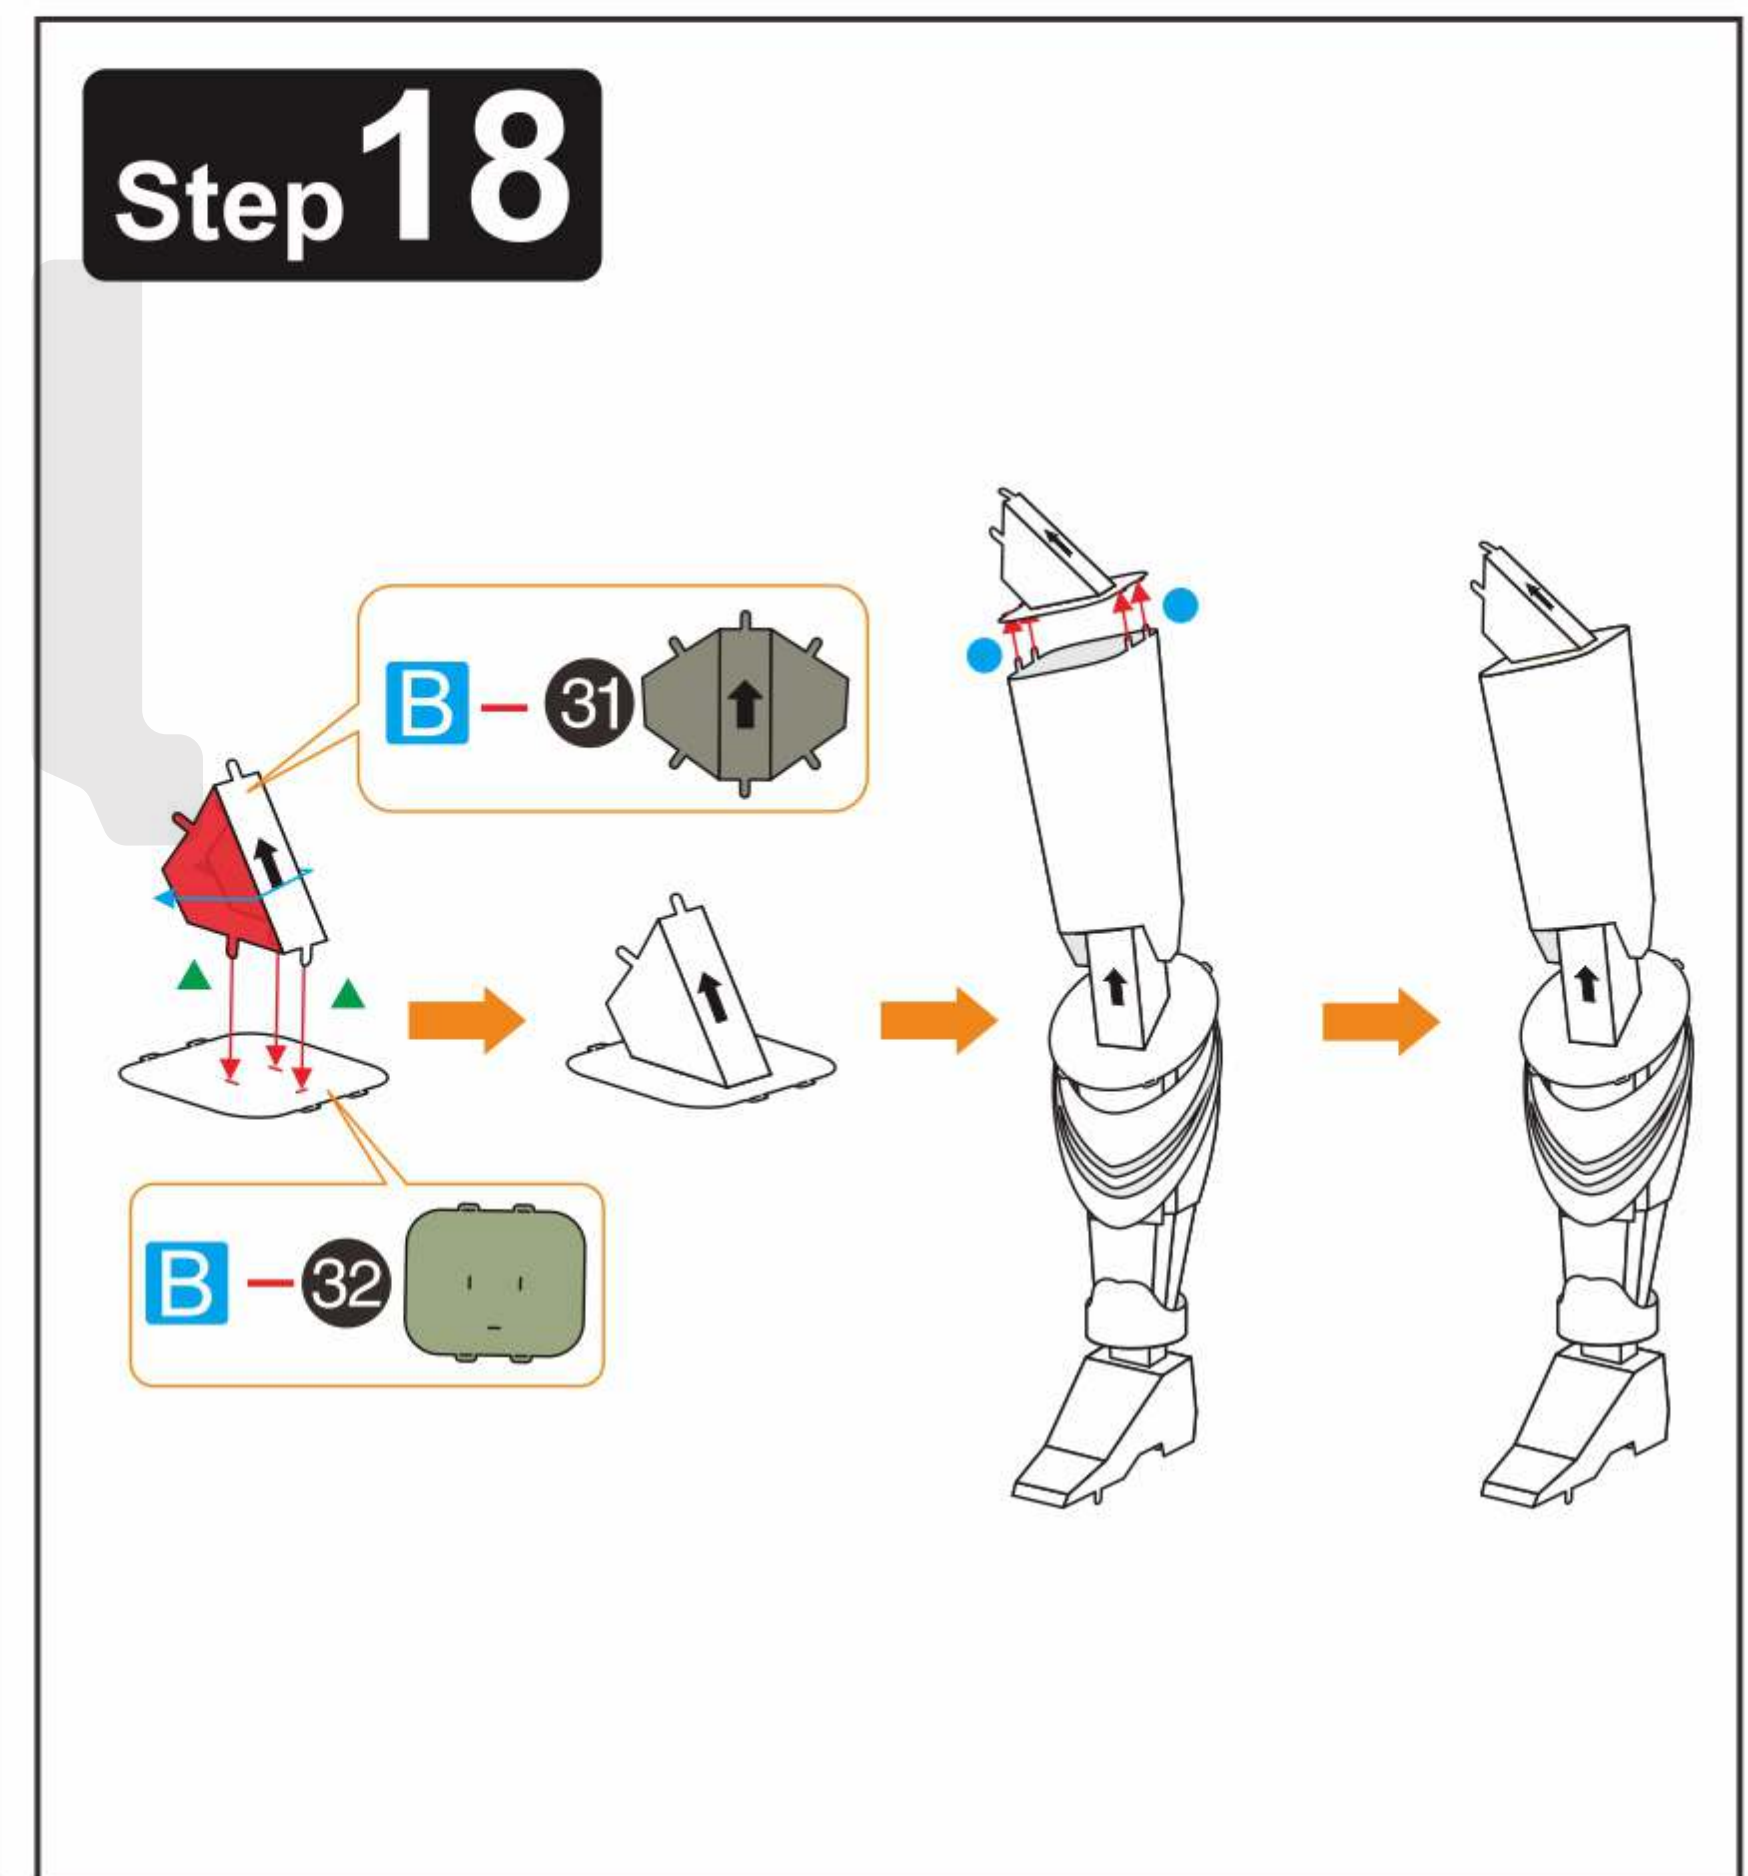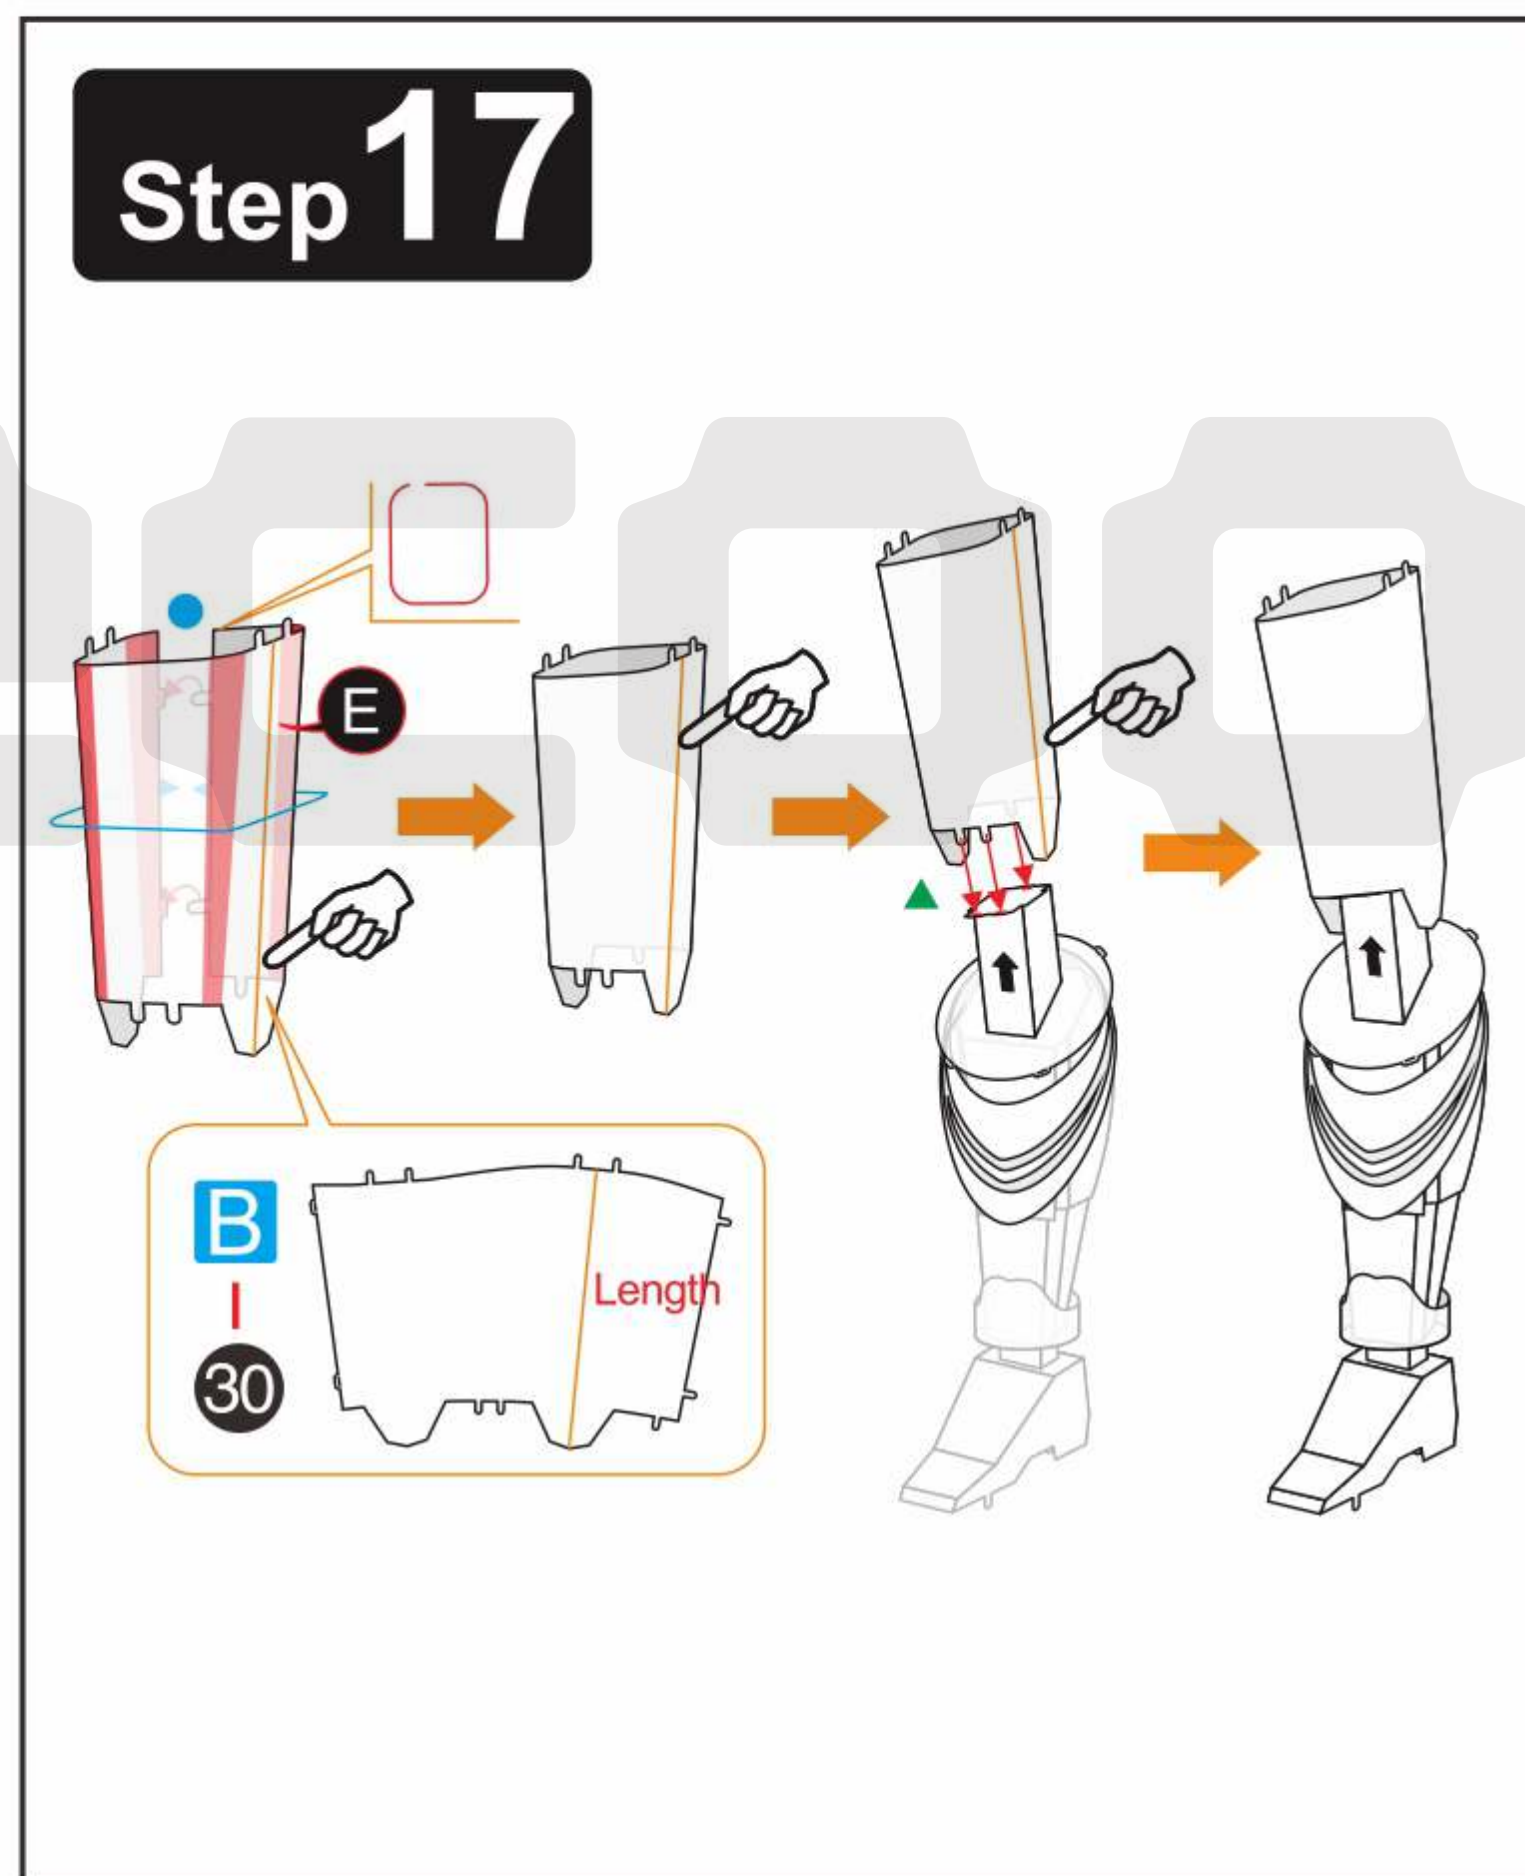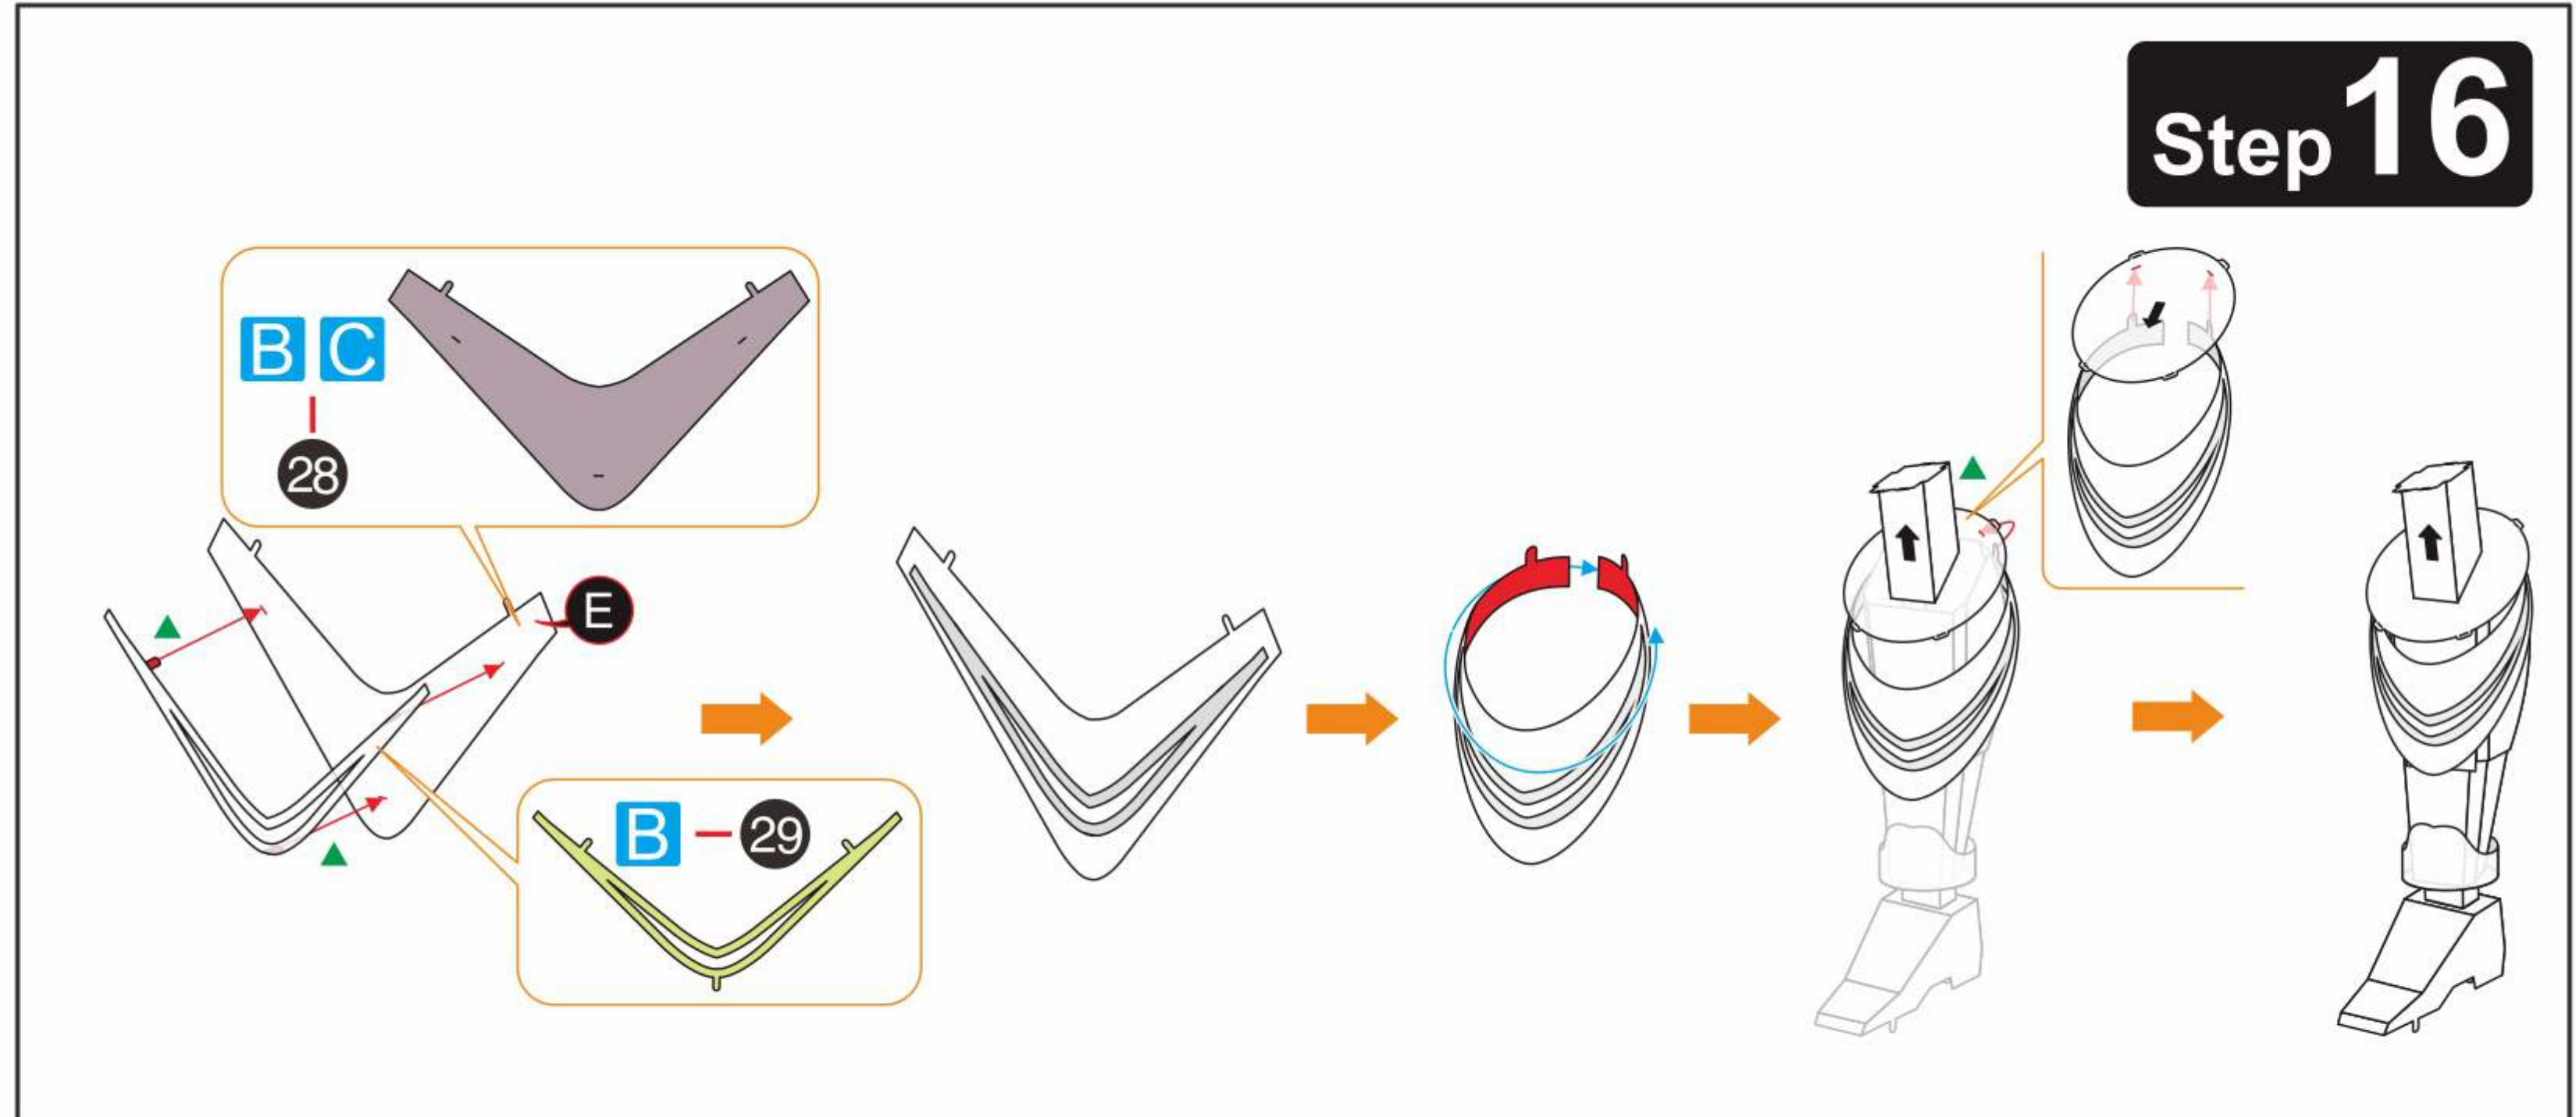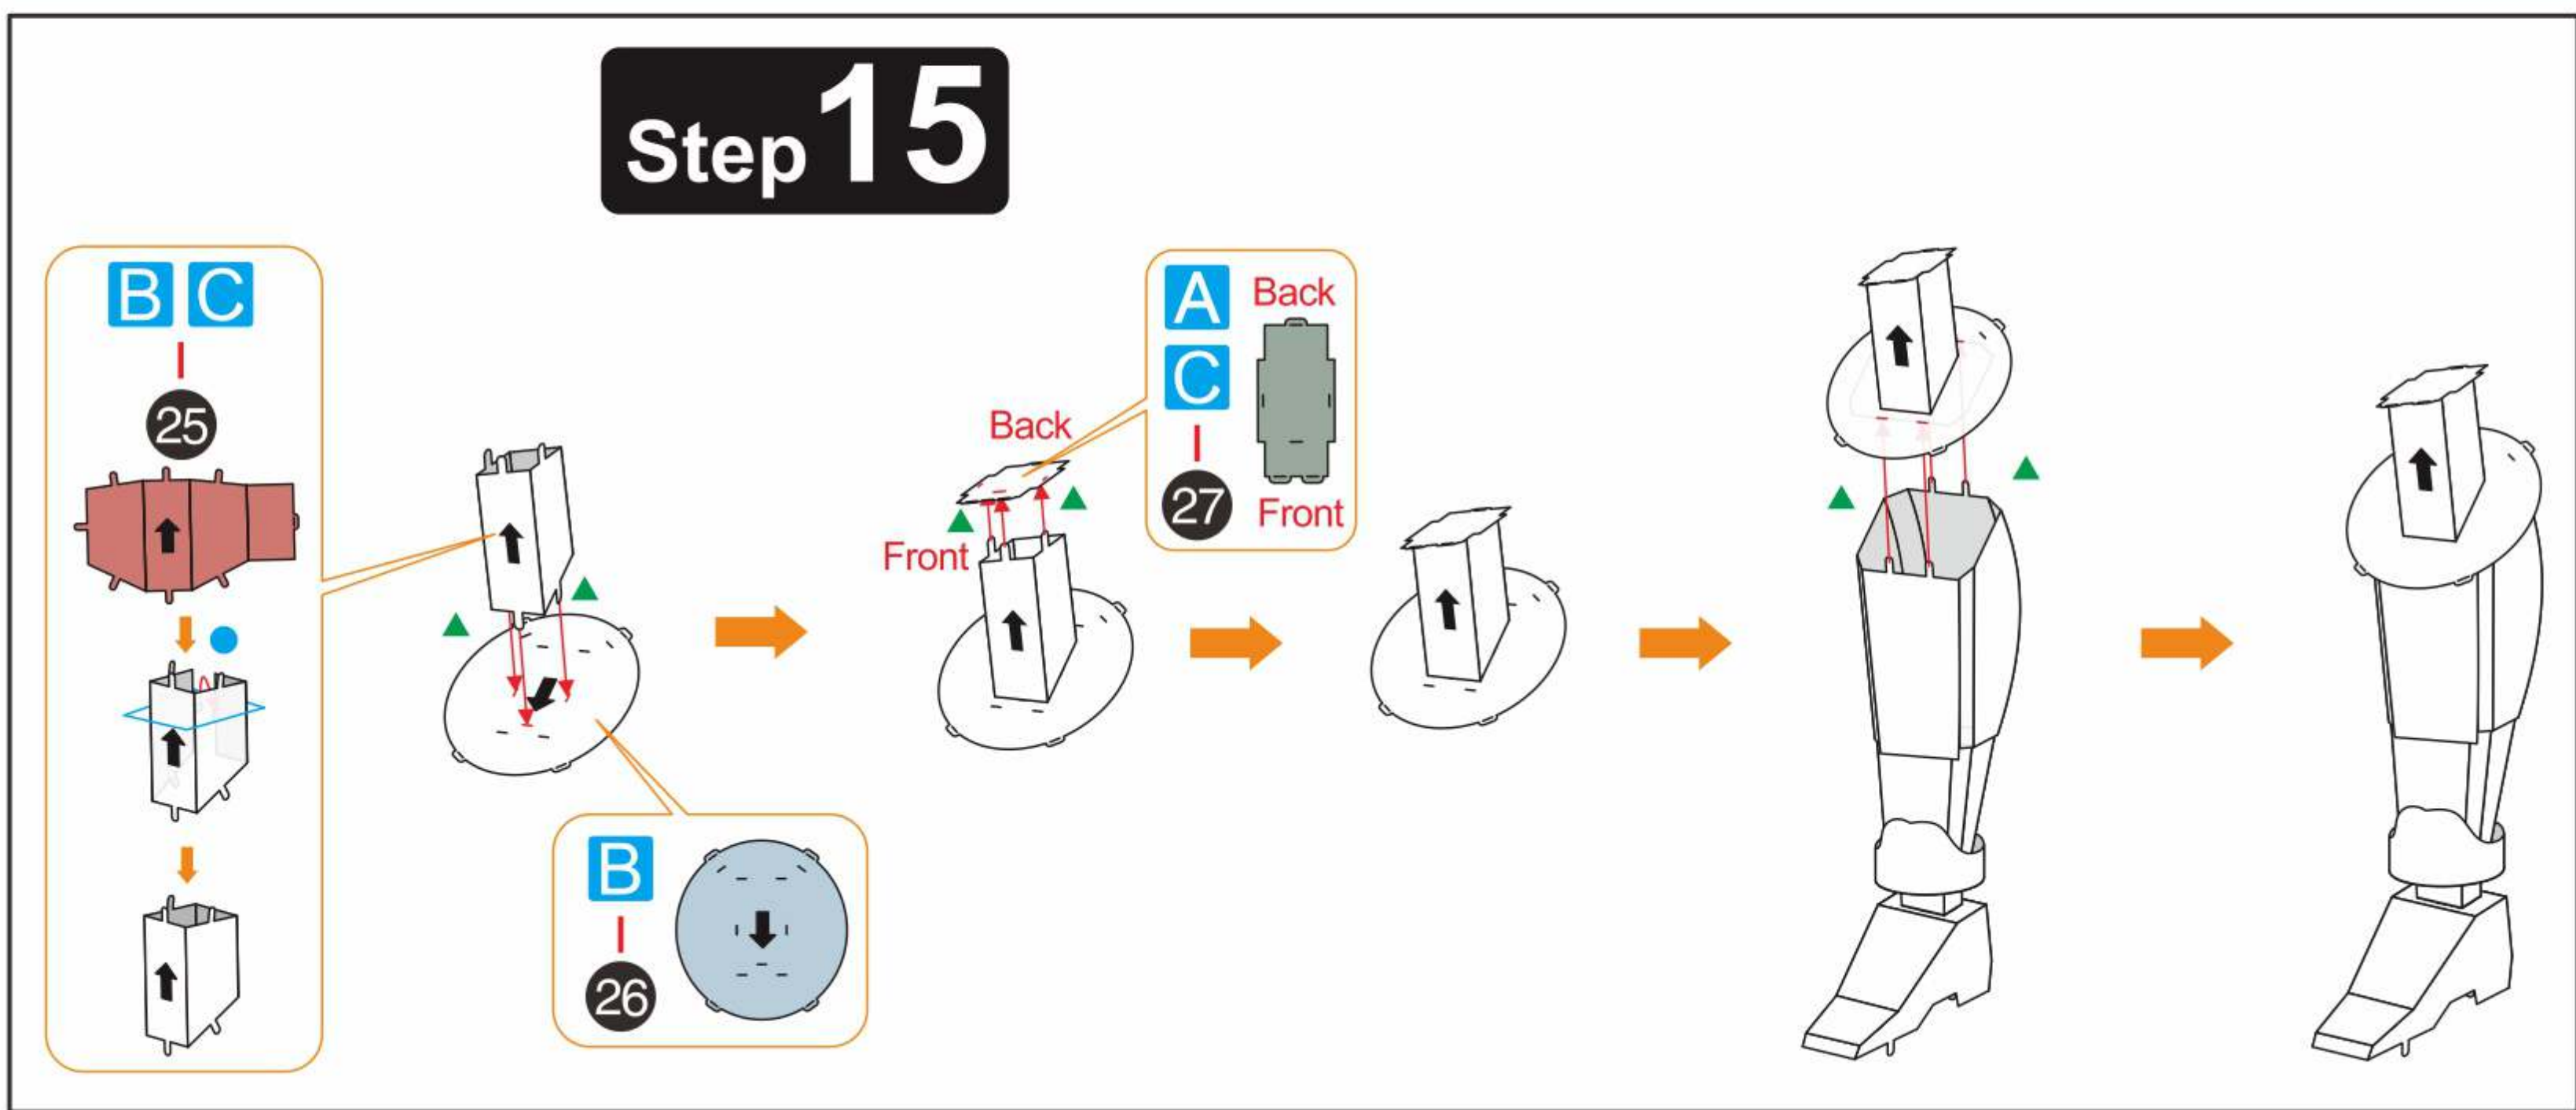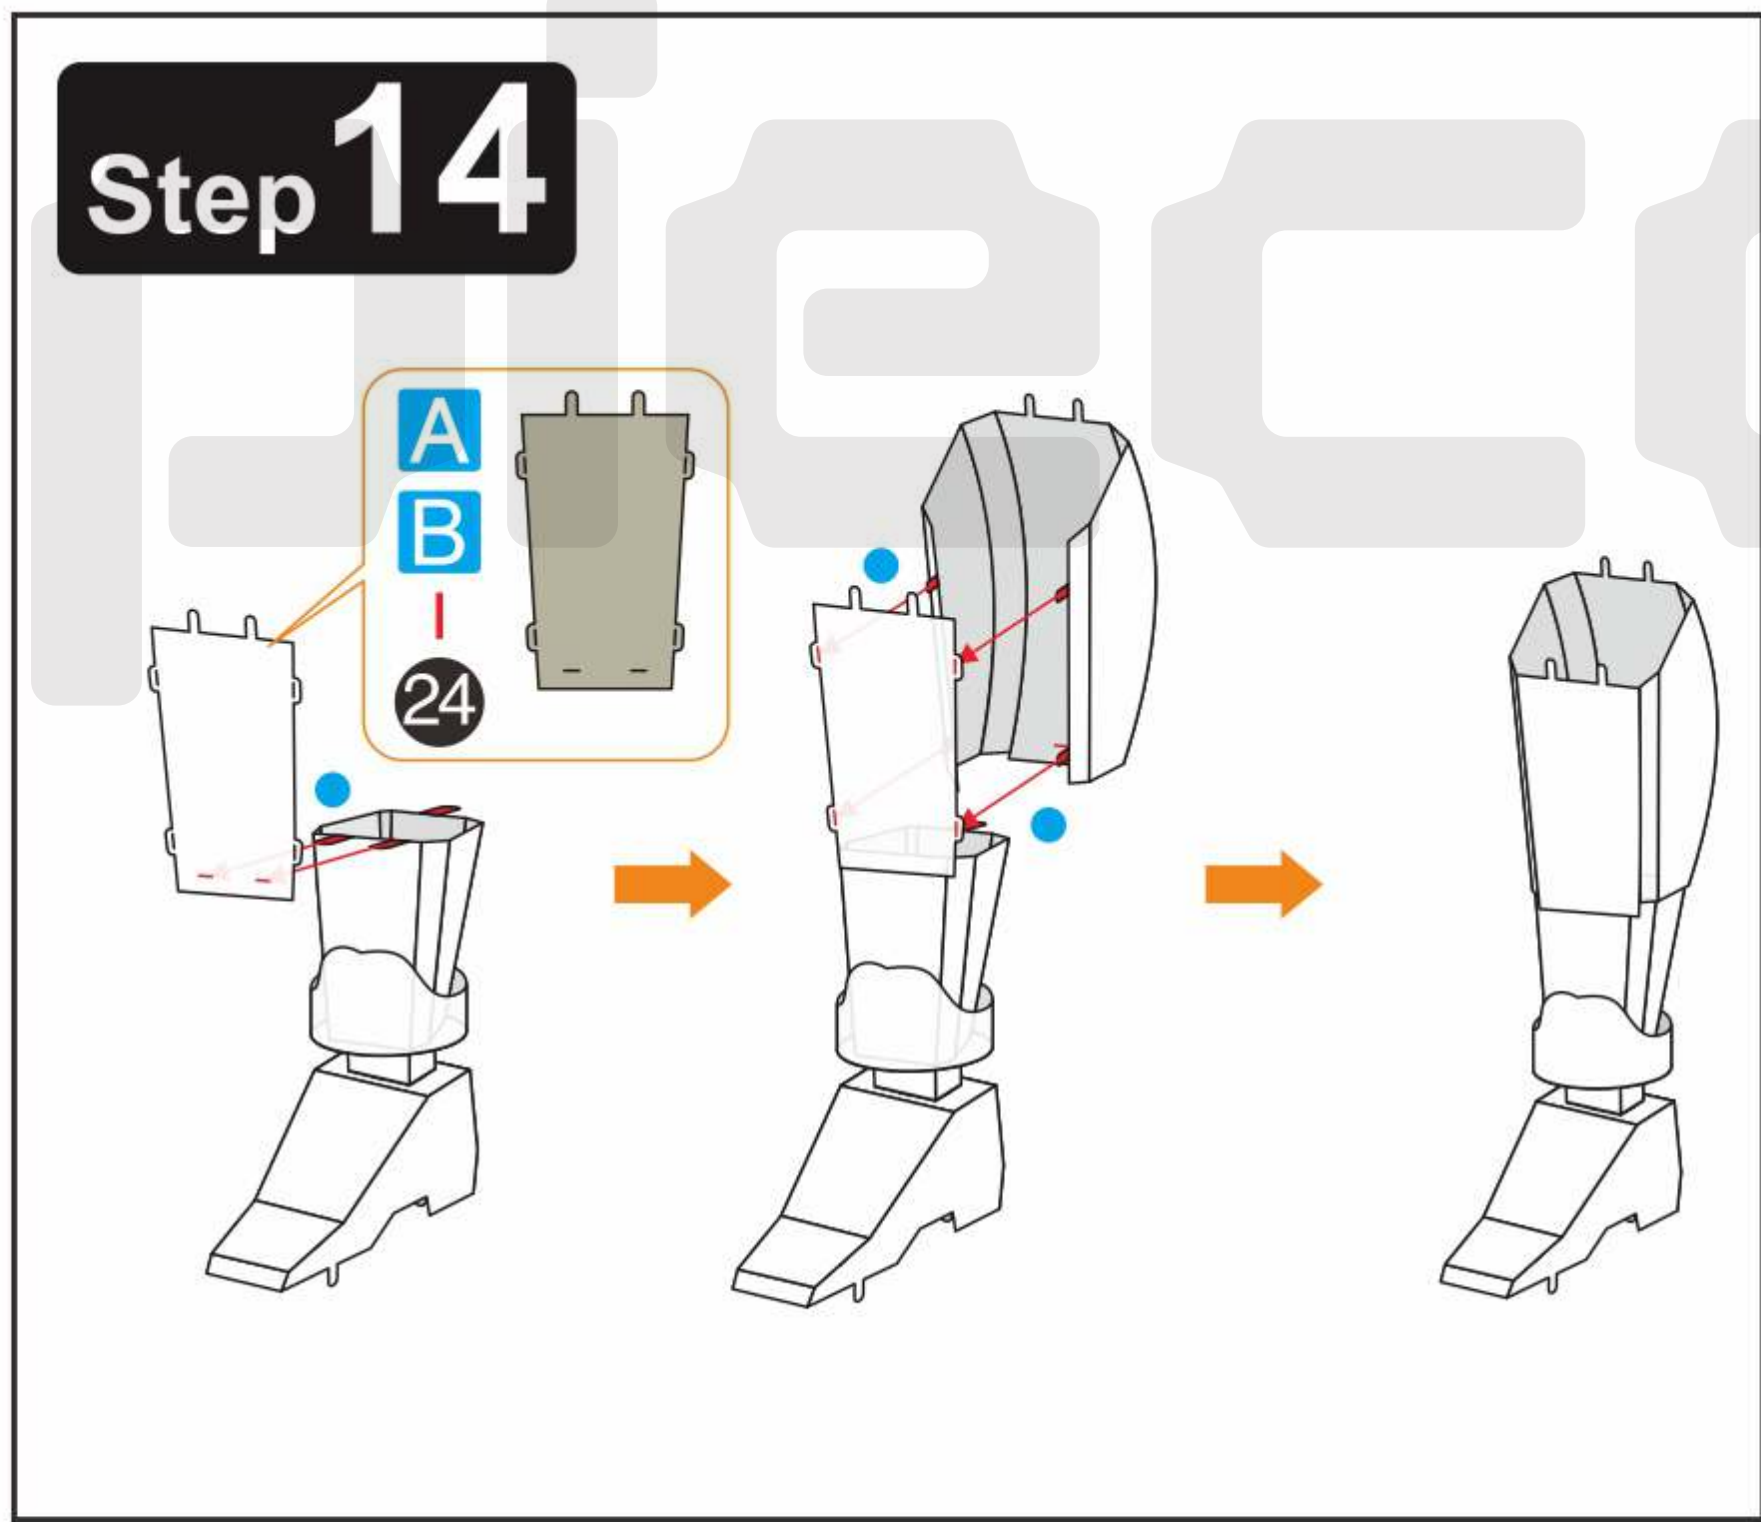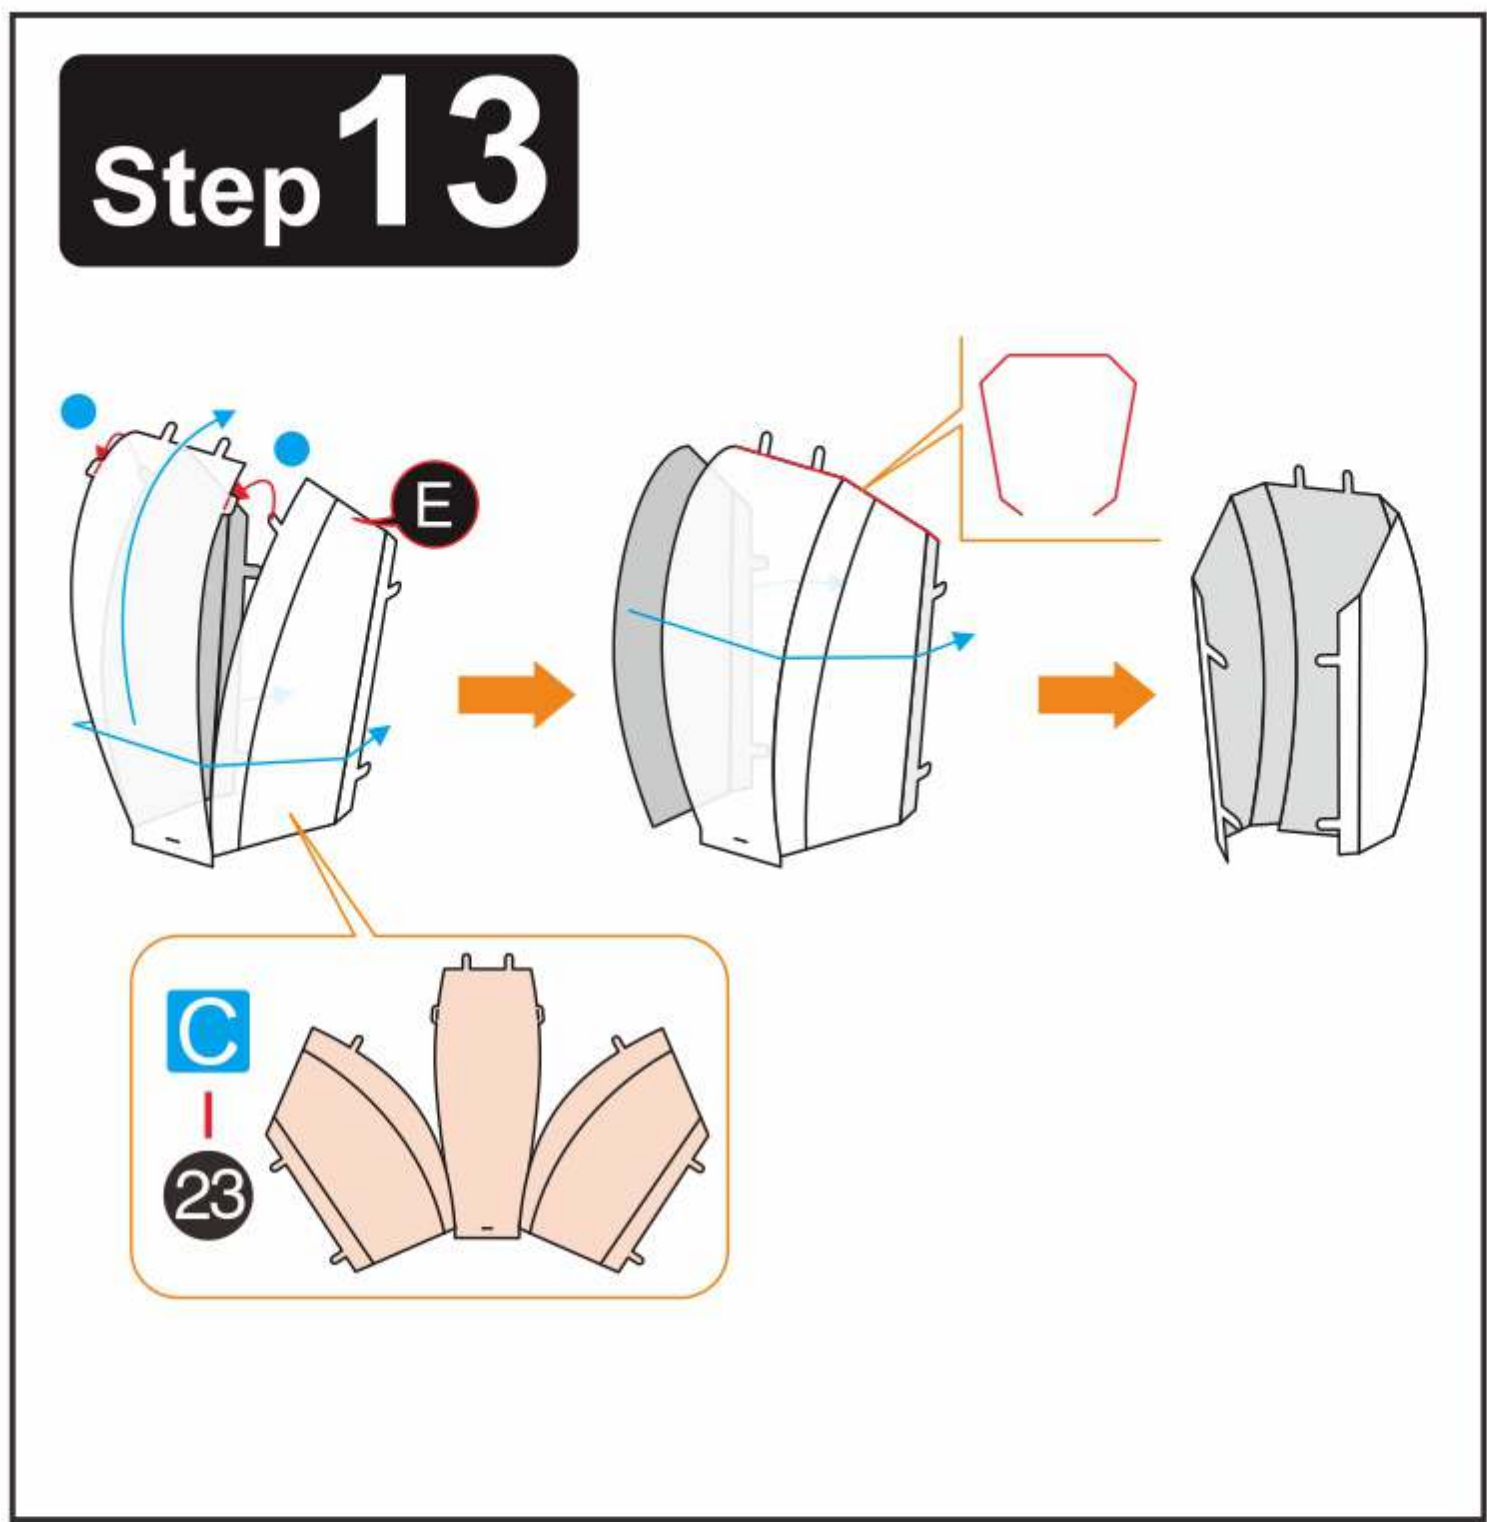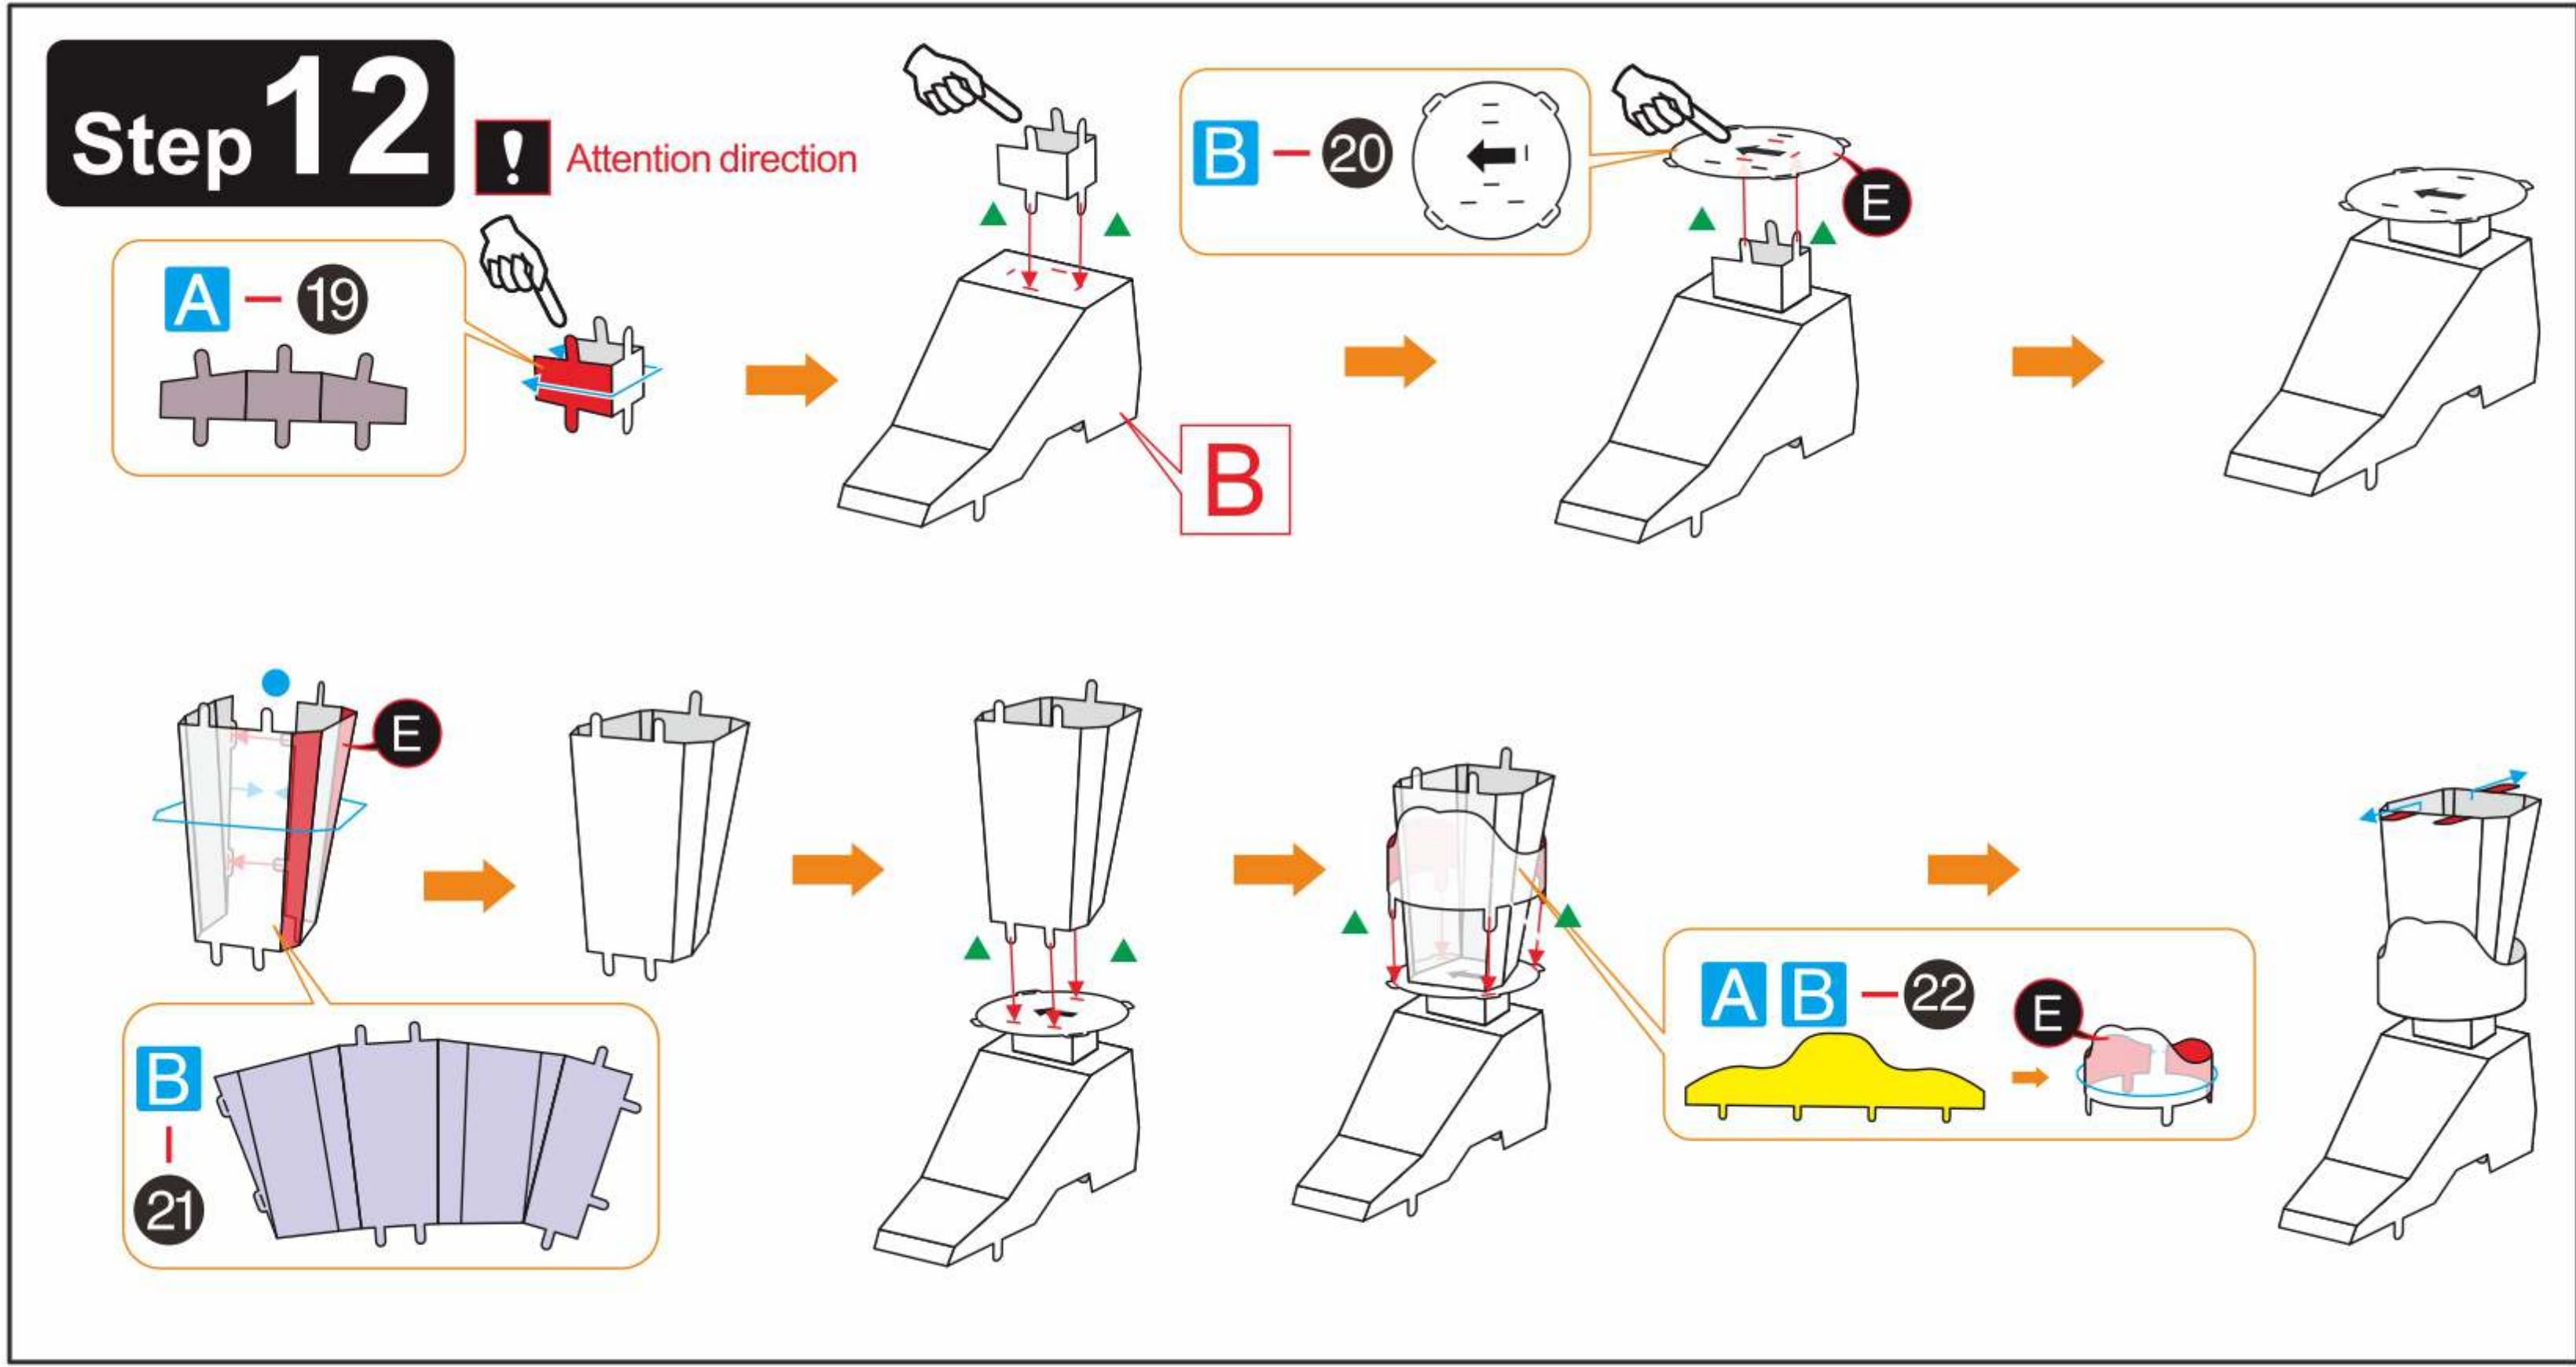


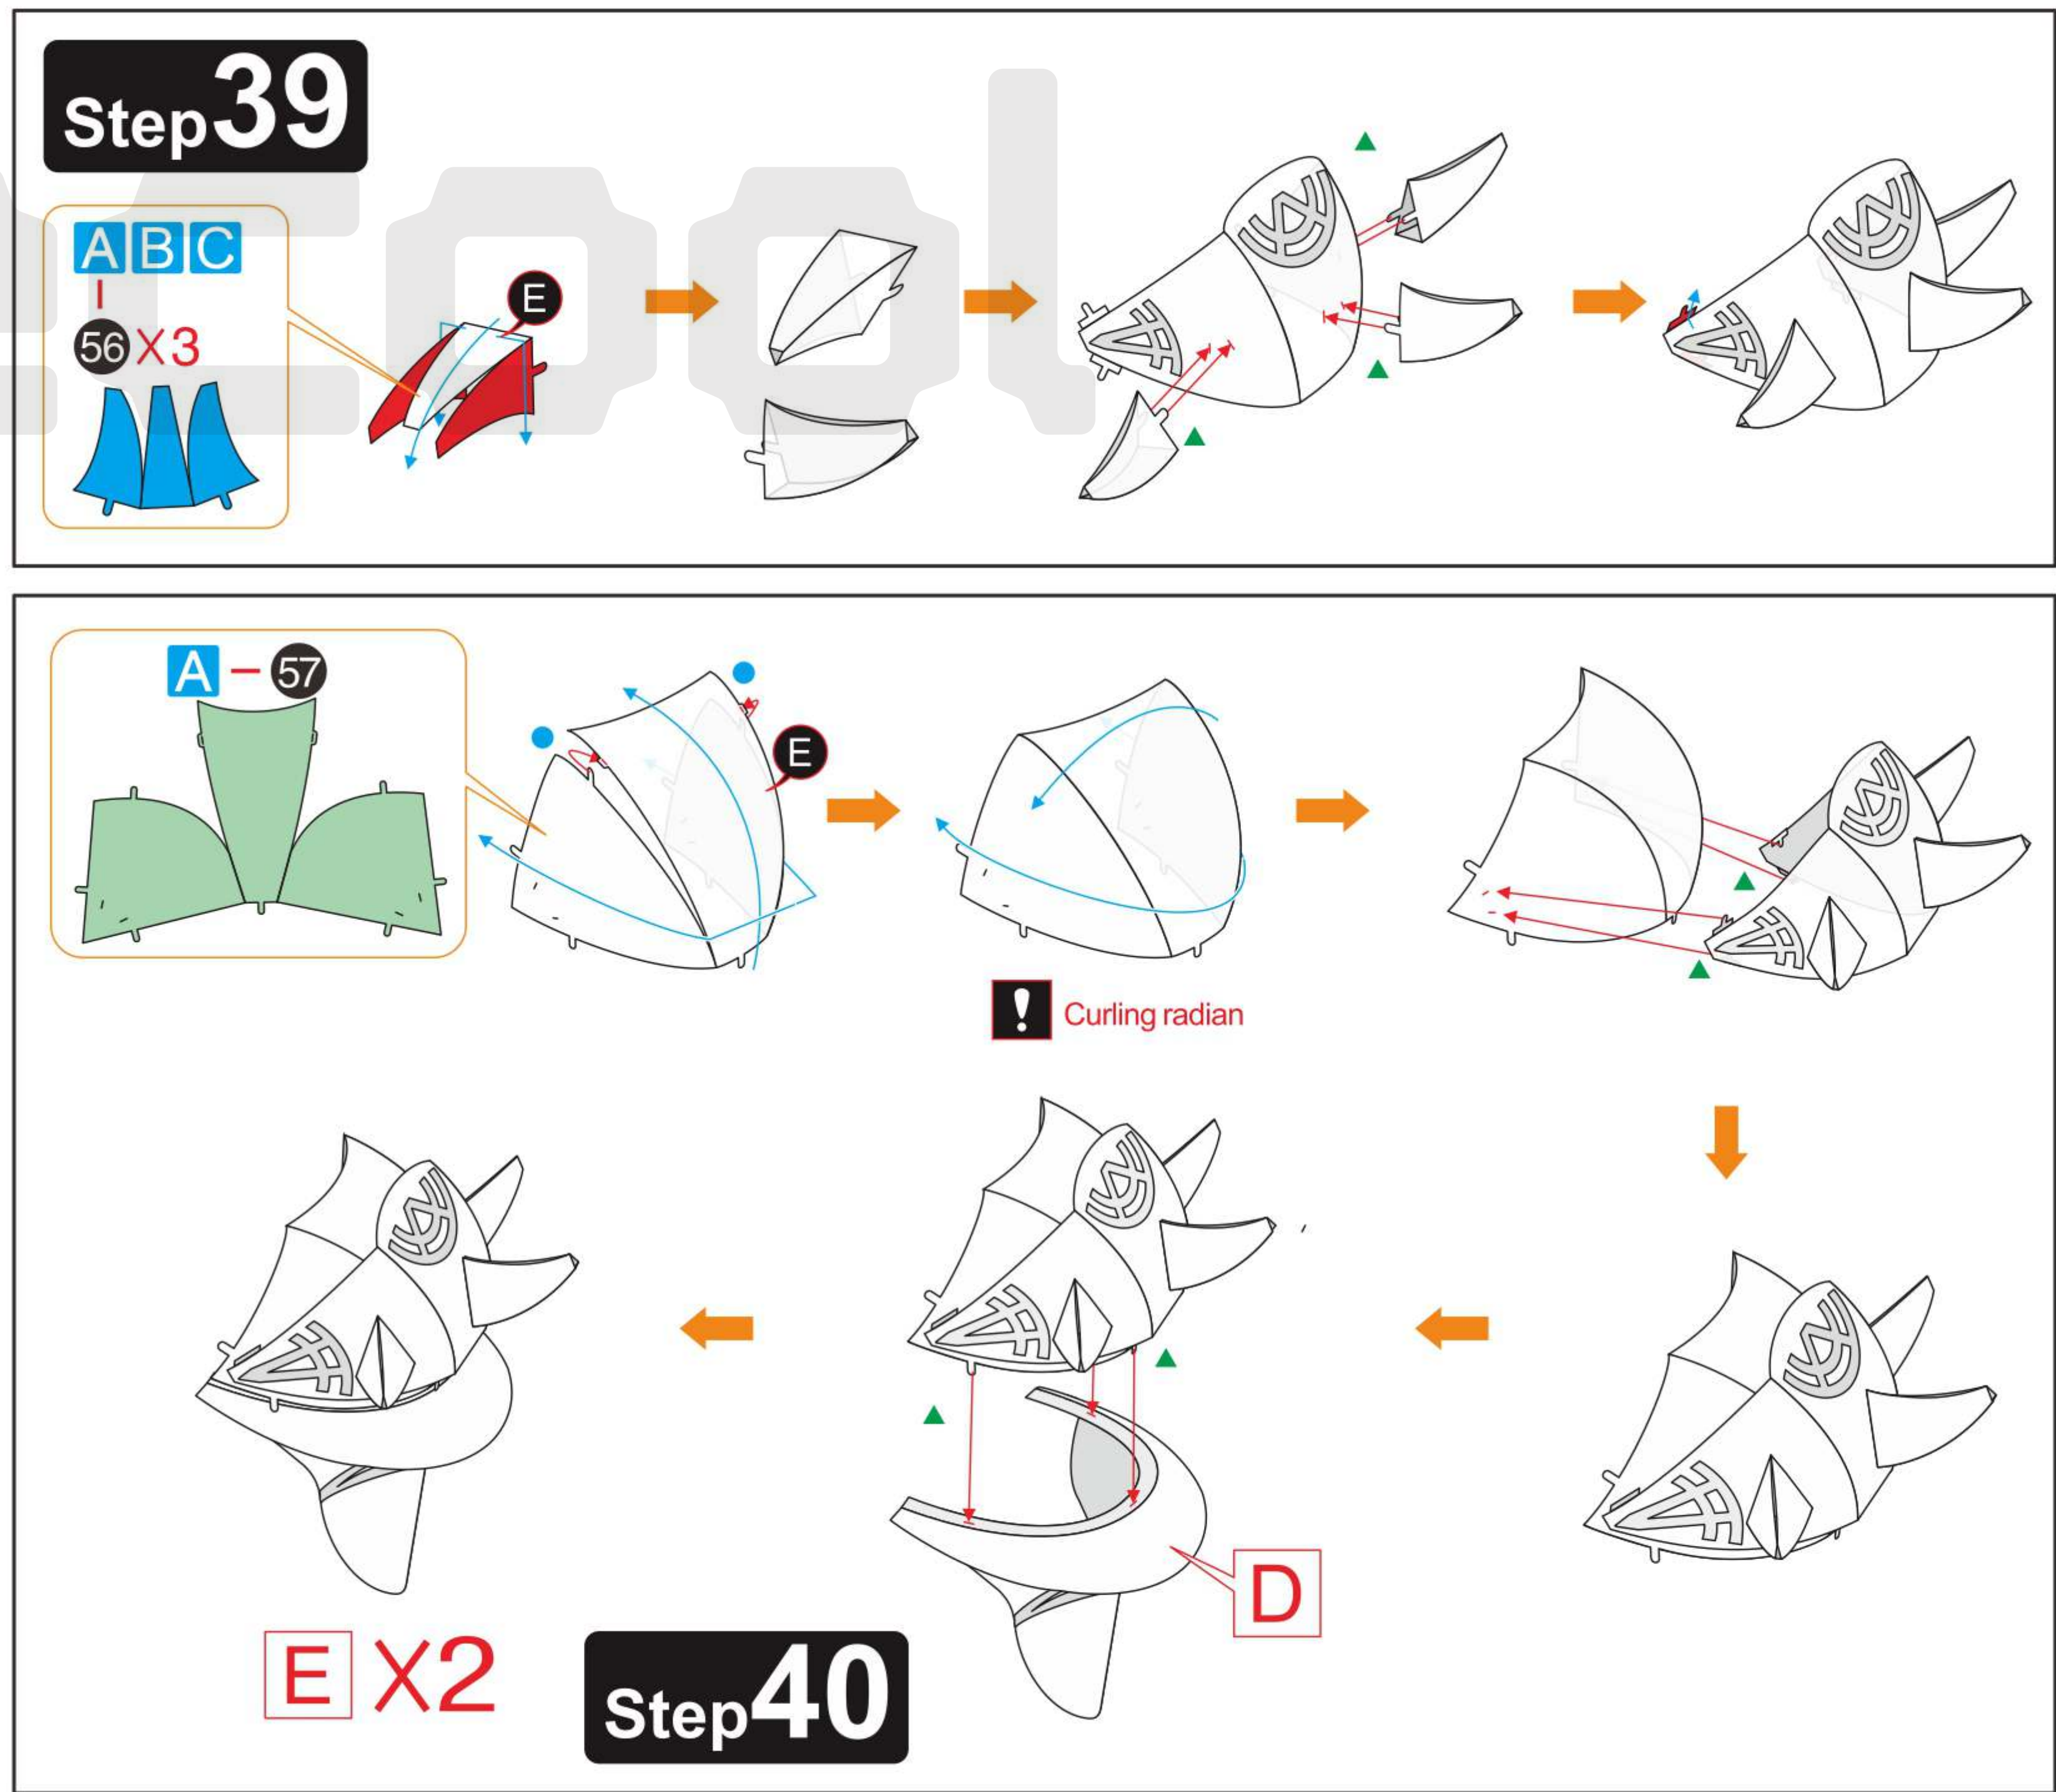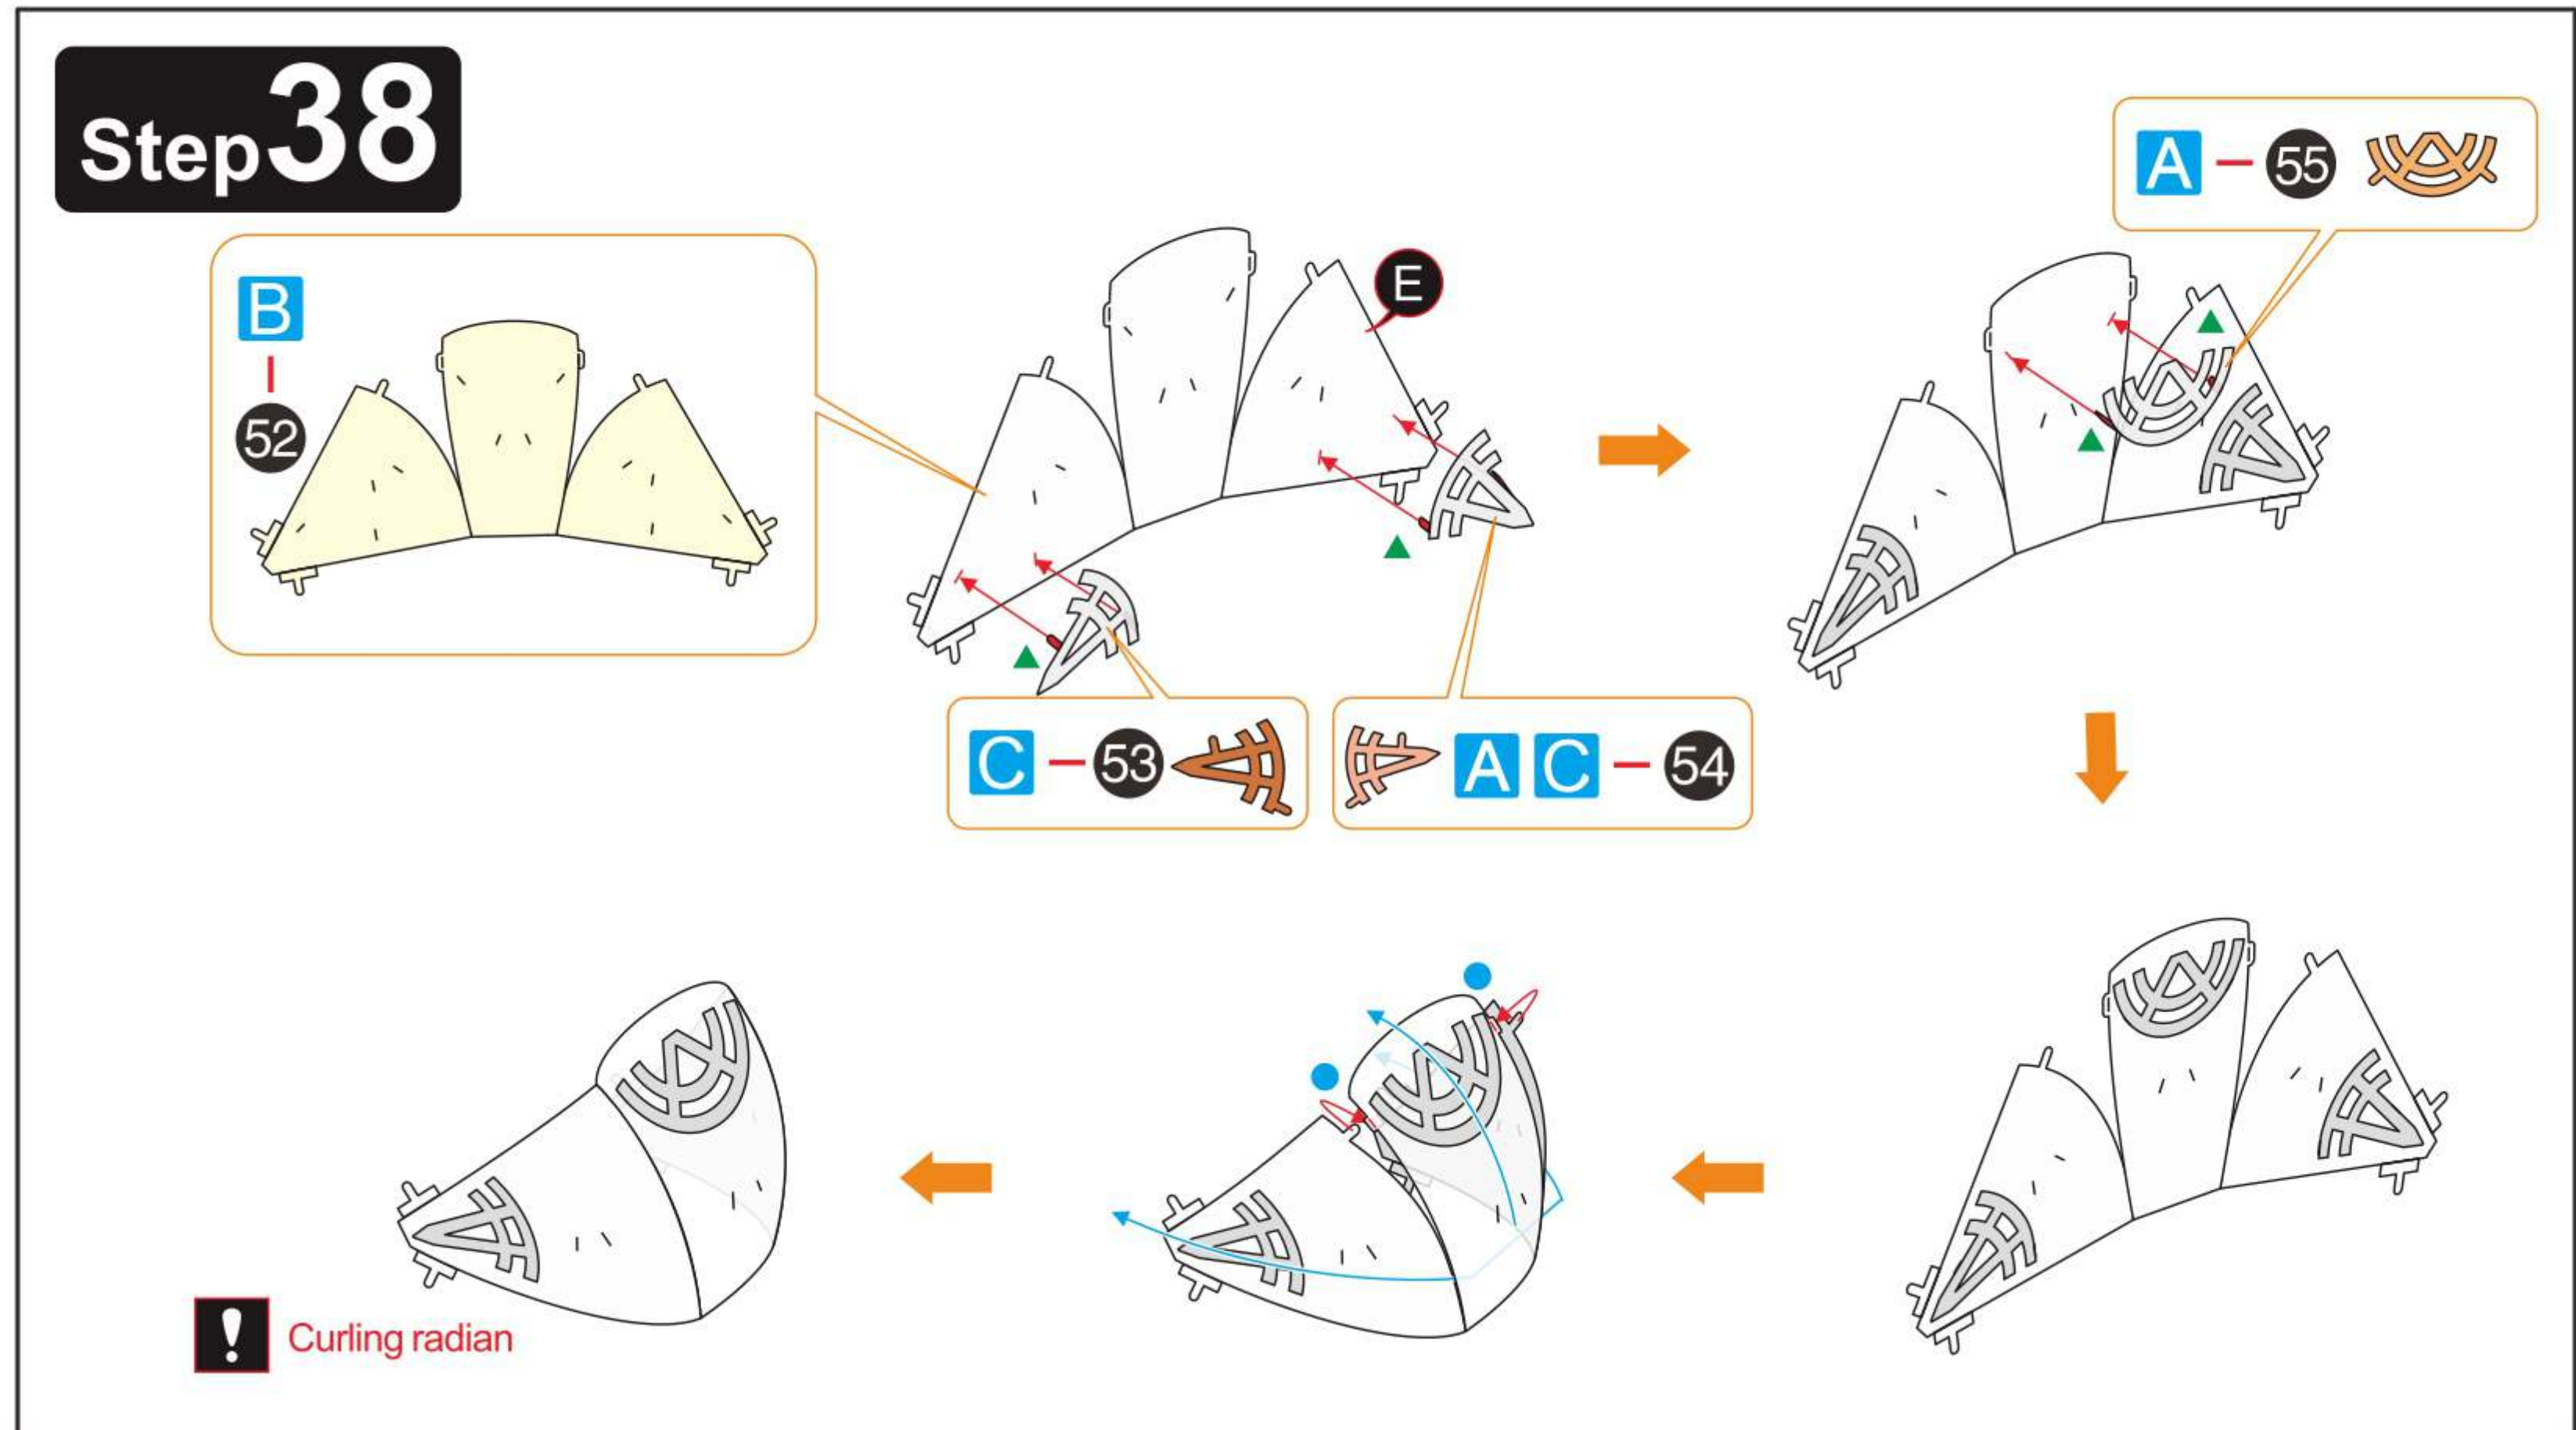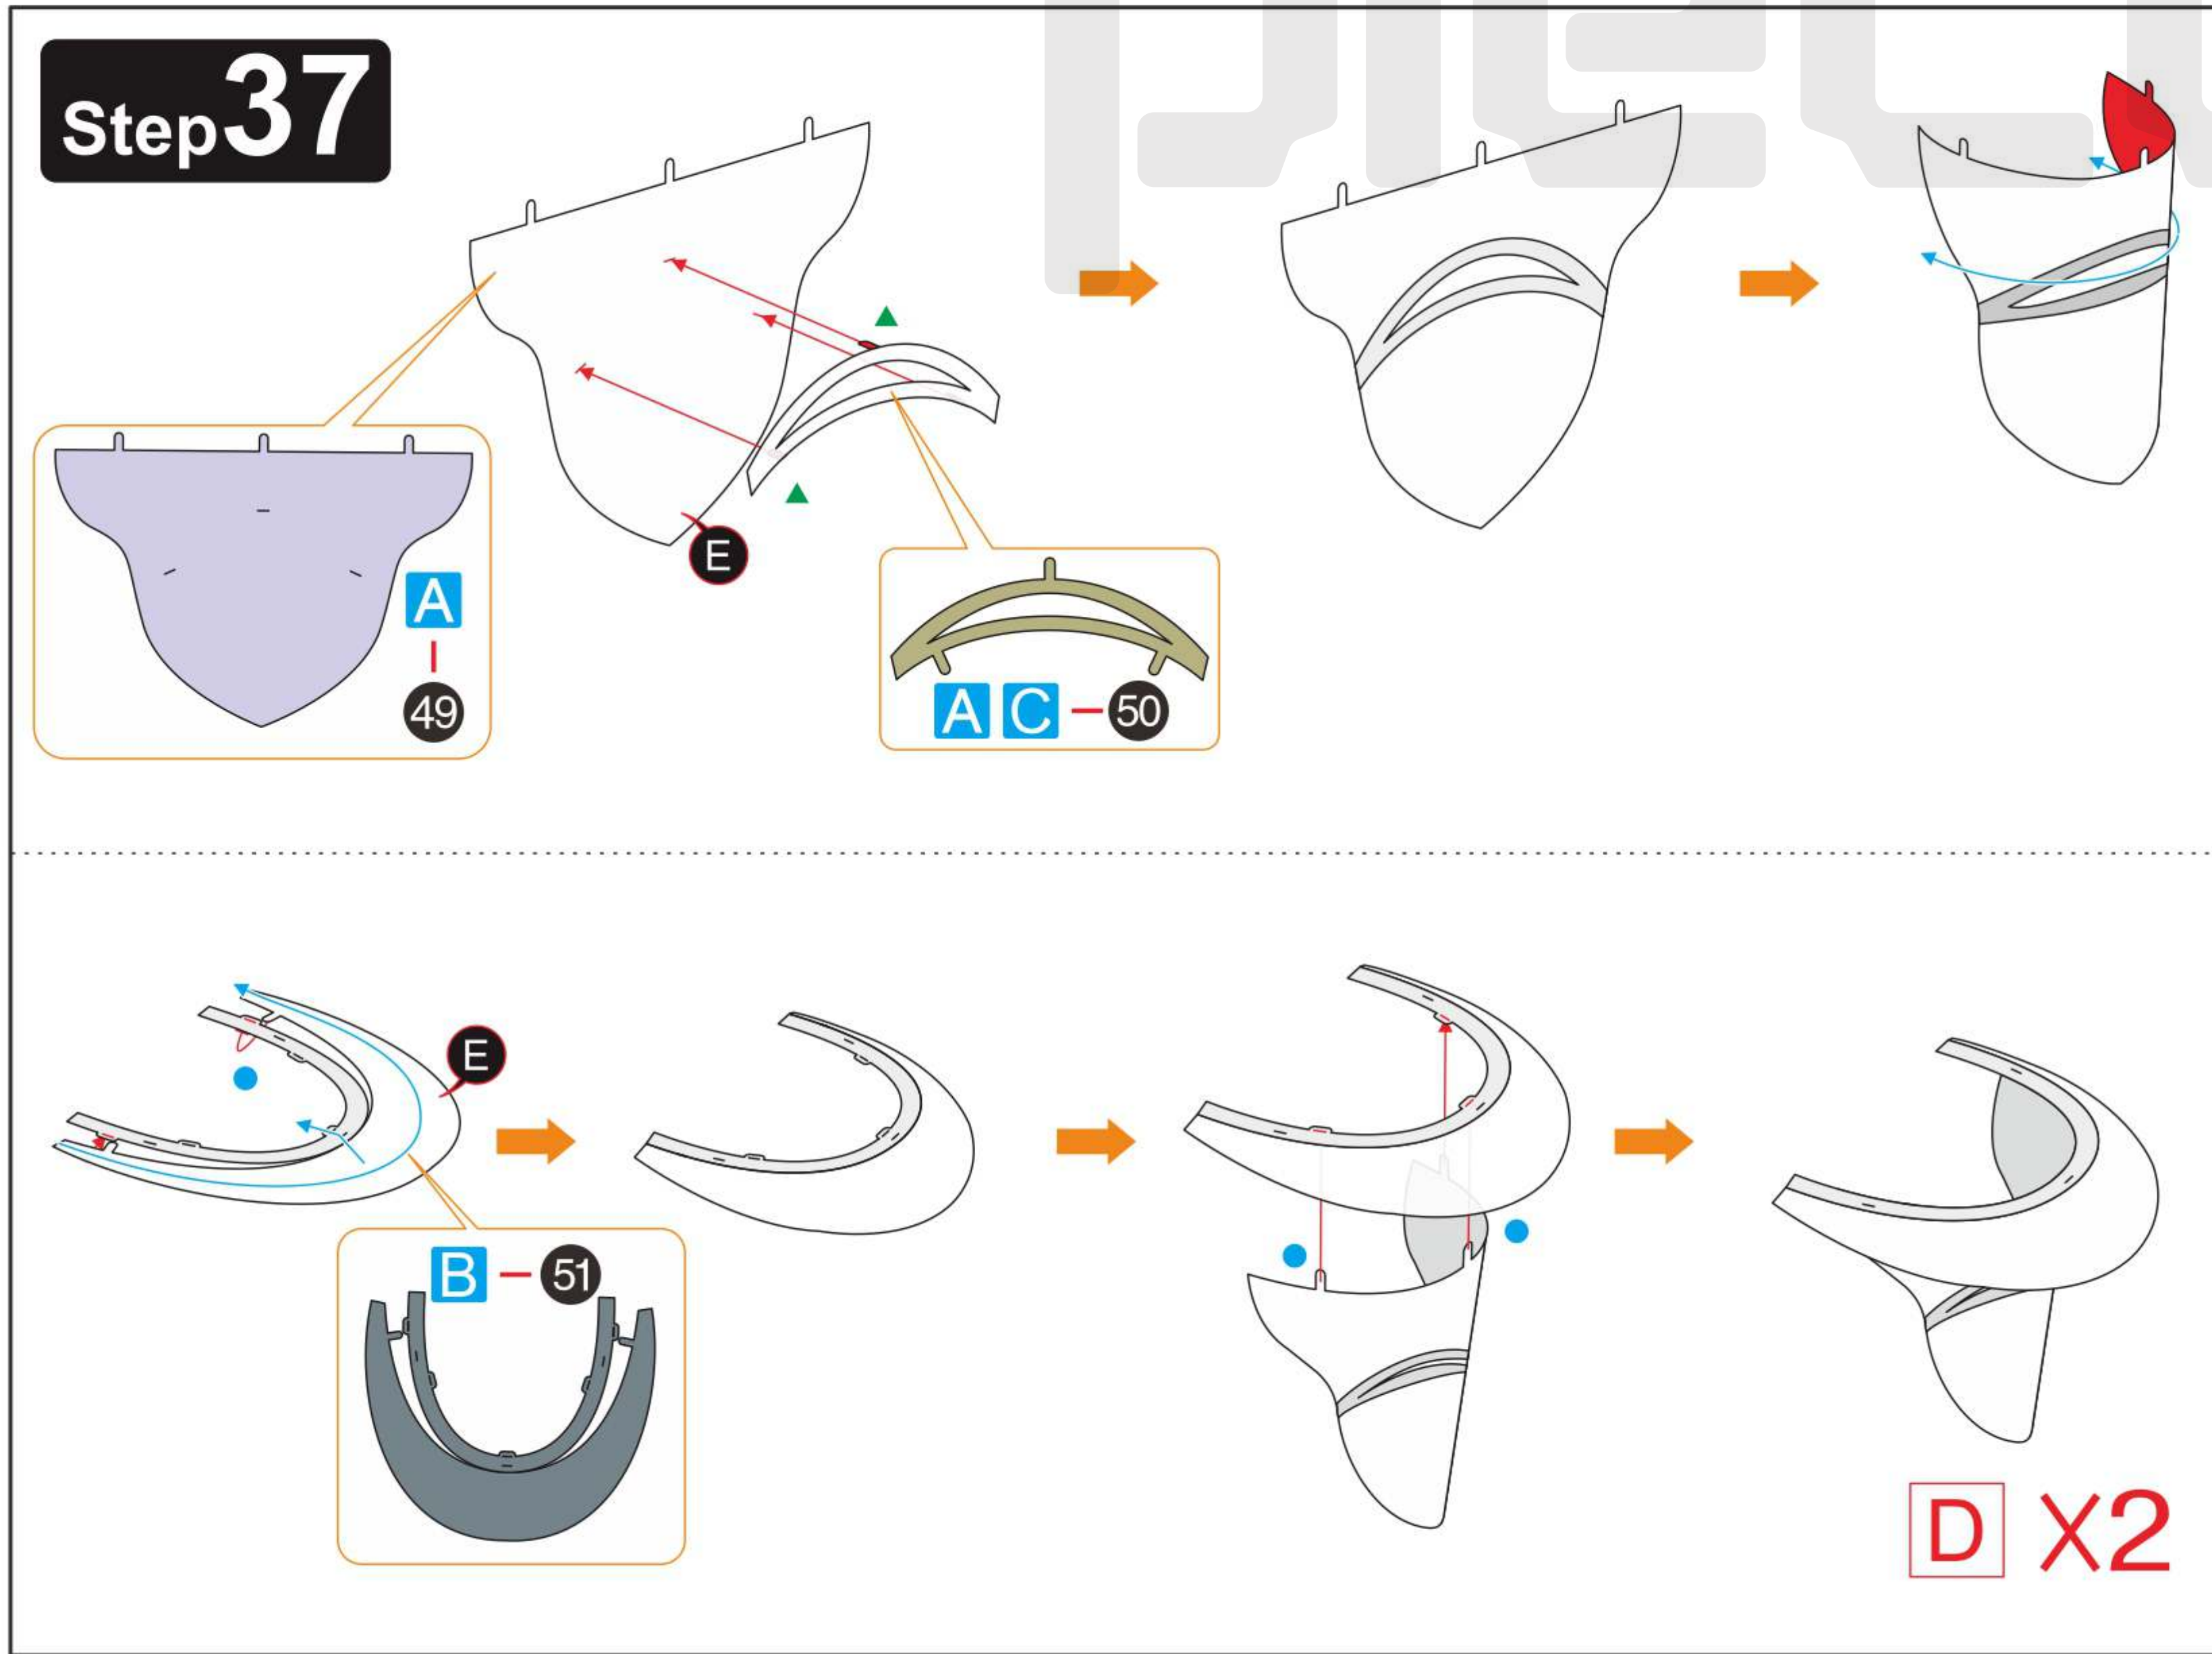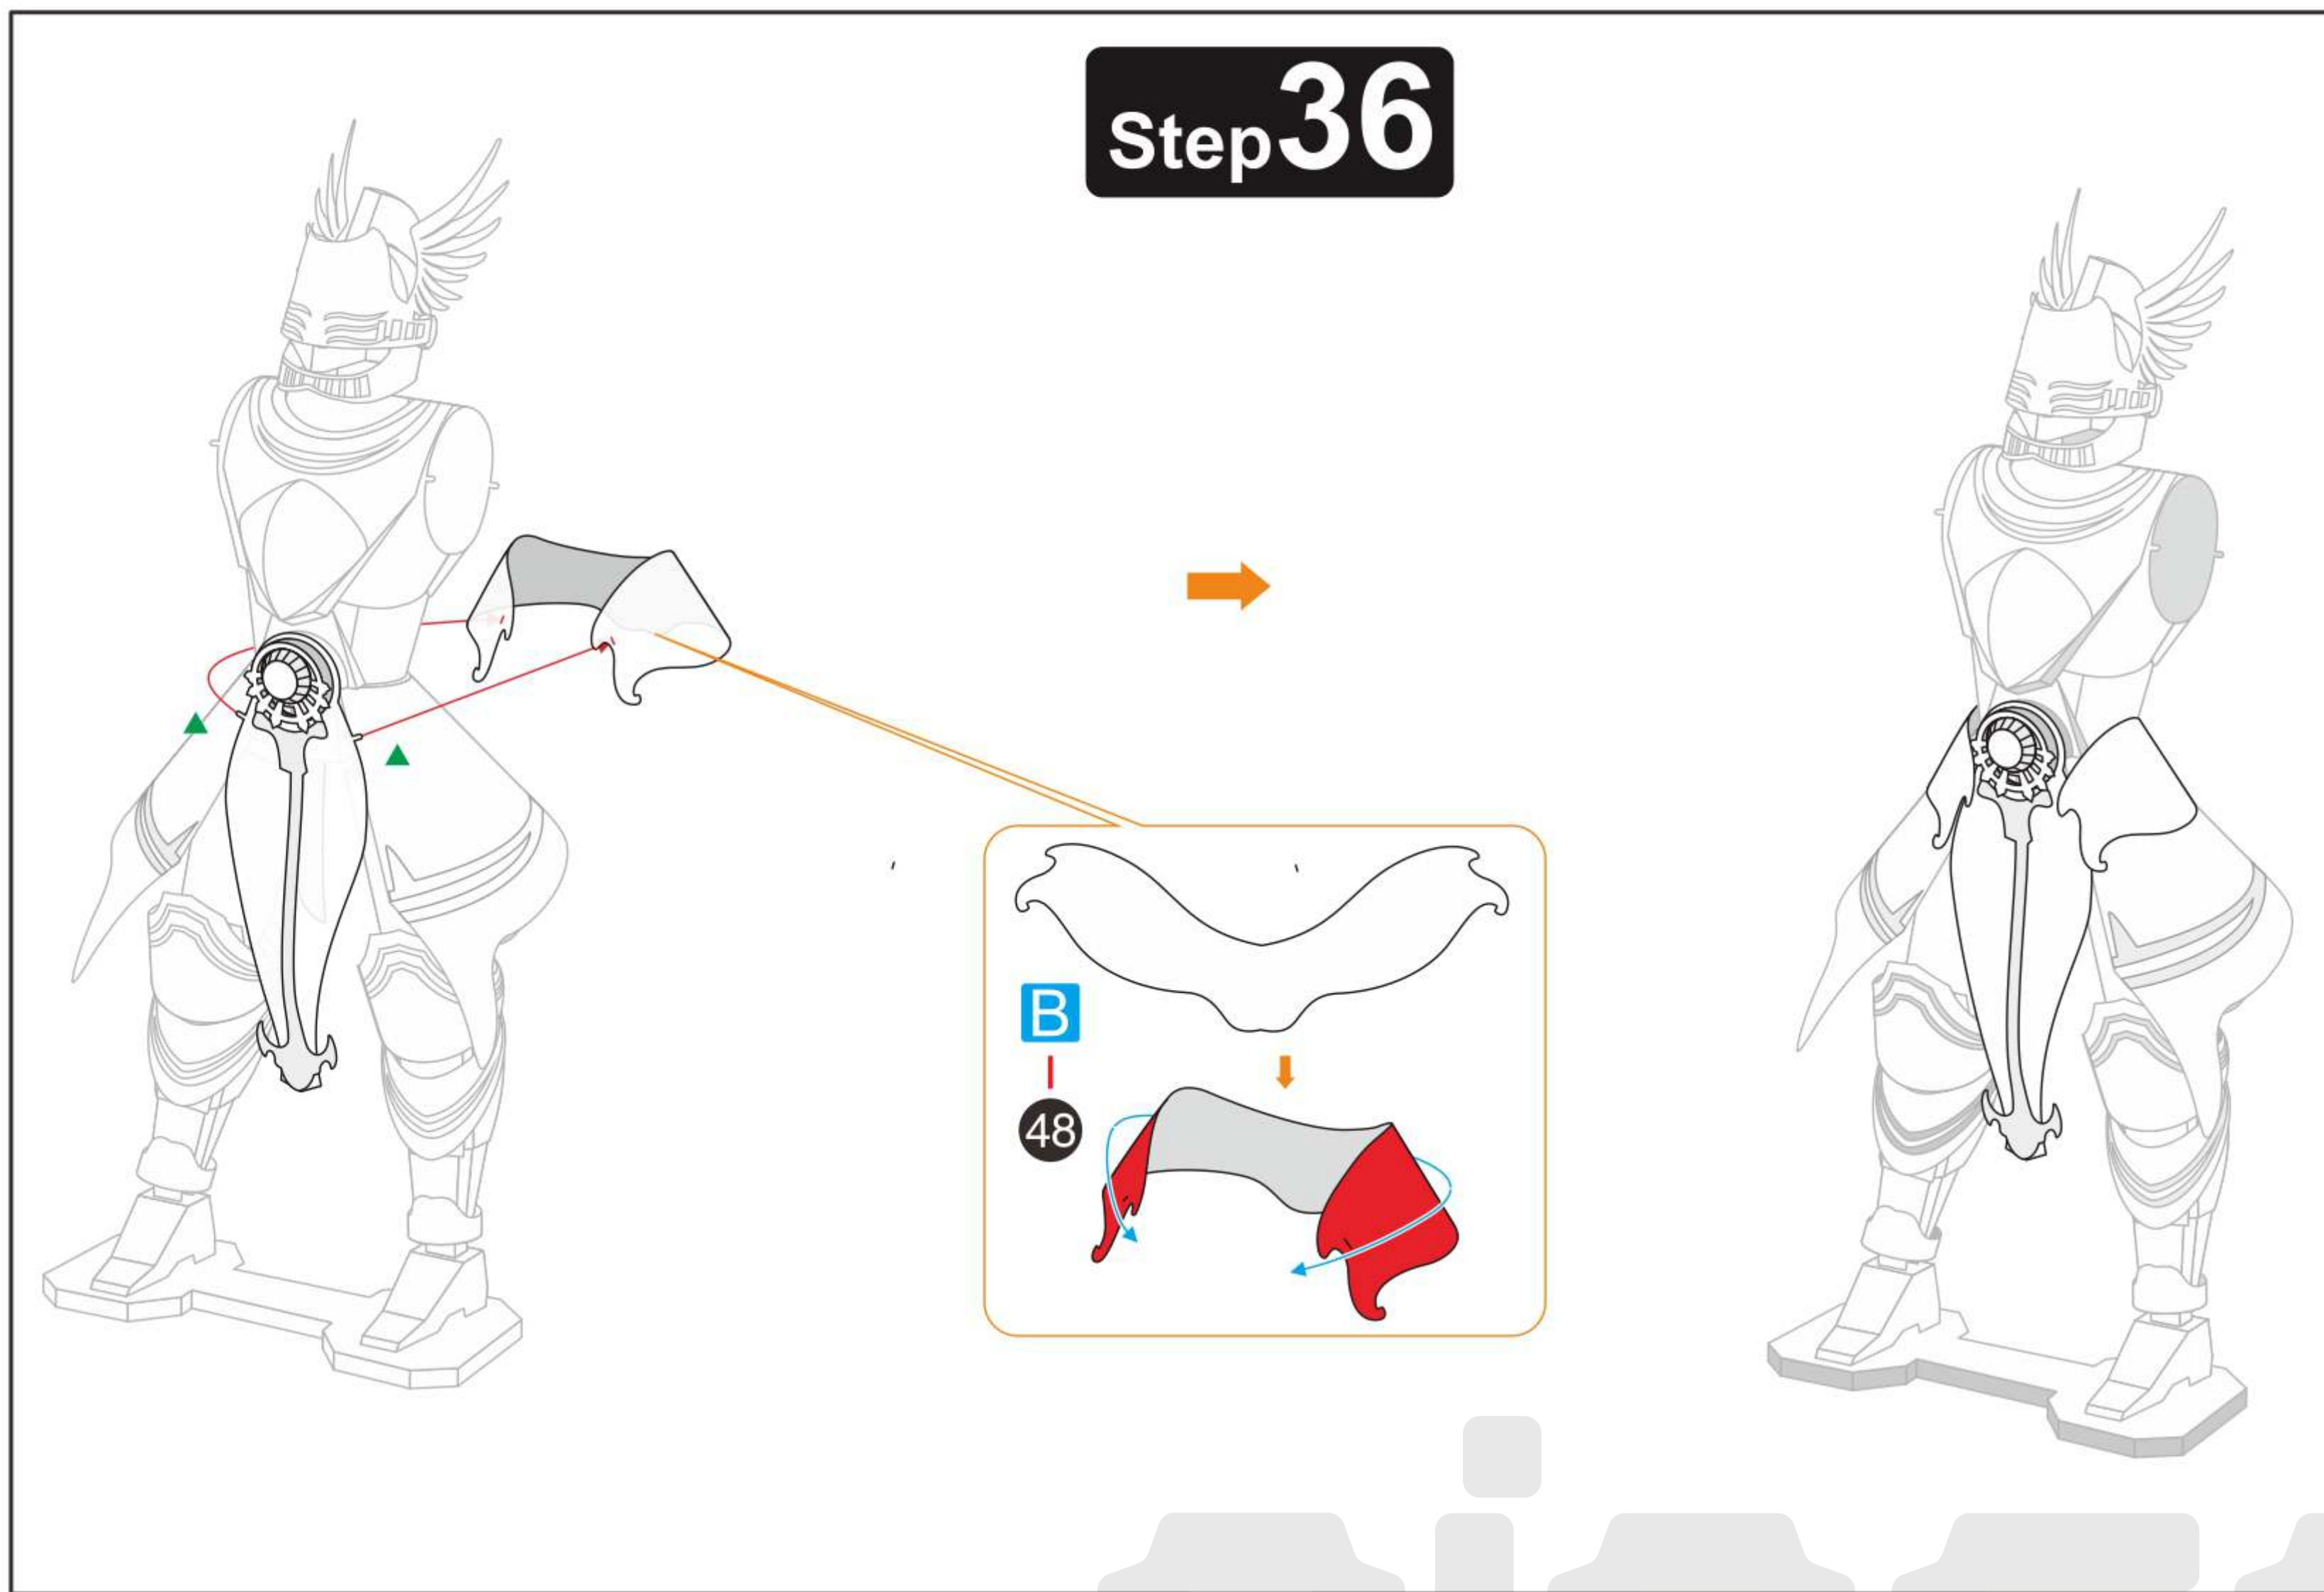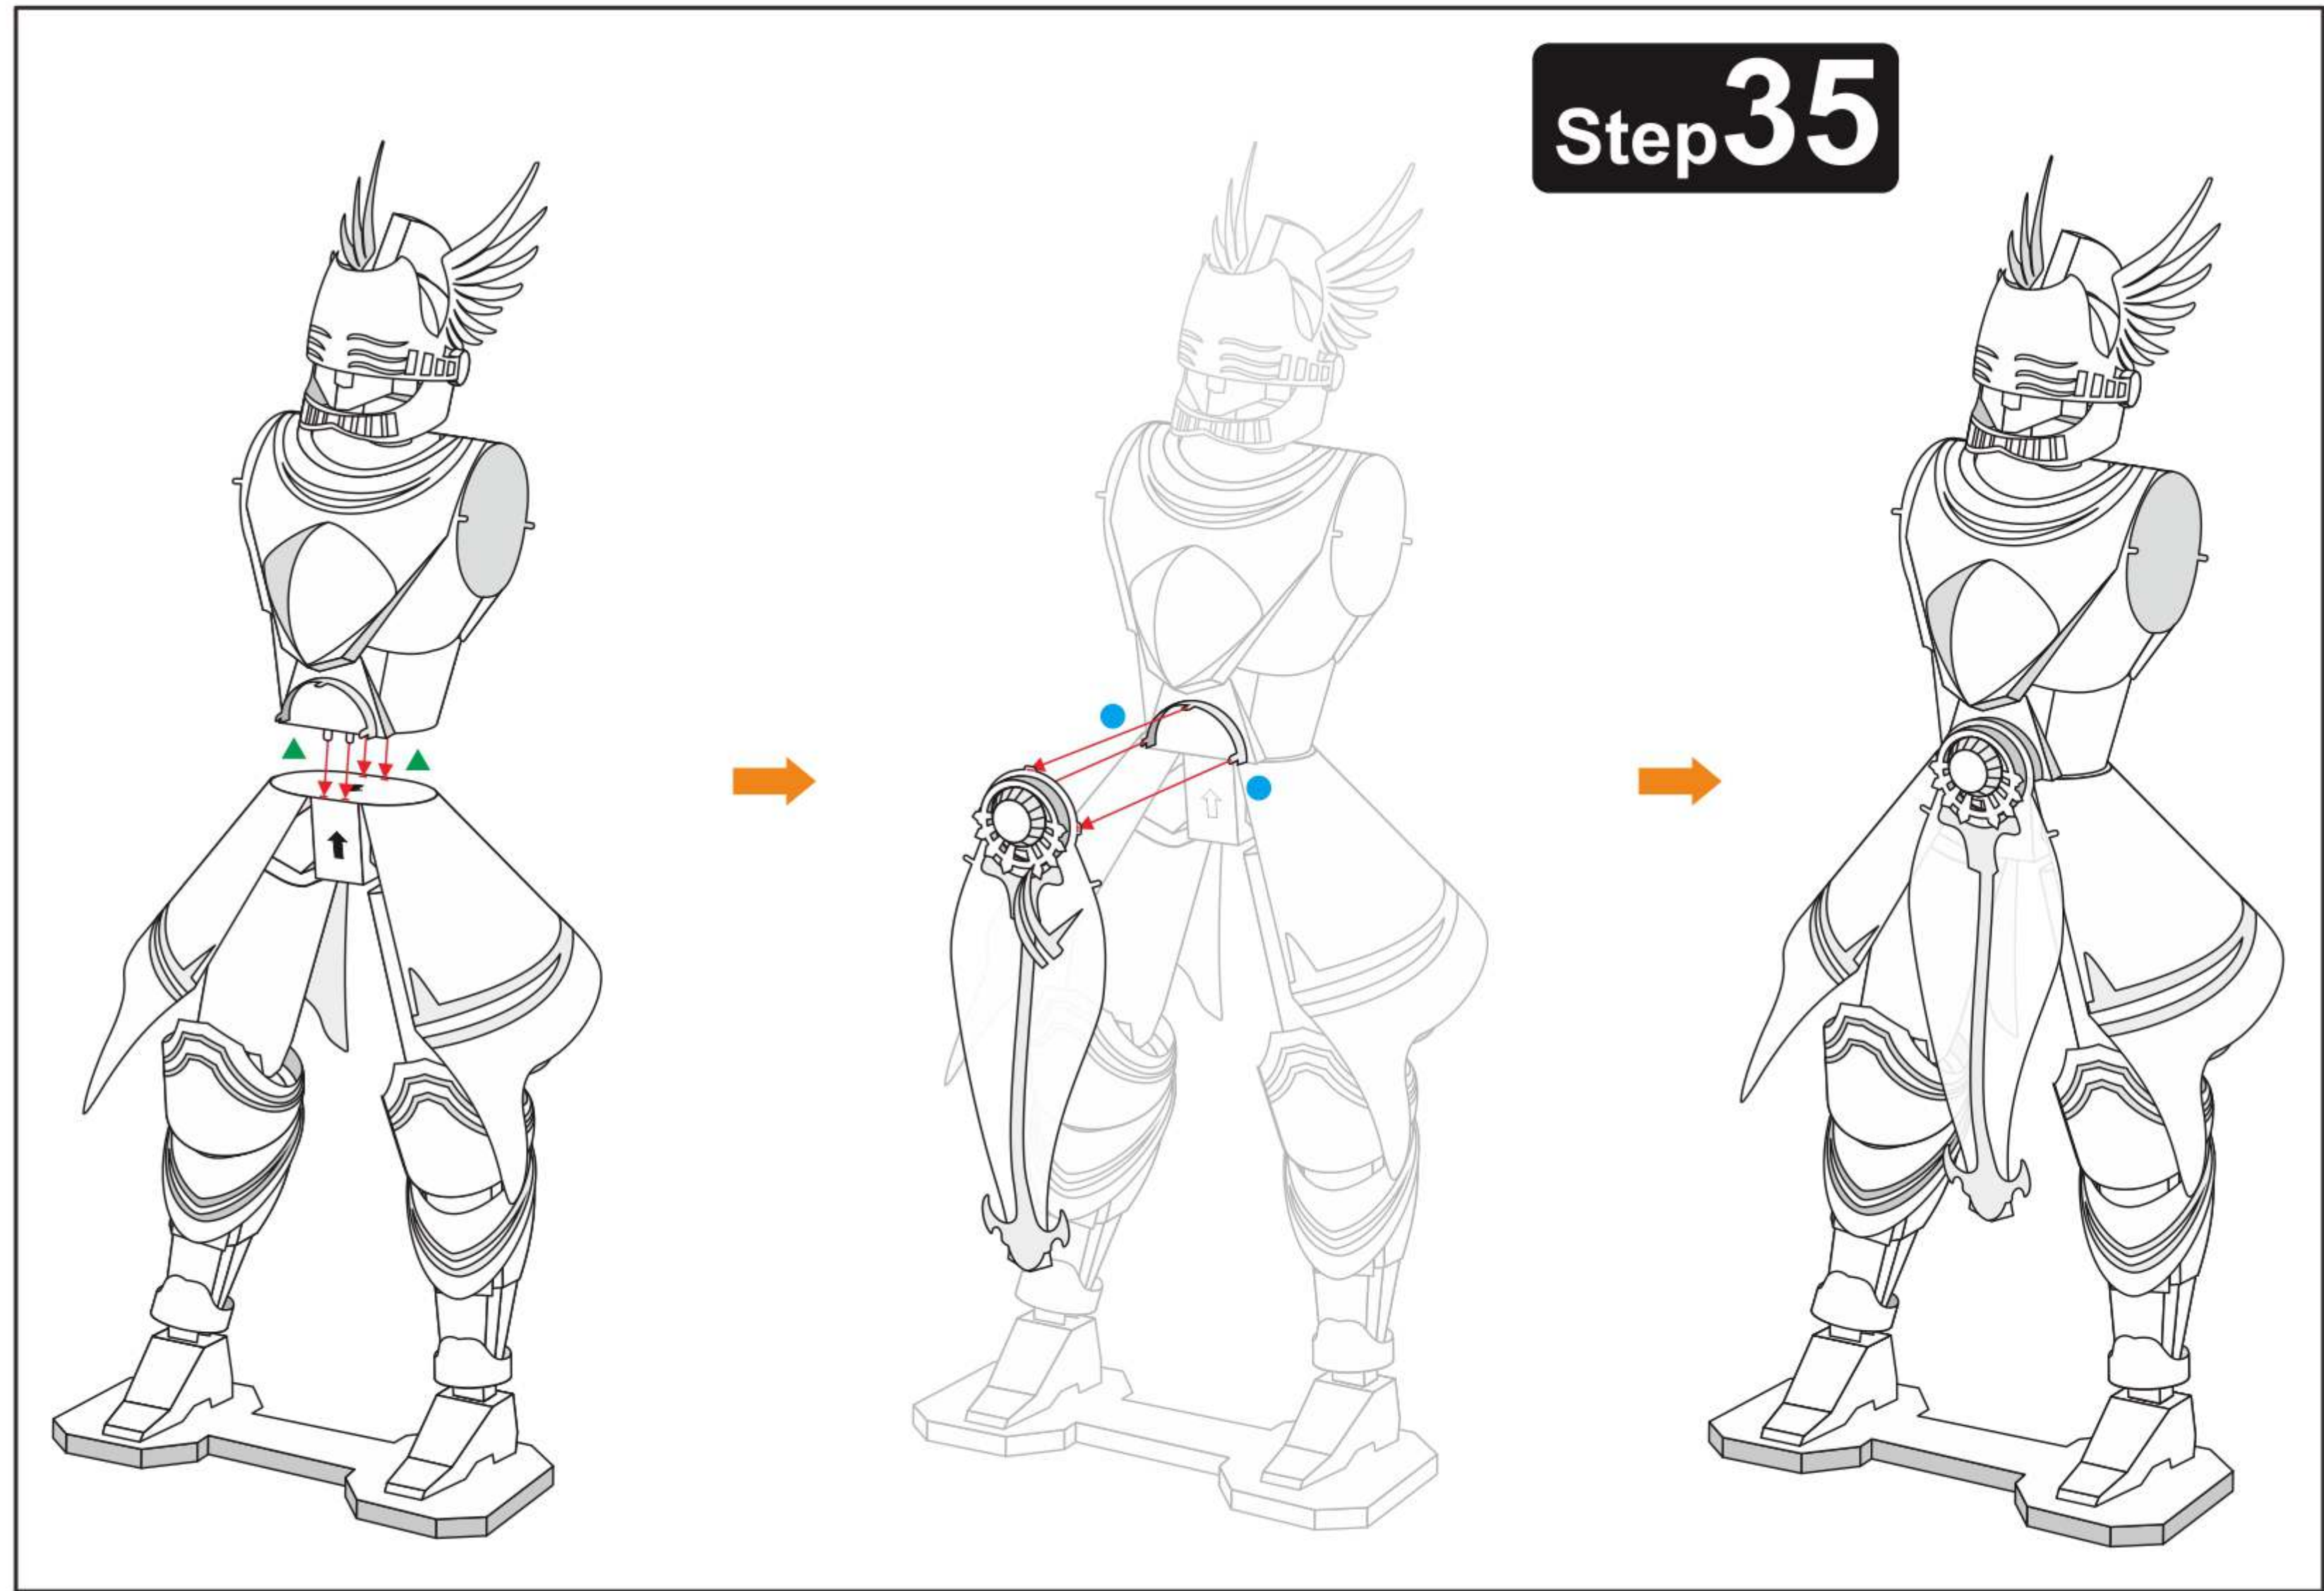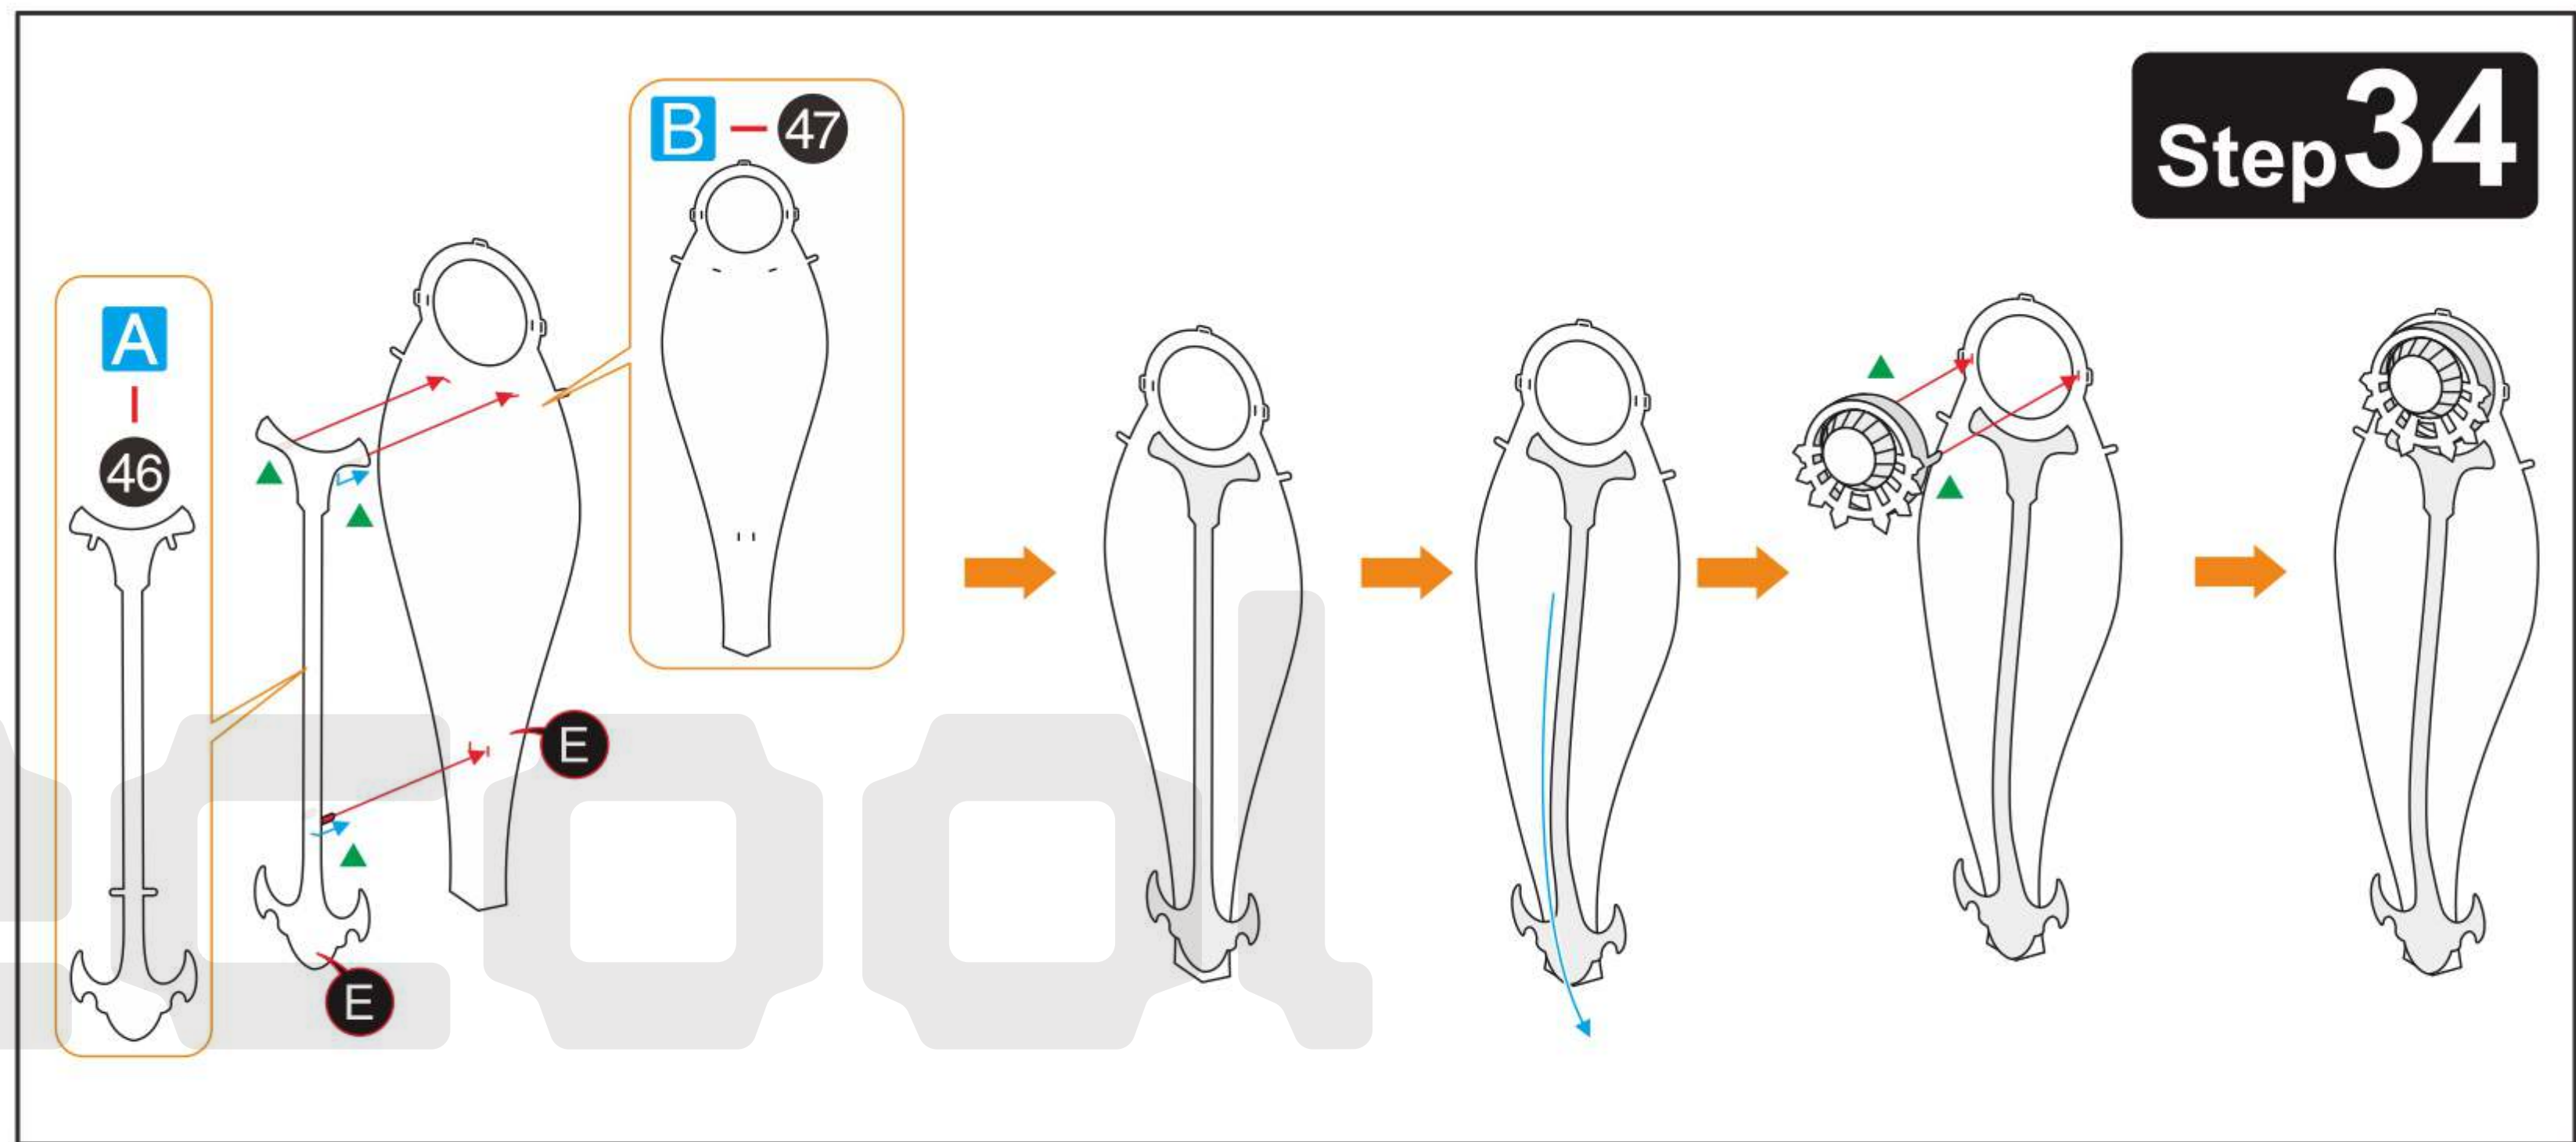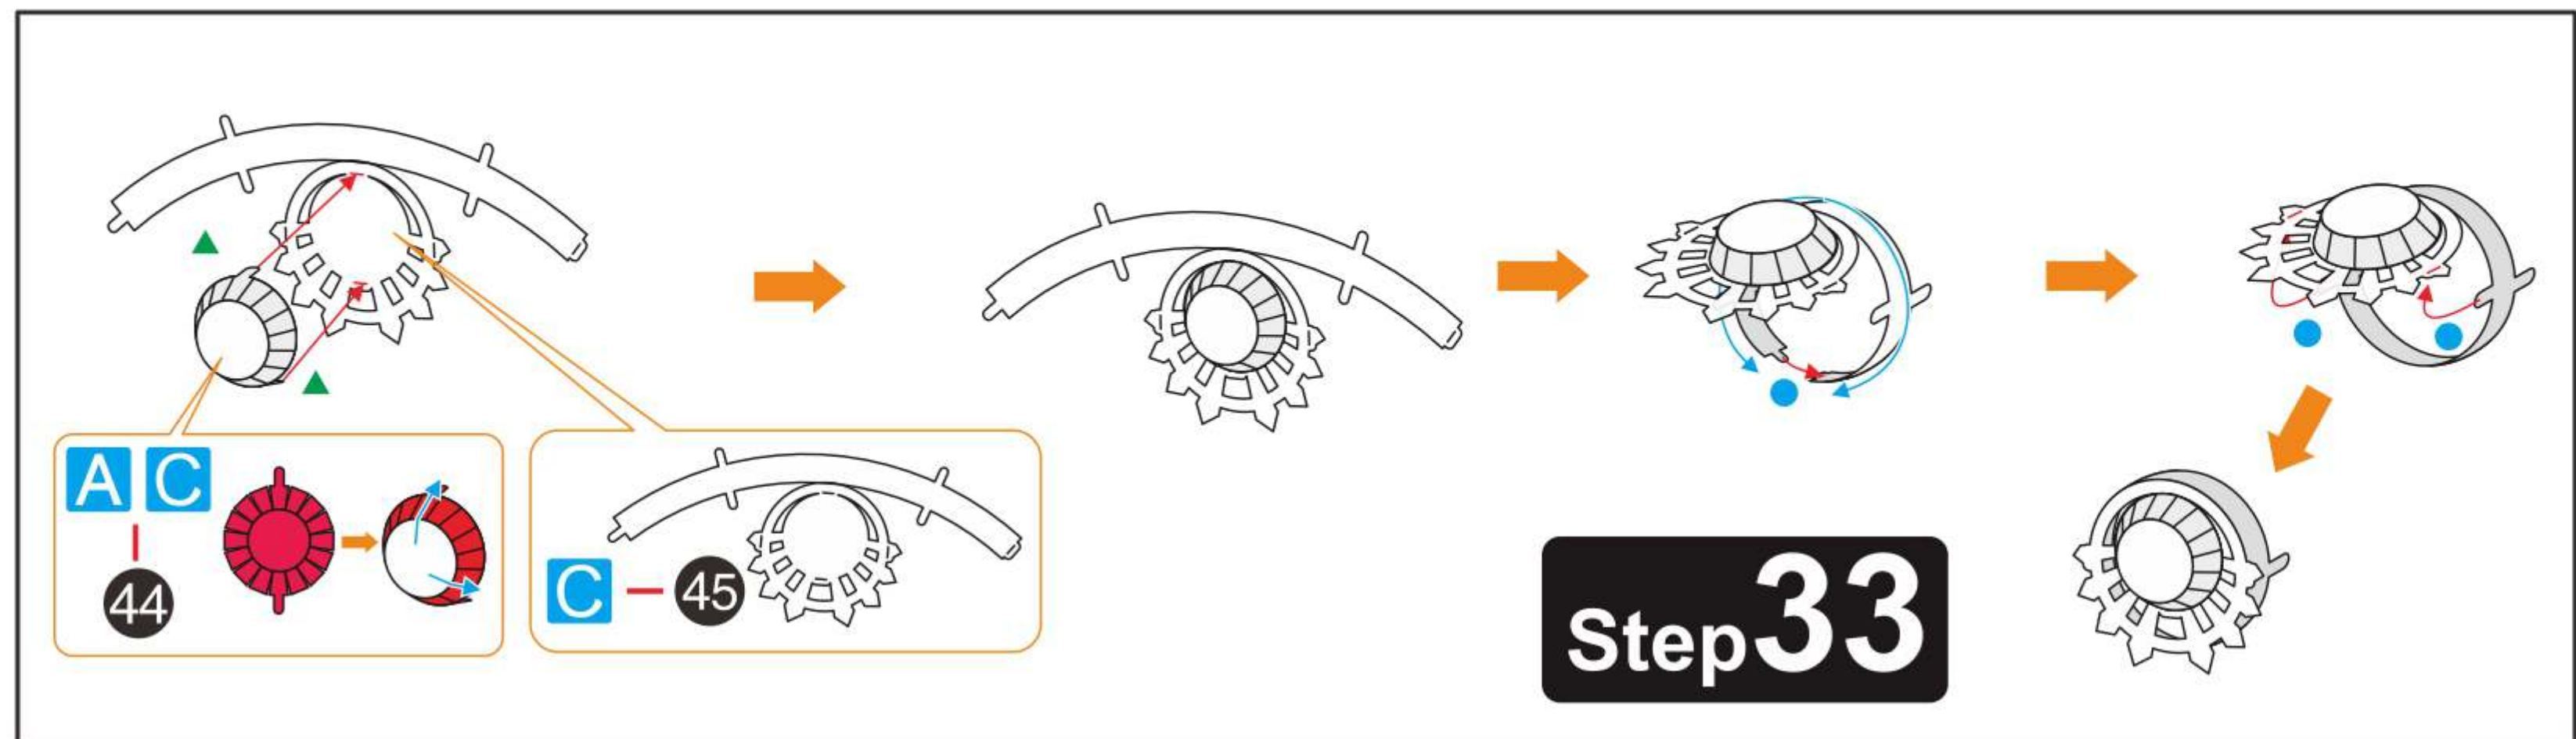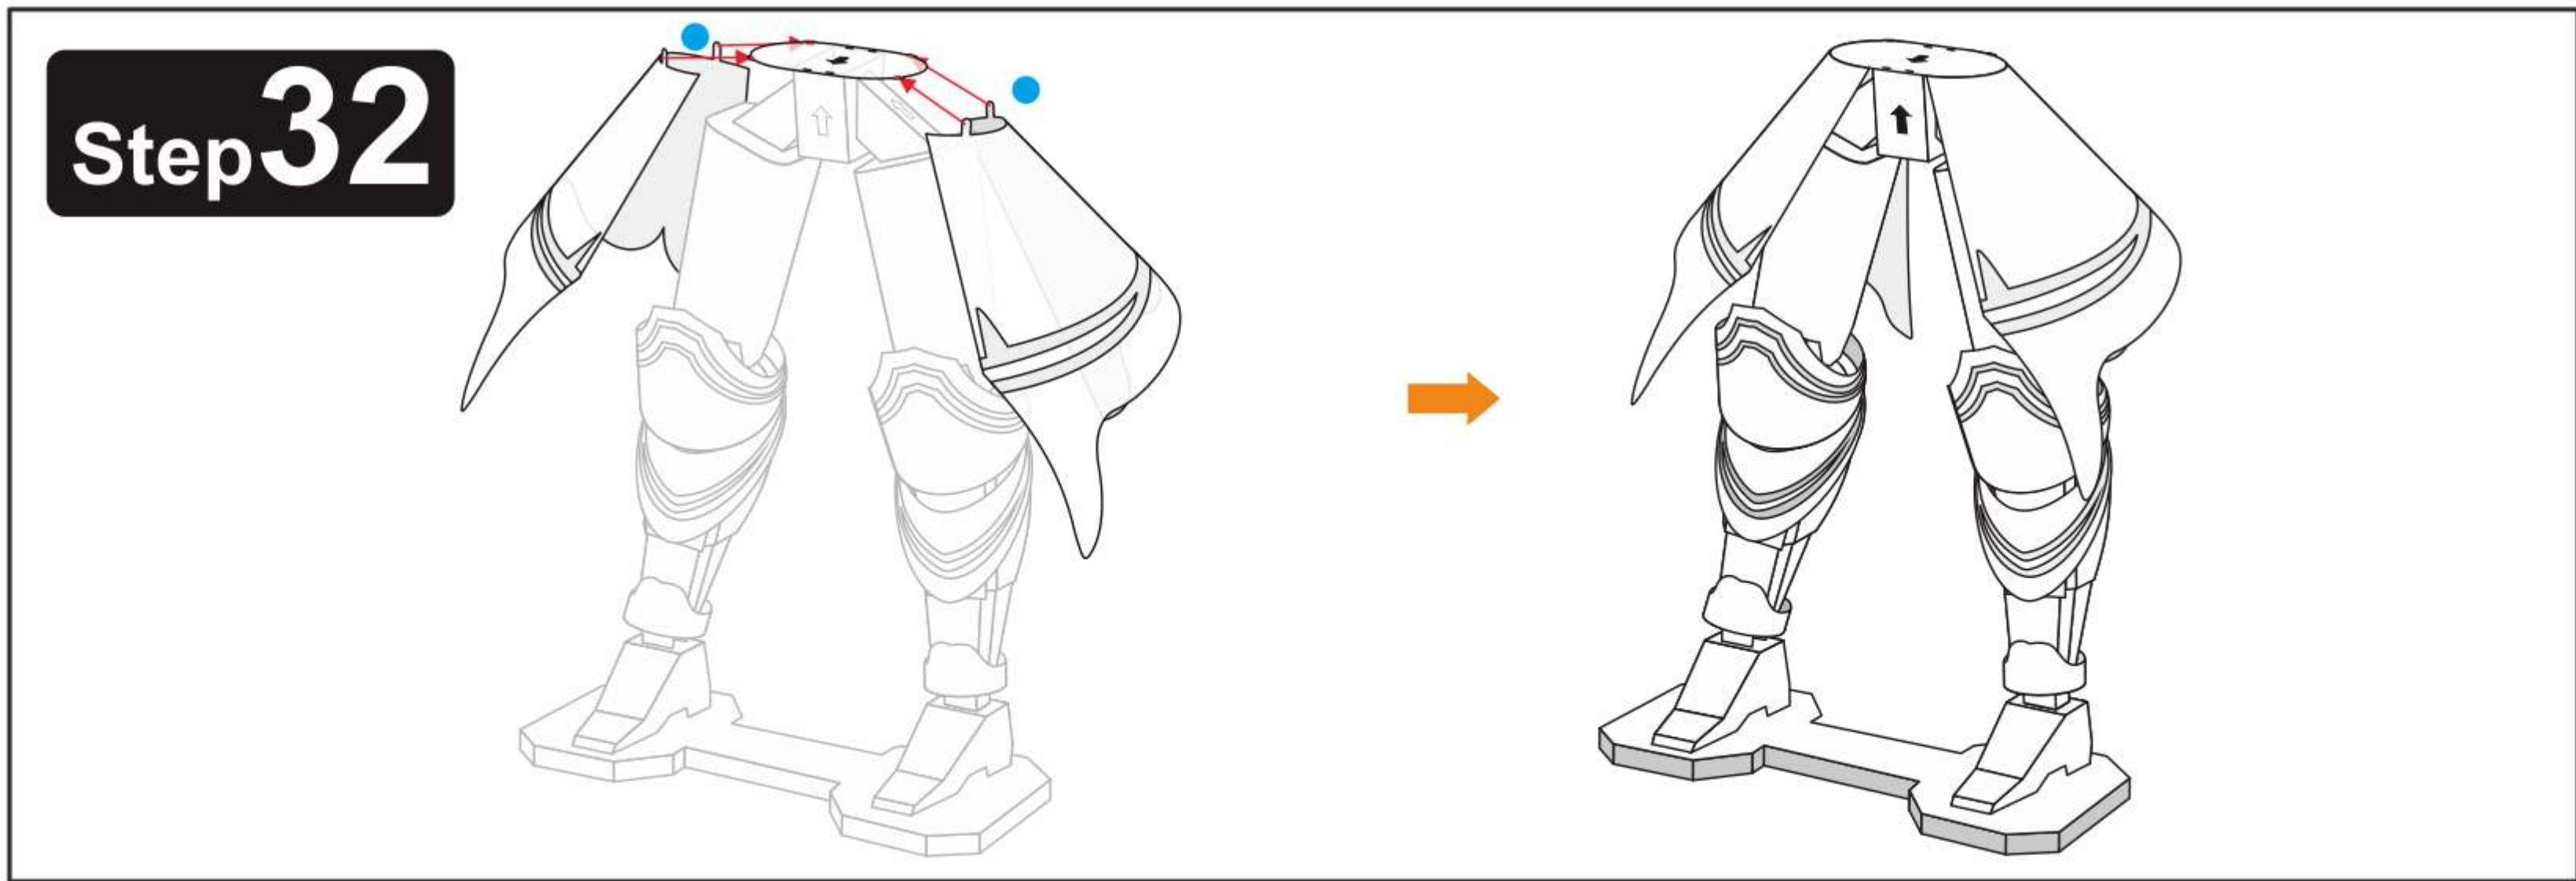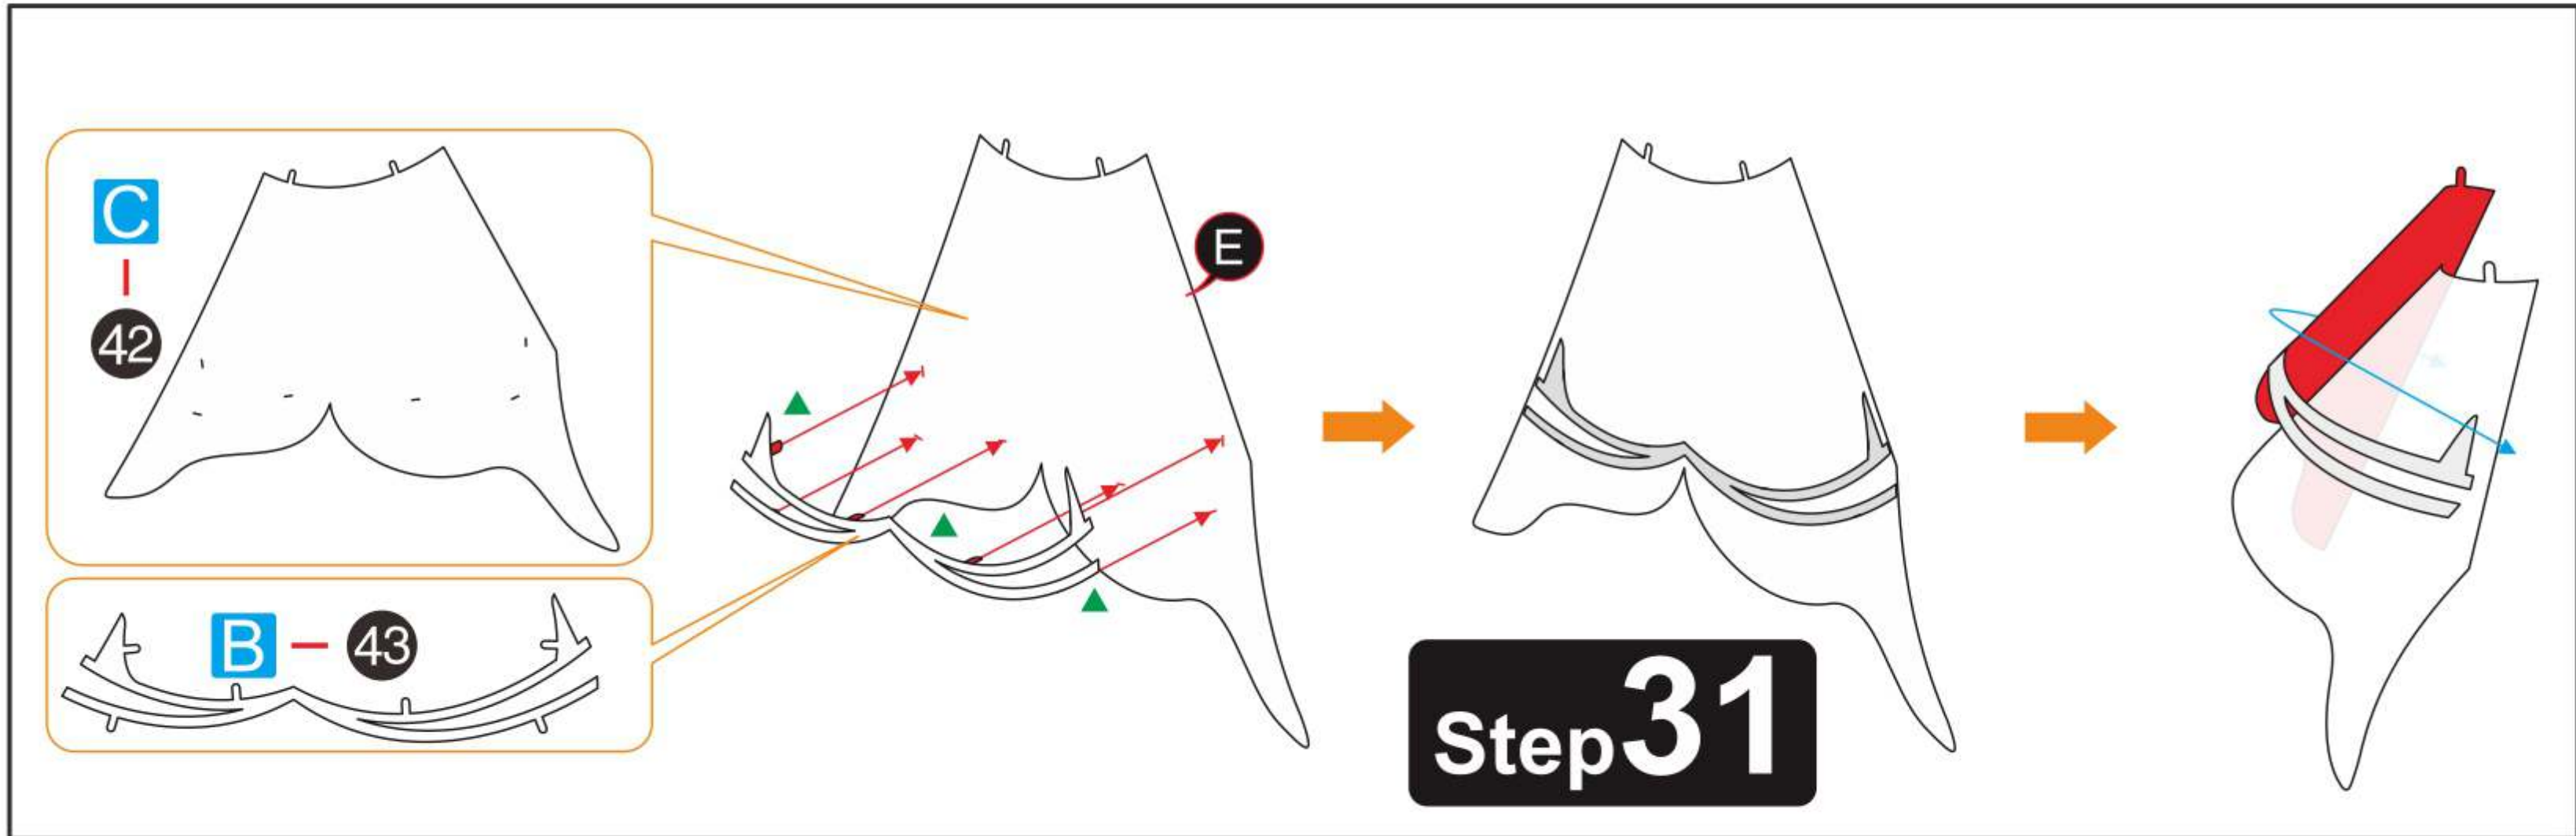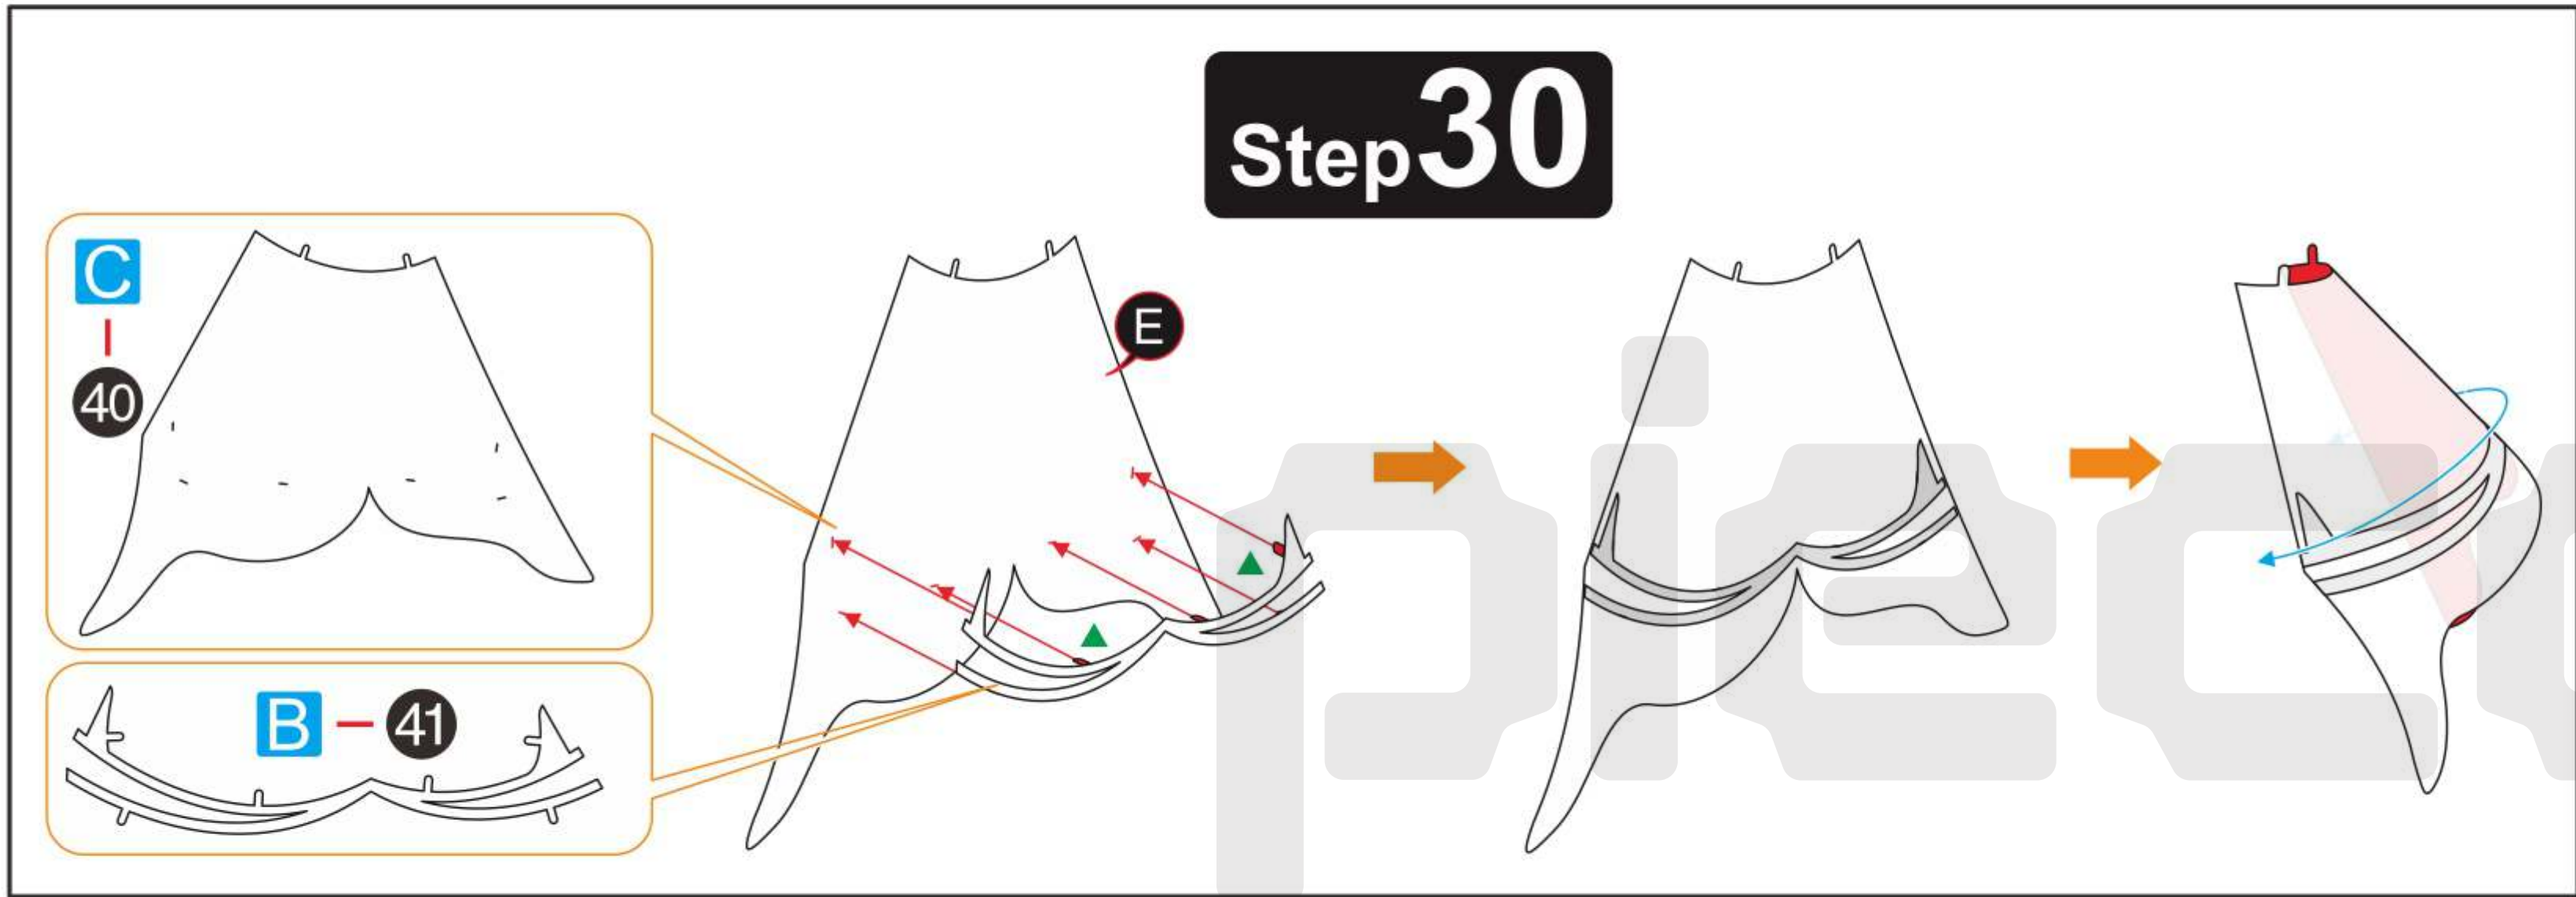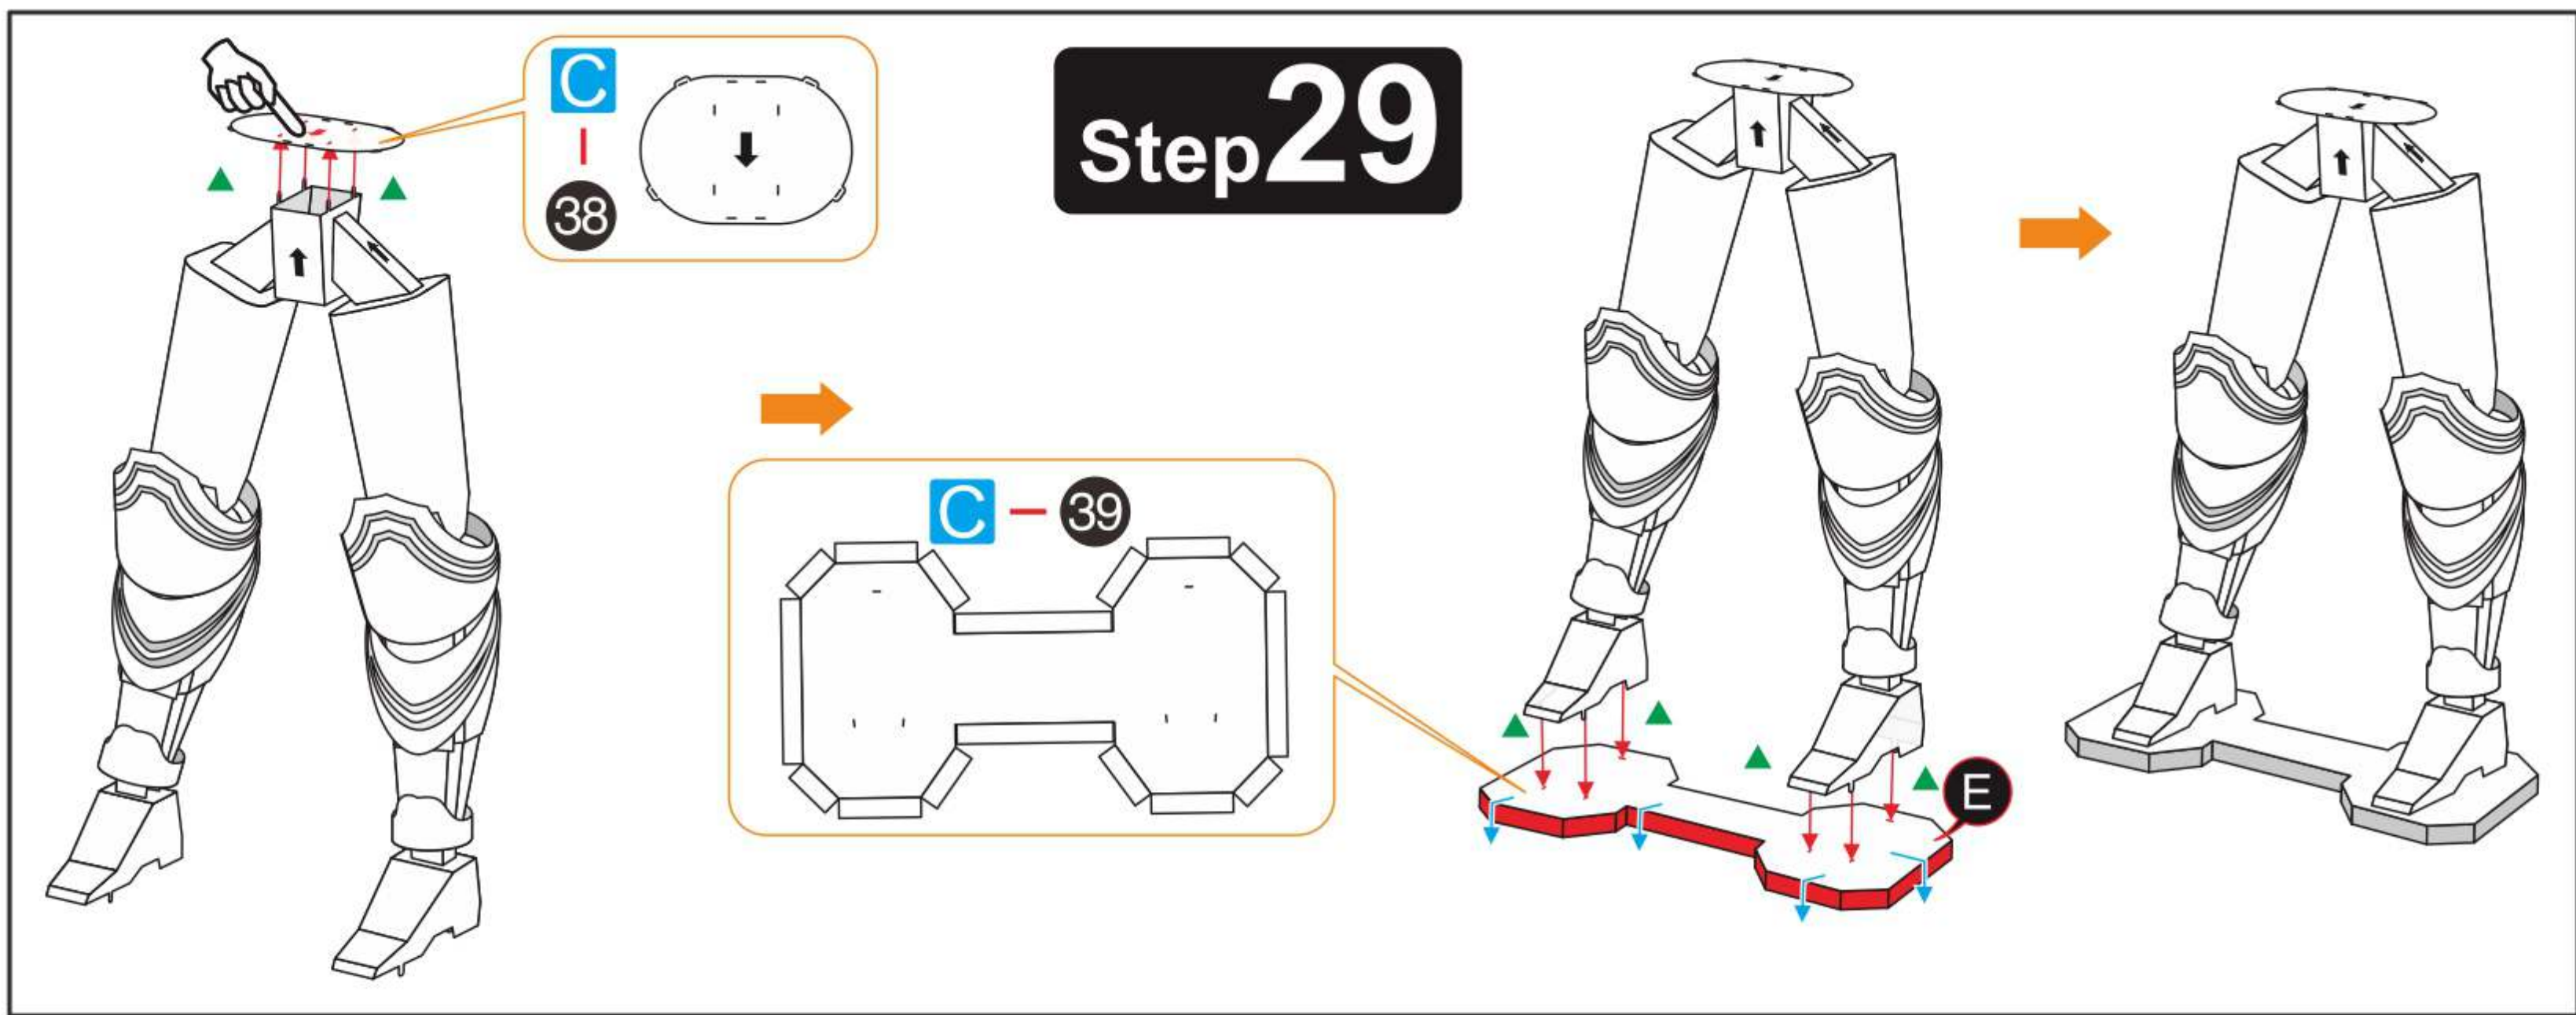

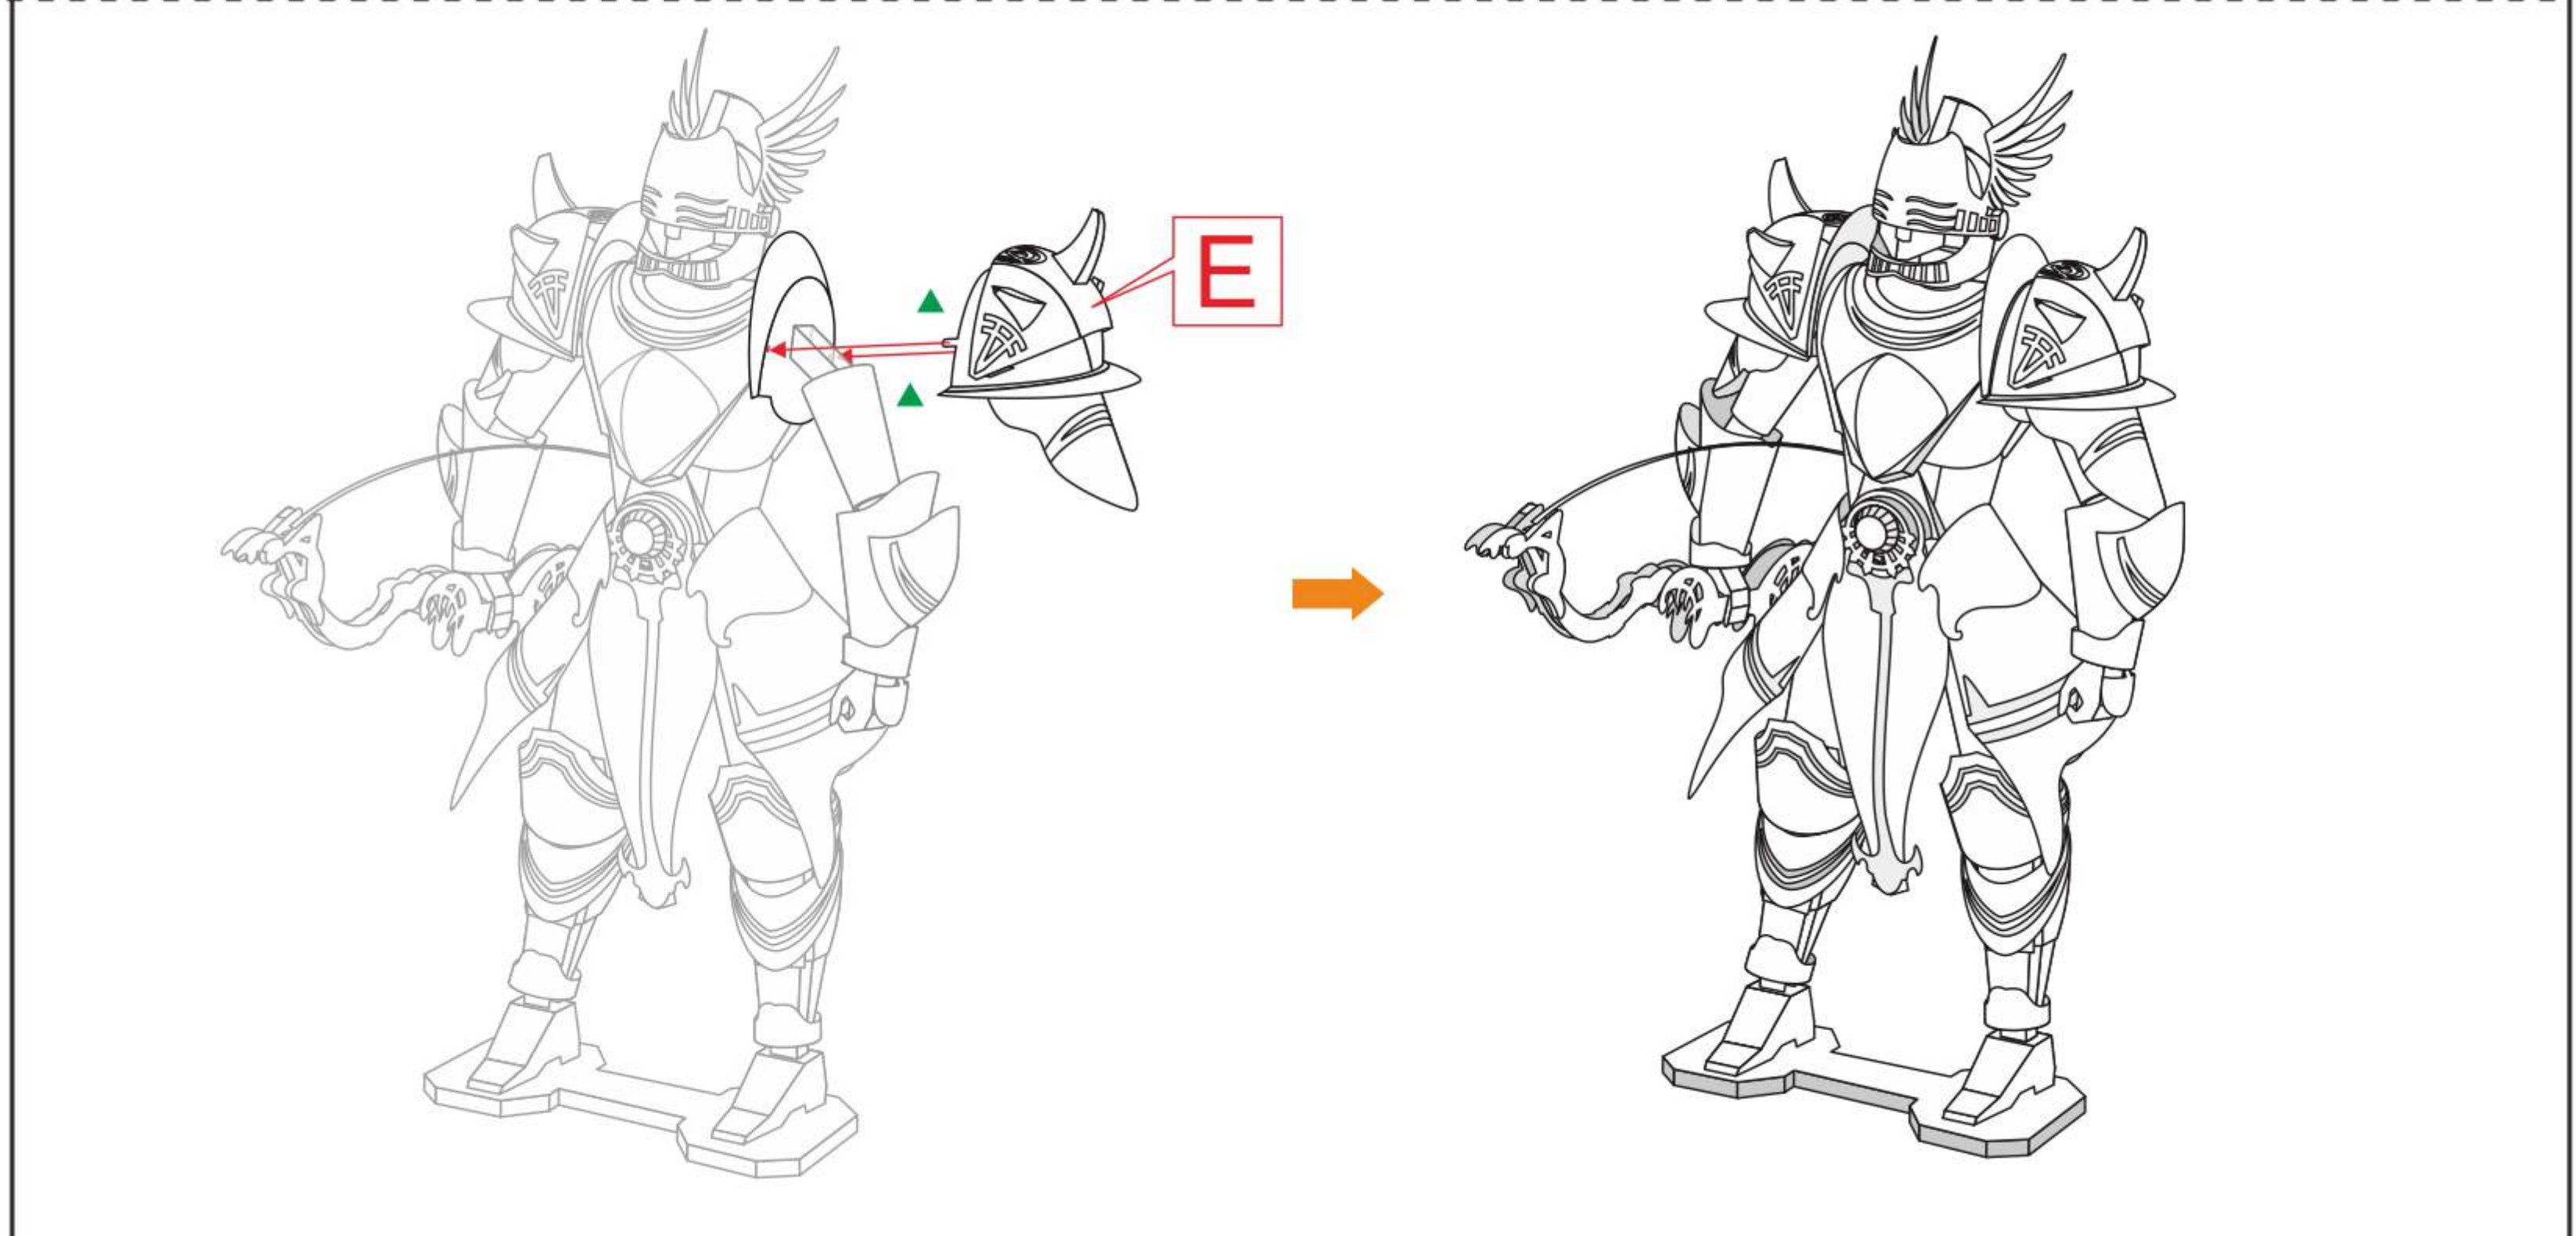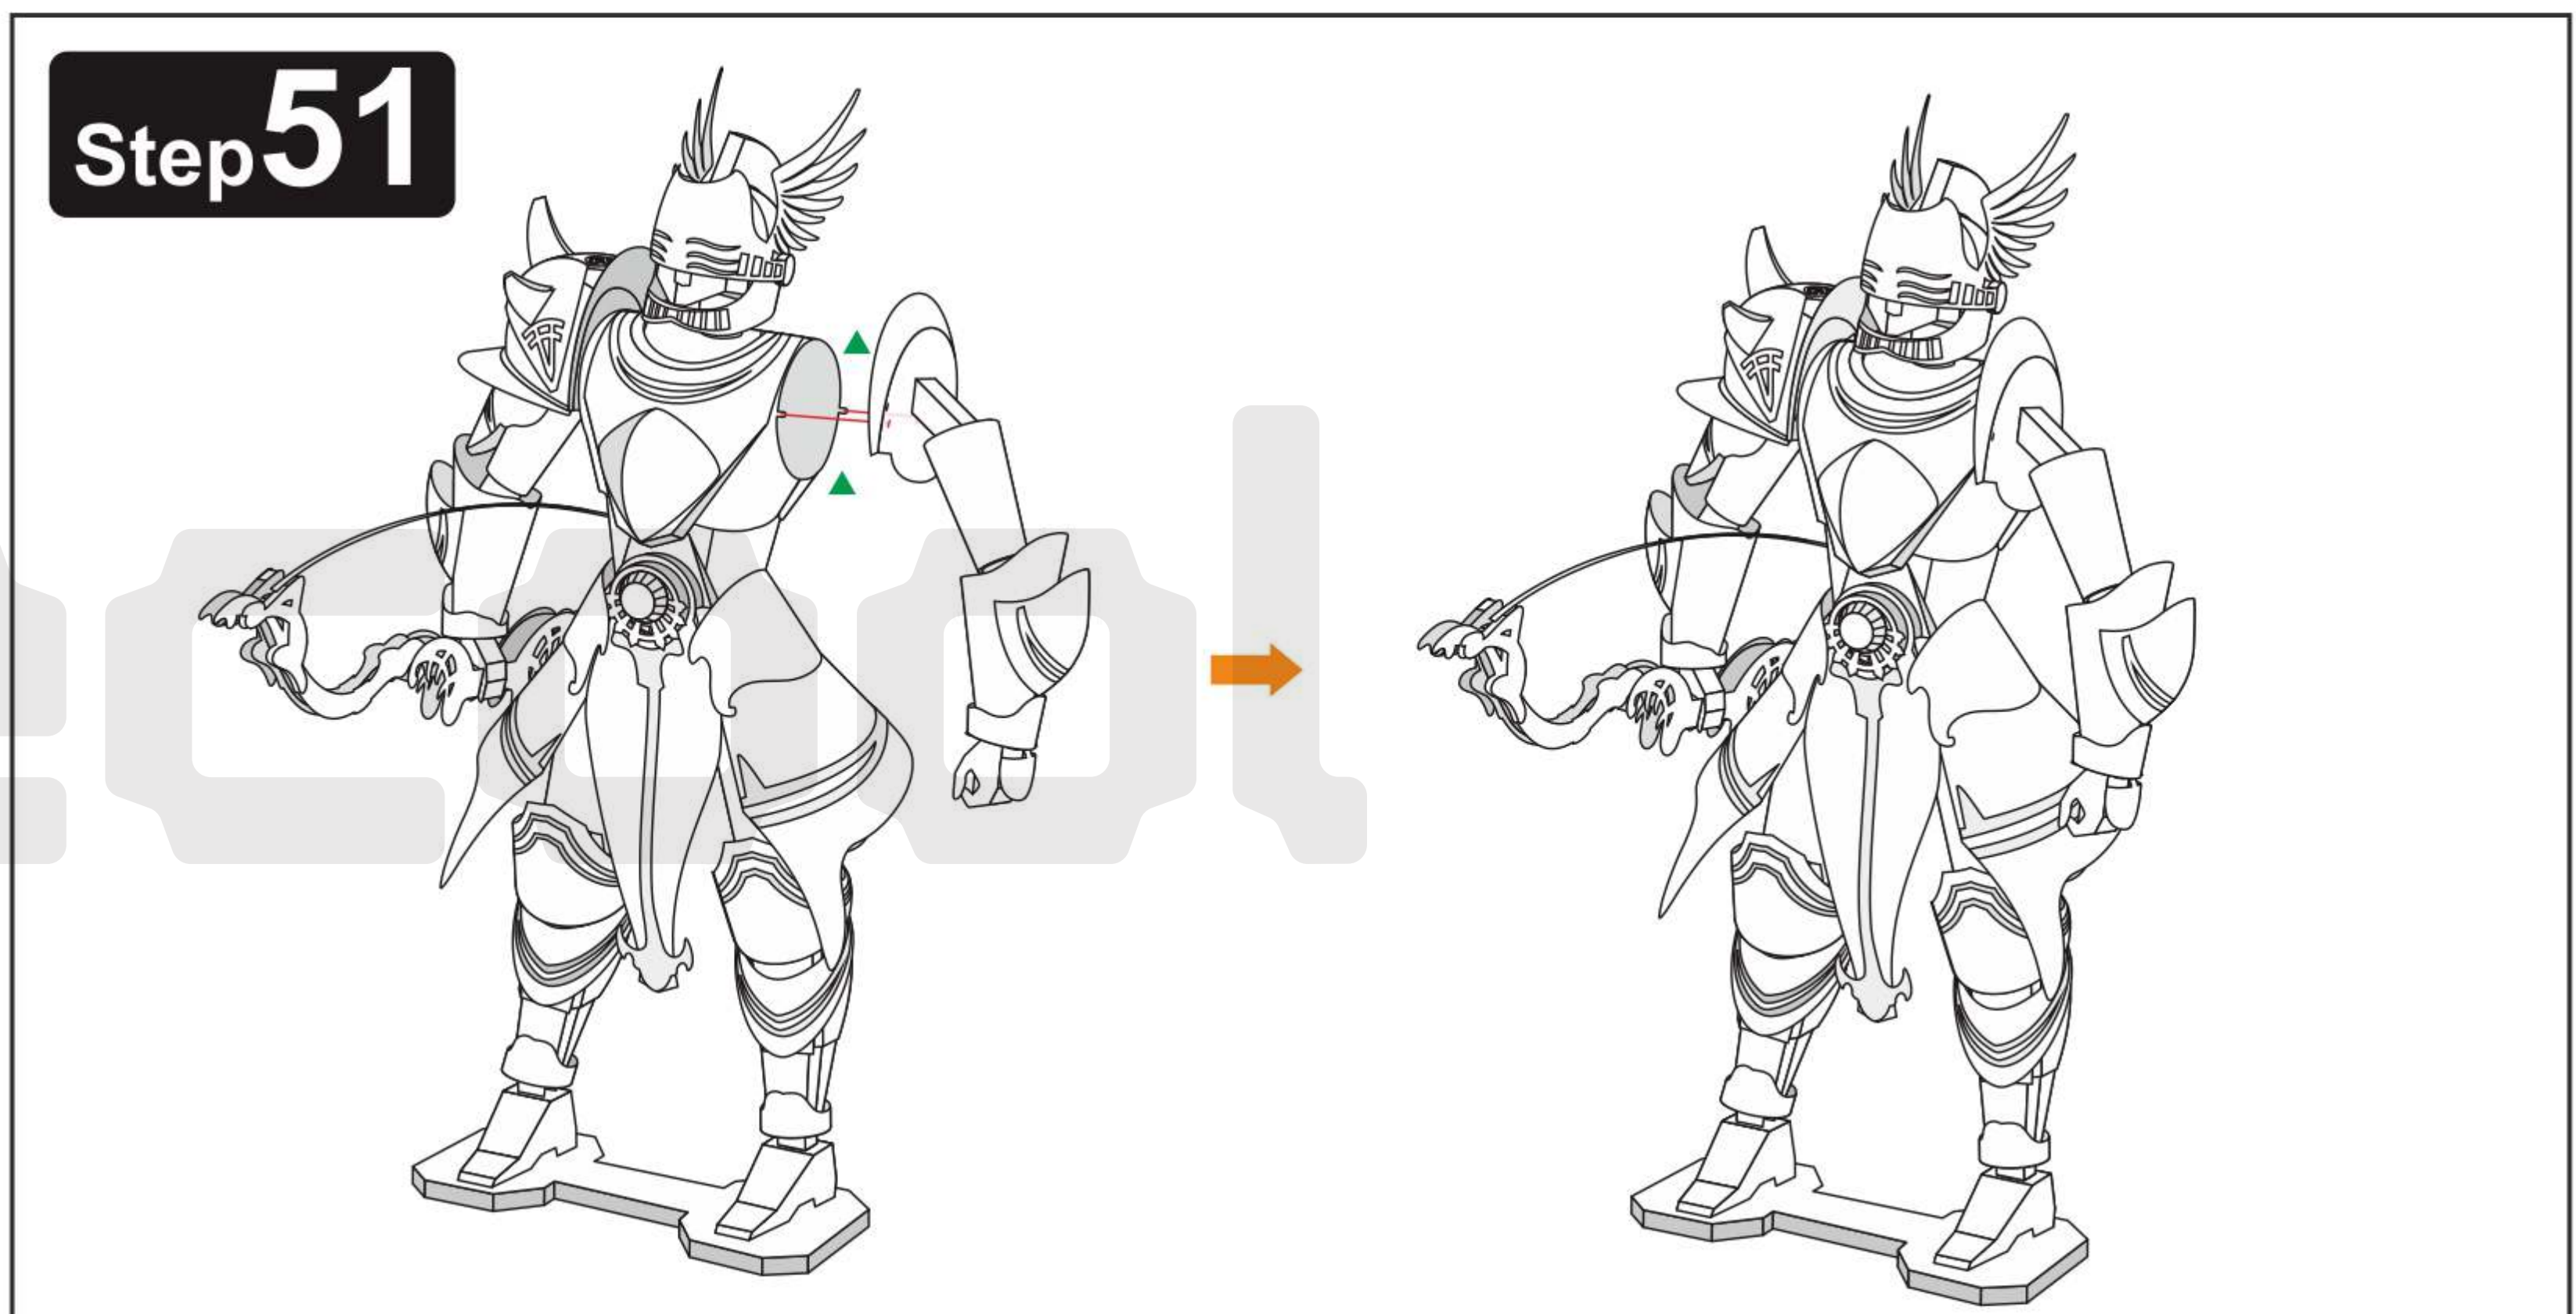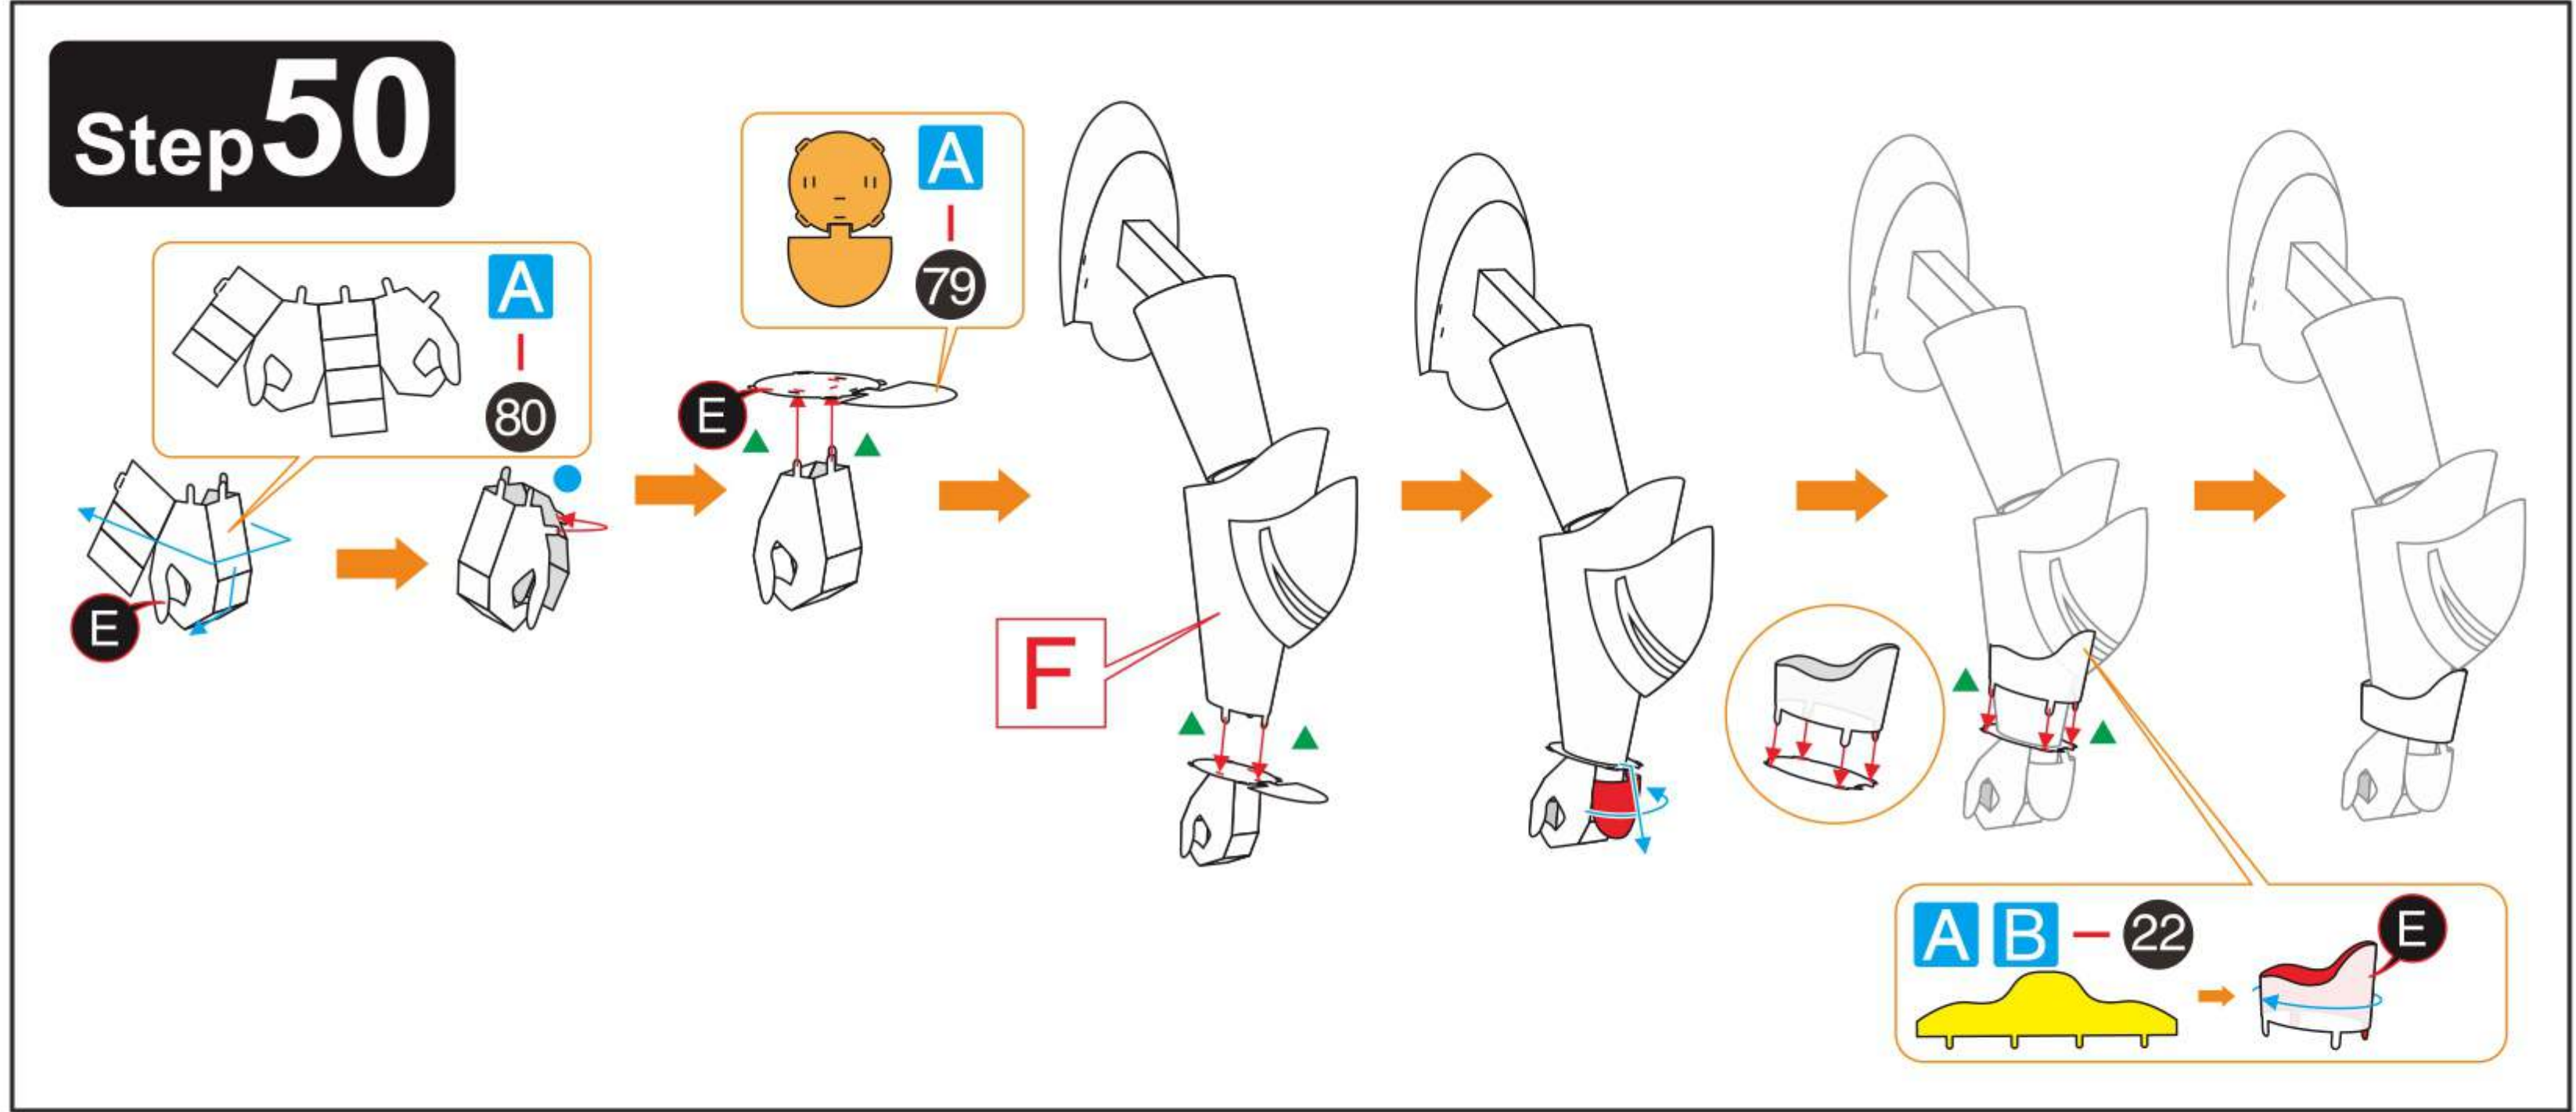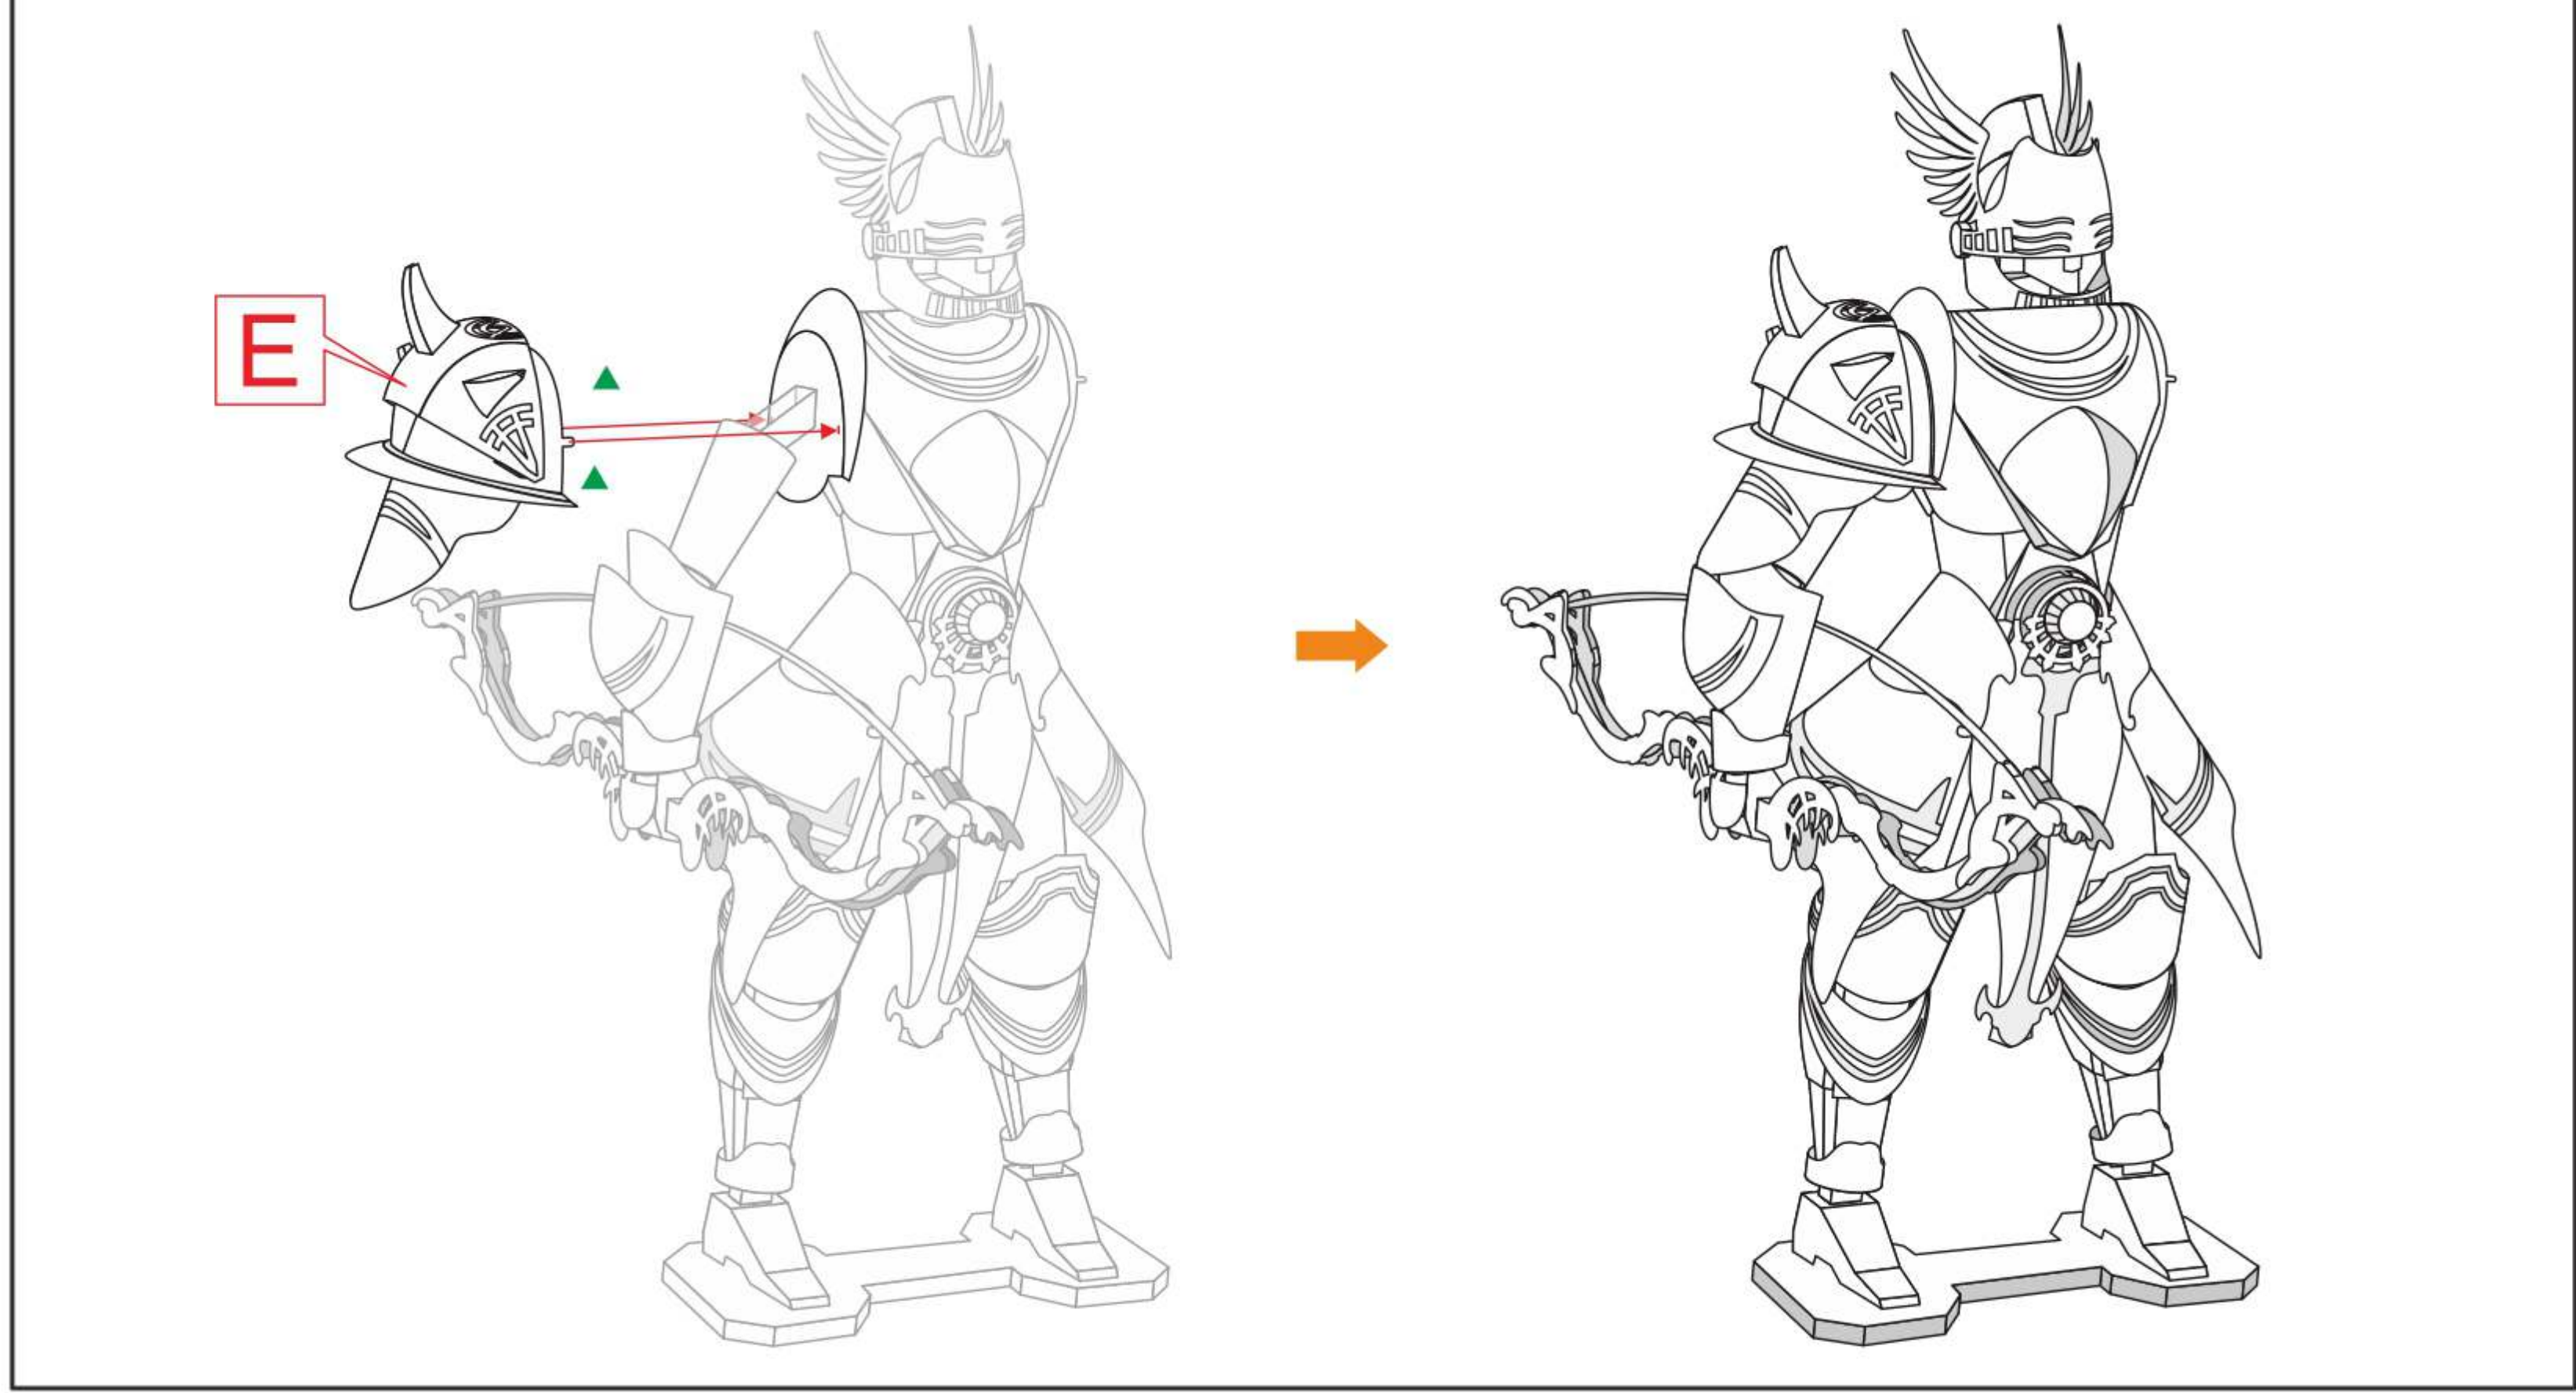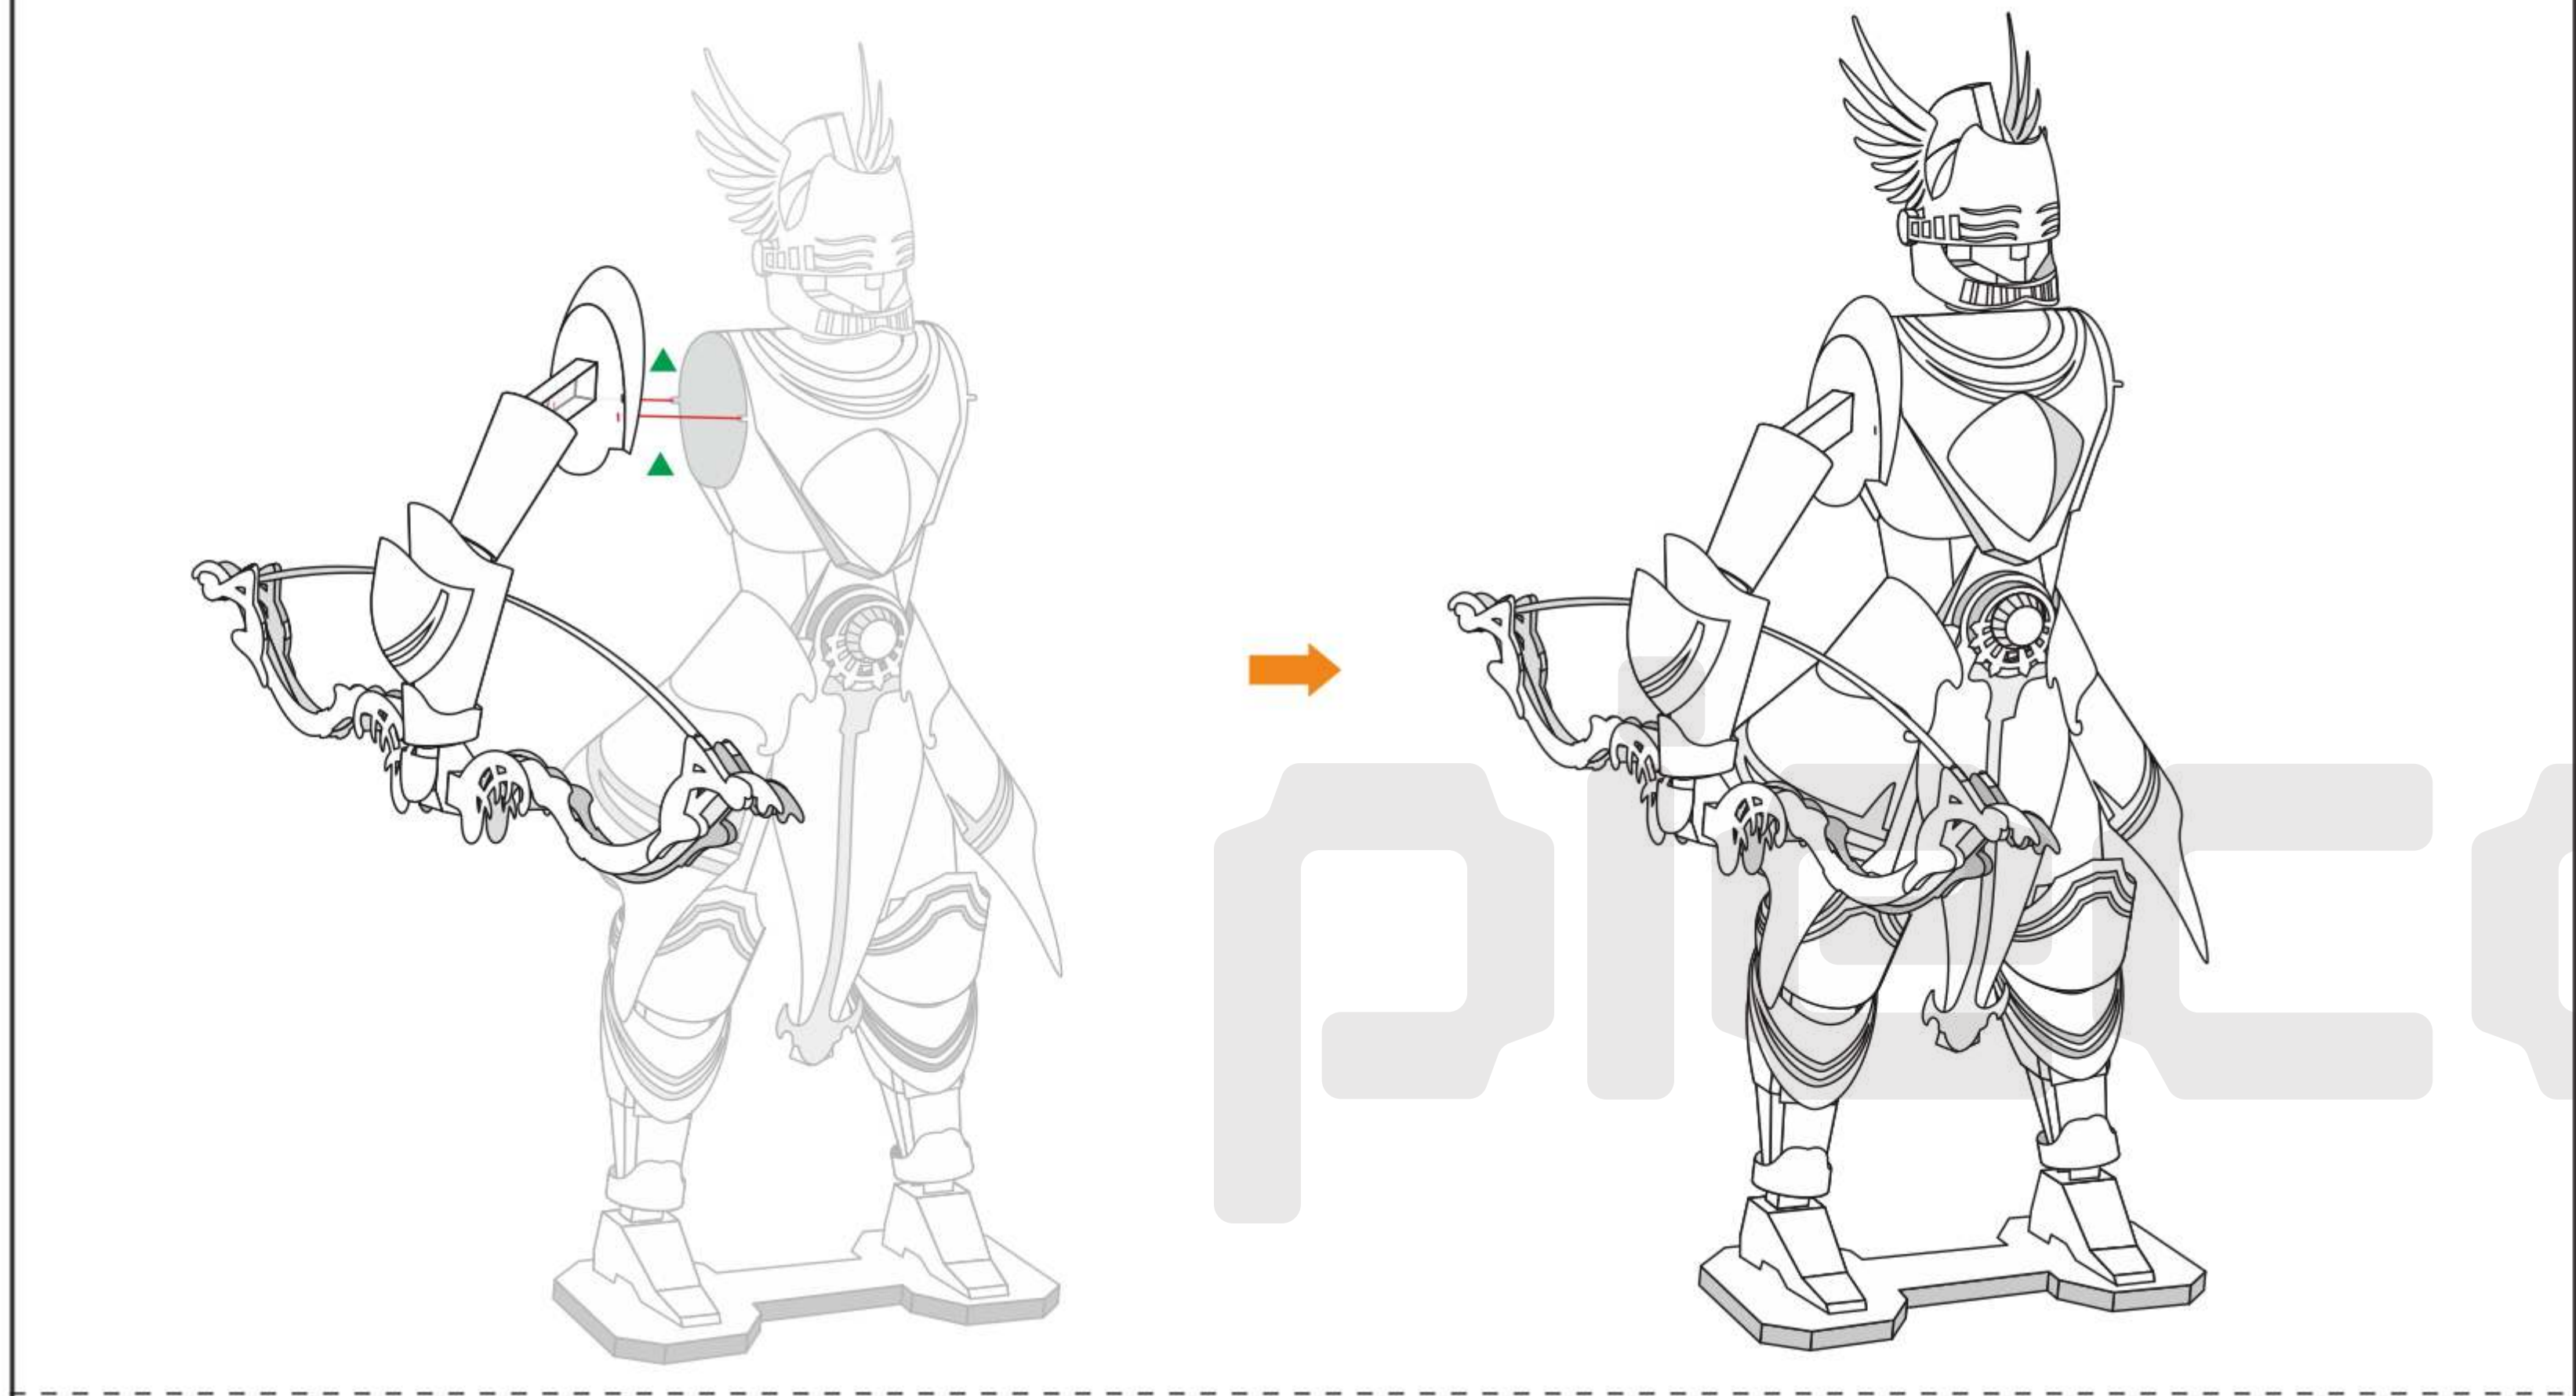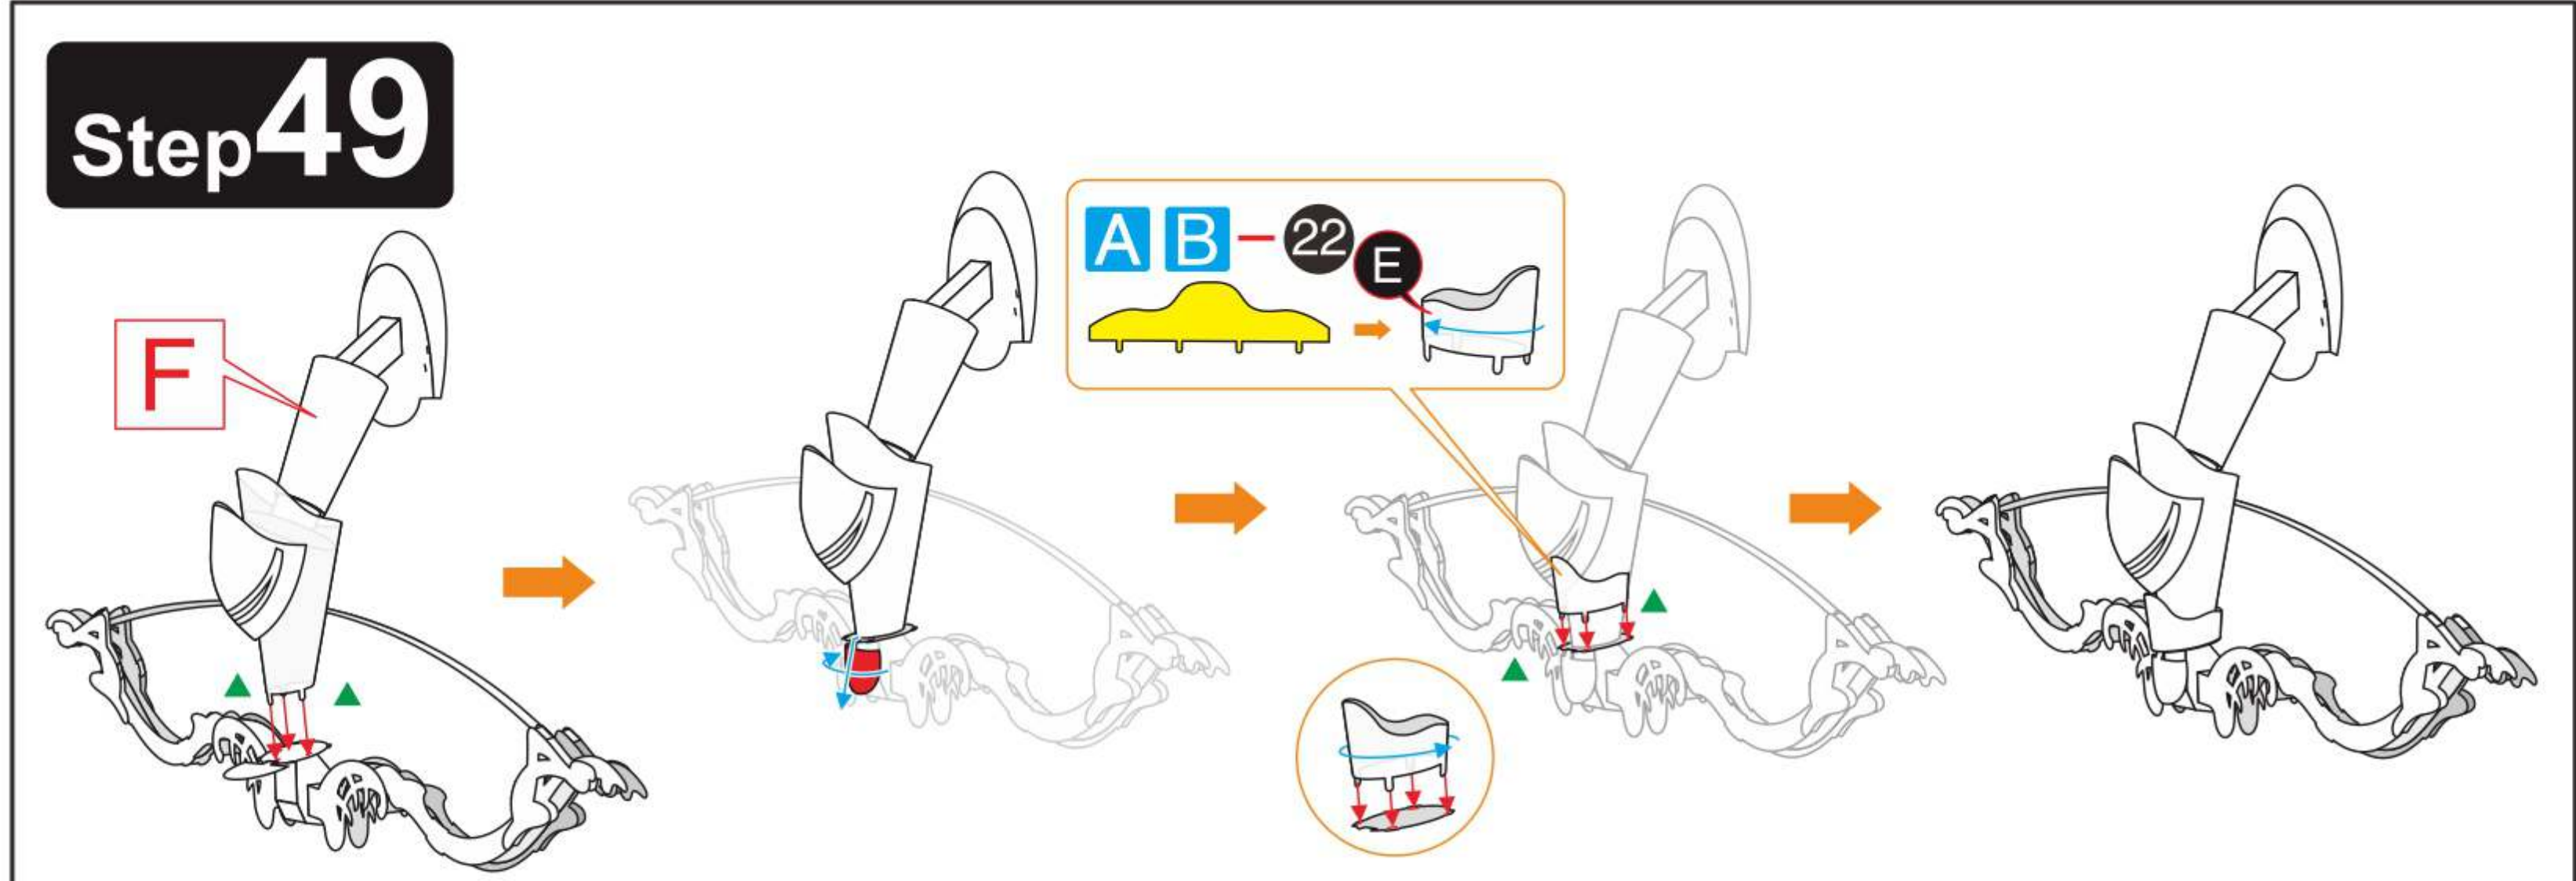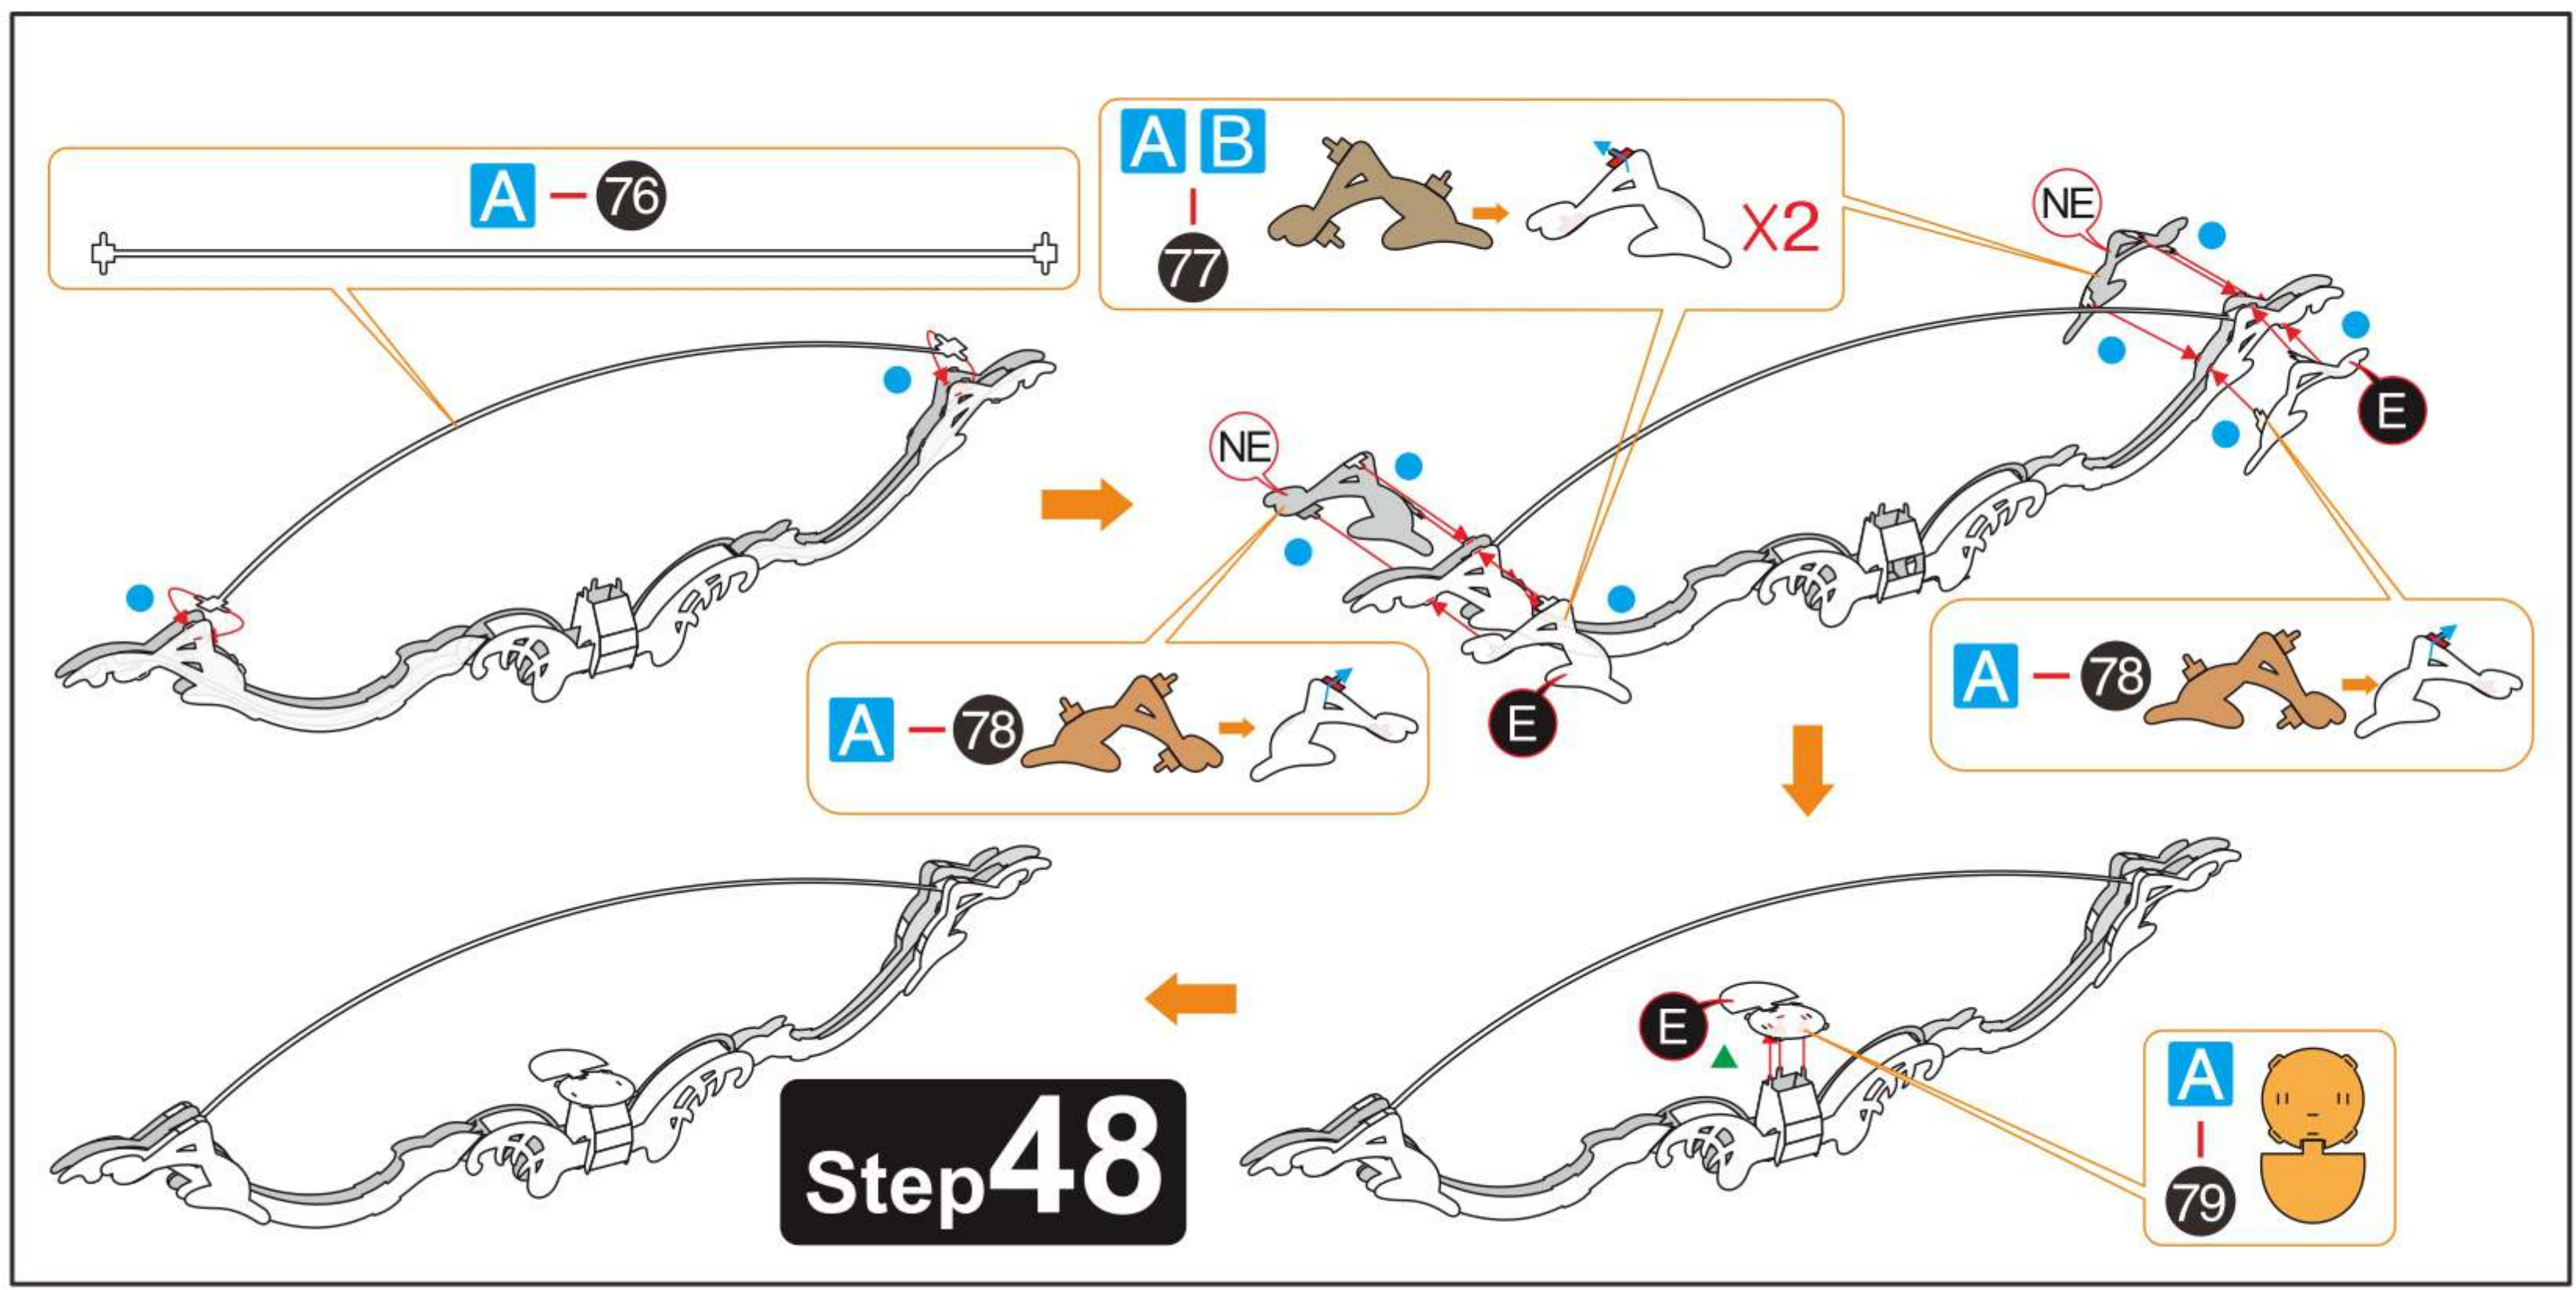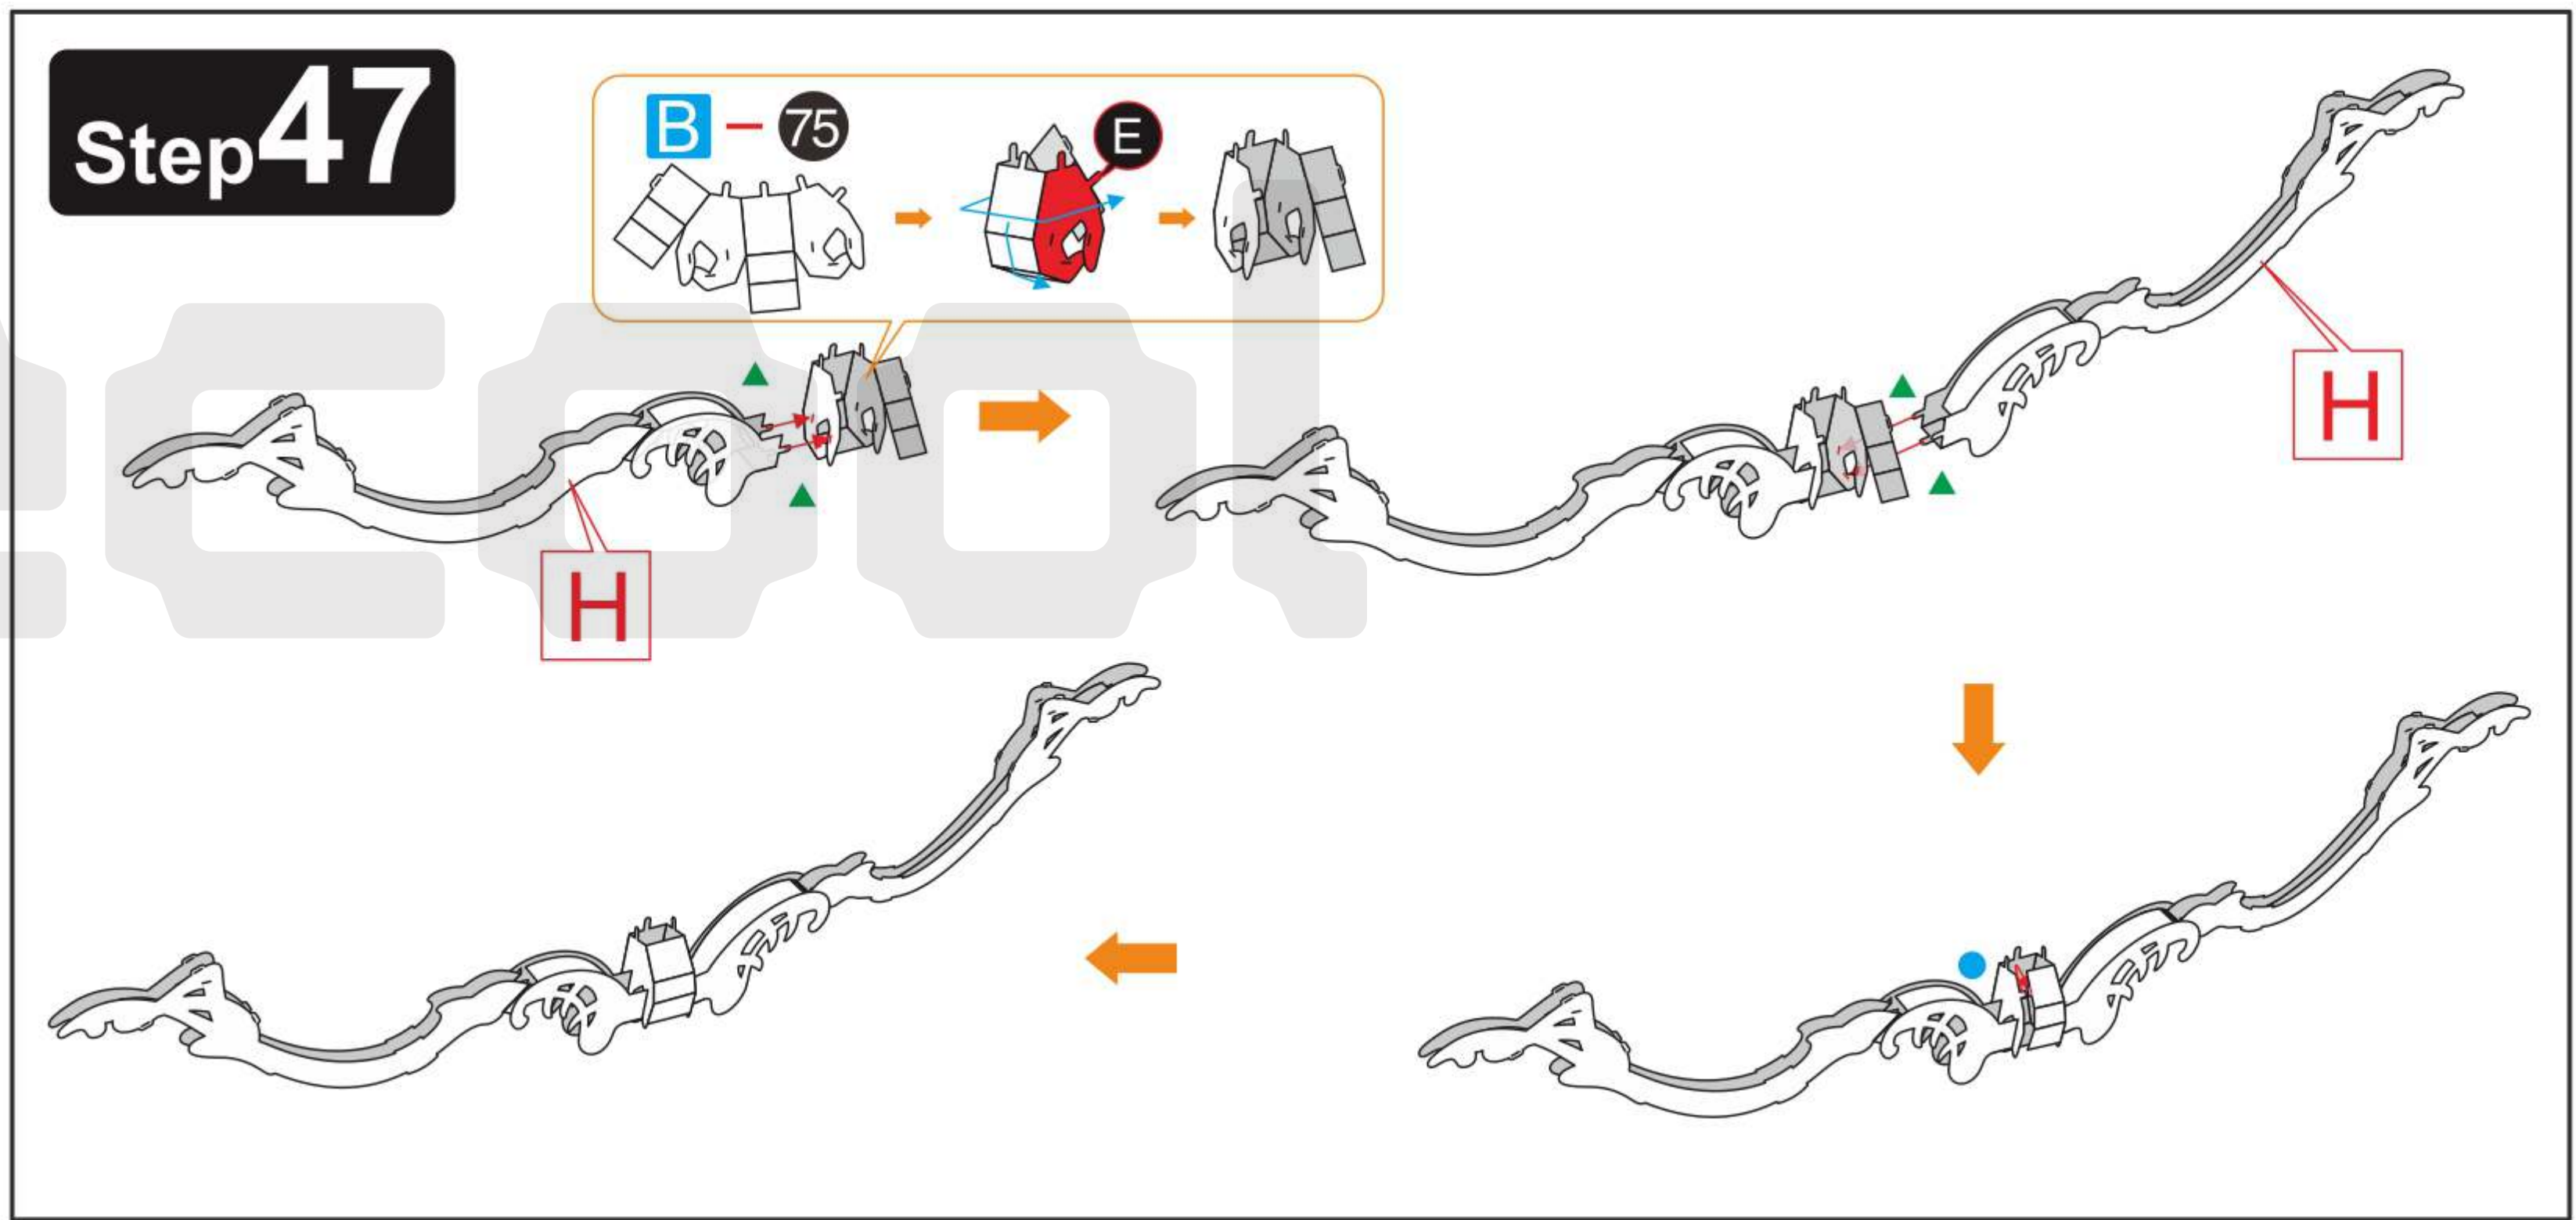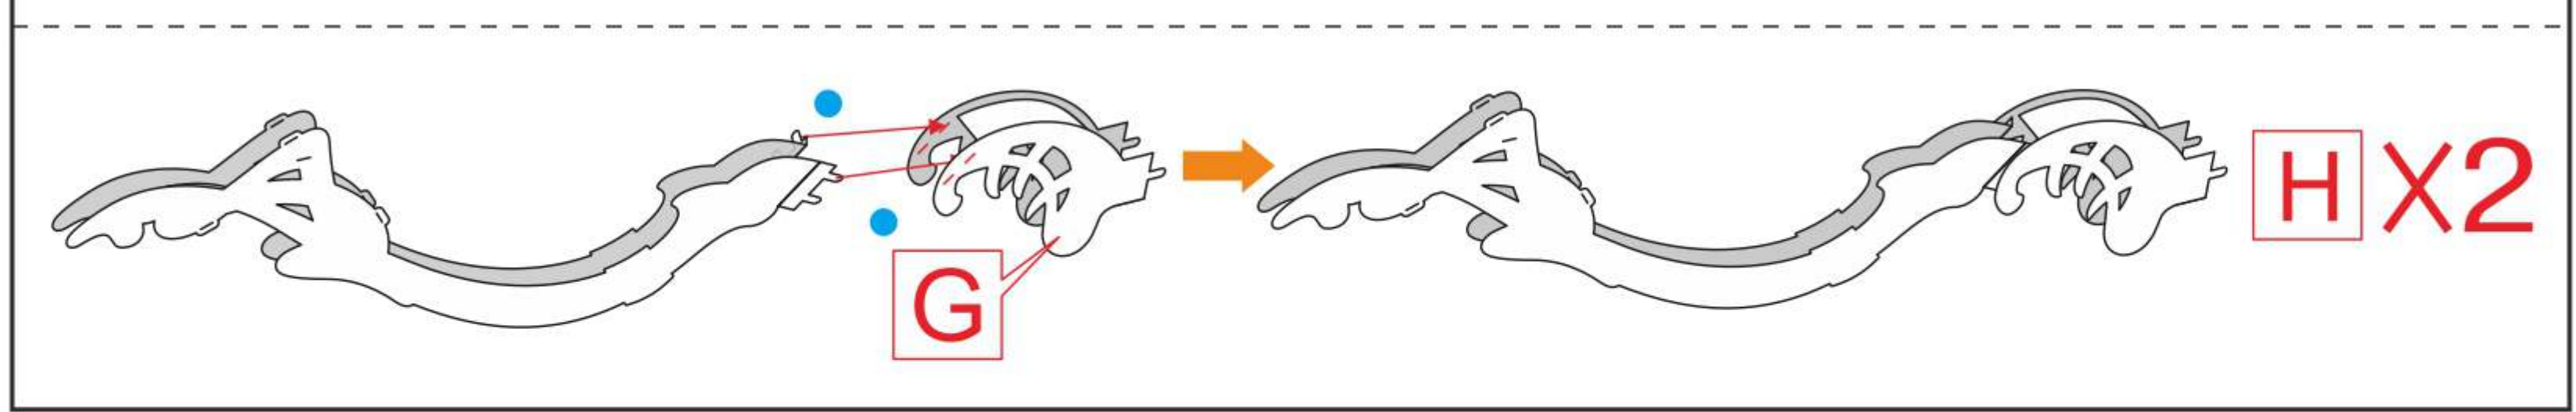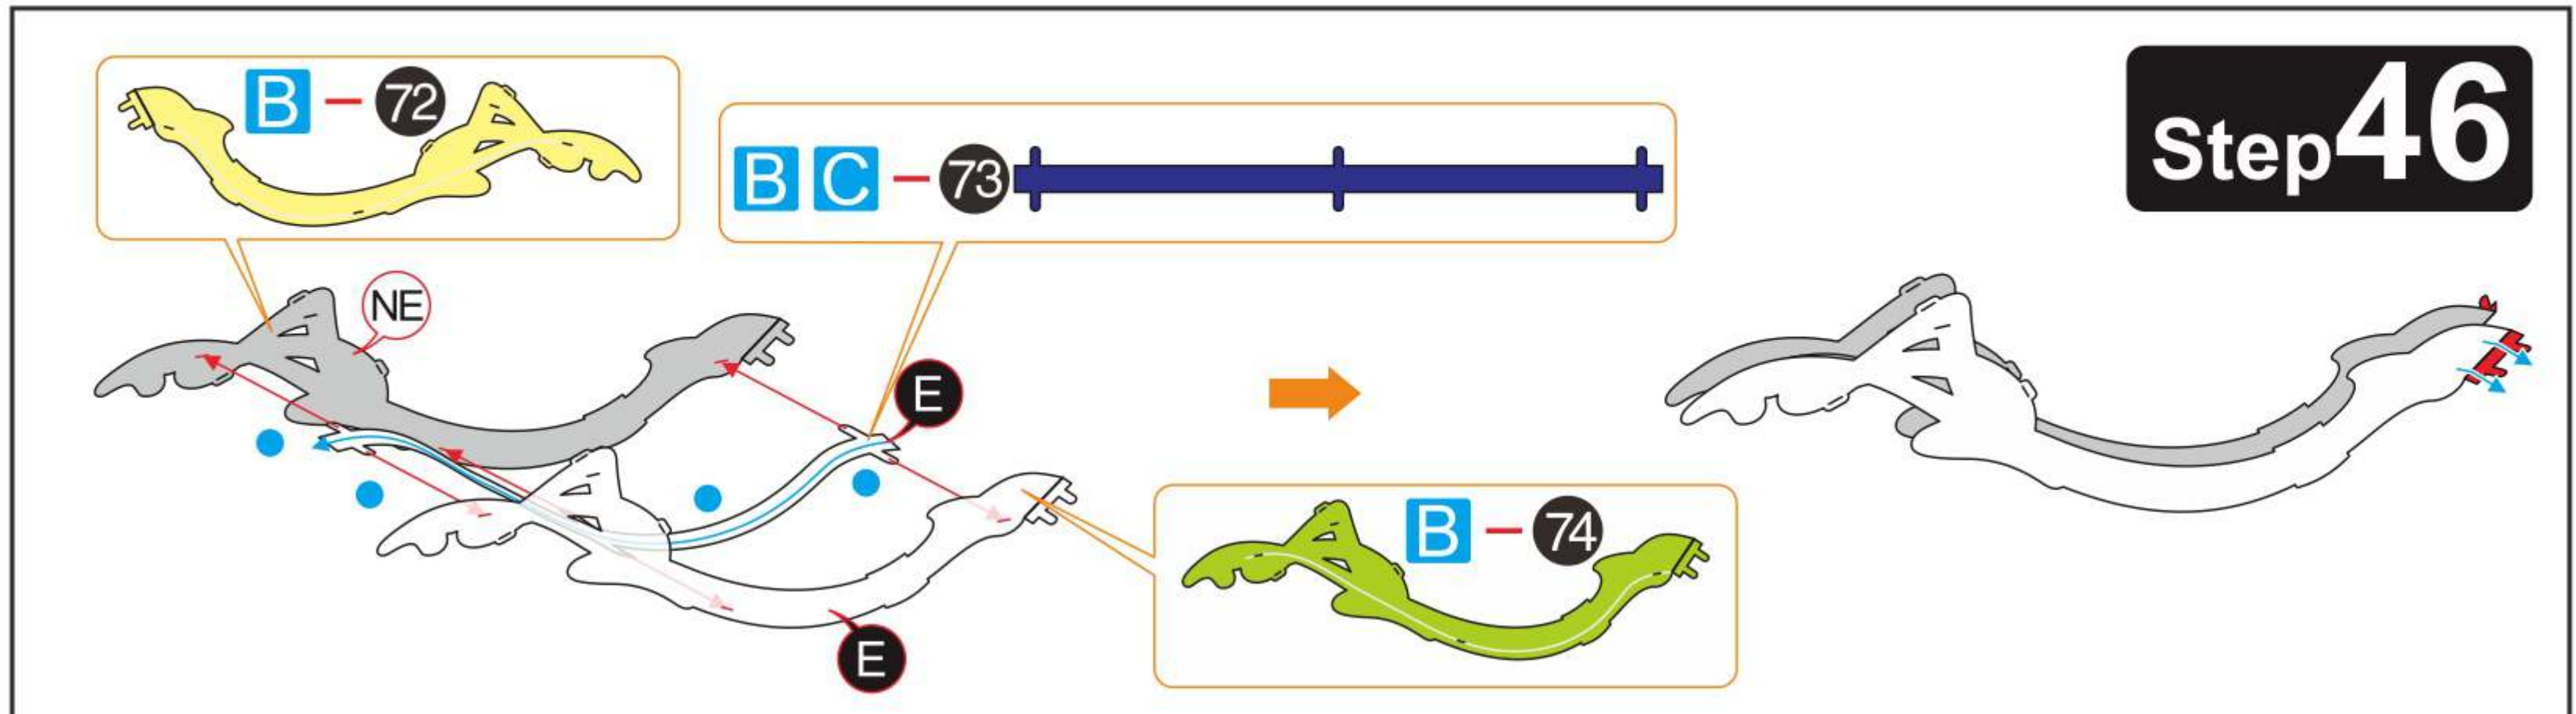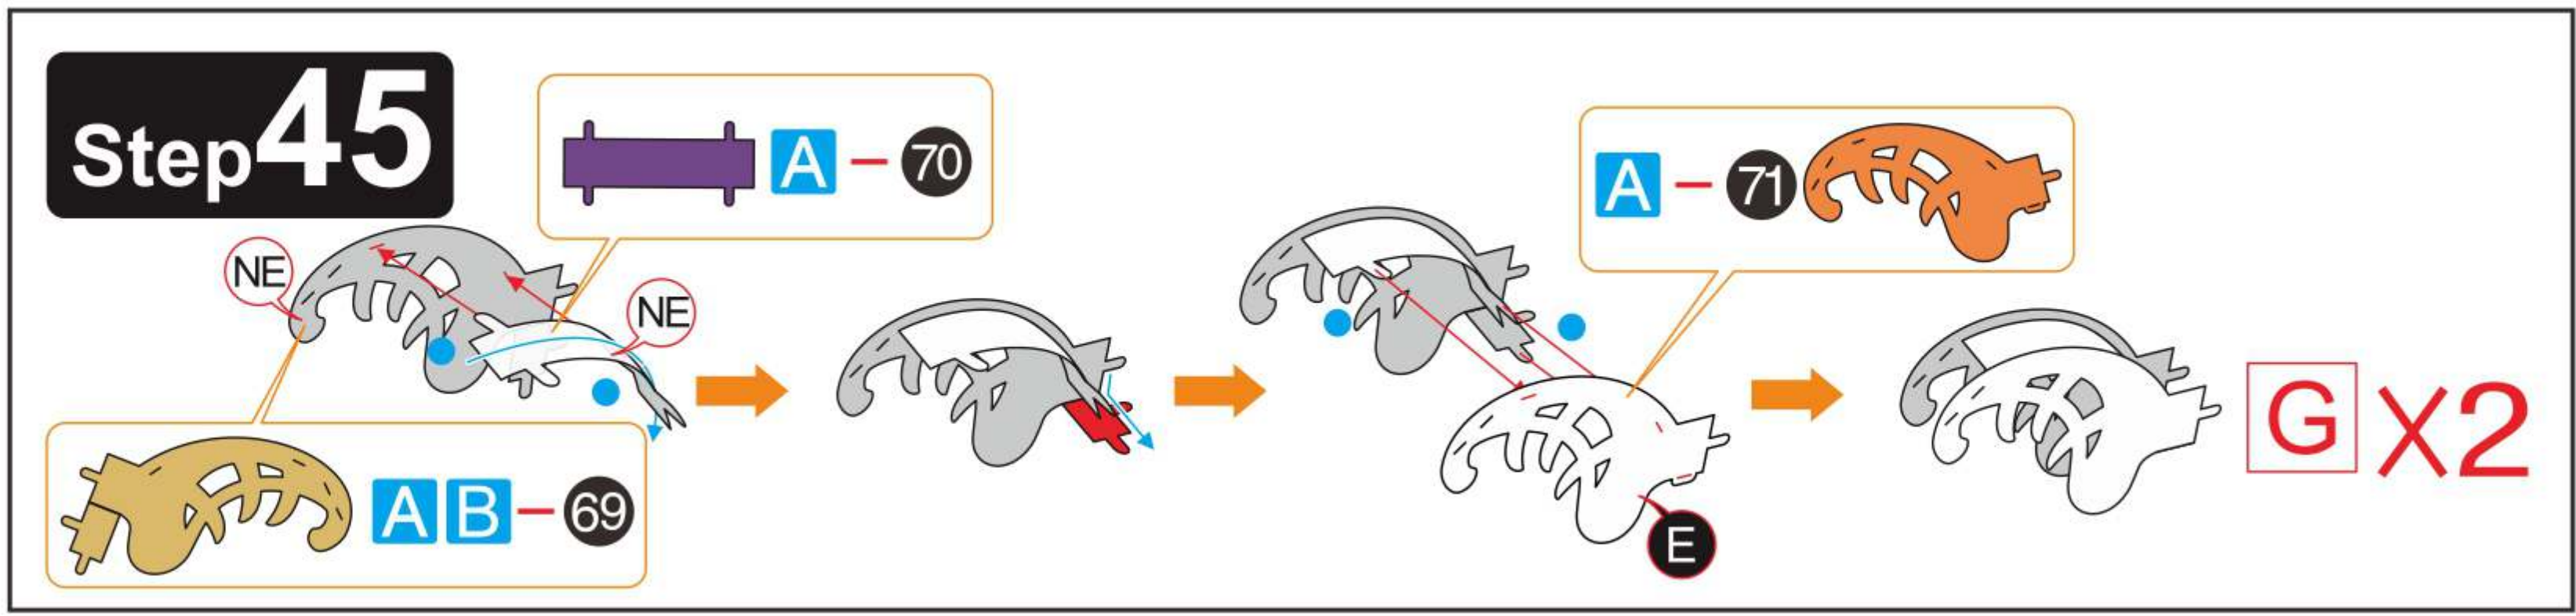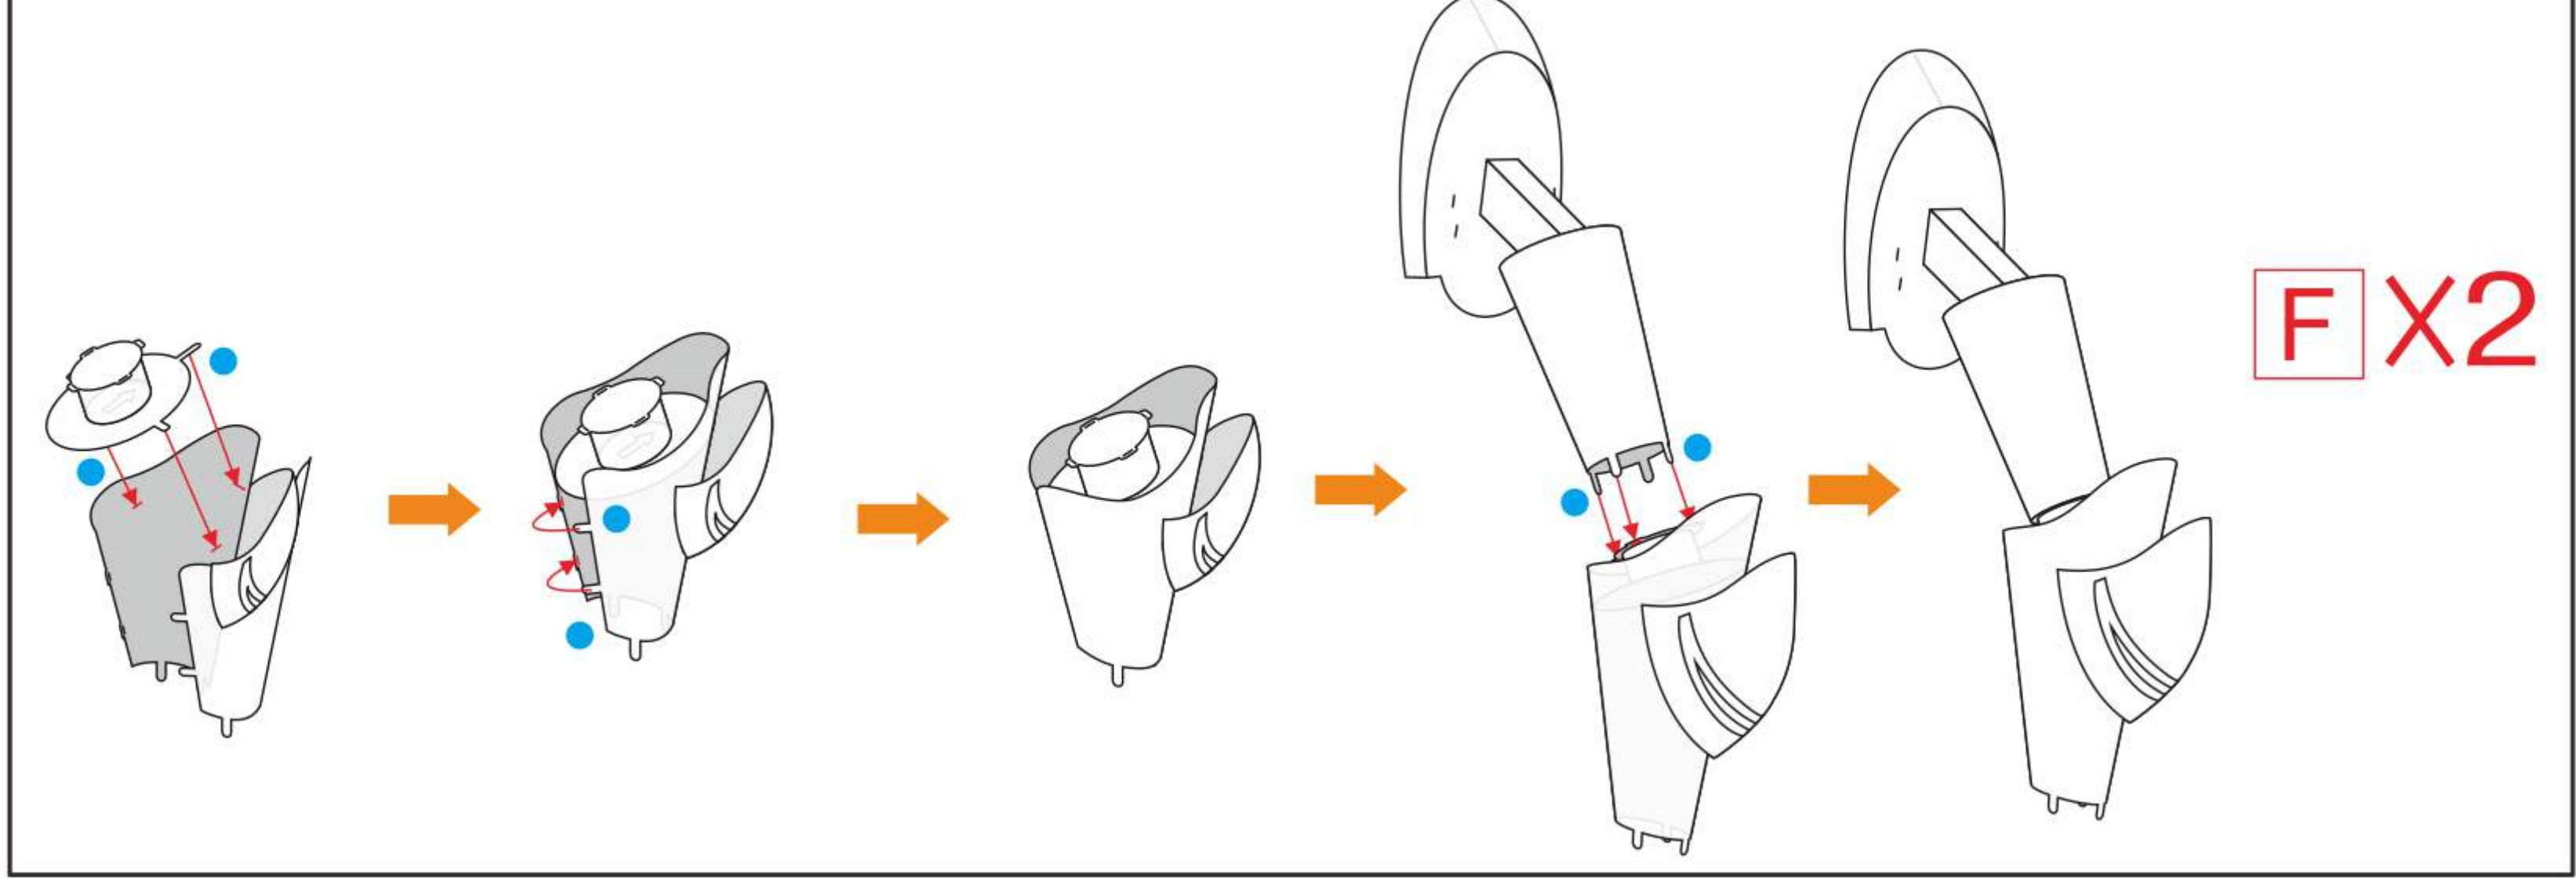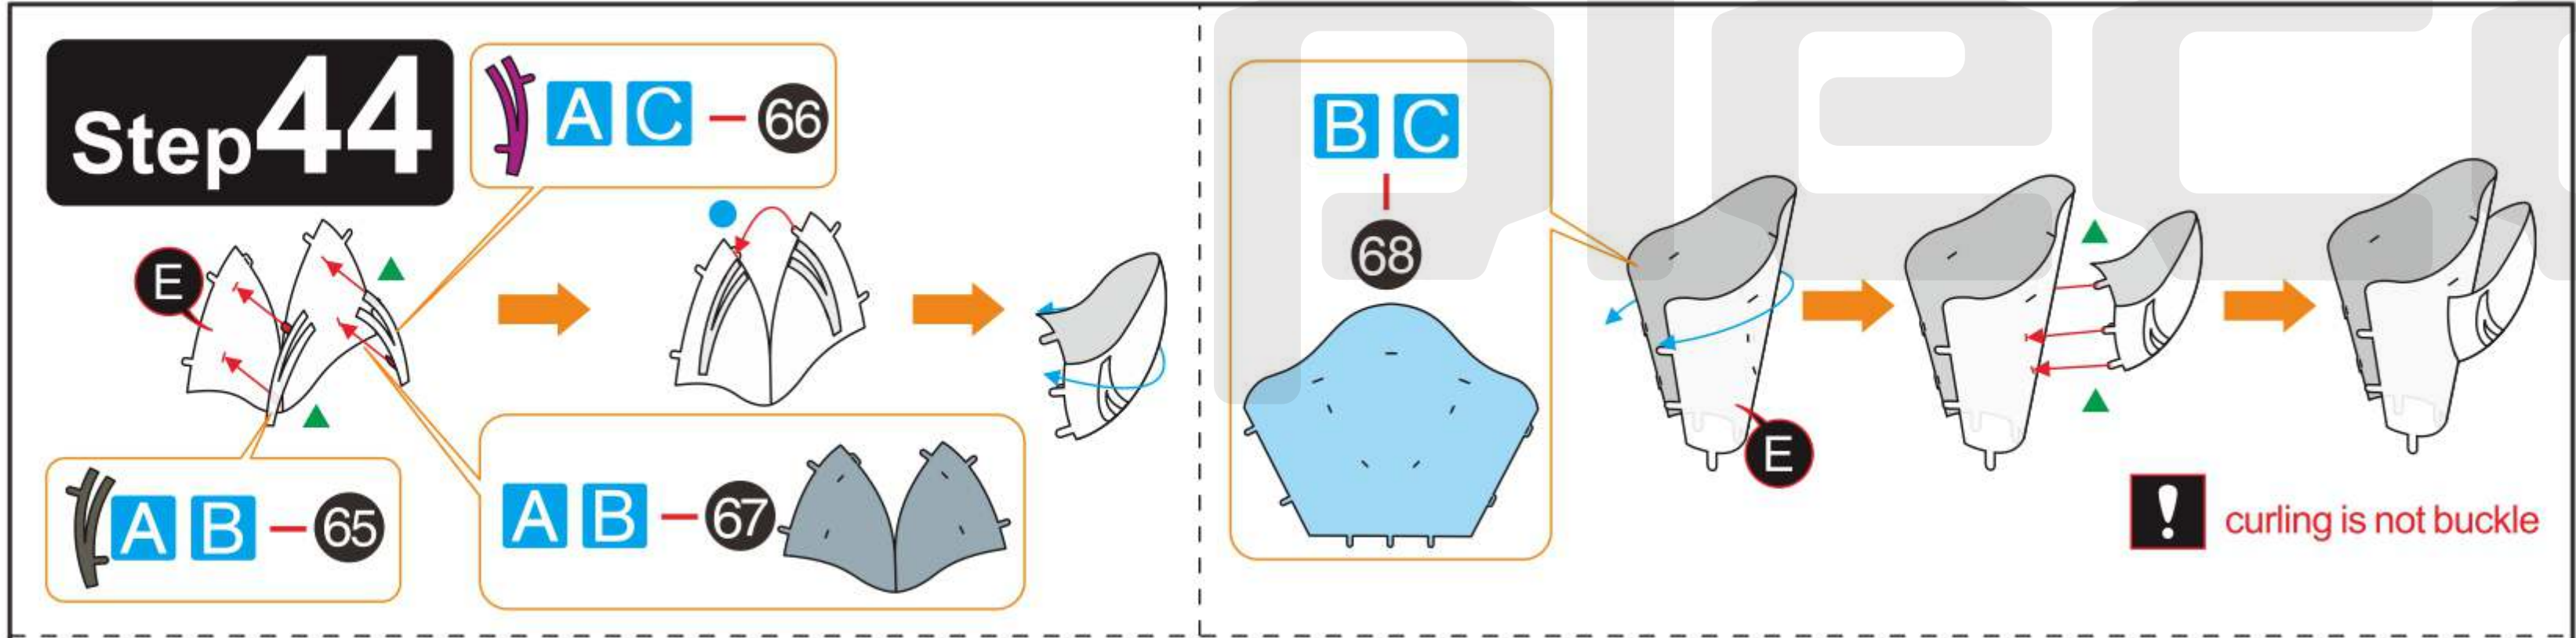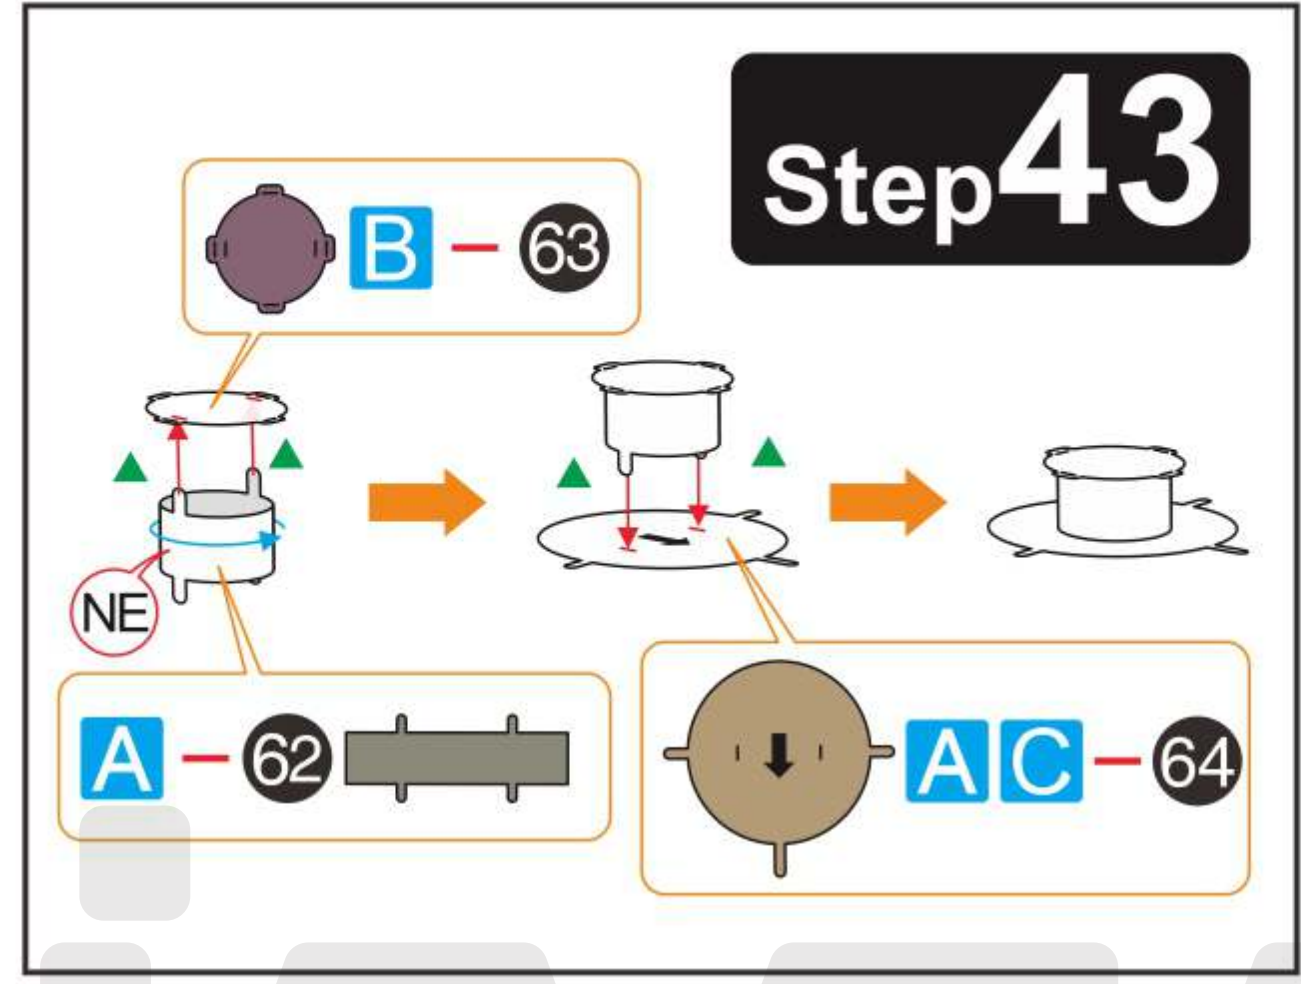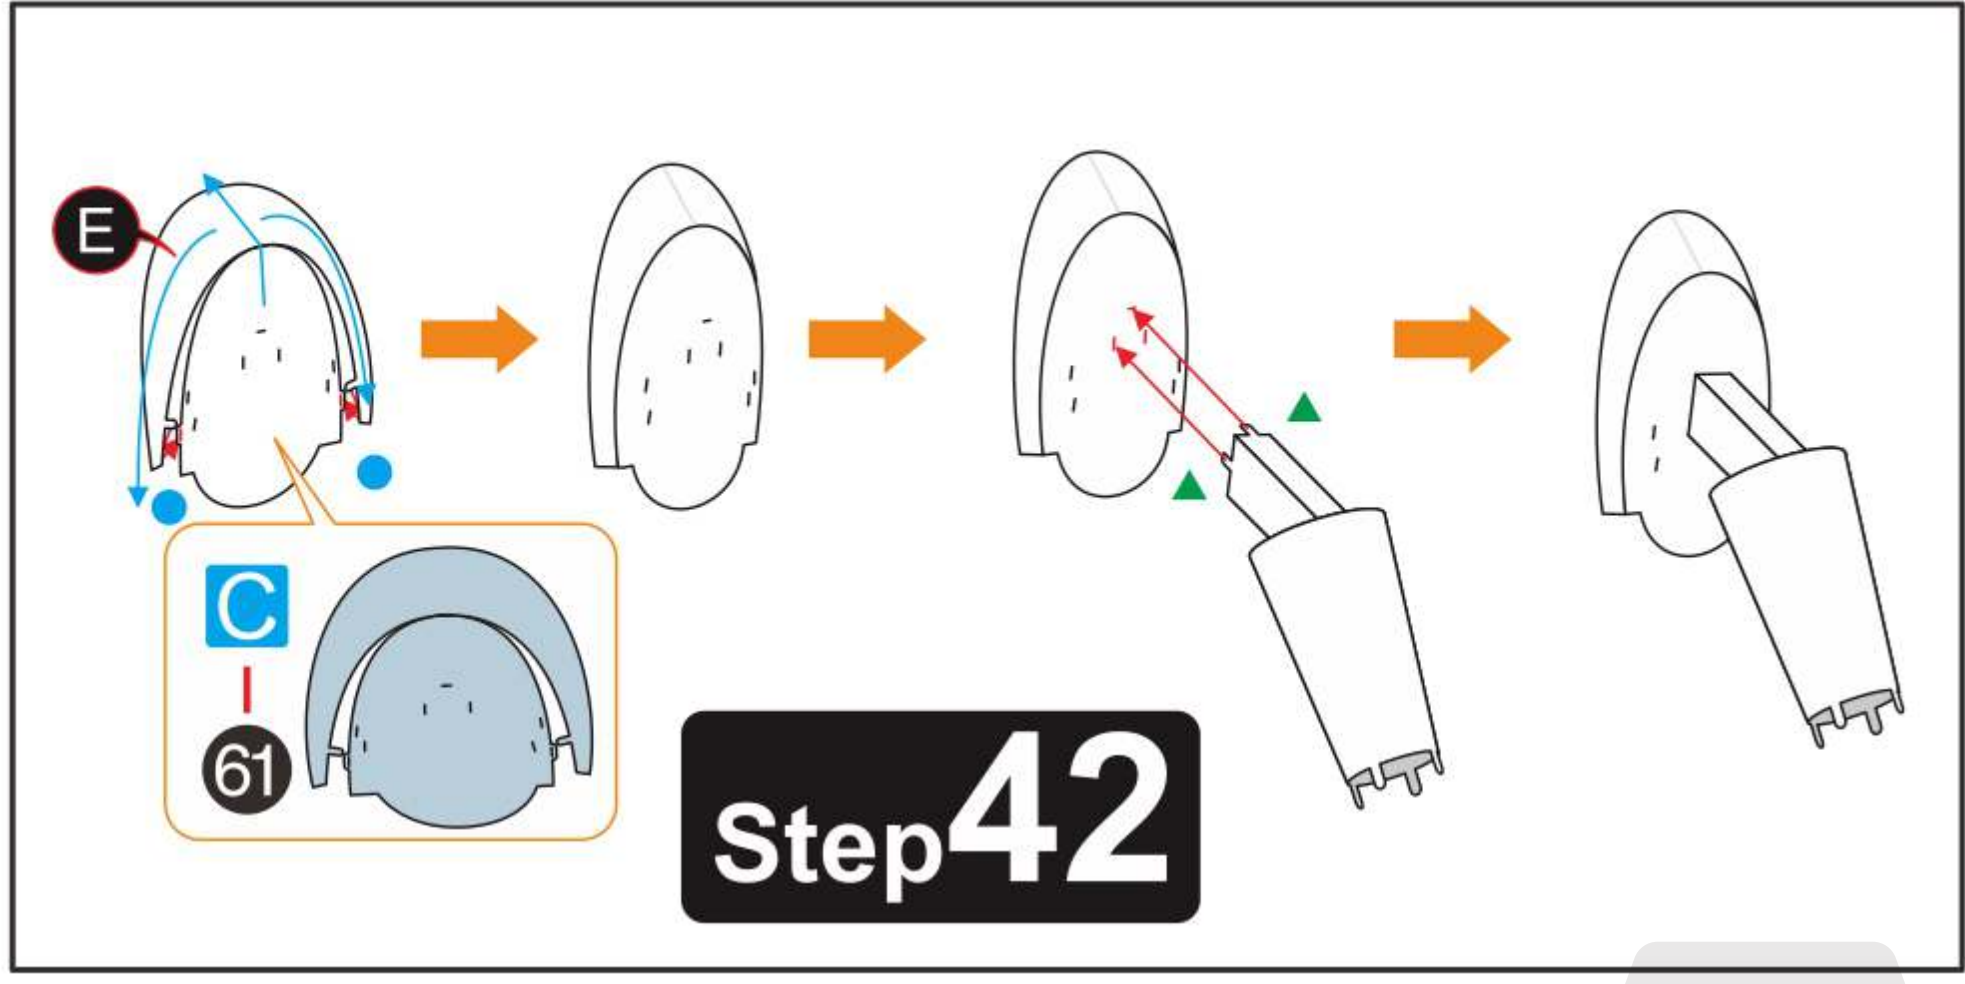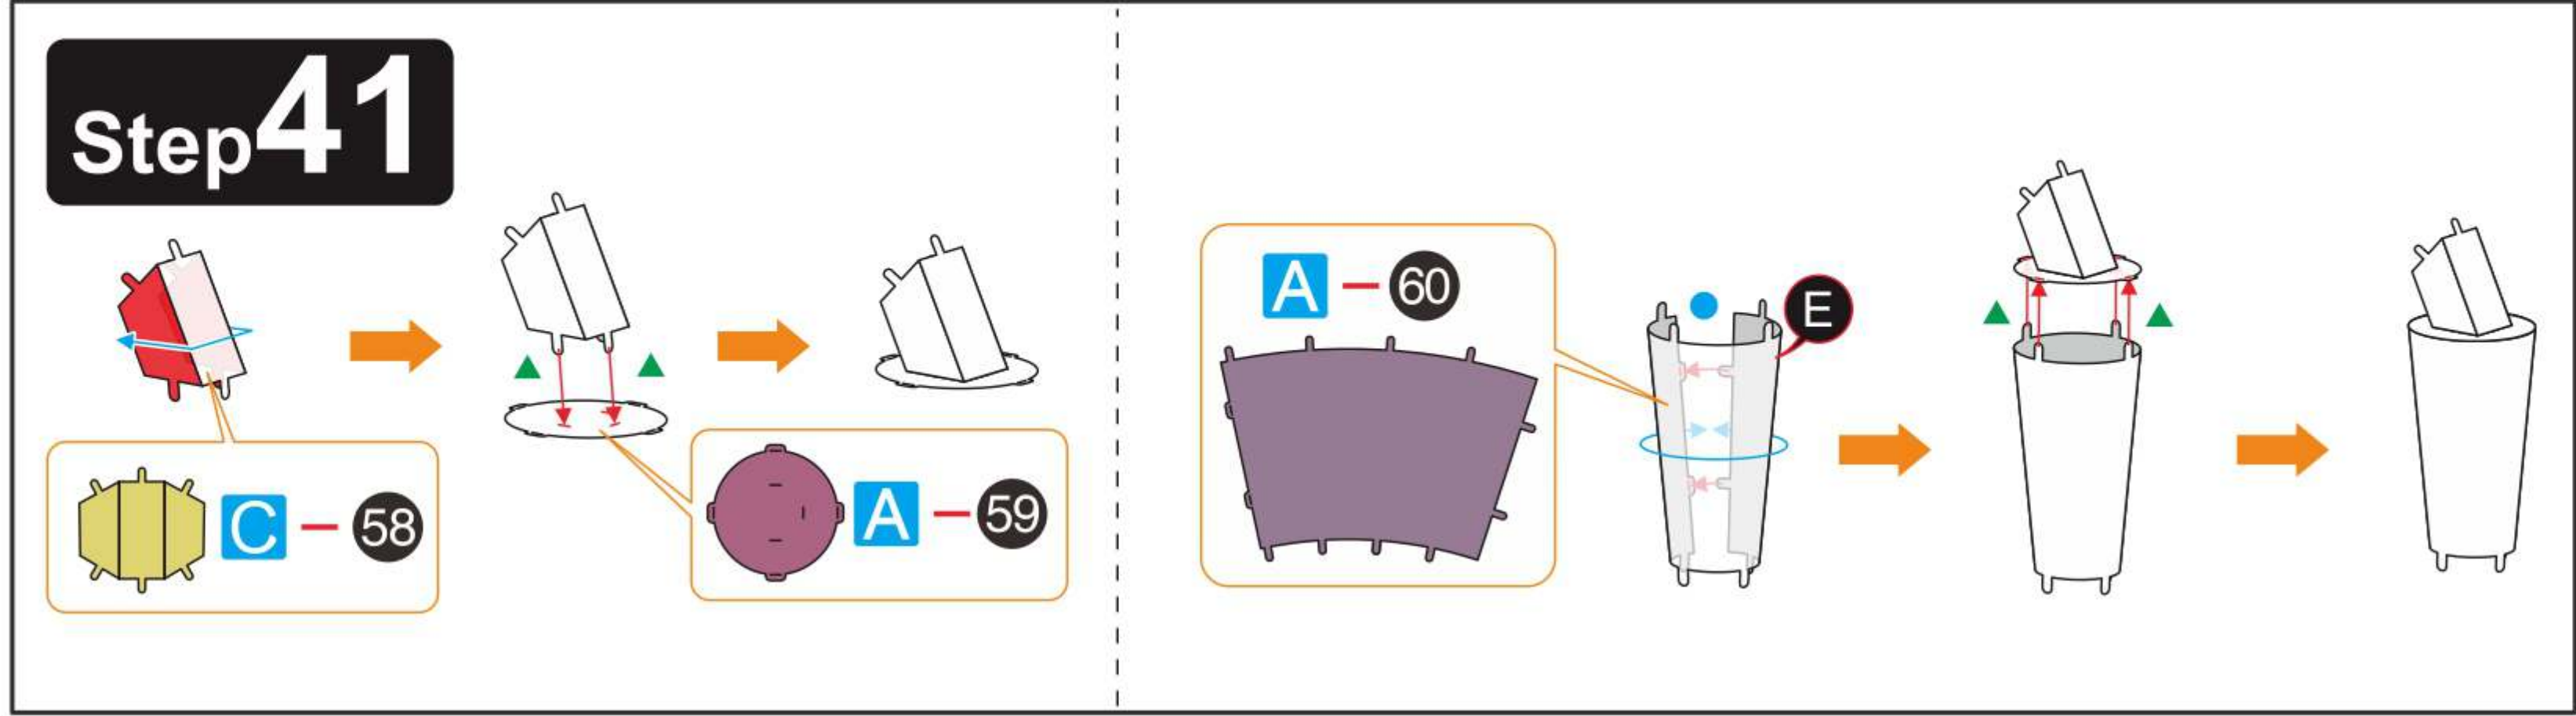

KNIGHT OF FIRMAMENT
HP072

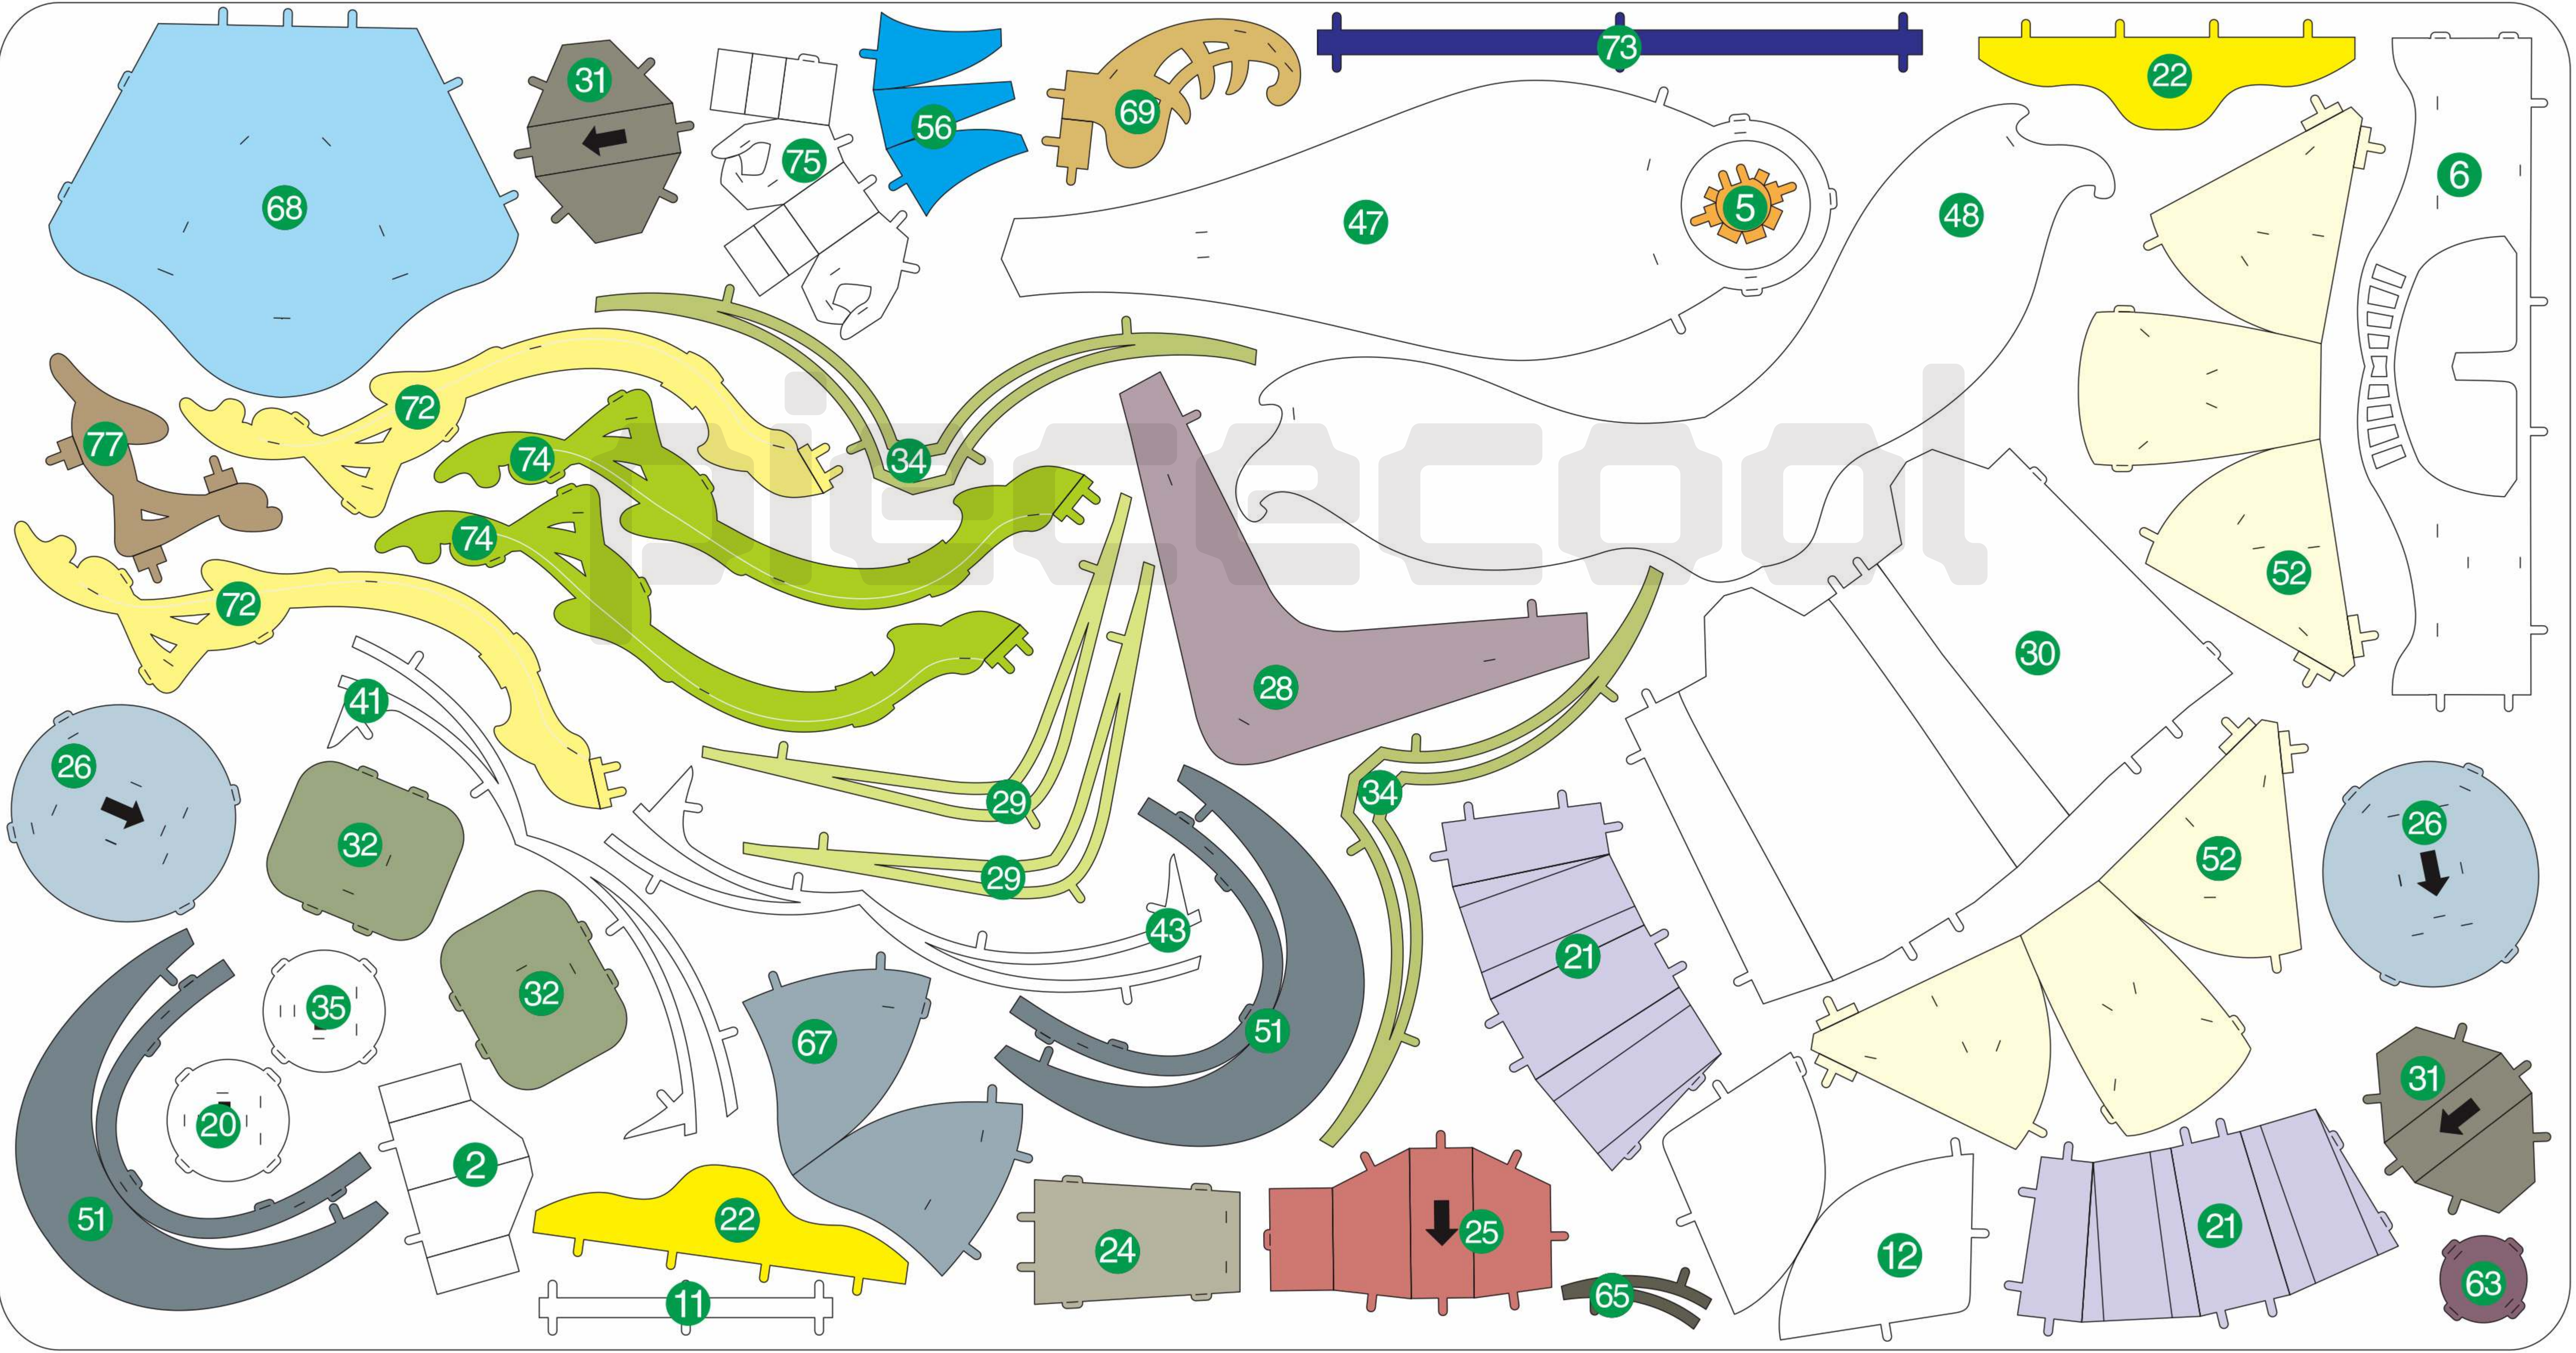

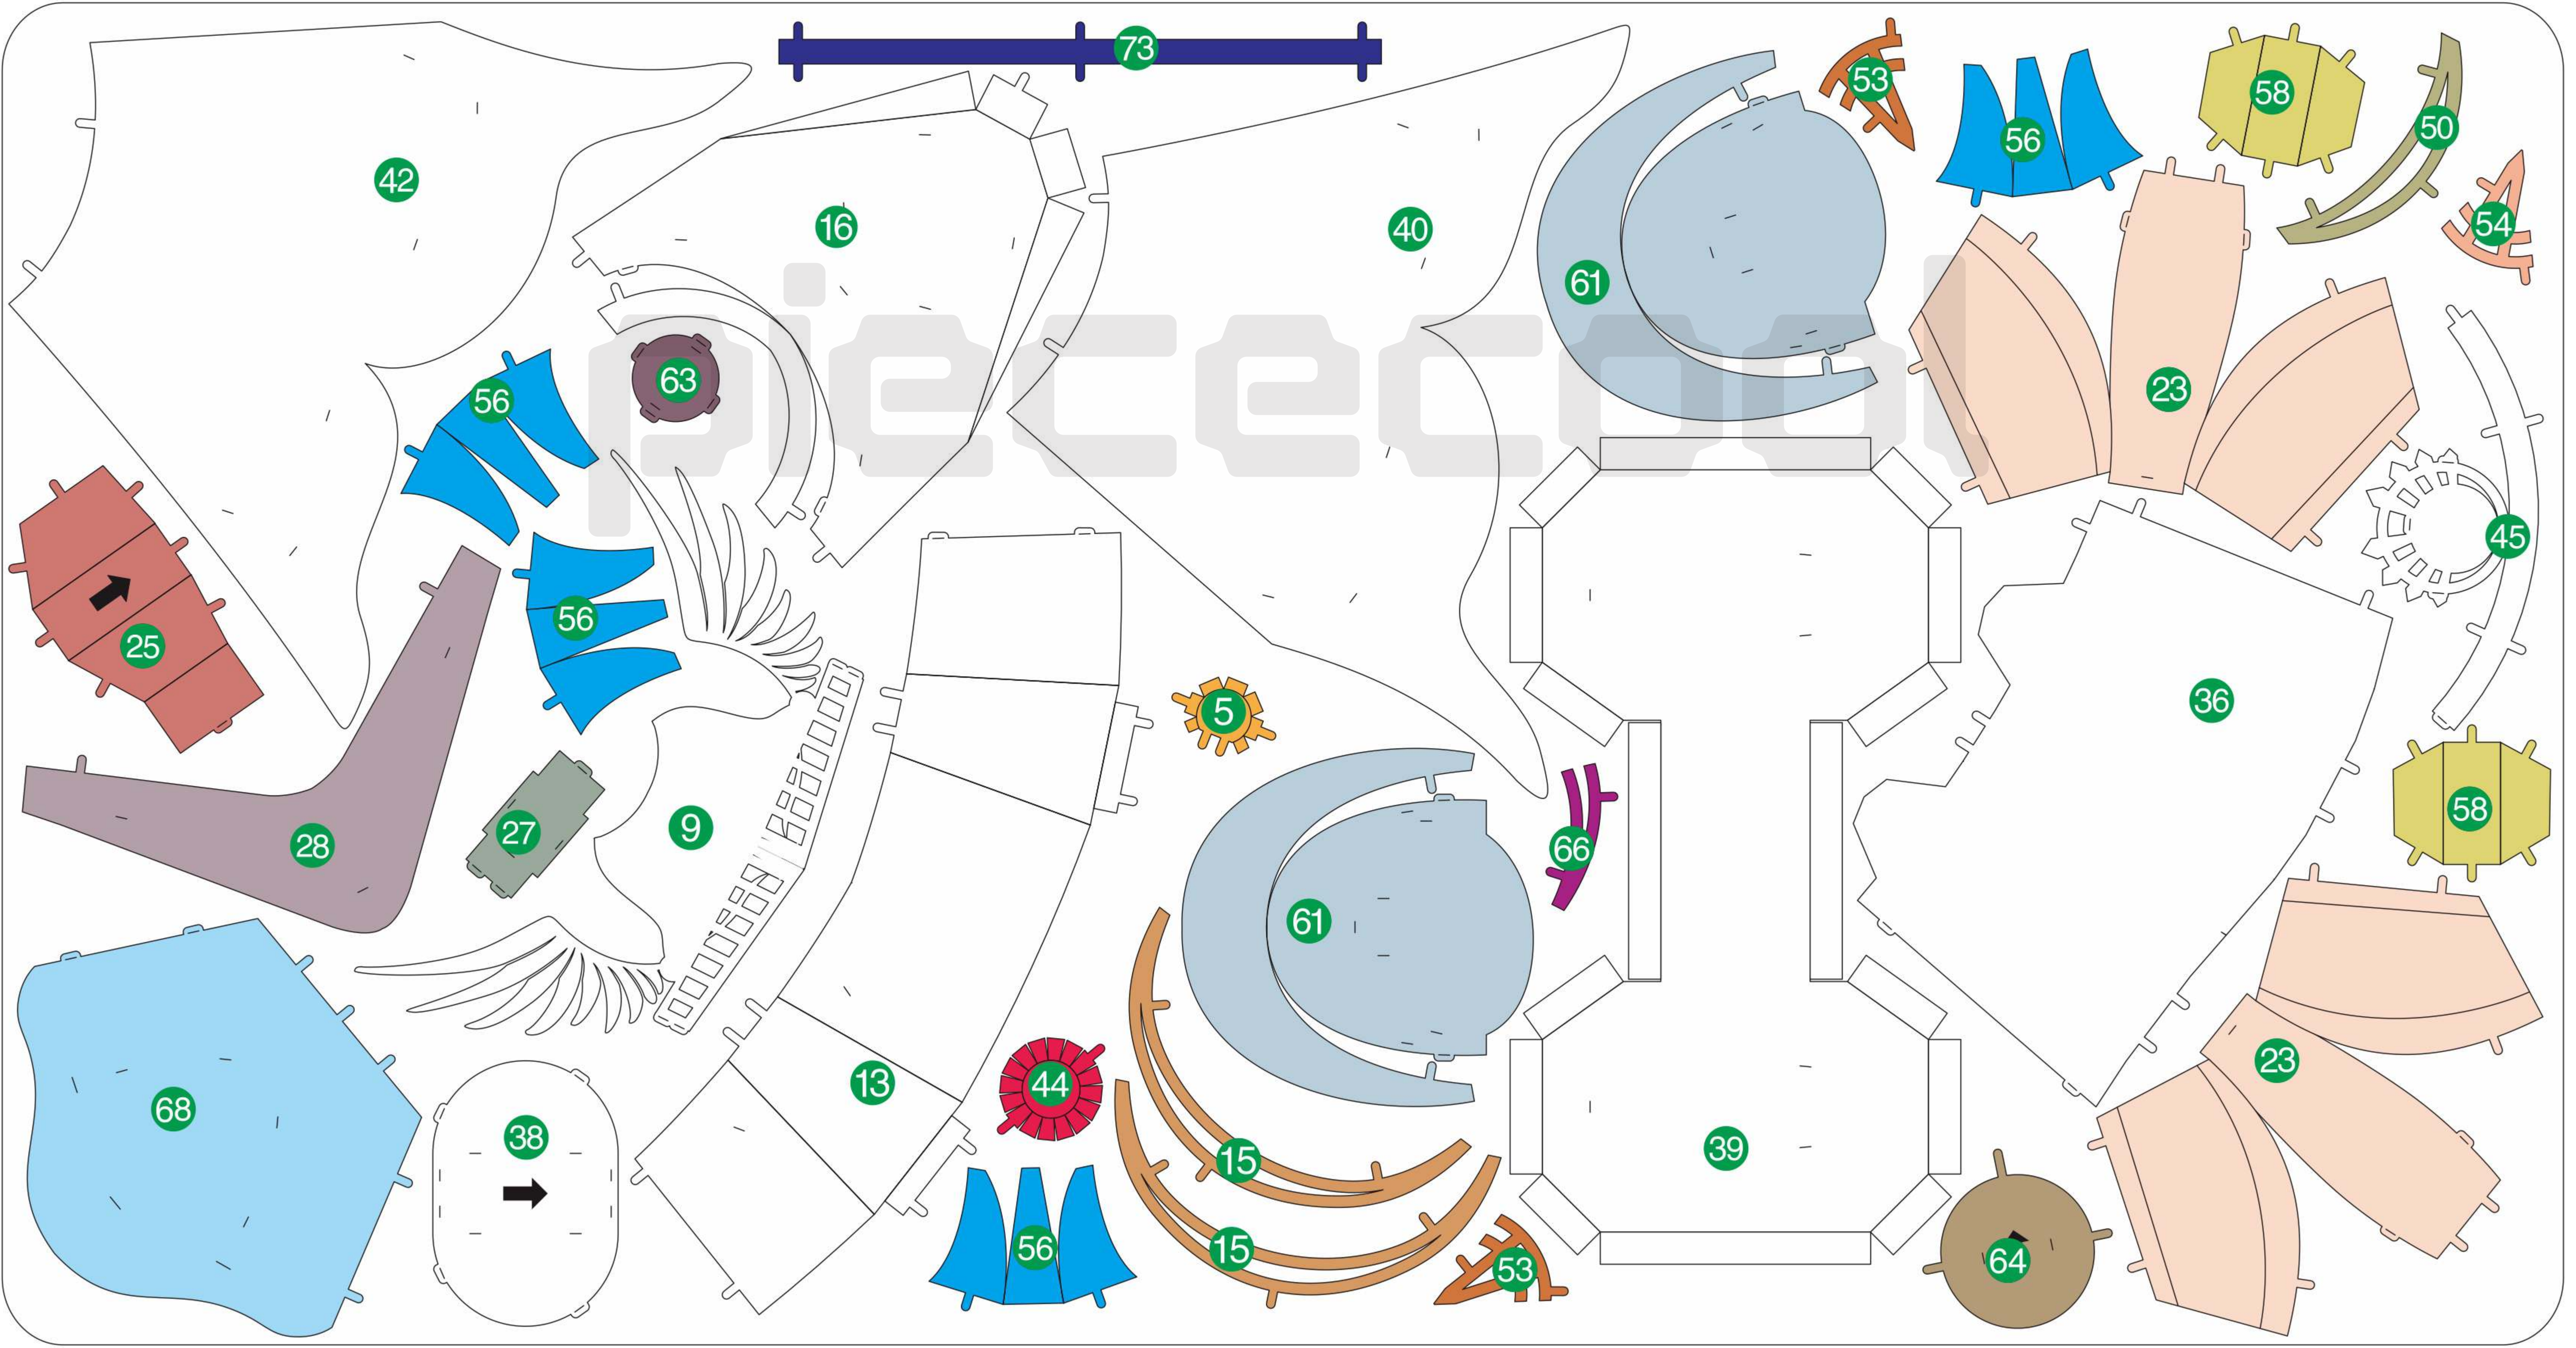

piececool