

piececool

**THE WIND BREAKER
HP171**

Assembly Instructions


© 2022 Wist Plastic & Metal Technology Limited.

Installation Reminder :




⚠ WARNING – Please handle metal sheets with care. The parts may have sharp edges that could cut or scratch skin. Keep away from children.

● Prepare tools:

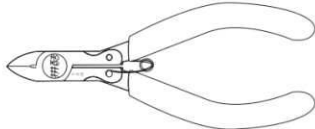

Clipper
Cut the parts off the sheets.

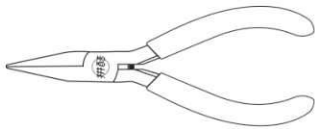


Needle nose pliers
Fold the cutting parts into models.

It is recommended to use piececool authentic assembly tools to build or fix the design. It is tailor made for the metal pieces and user friendly.


● Installation Method:

a. Remove the parts

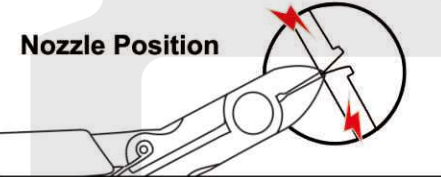


Nozzle Position
Please use the clipper to cut the nozzle position and remove the parts.

d. Retaining the parts

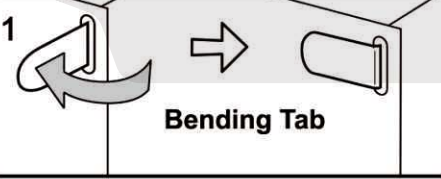


Bending Tab
Insert the hole, bending tab with angle 90°

b. Identify the parts

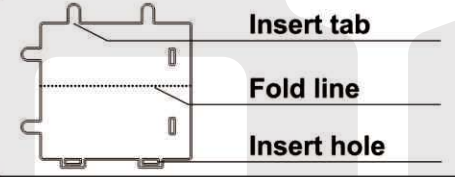


Insert tab
Fold line
Insert hole
Identify the insert tab, fold line and the insert hole.

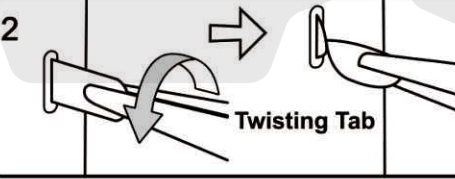

Twisting Tab
Insert the hole, twisting tab with angle 90°

c. Folding the parts

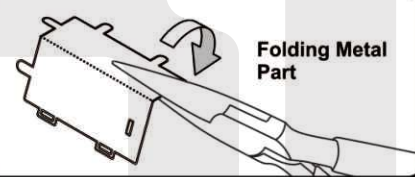

Folding Metal Part
Please use the Needle nose pliers to fold the cutting parts into models.

● Attention :

 Engraved / Color side

 Non-engraved / Silver side




 Attention Point

 Keep the parts symmetrical


When cutting metal parts, please do not cut the “insert tab” as “nozzle position”. Only cut the parts of the current step when cutting the parts. Do not cut all the parts at one time to avoid loss.

When encountering the parts of the folding line, please pay attention to the front and back of the metal sheet and the direction of the folding. According to the direction indicated in the instruction, cut lightly and fold slowly. It is best to fold it once. Do not fold it repeatedly to avoid damage to the parts.


Assembling steps:

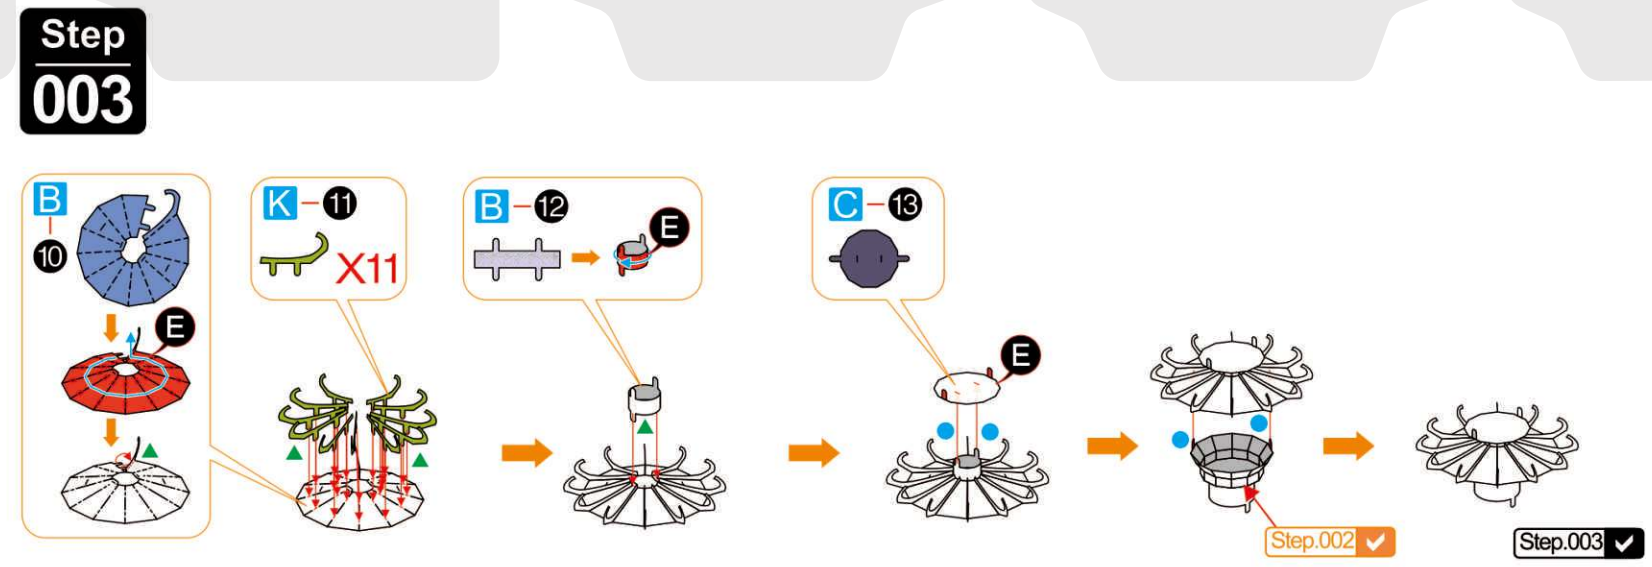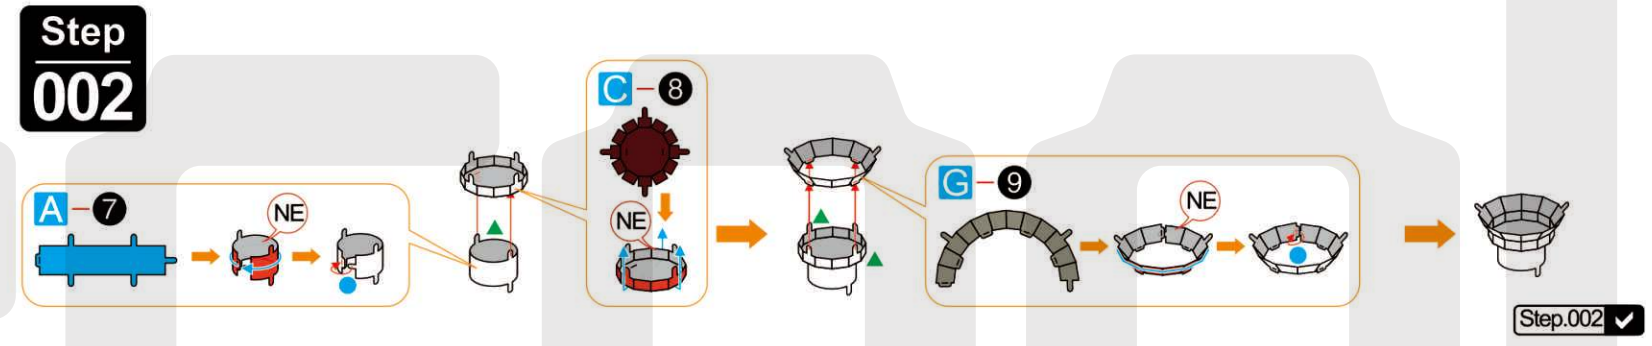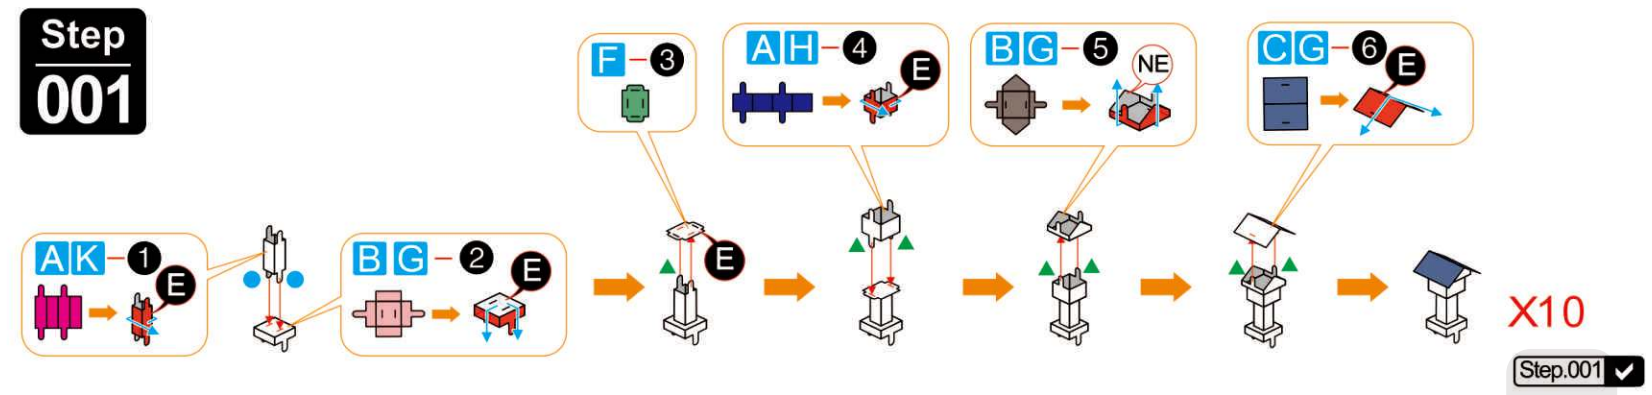


Step 004

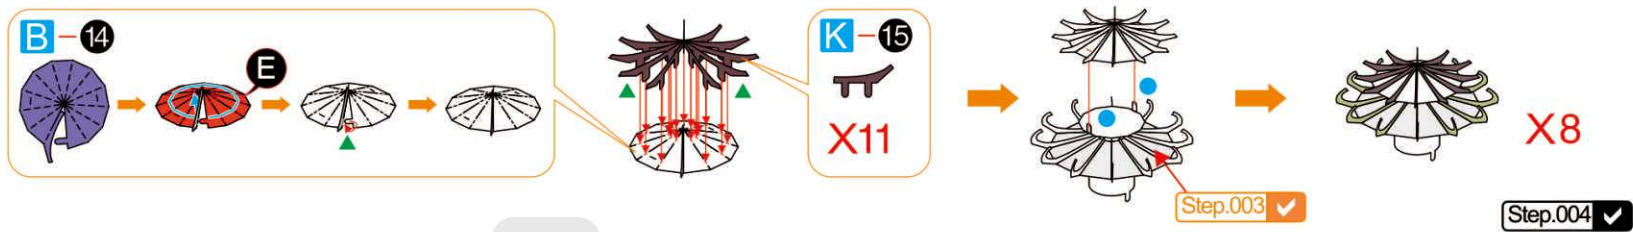


Step 005

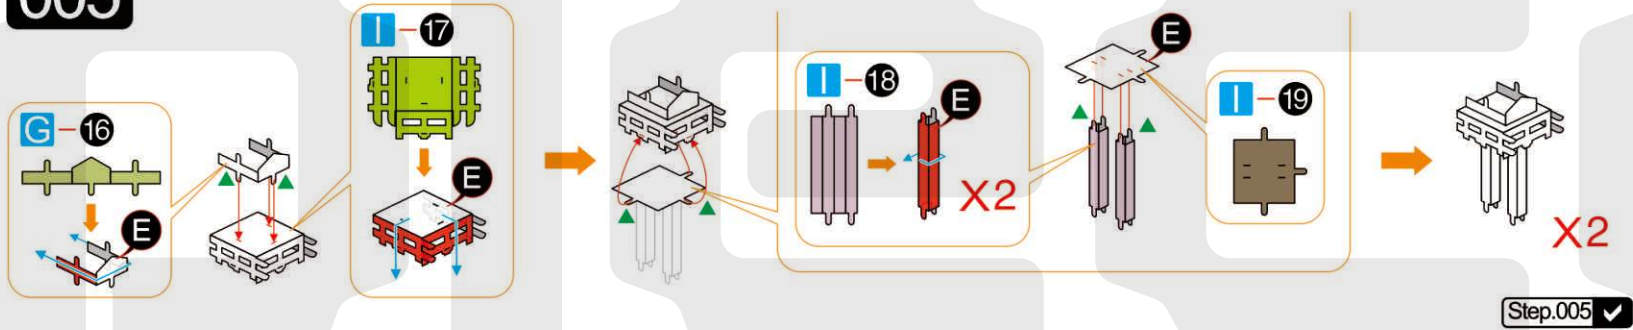


Step 006

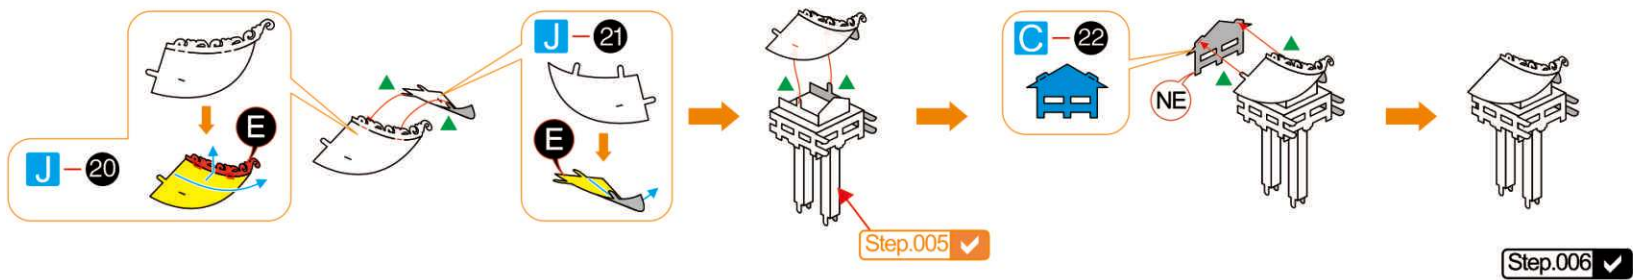


Step 007

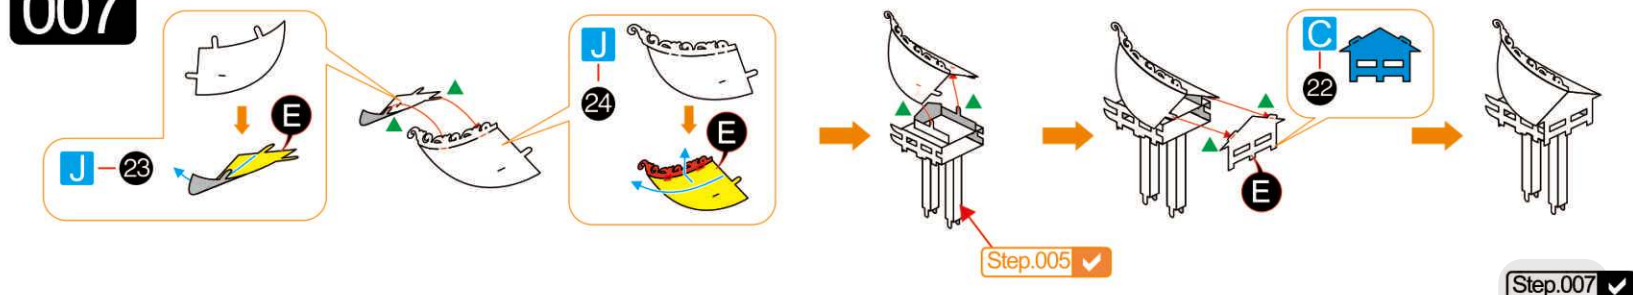


Step 008

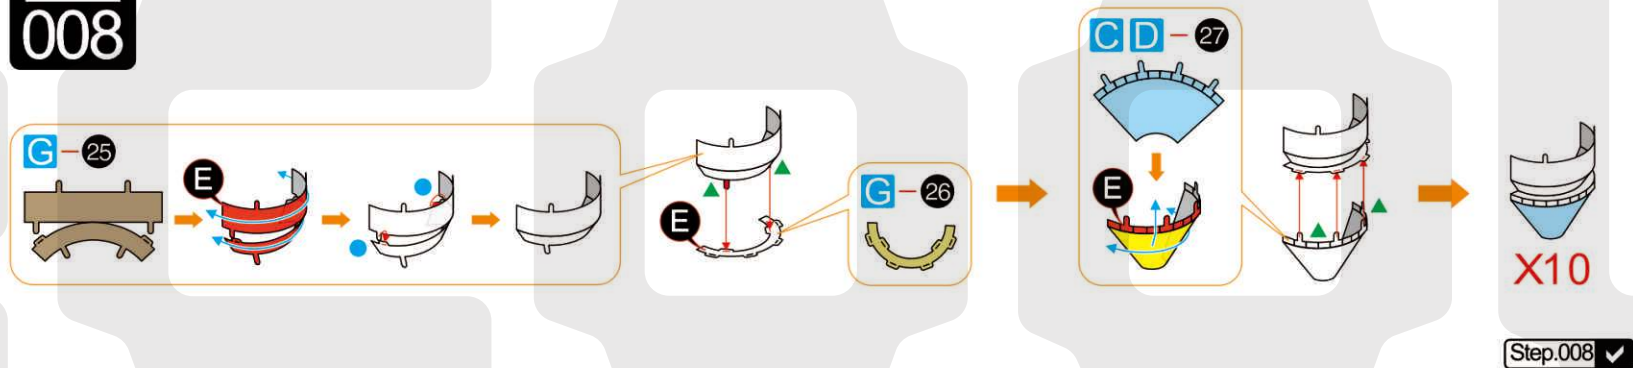


Step 009

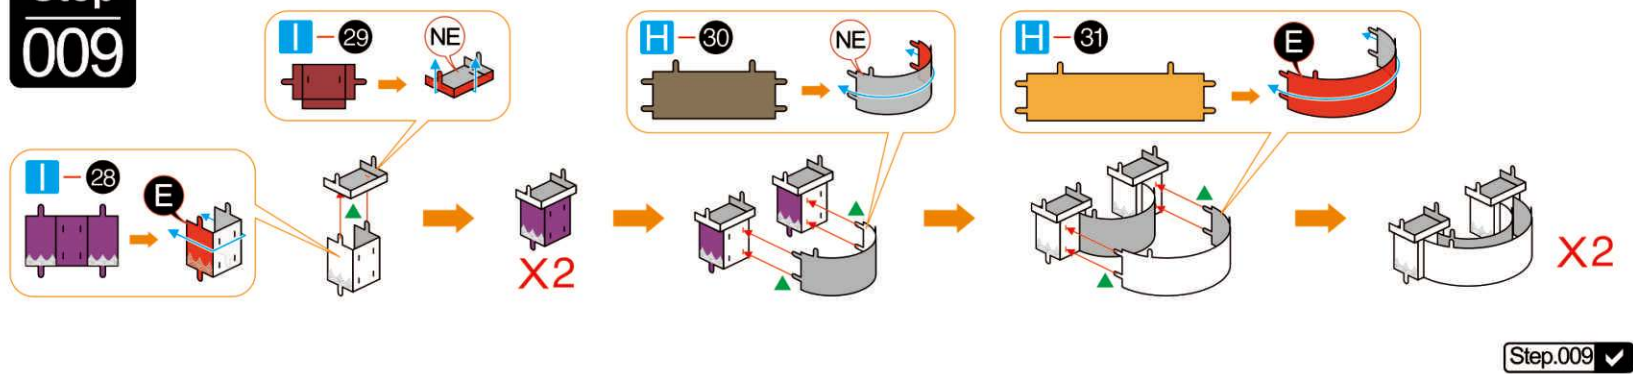


Step
010

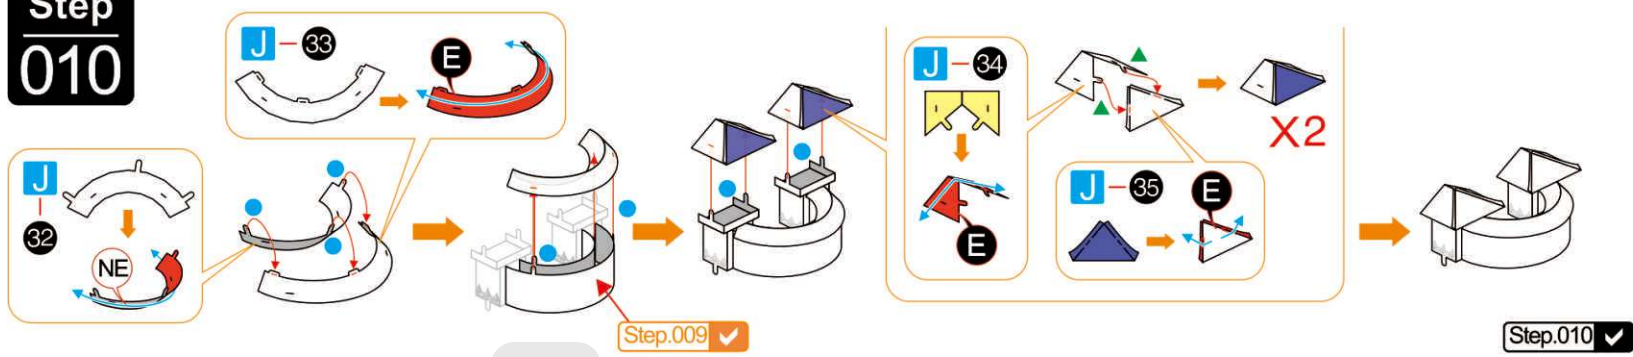


Step
011

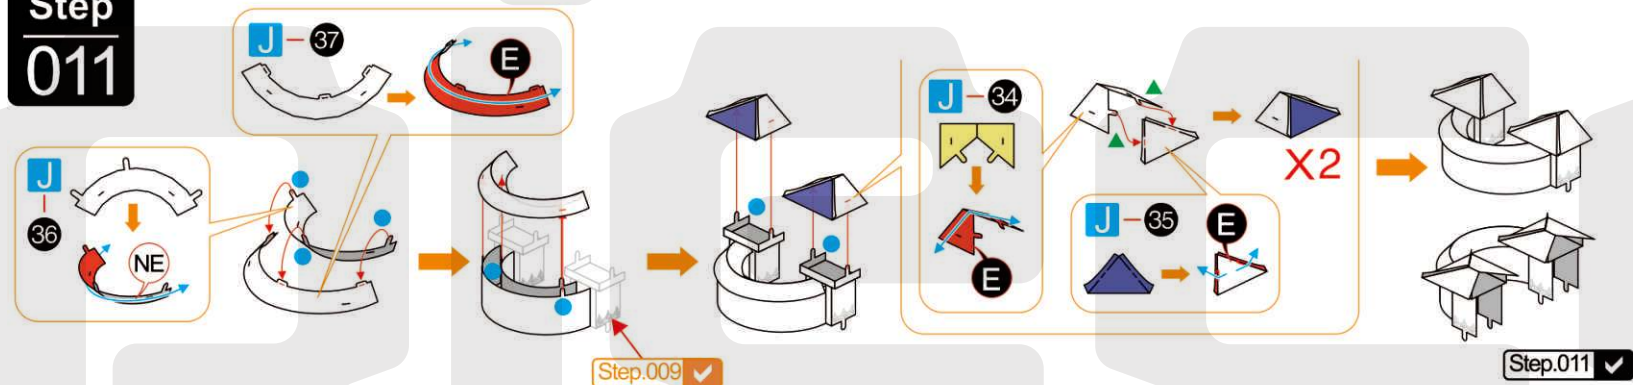


Step
012

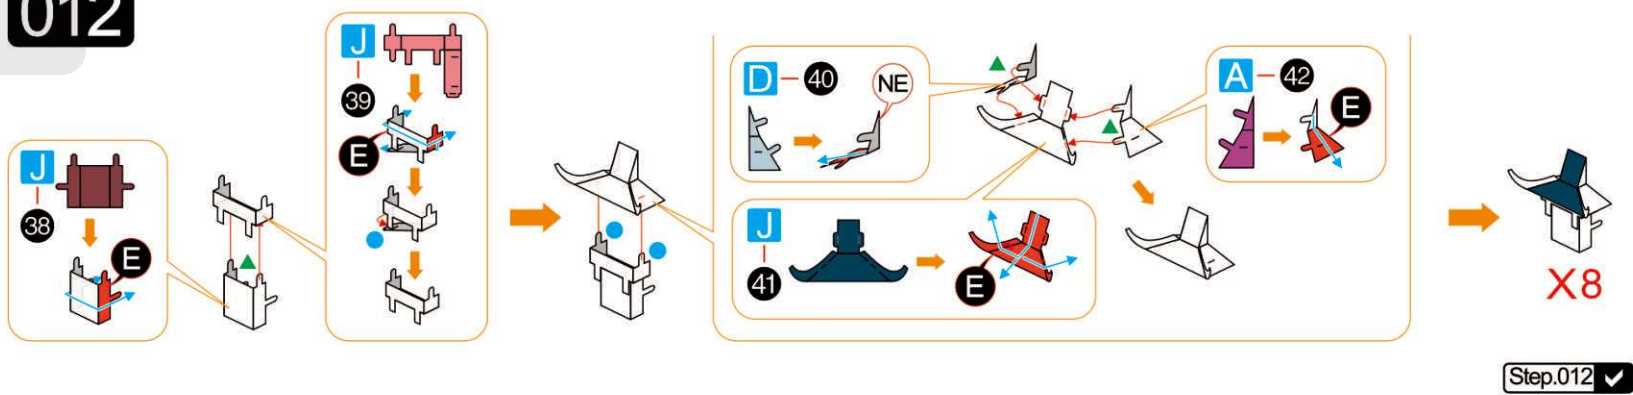


Step
013

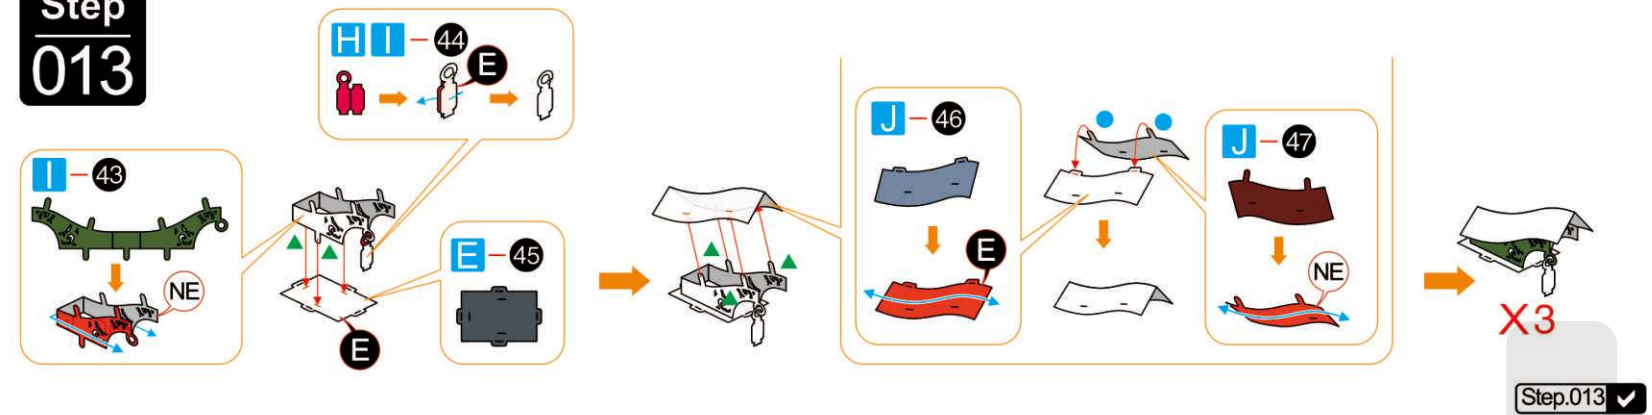


Step
014

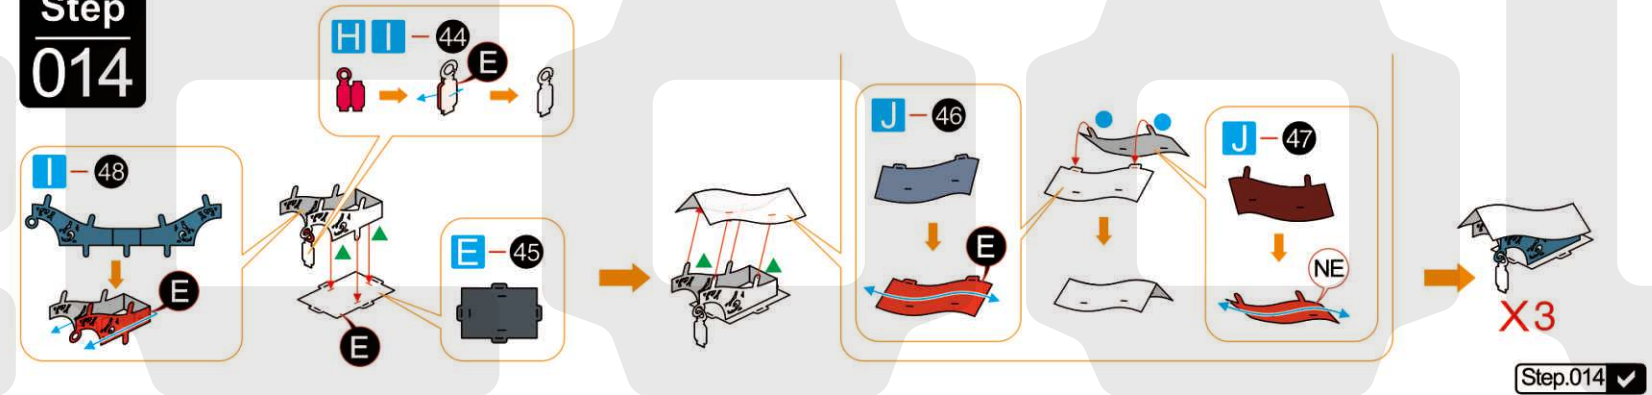


Step
015

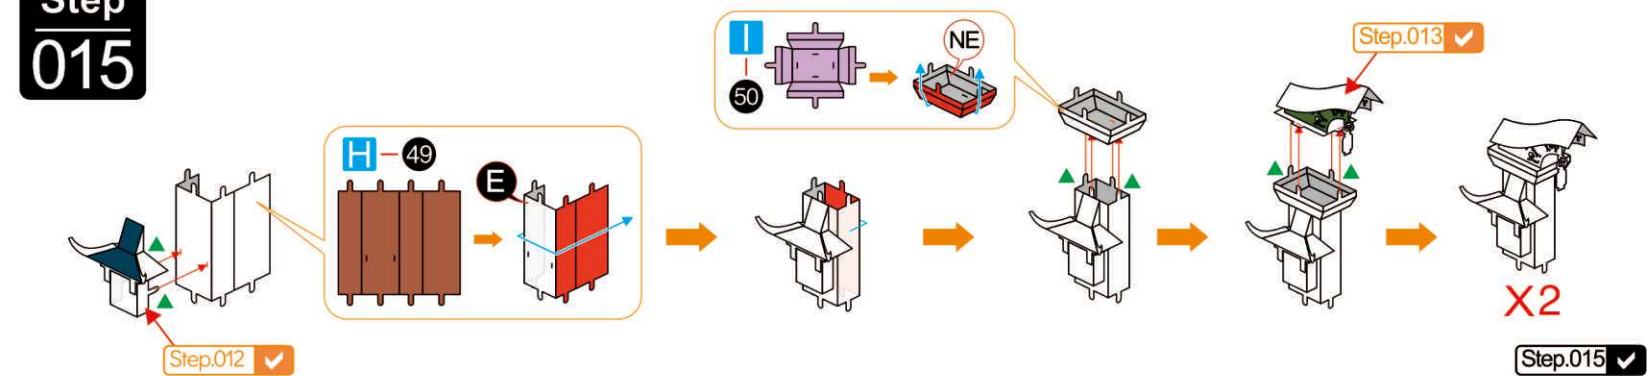


Step 016

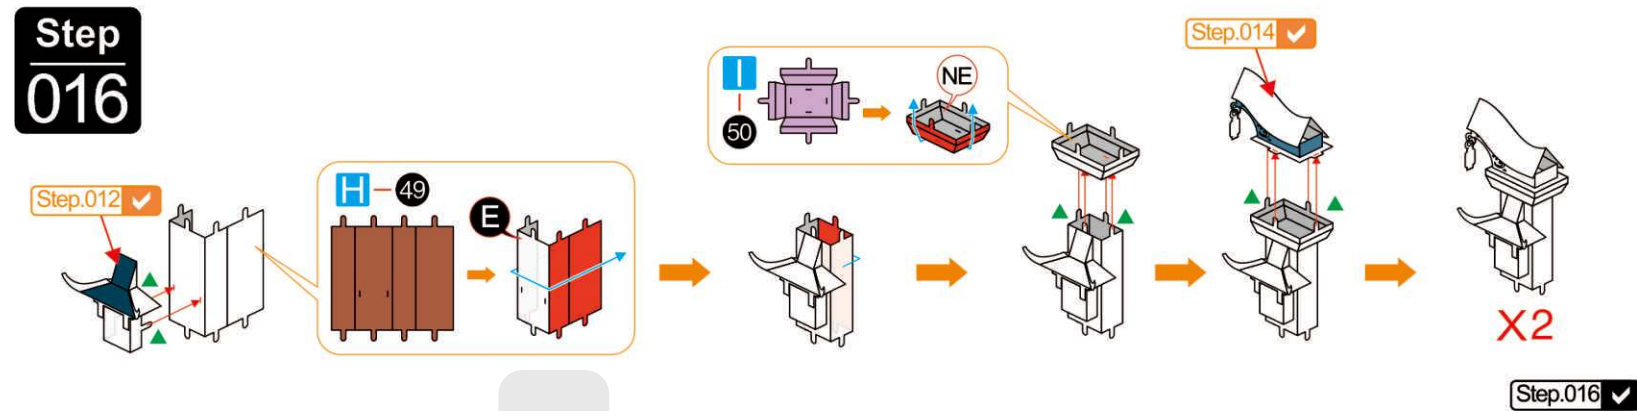


Step 017

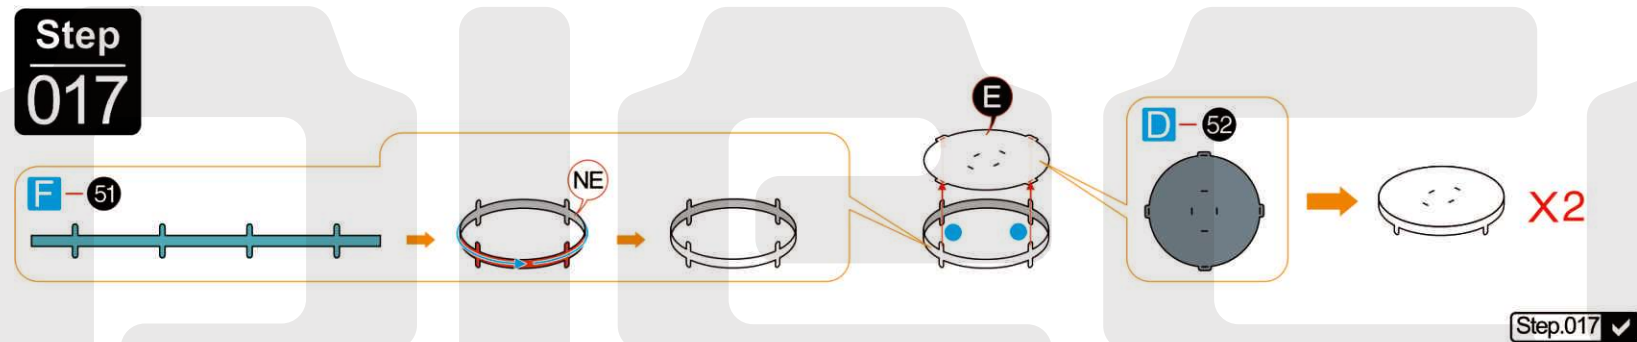


Step 018

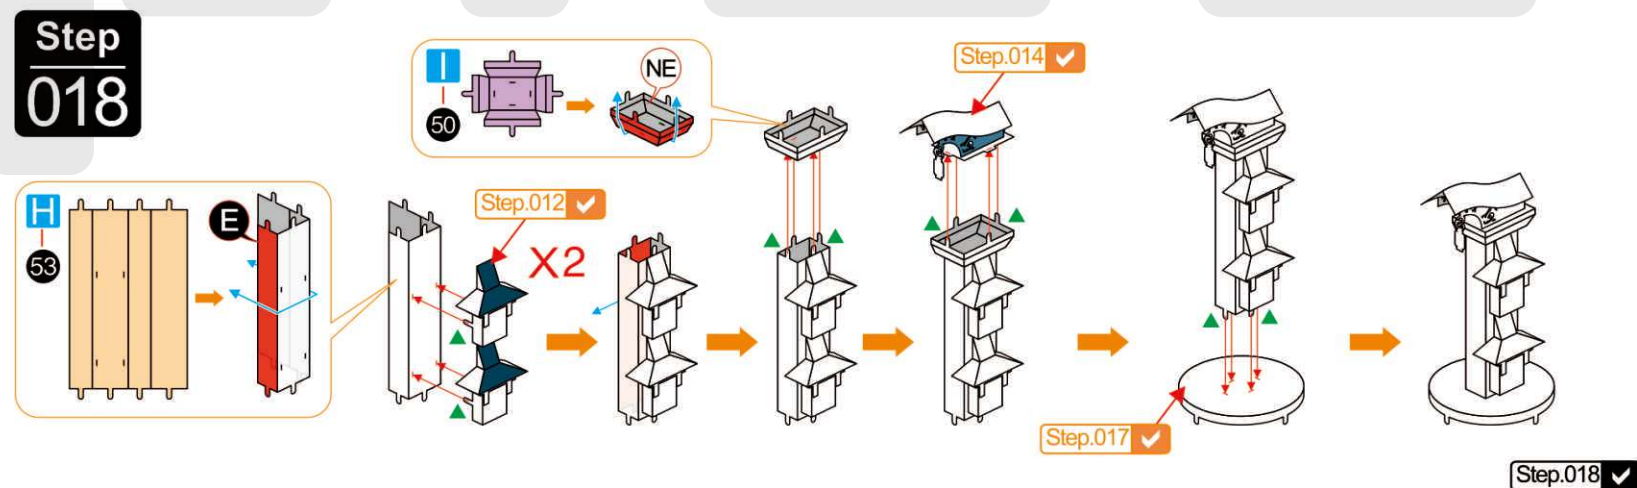


Step 019

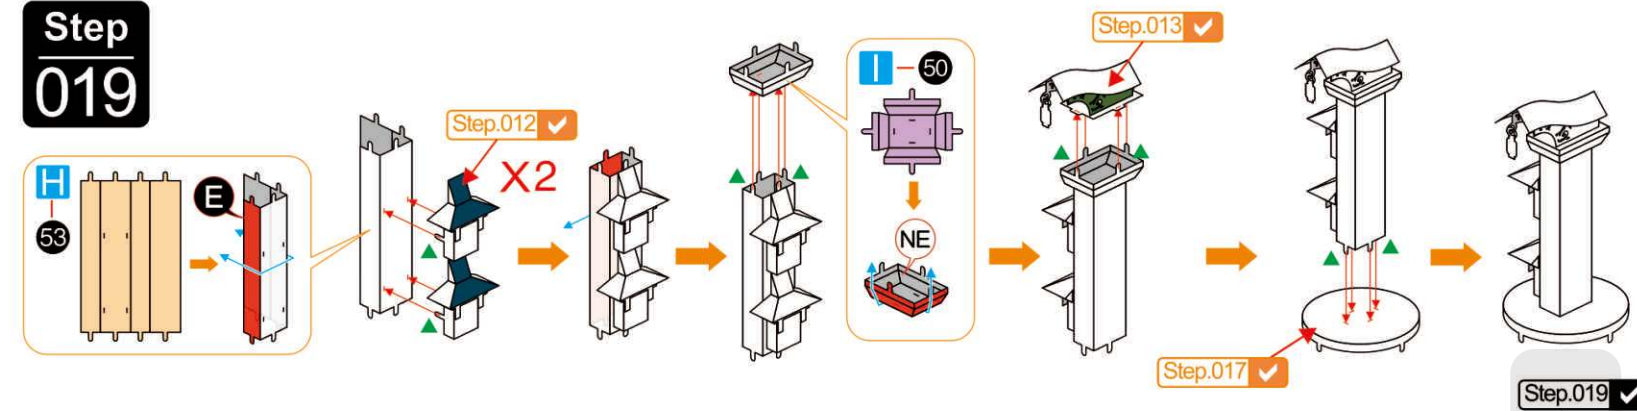


Step 020

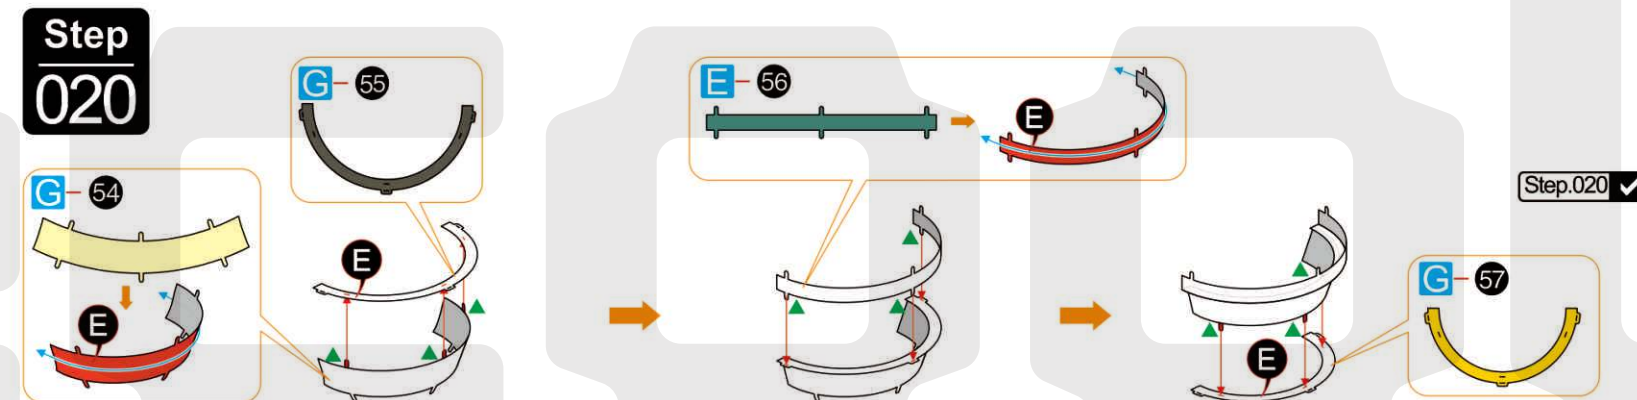


Step 021

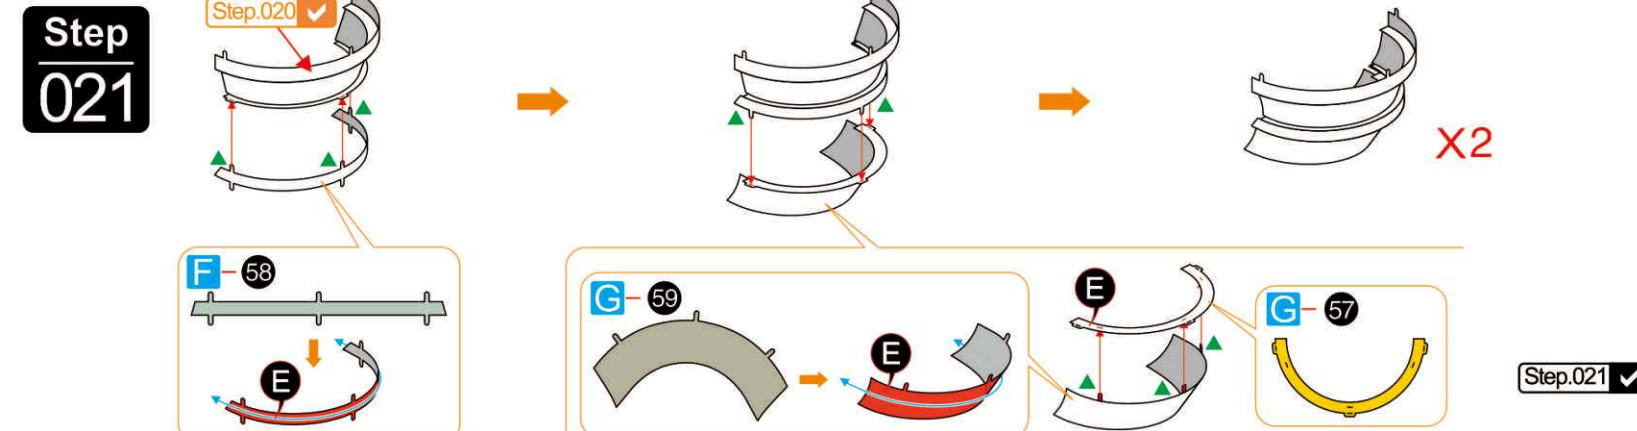


Step 022

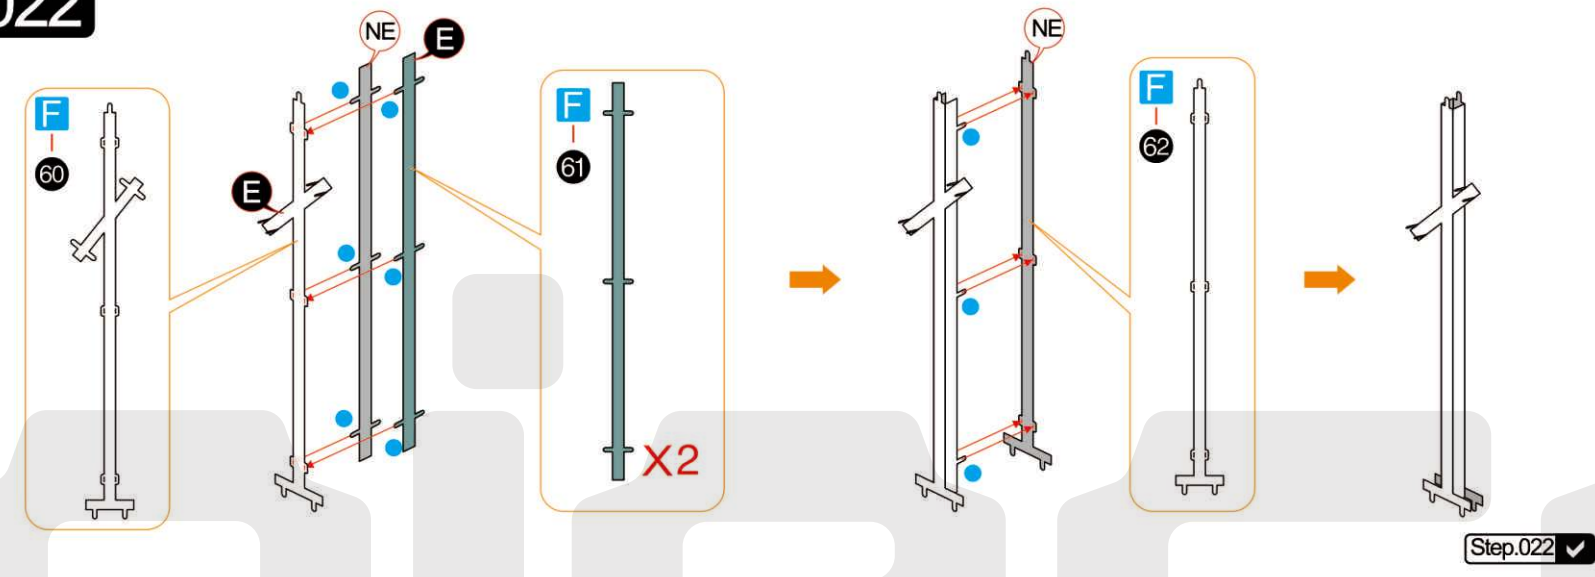


Step 023

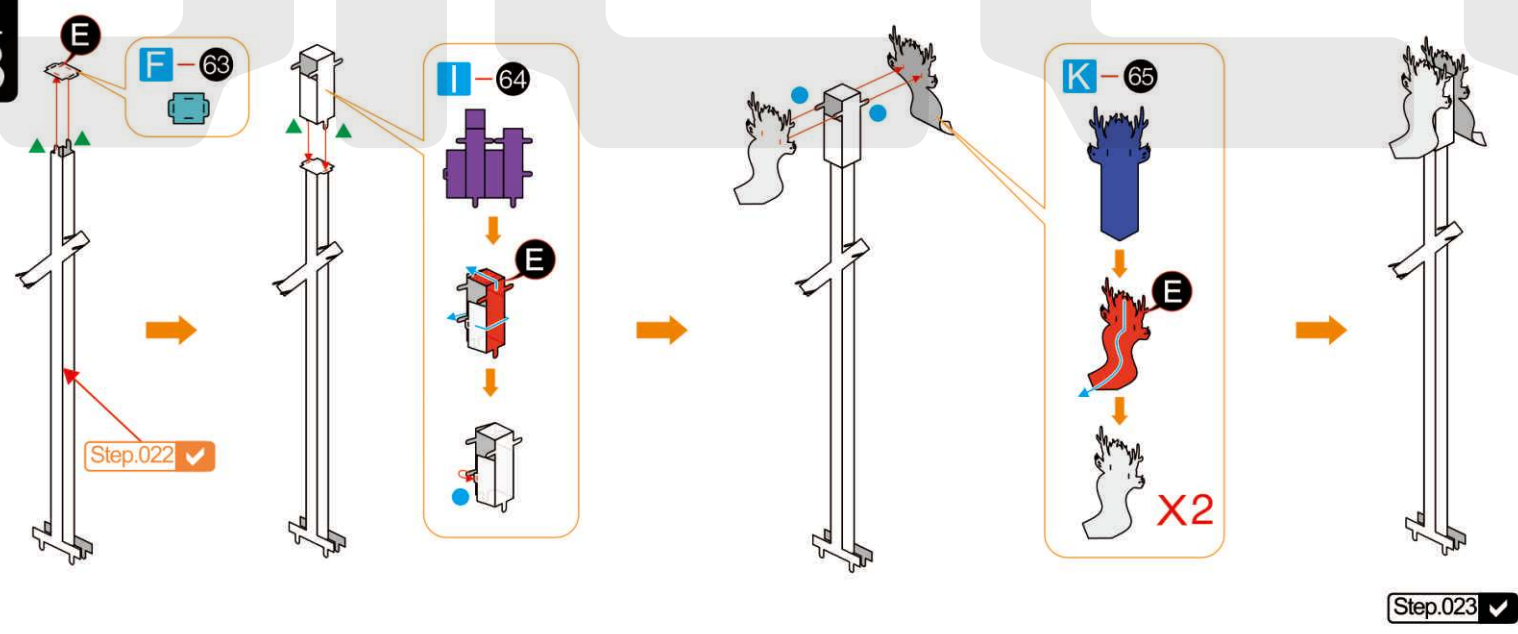


Step 024

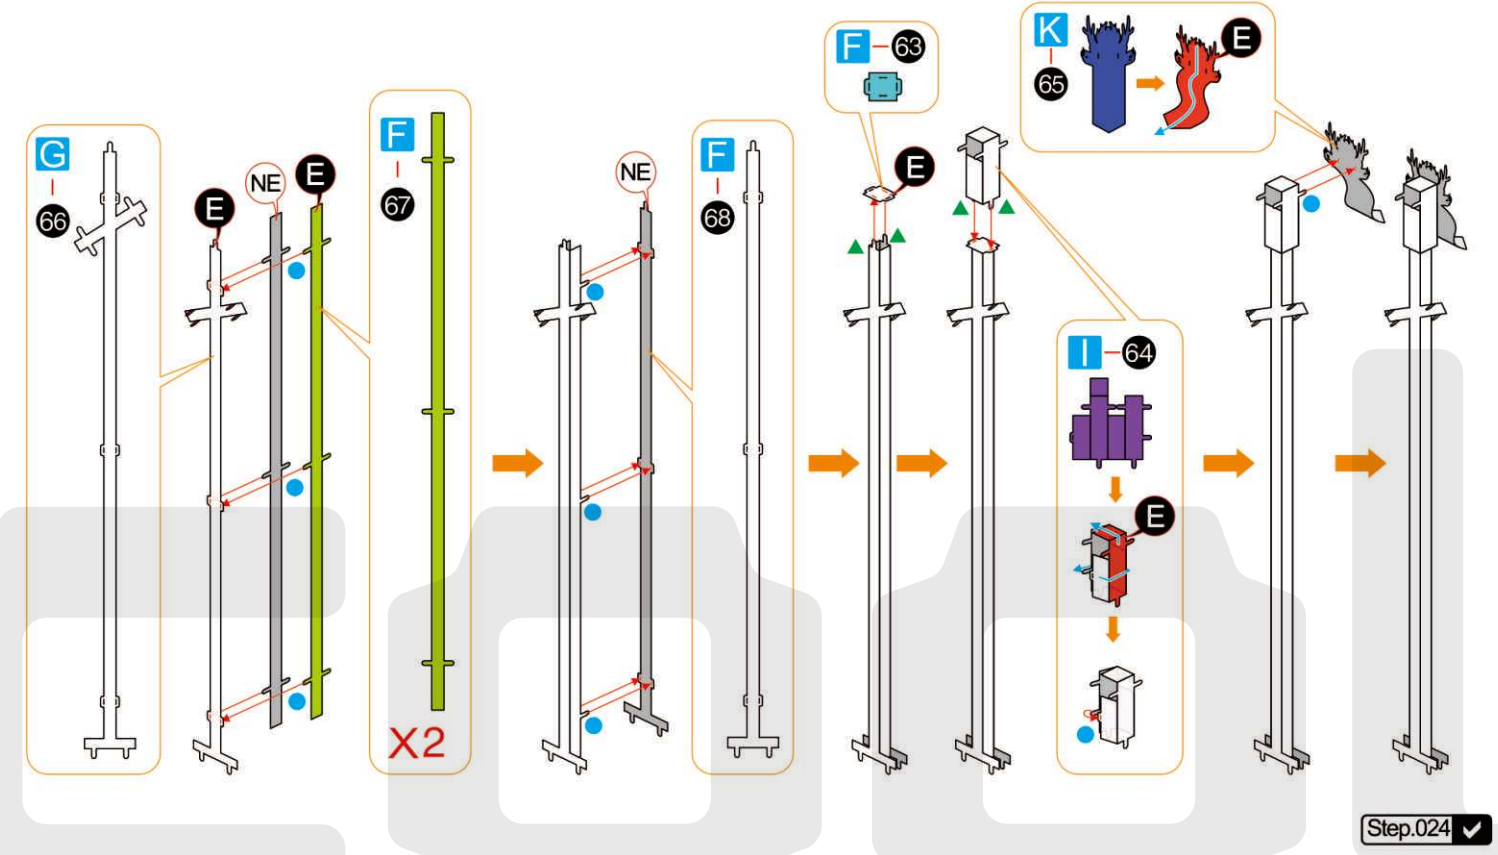


Step 025

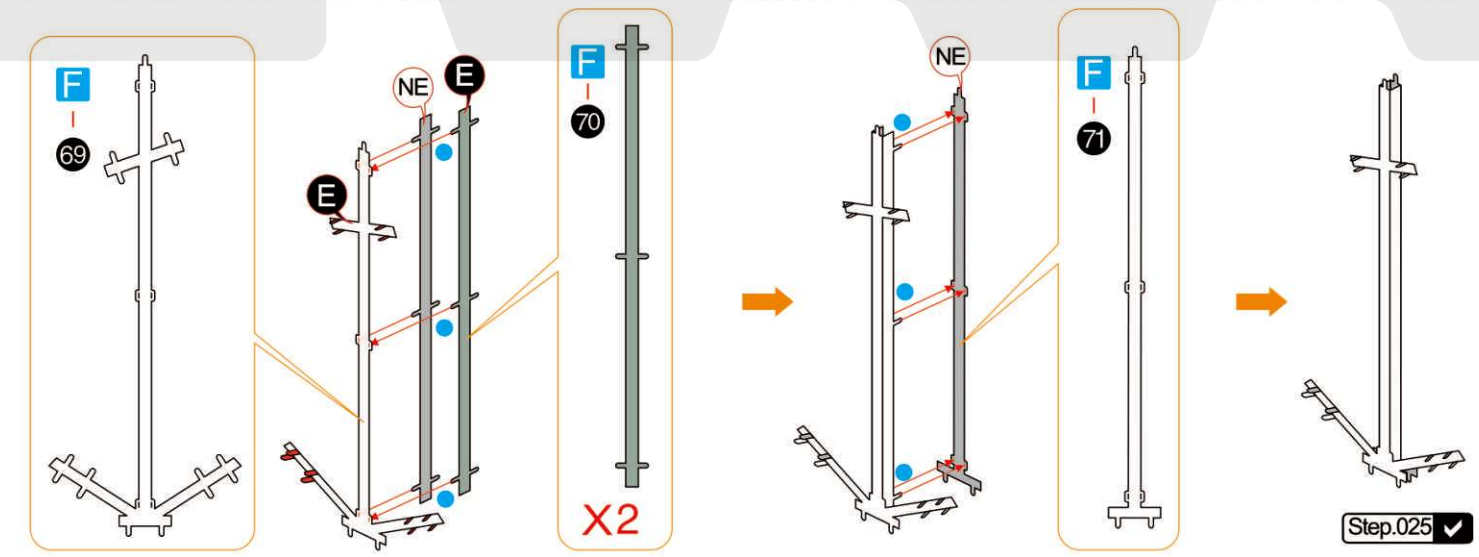


Step 026

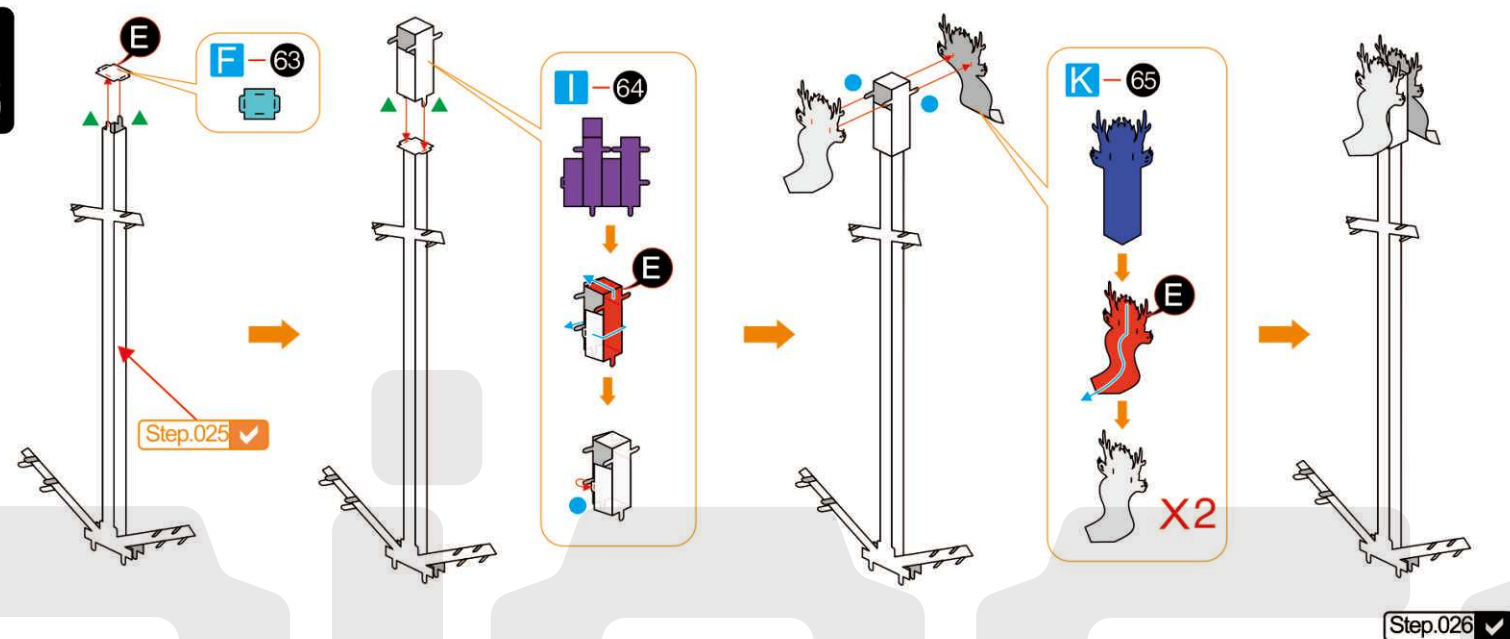


Step 027

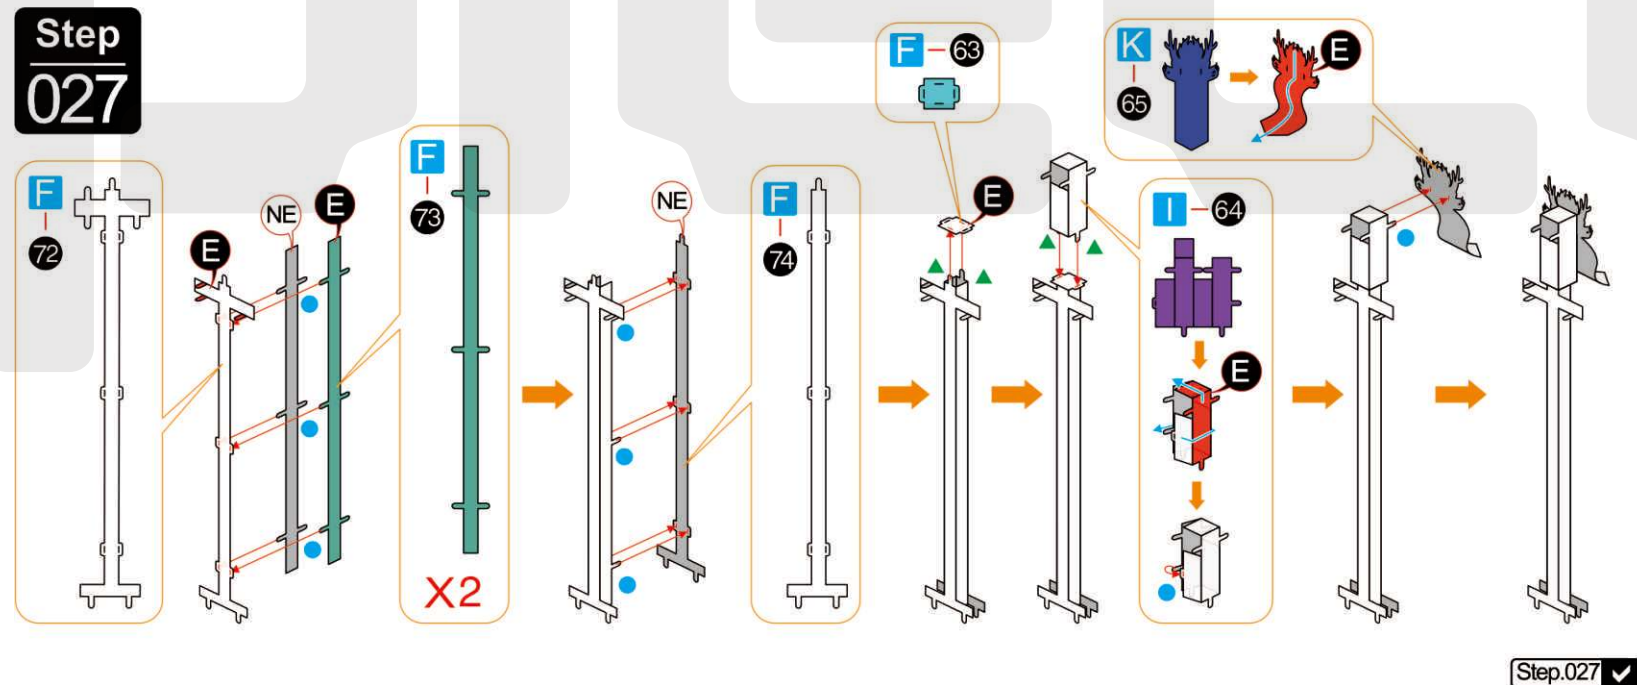


Step 028

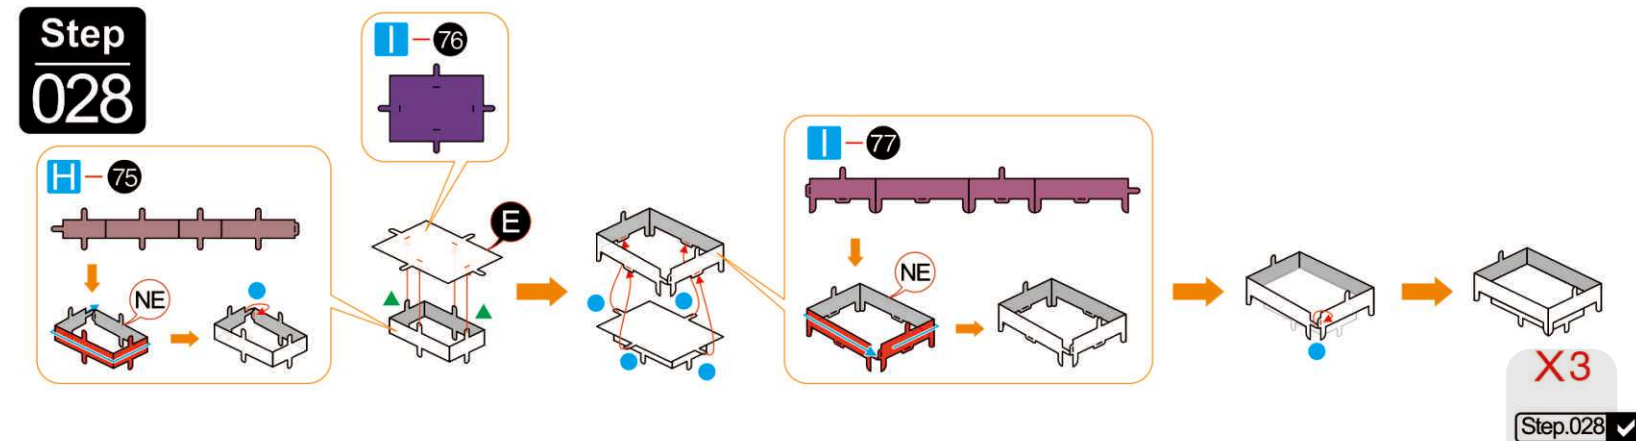


Step 029

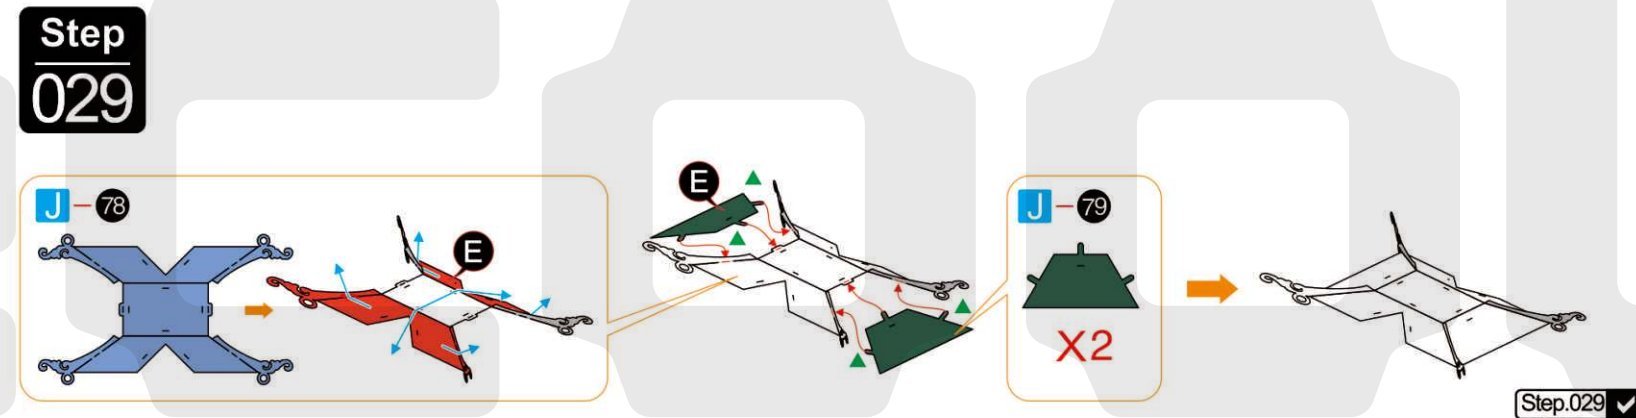


Step 030

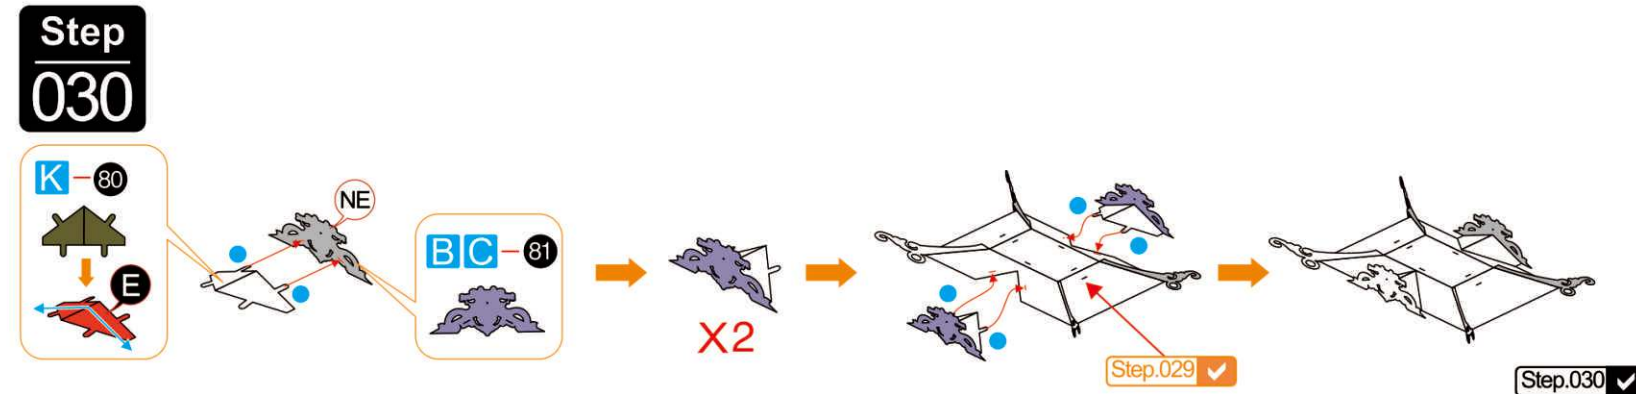


Step 031

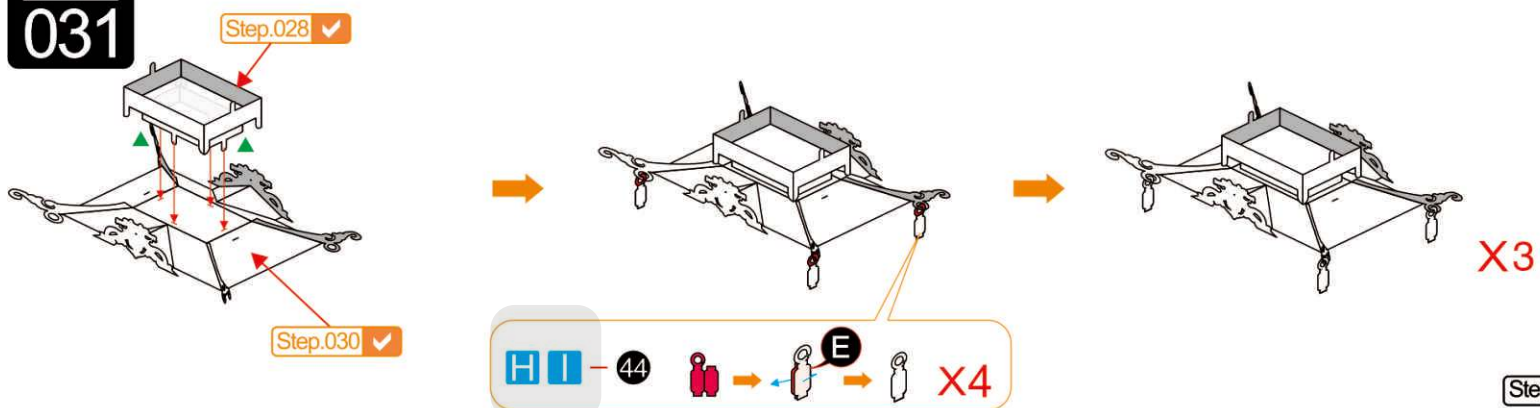


Step 032

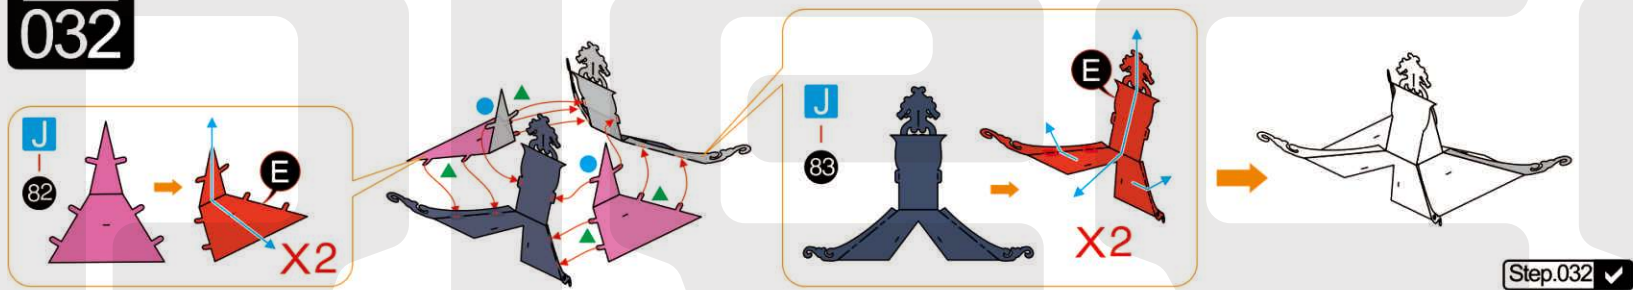


Step 033

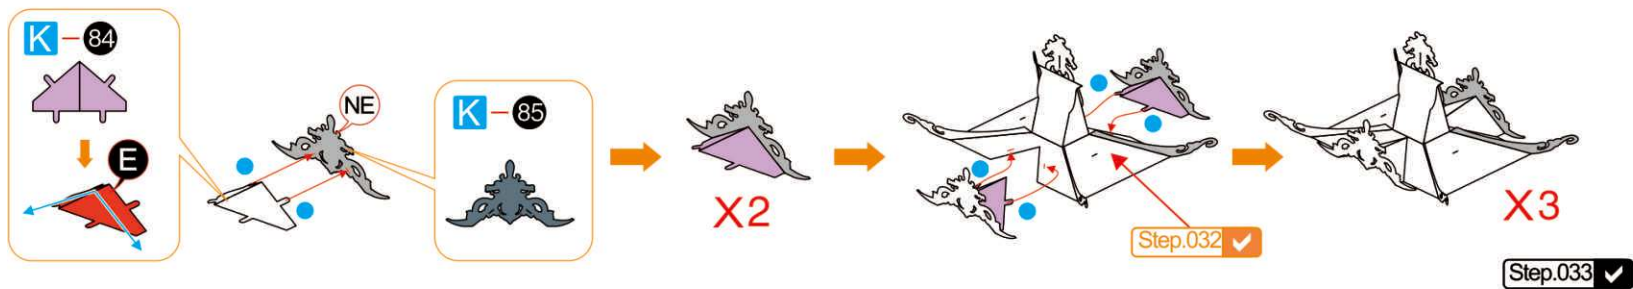


Step 034

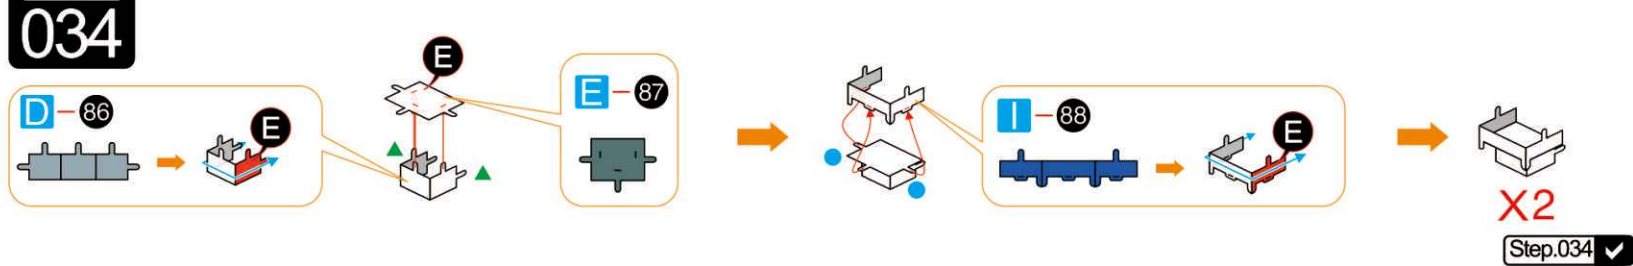


Step 035

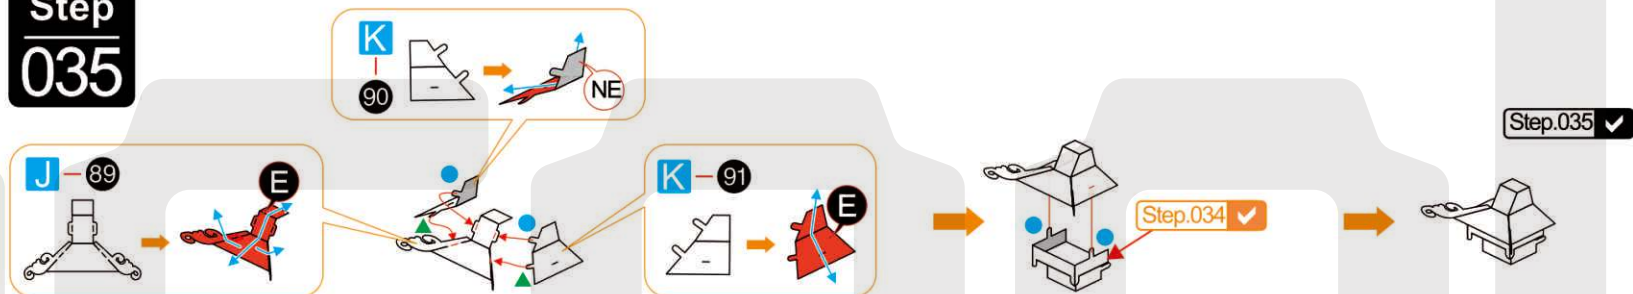


Step 036

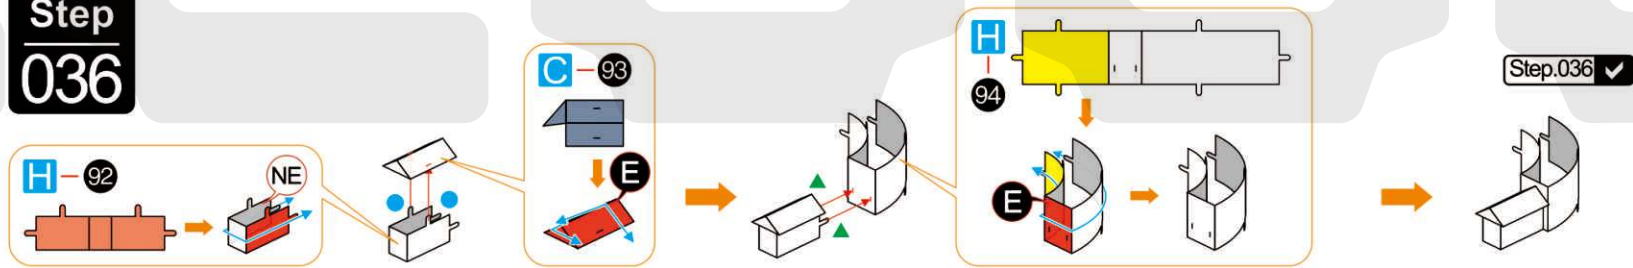


Step 037

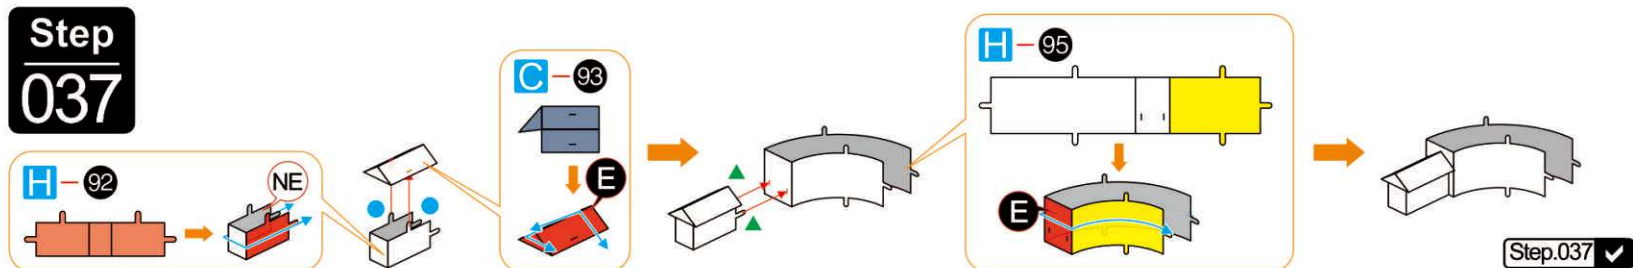


Step 038

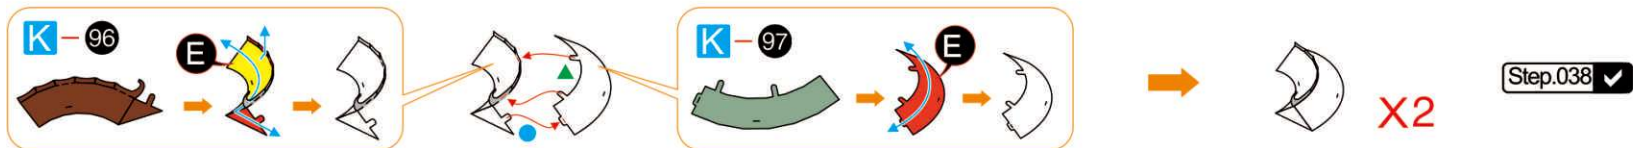

Step 039

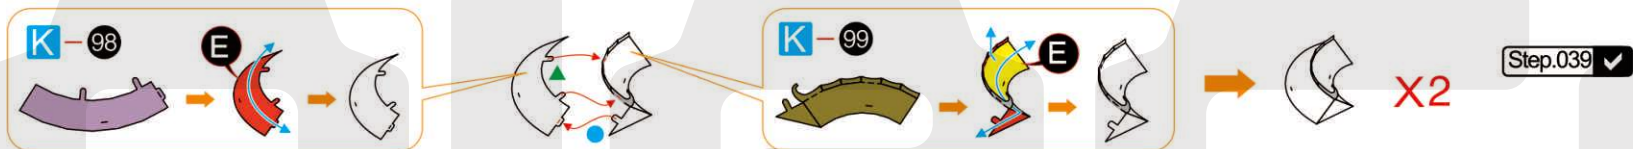


Step 040

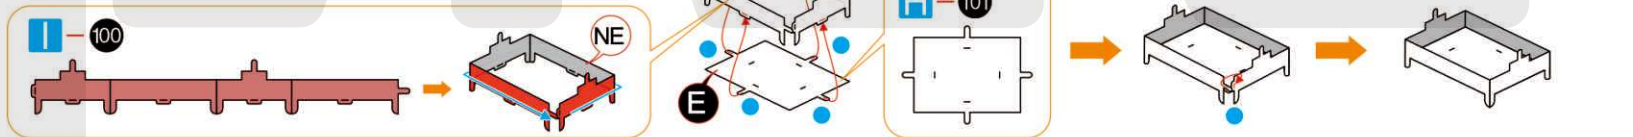


Step 041



Step 042

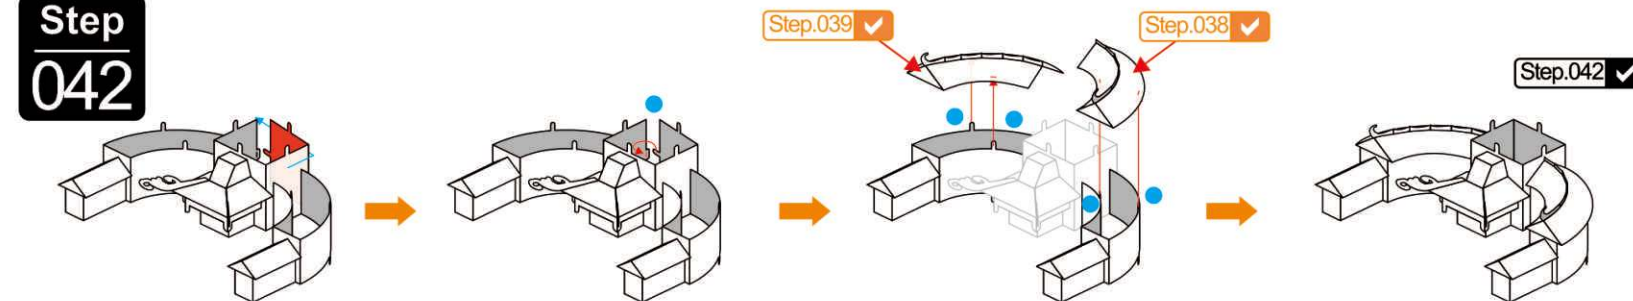


Step 043

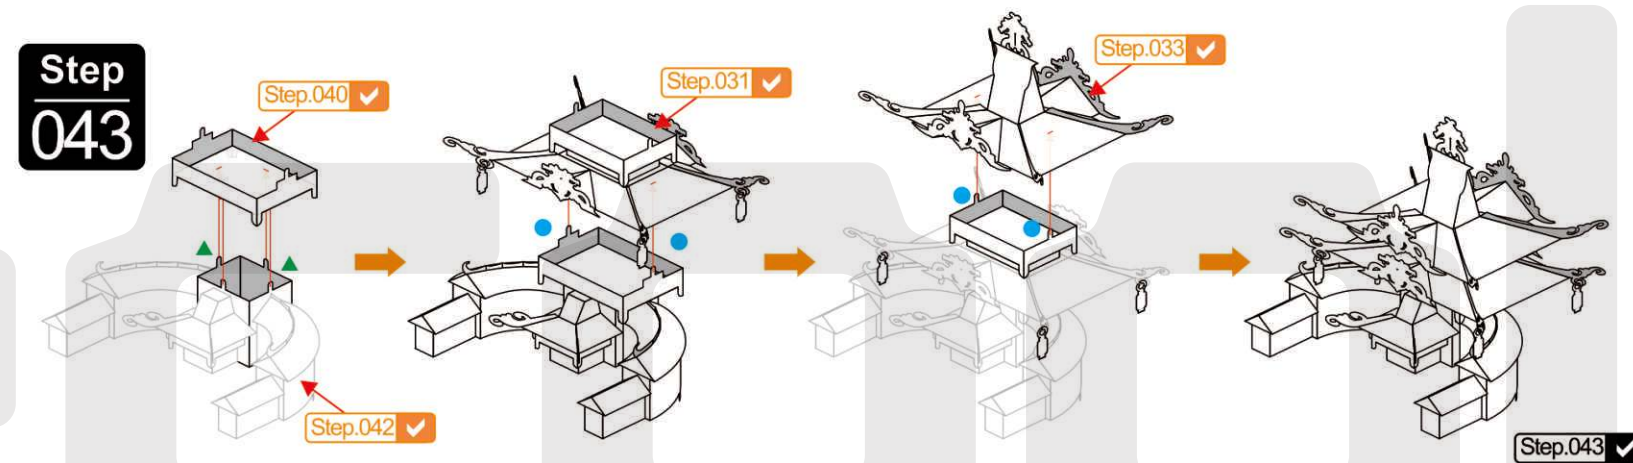


Step 044




Step 045

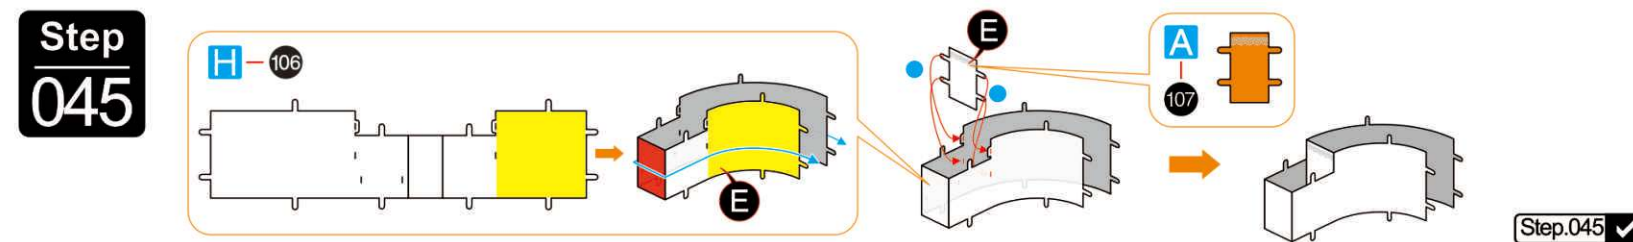


Step 046

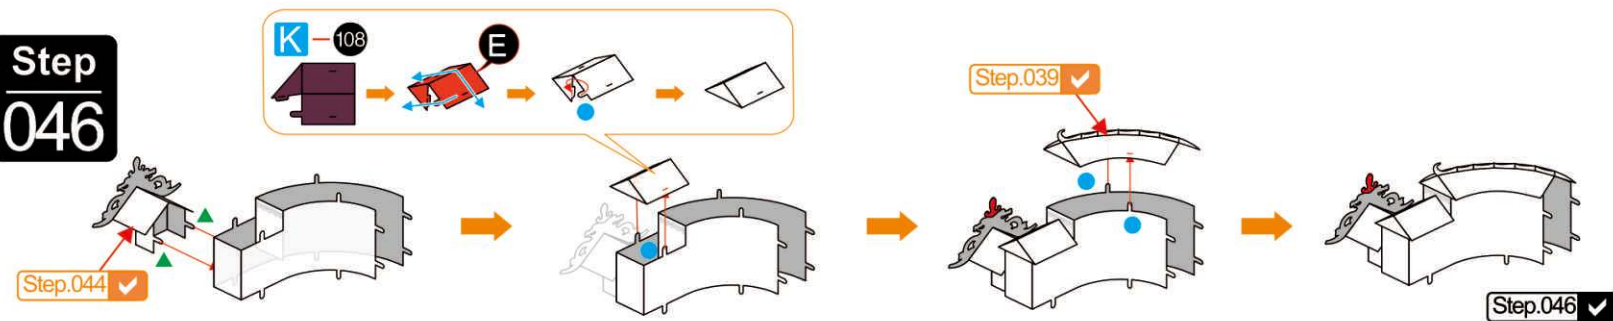


Step 047

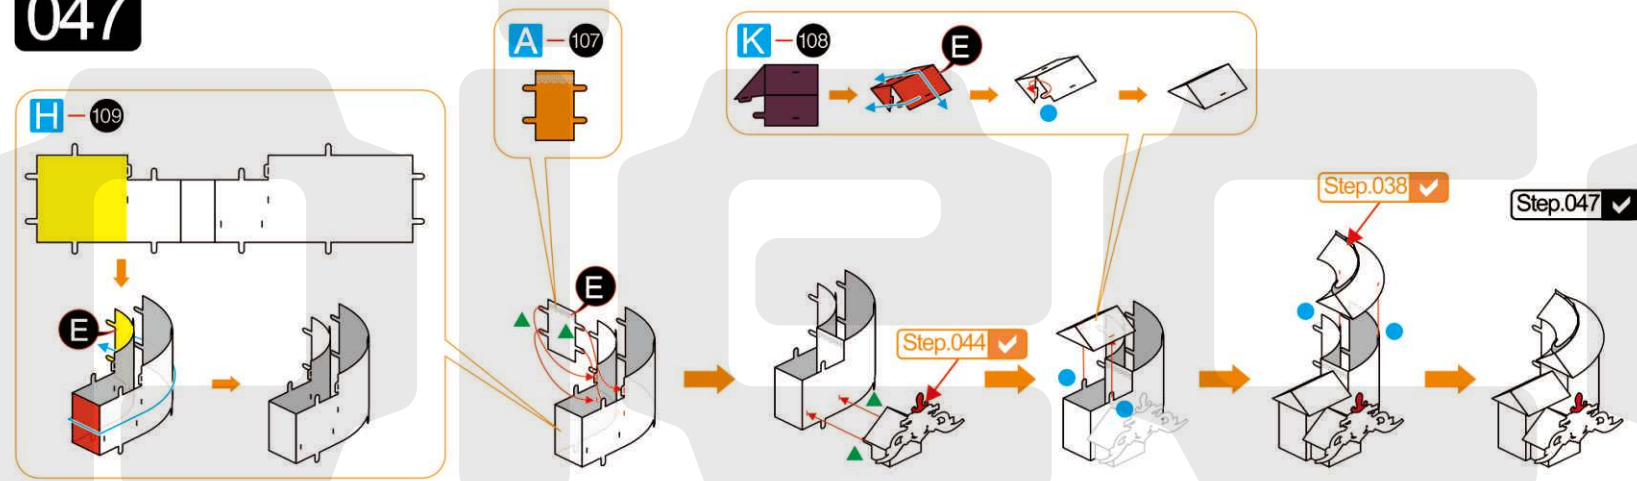


Step 048

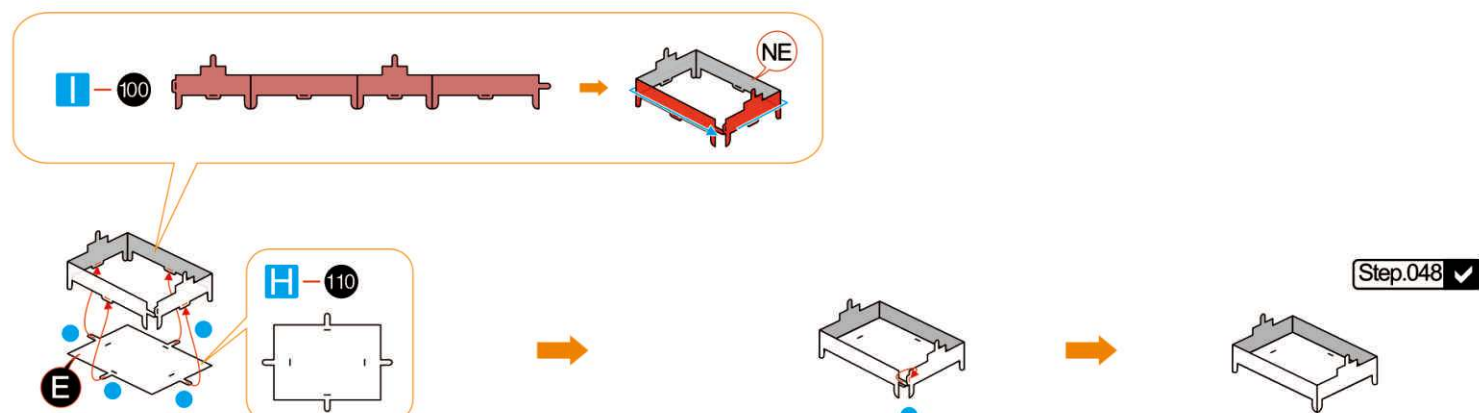


Step 049

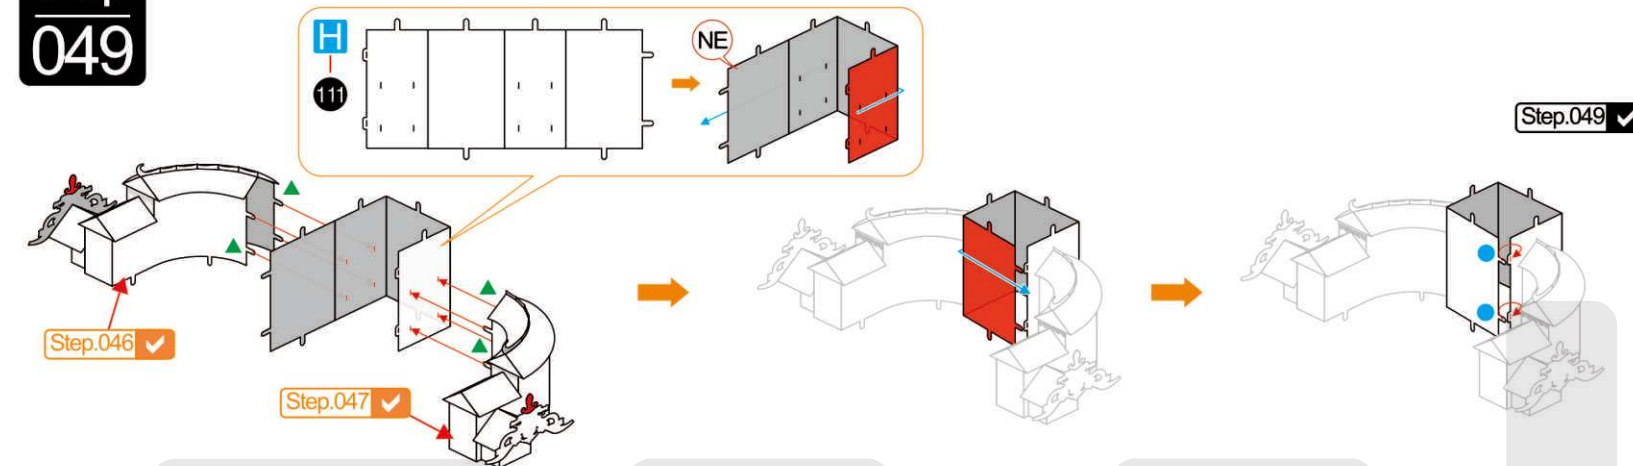


Step 050

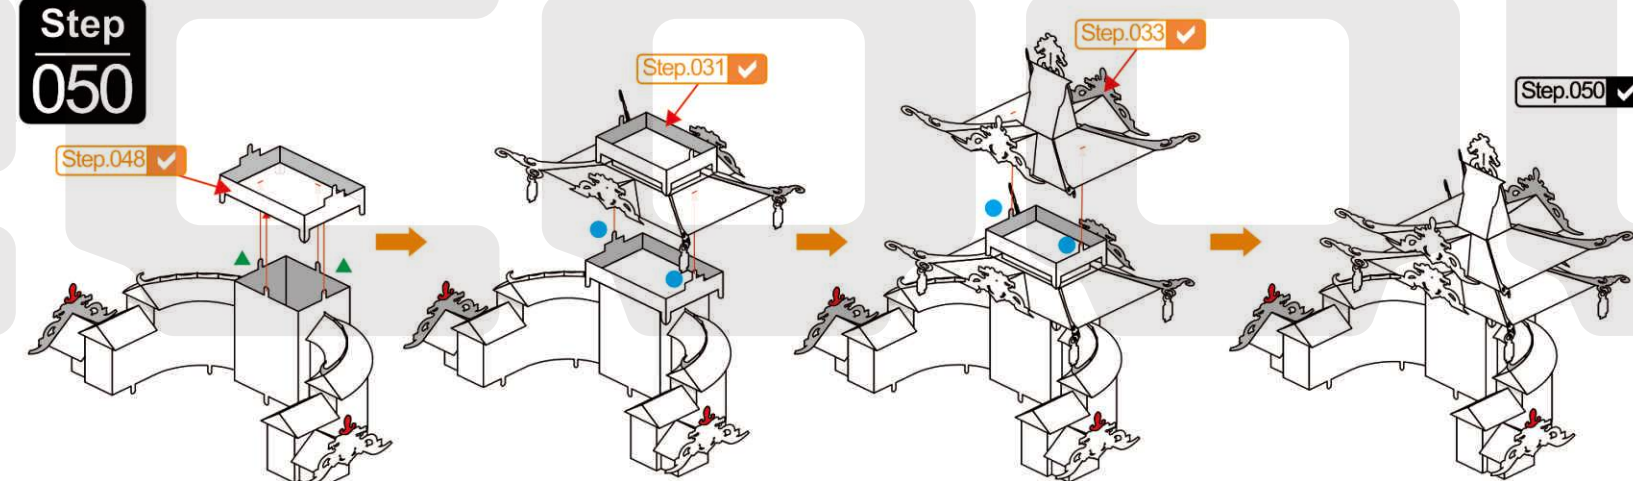


Step 051

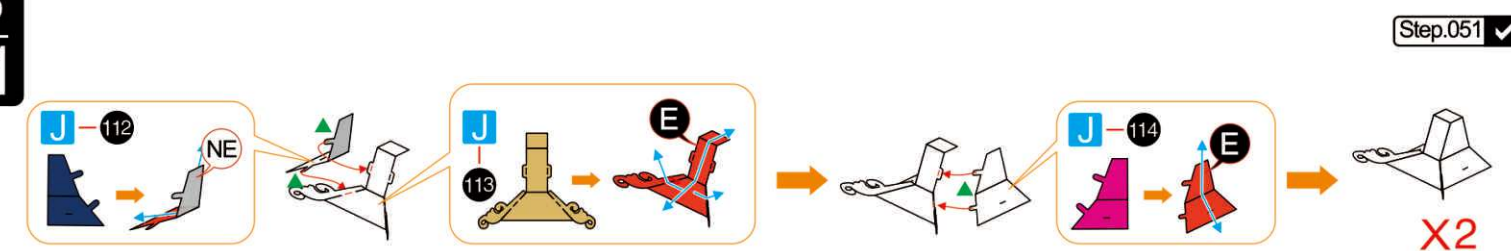


Step 052

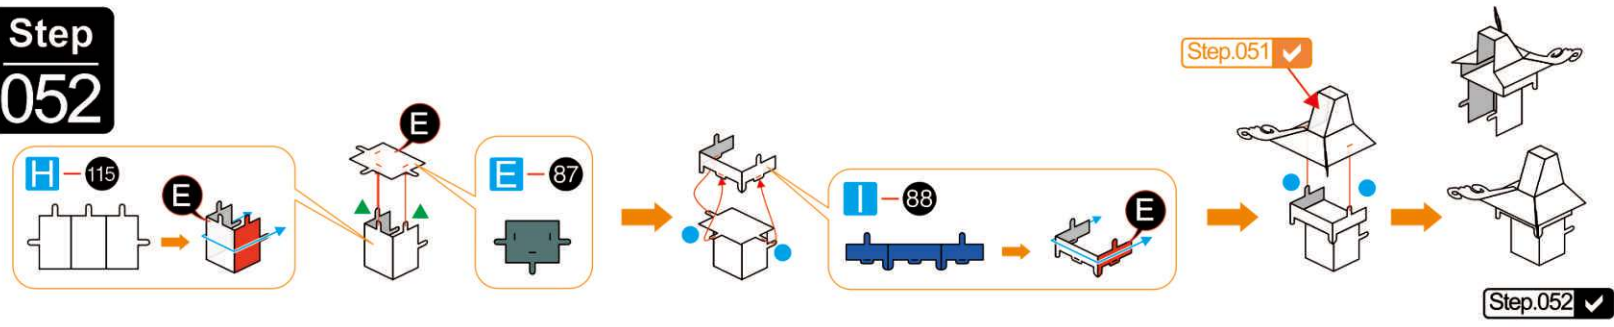


Step 053

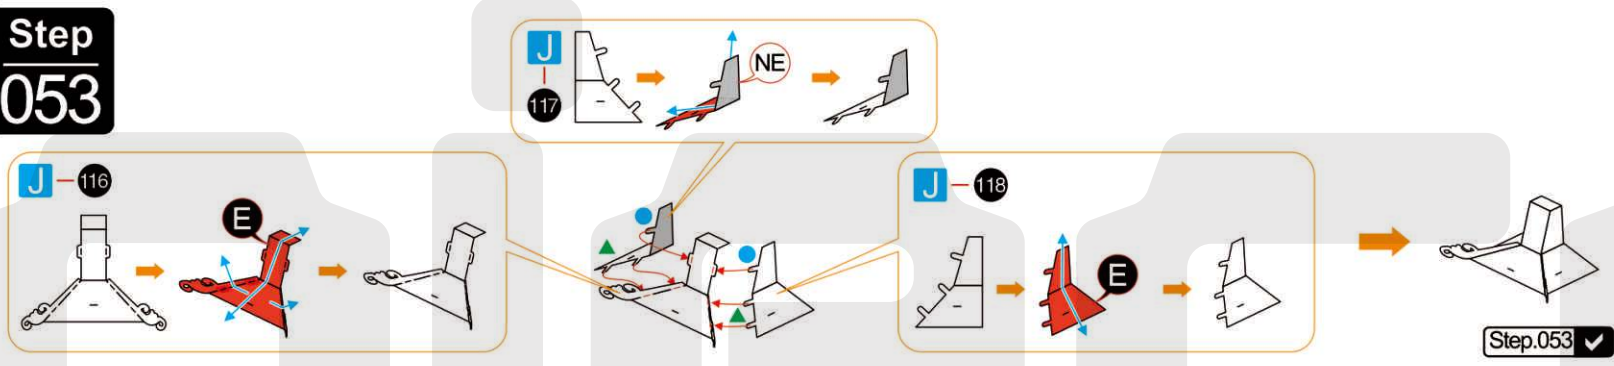


Step 054

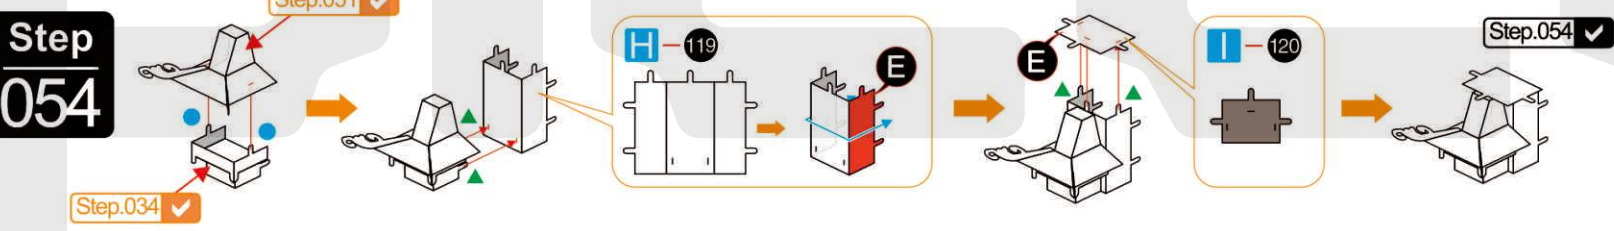


Step 055

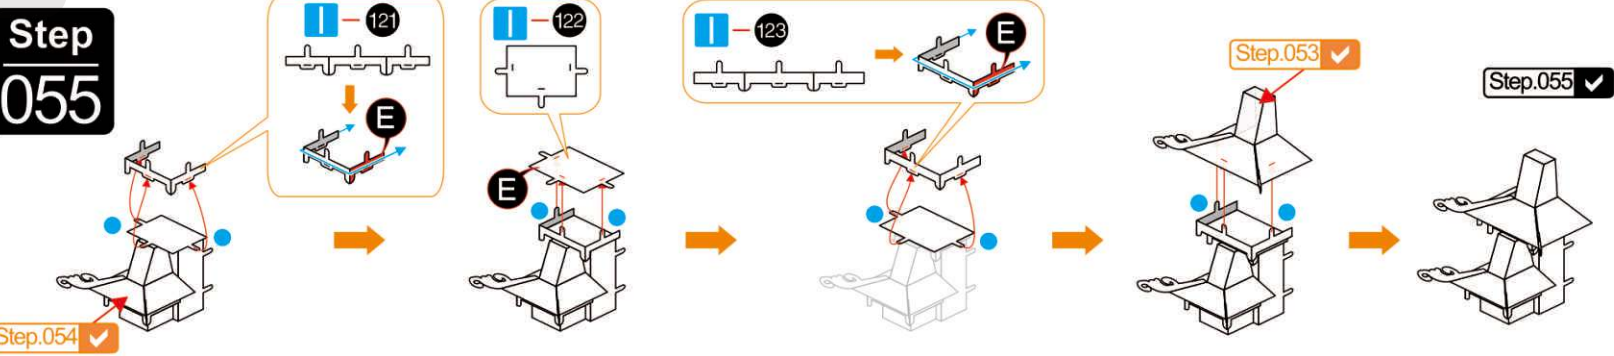


Step 056

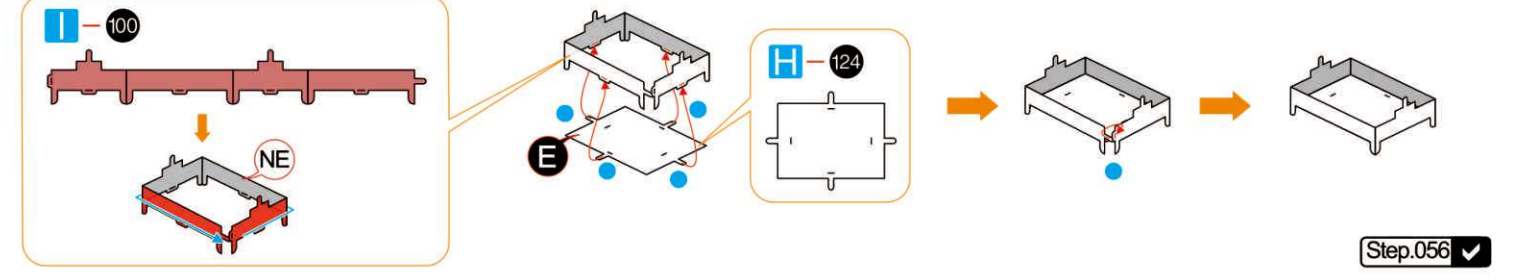


Step 057

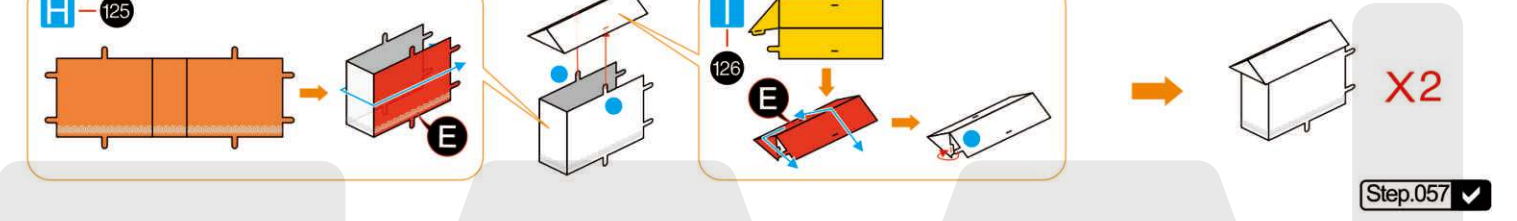


Step 058

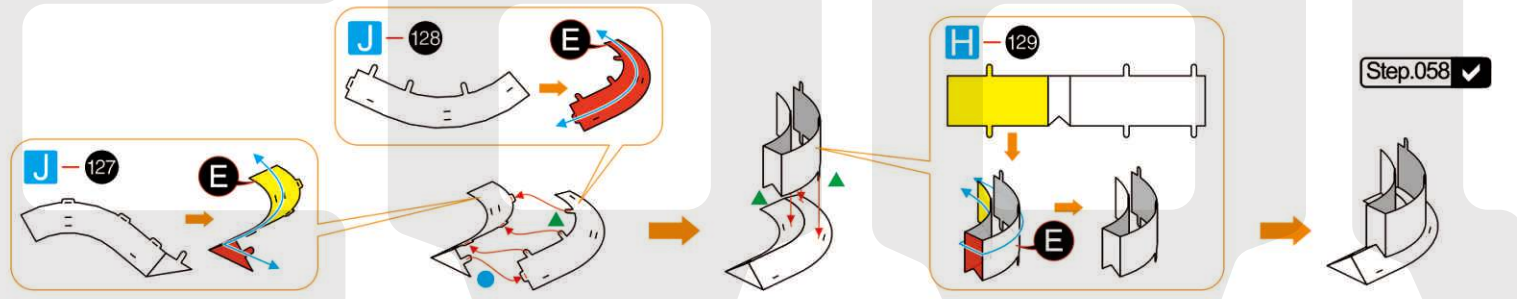


Step 059

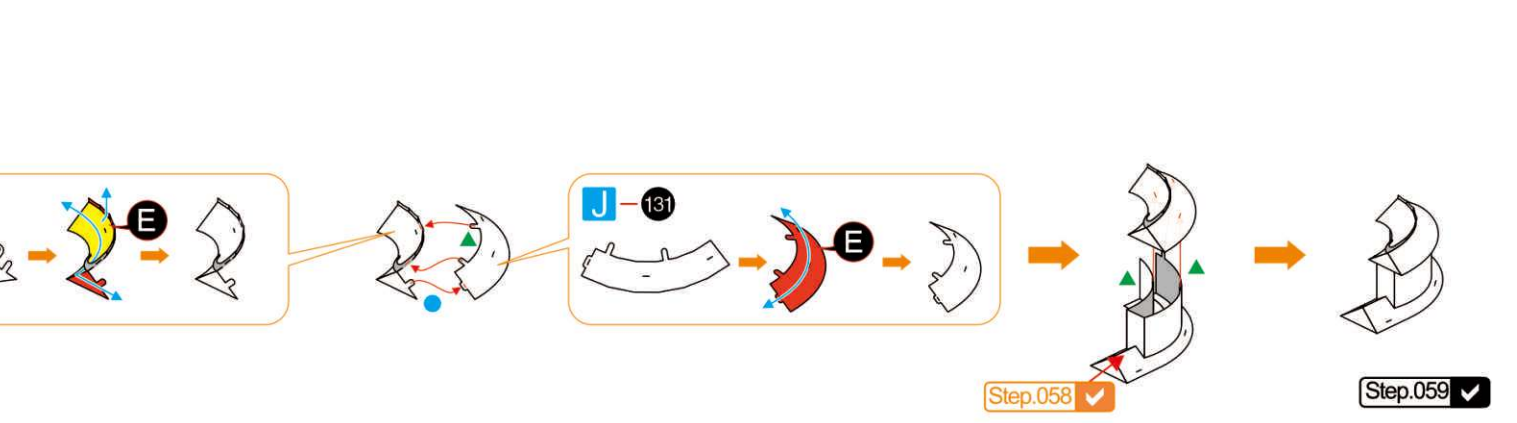


Step 060

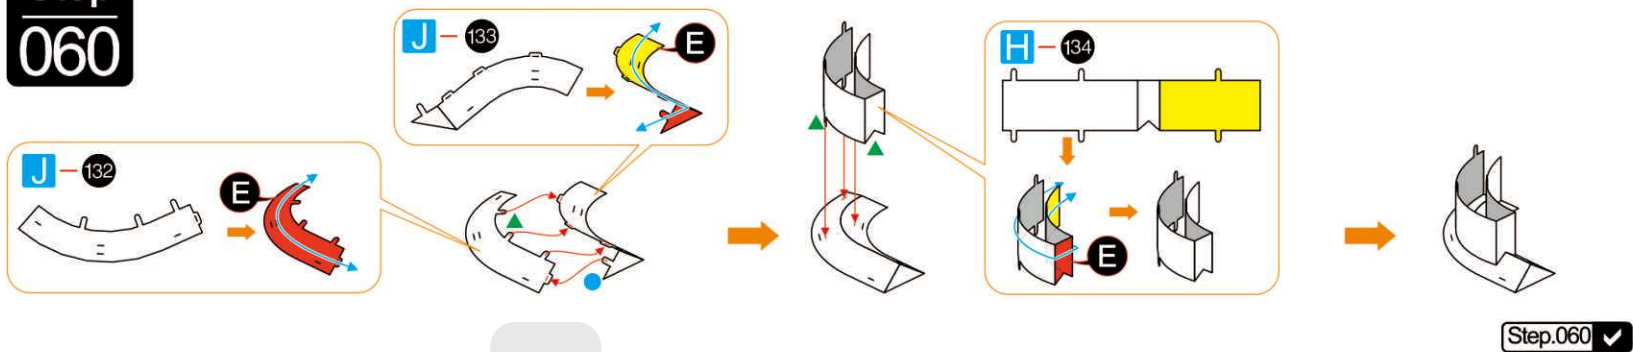


Step 061

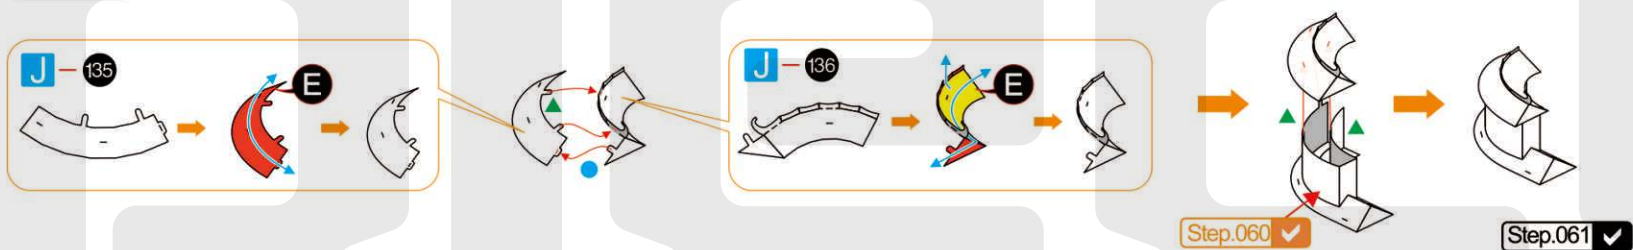


Step 062

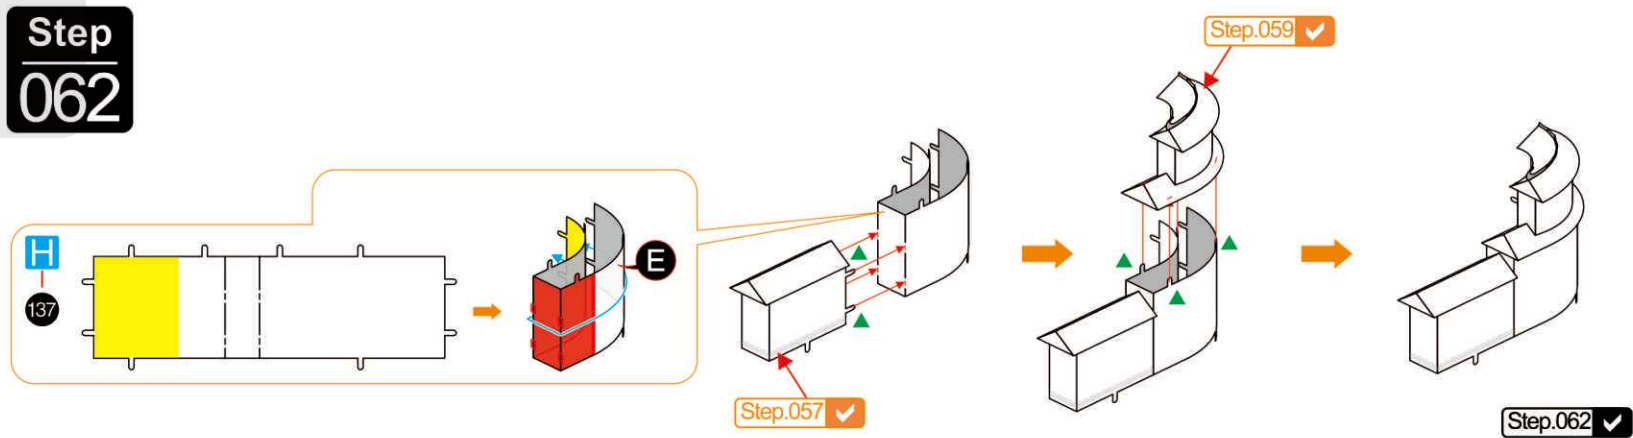


Step 063

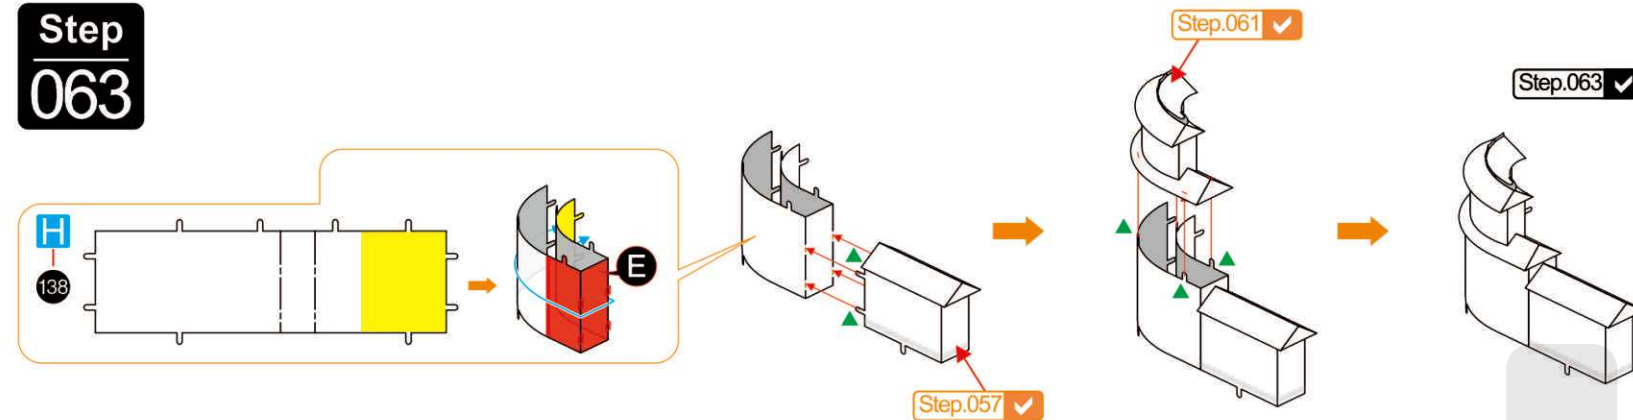


Step 064

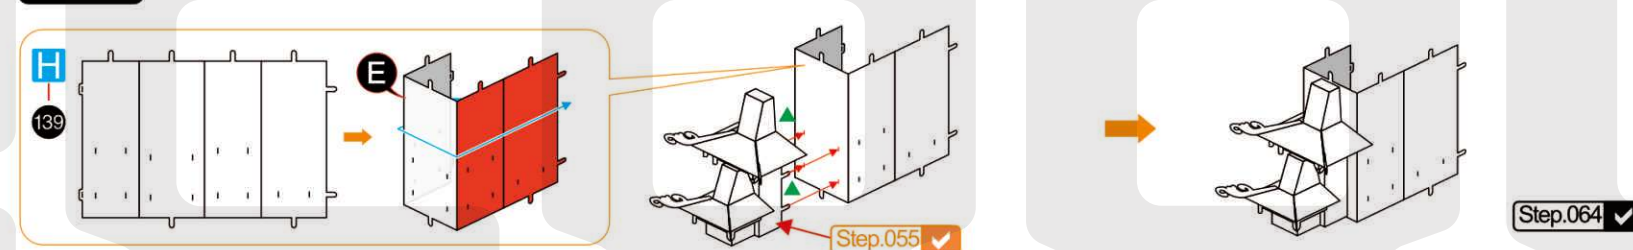


Step 065

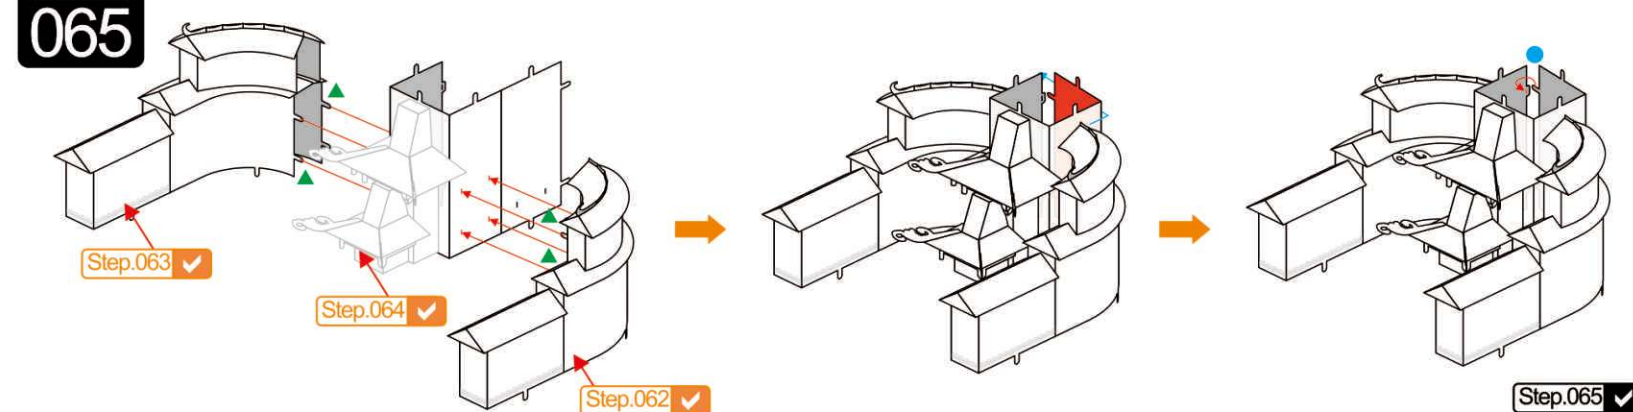


Step 066

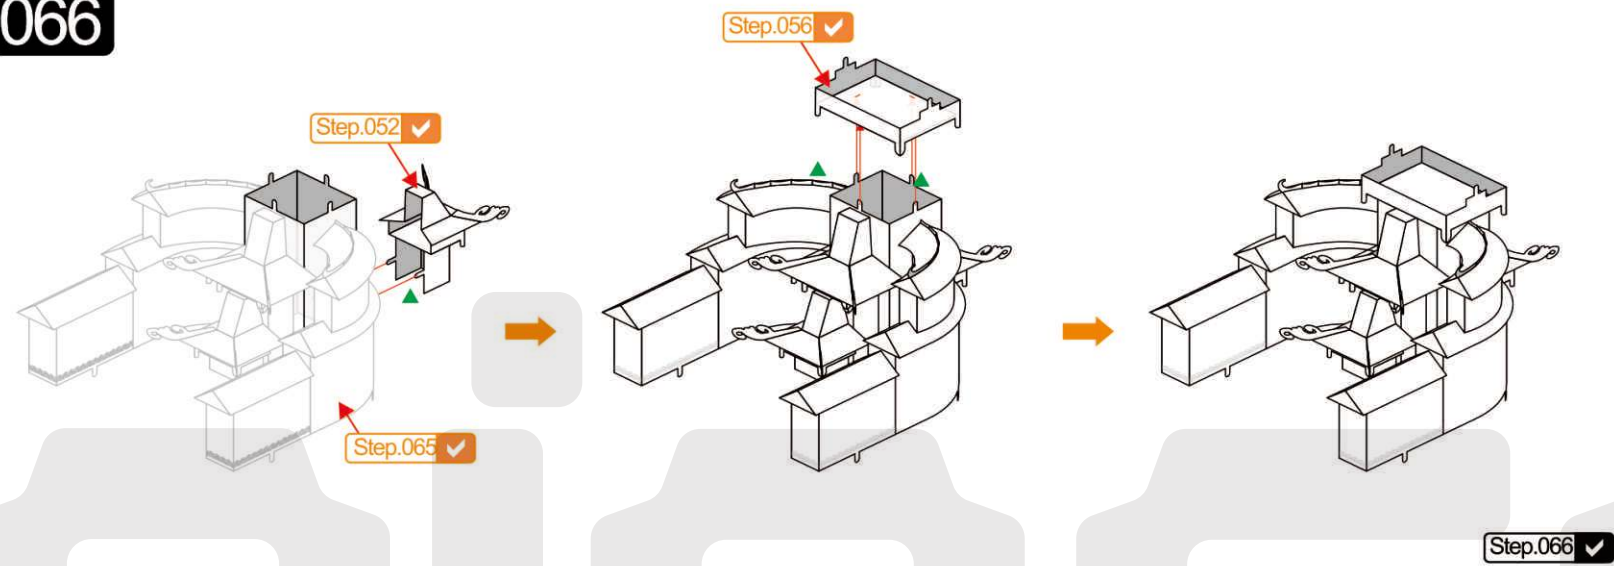


Step 067

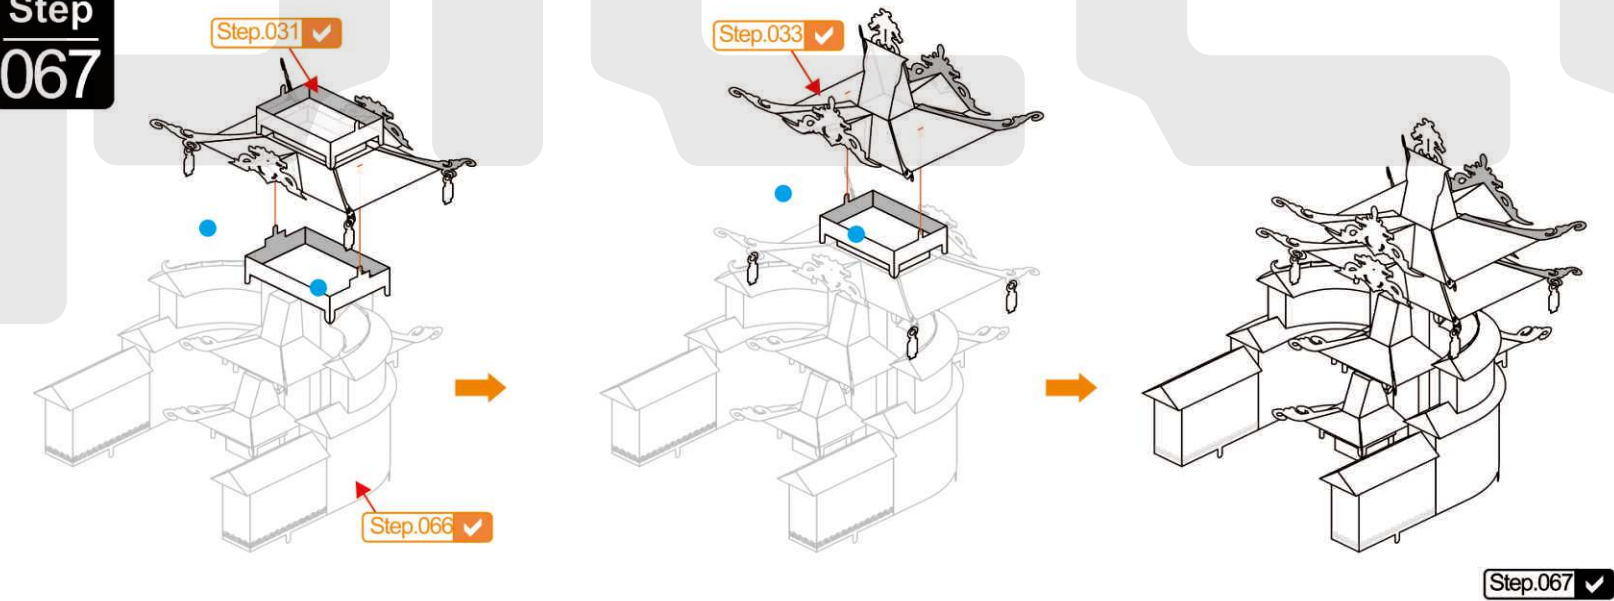


Step 068

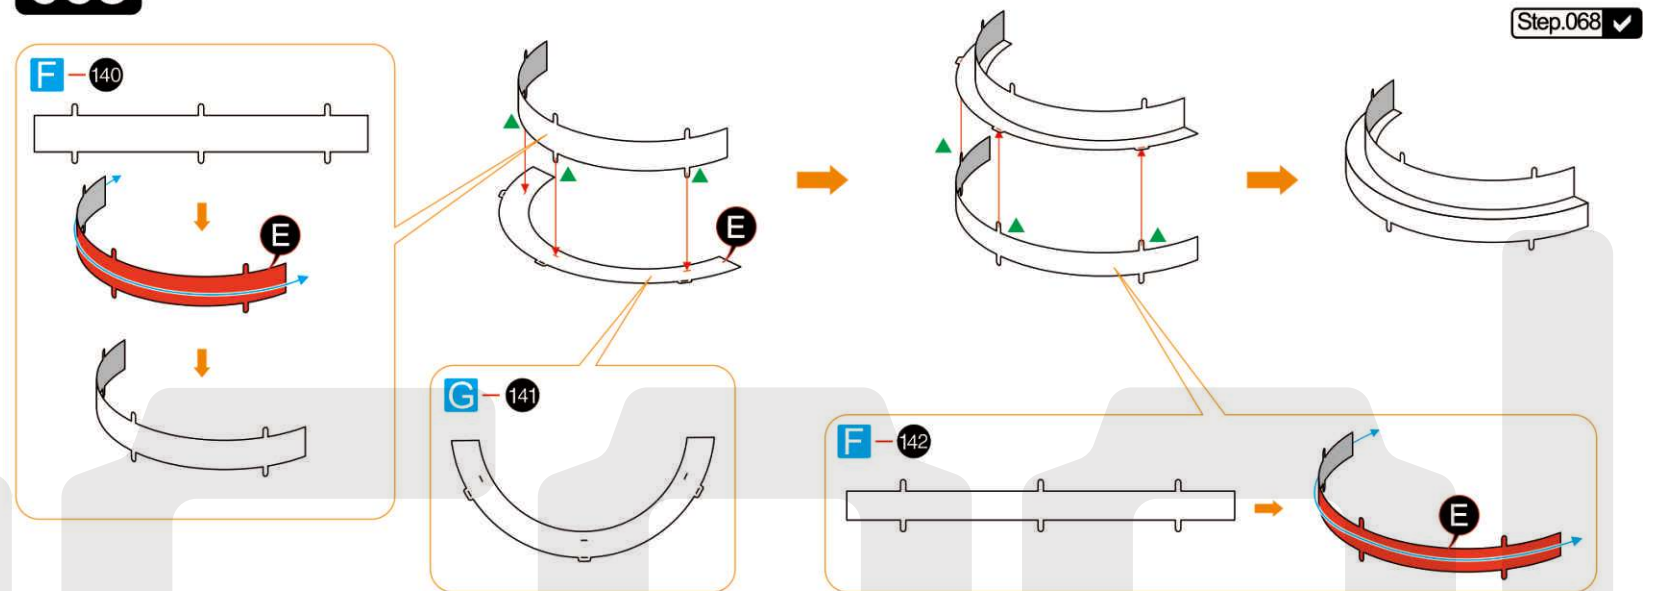


Step 069

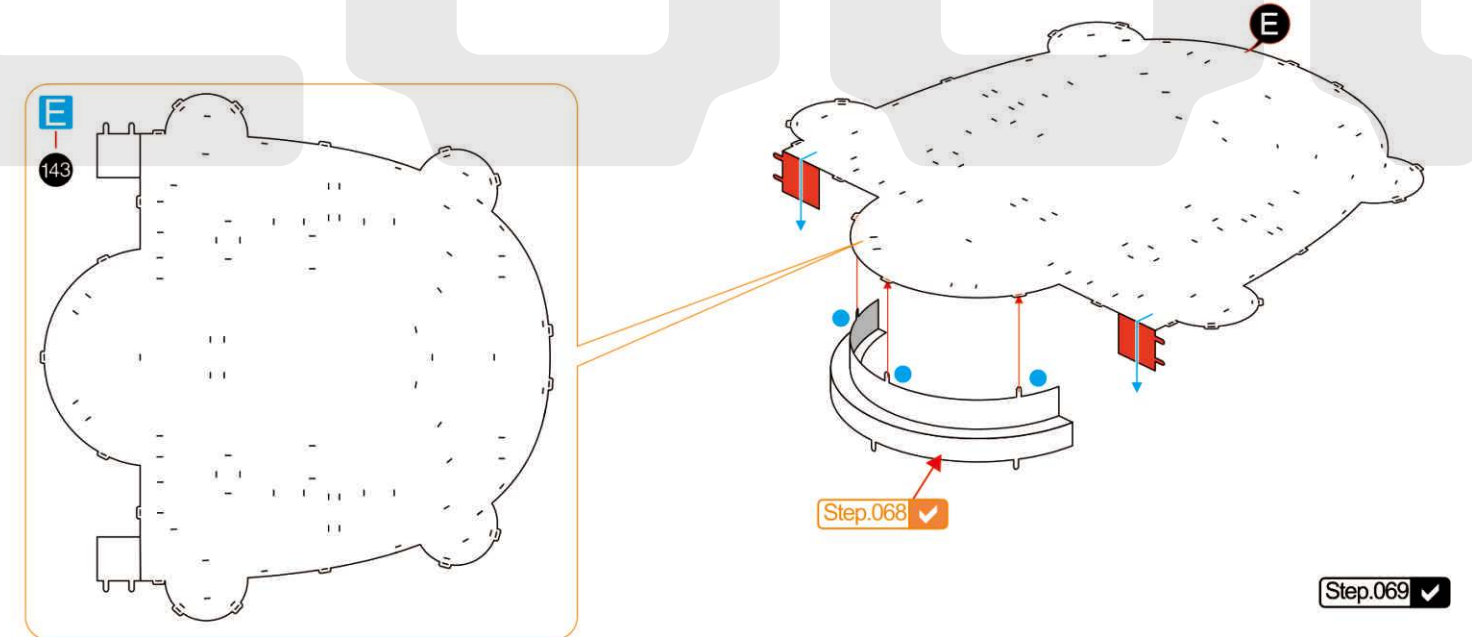


Step 070

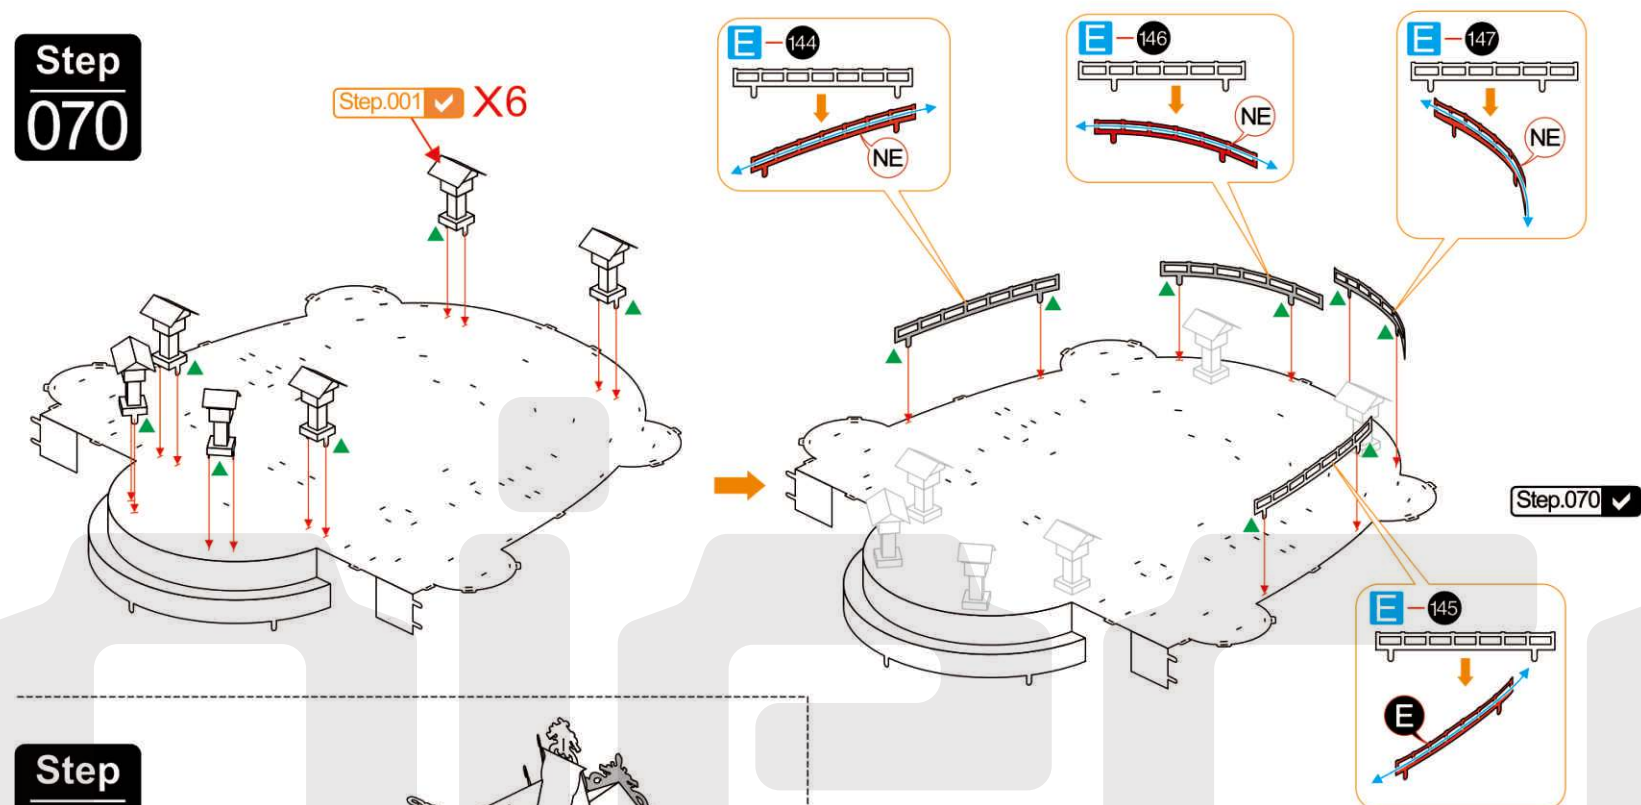


Step 071

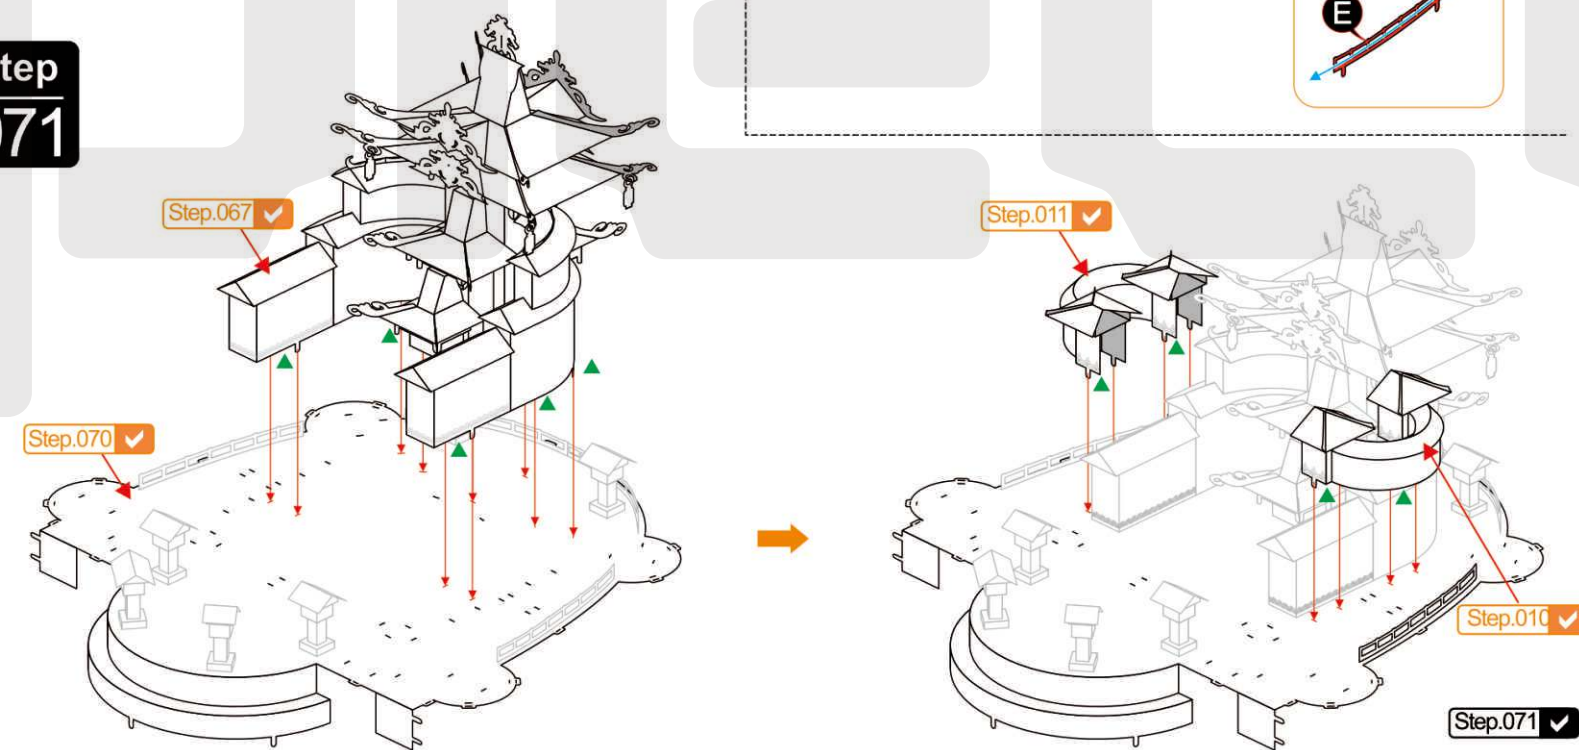


Step 072

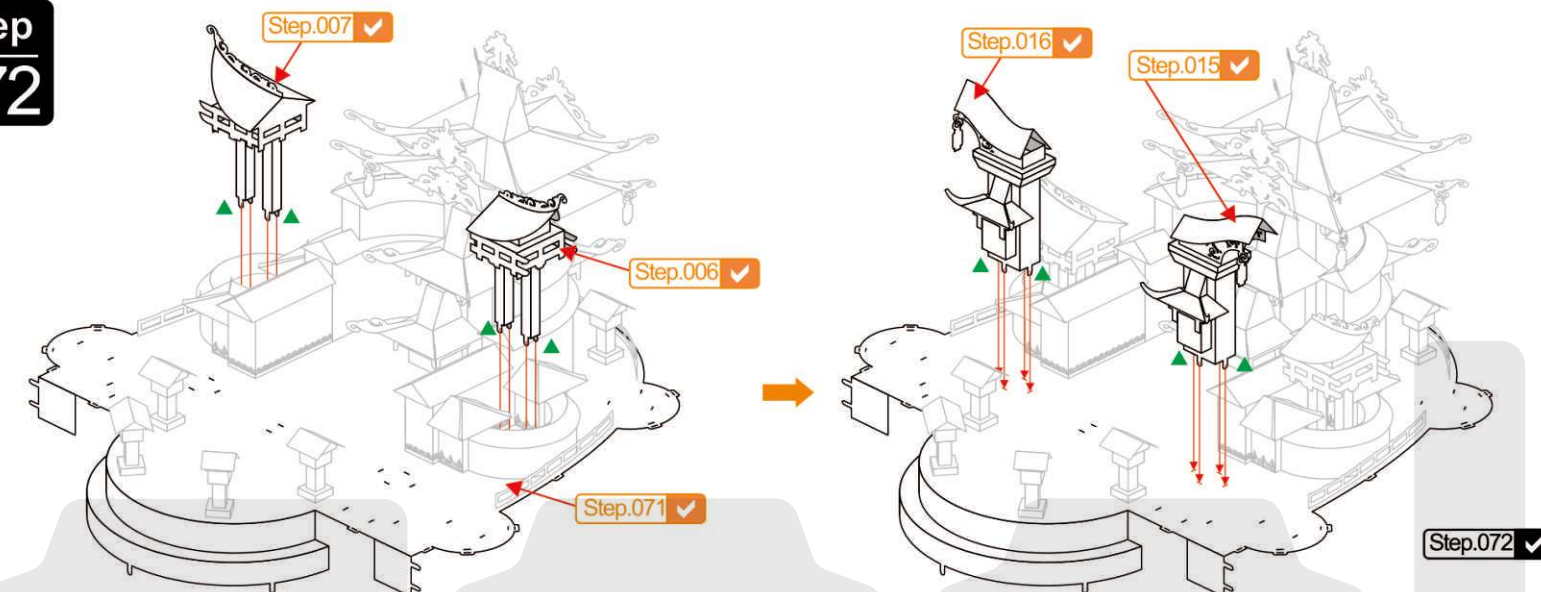


Step 073

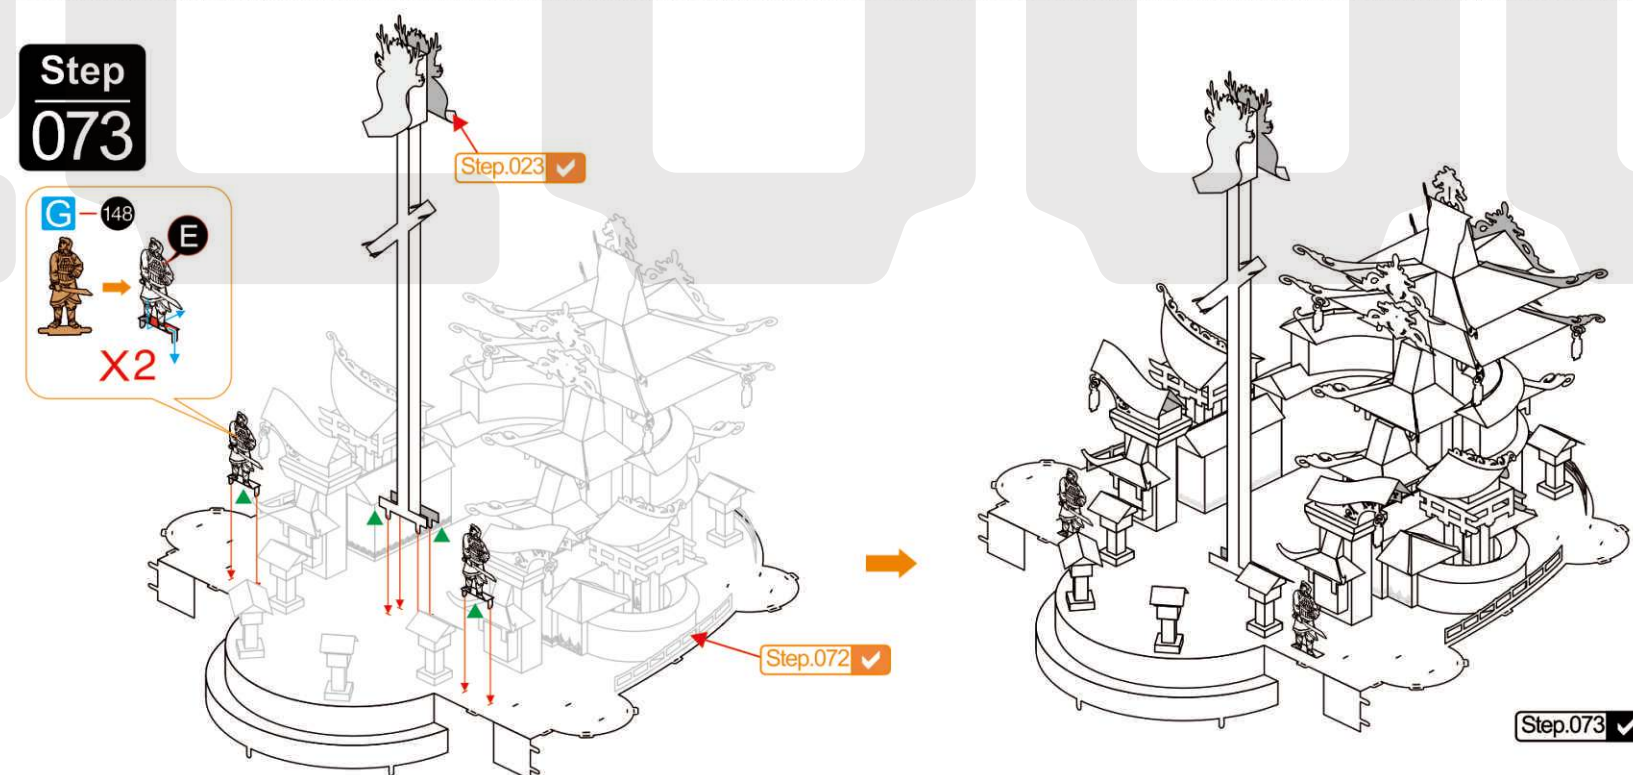


Step 074

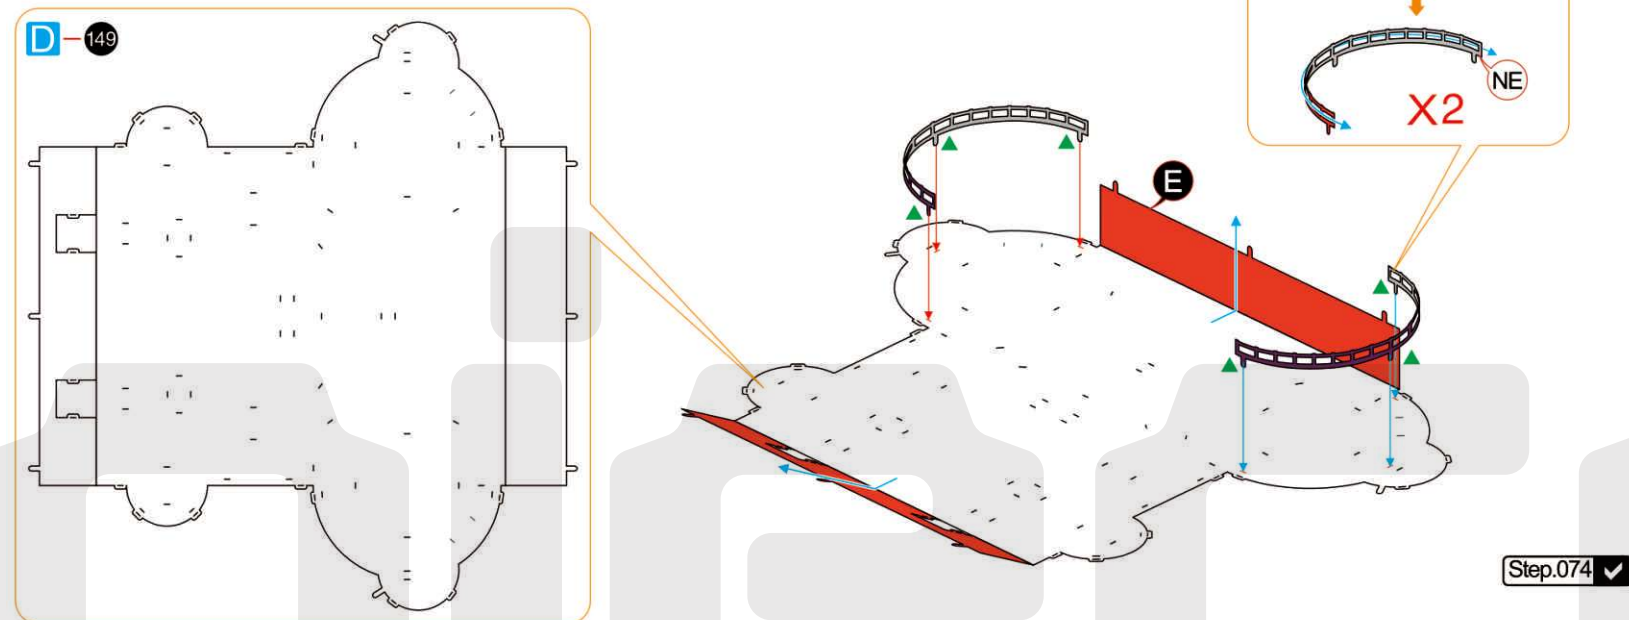


Step 075

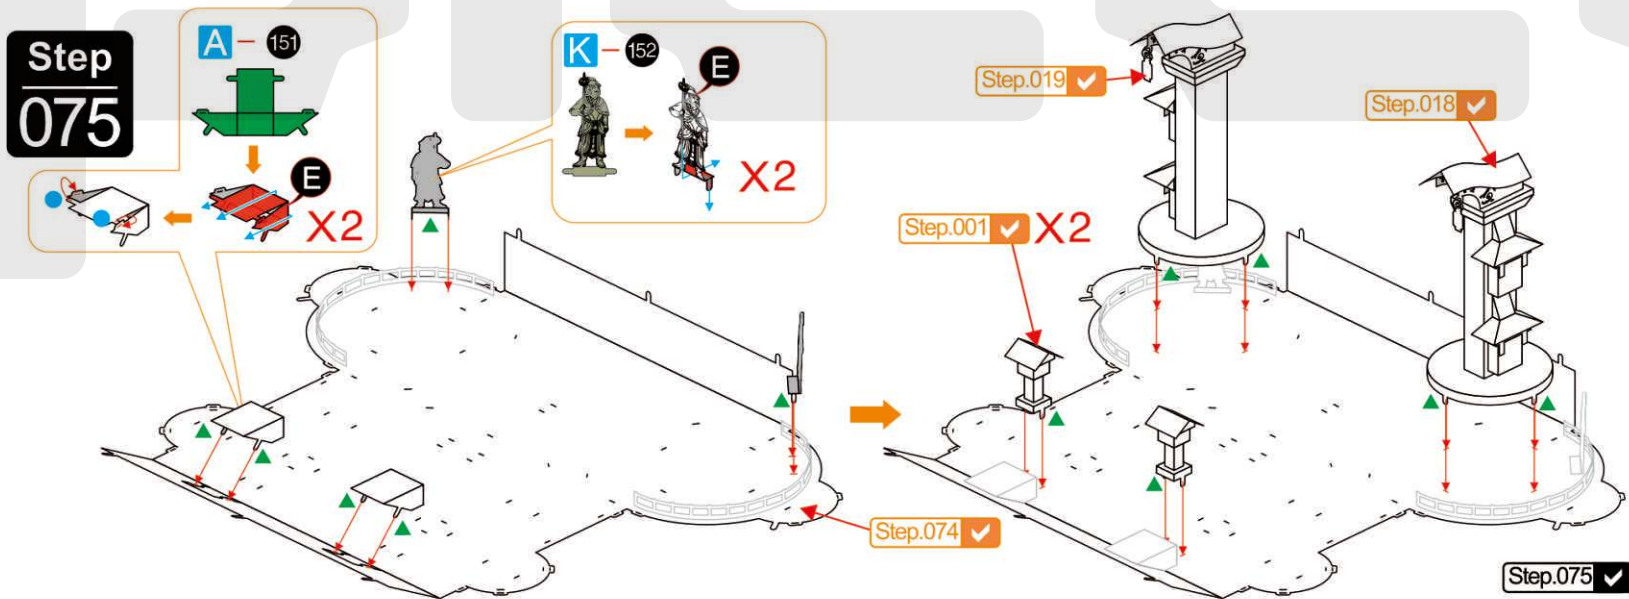


Step 076

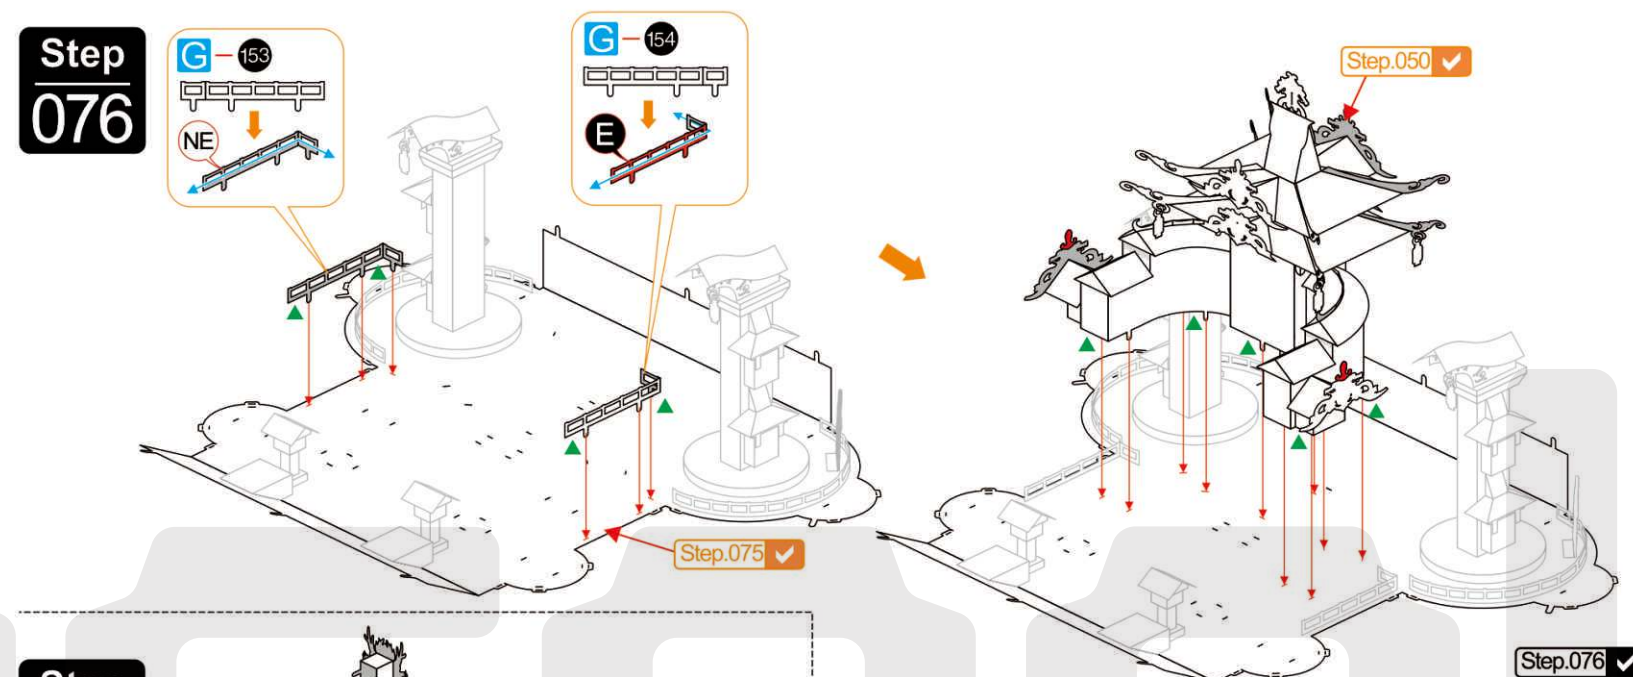


Step 077

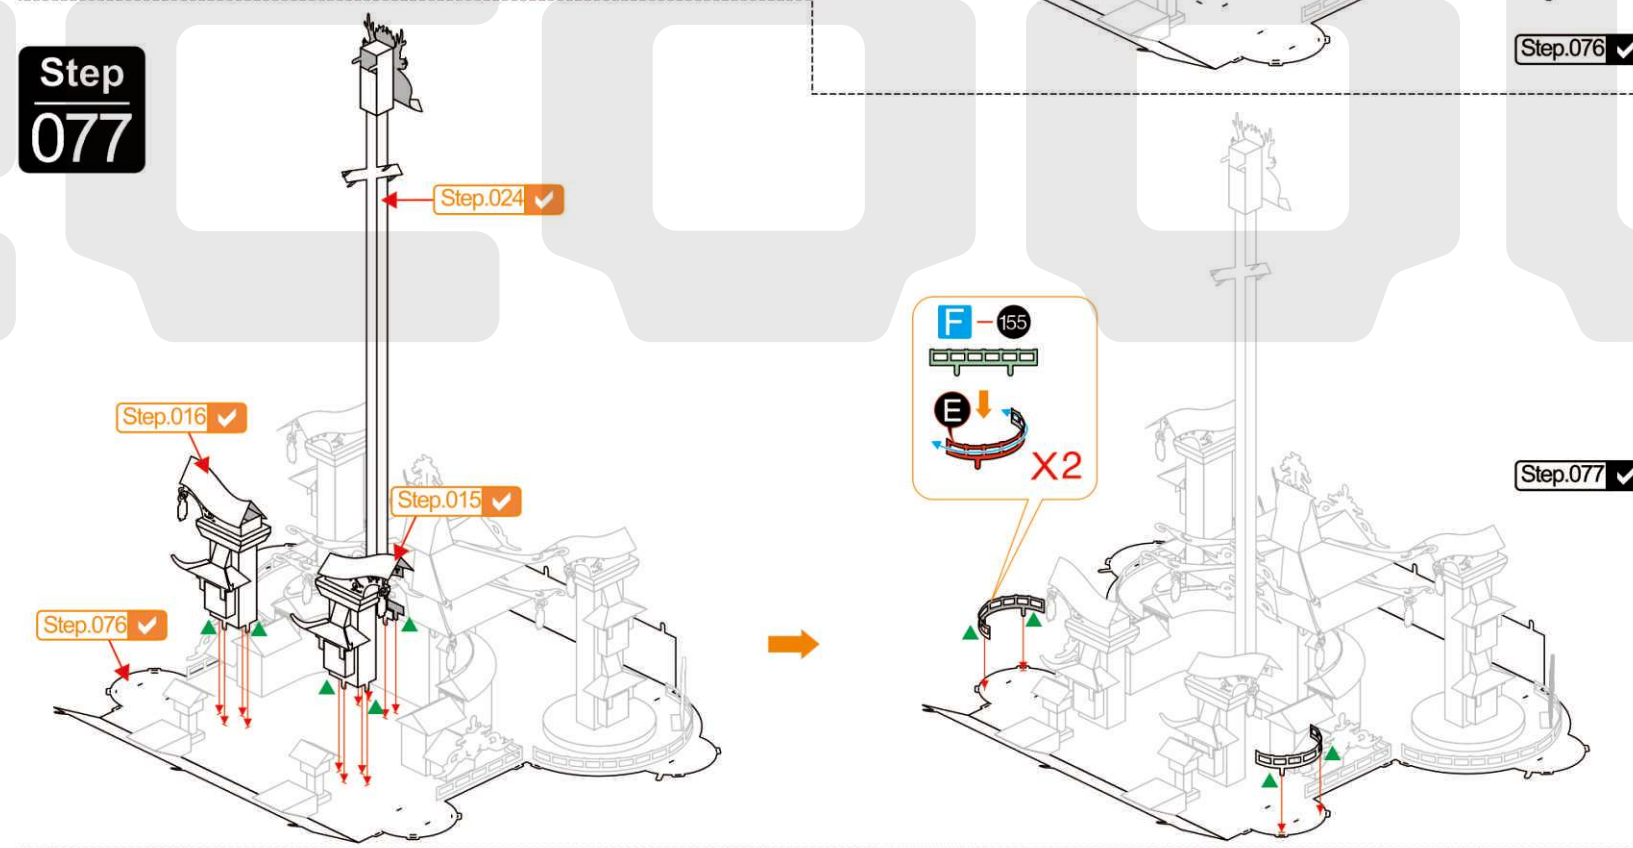


Step 078

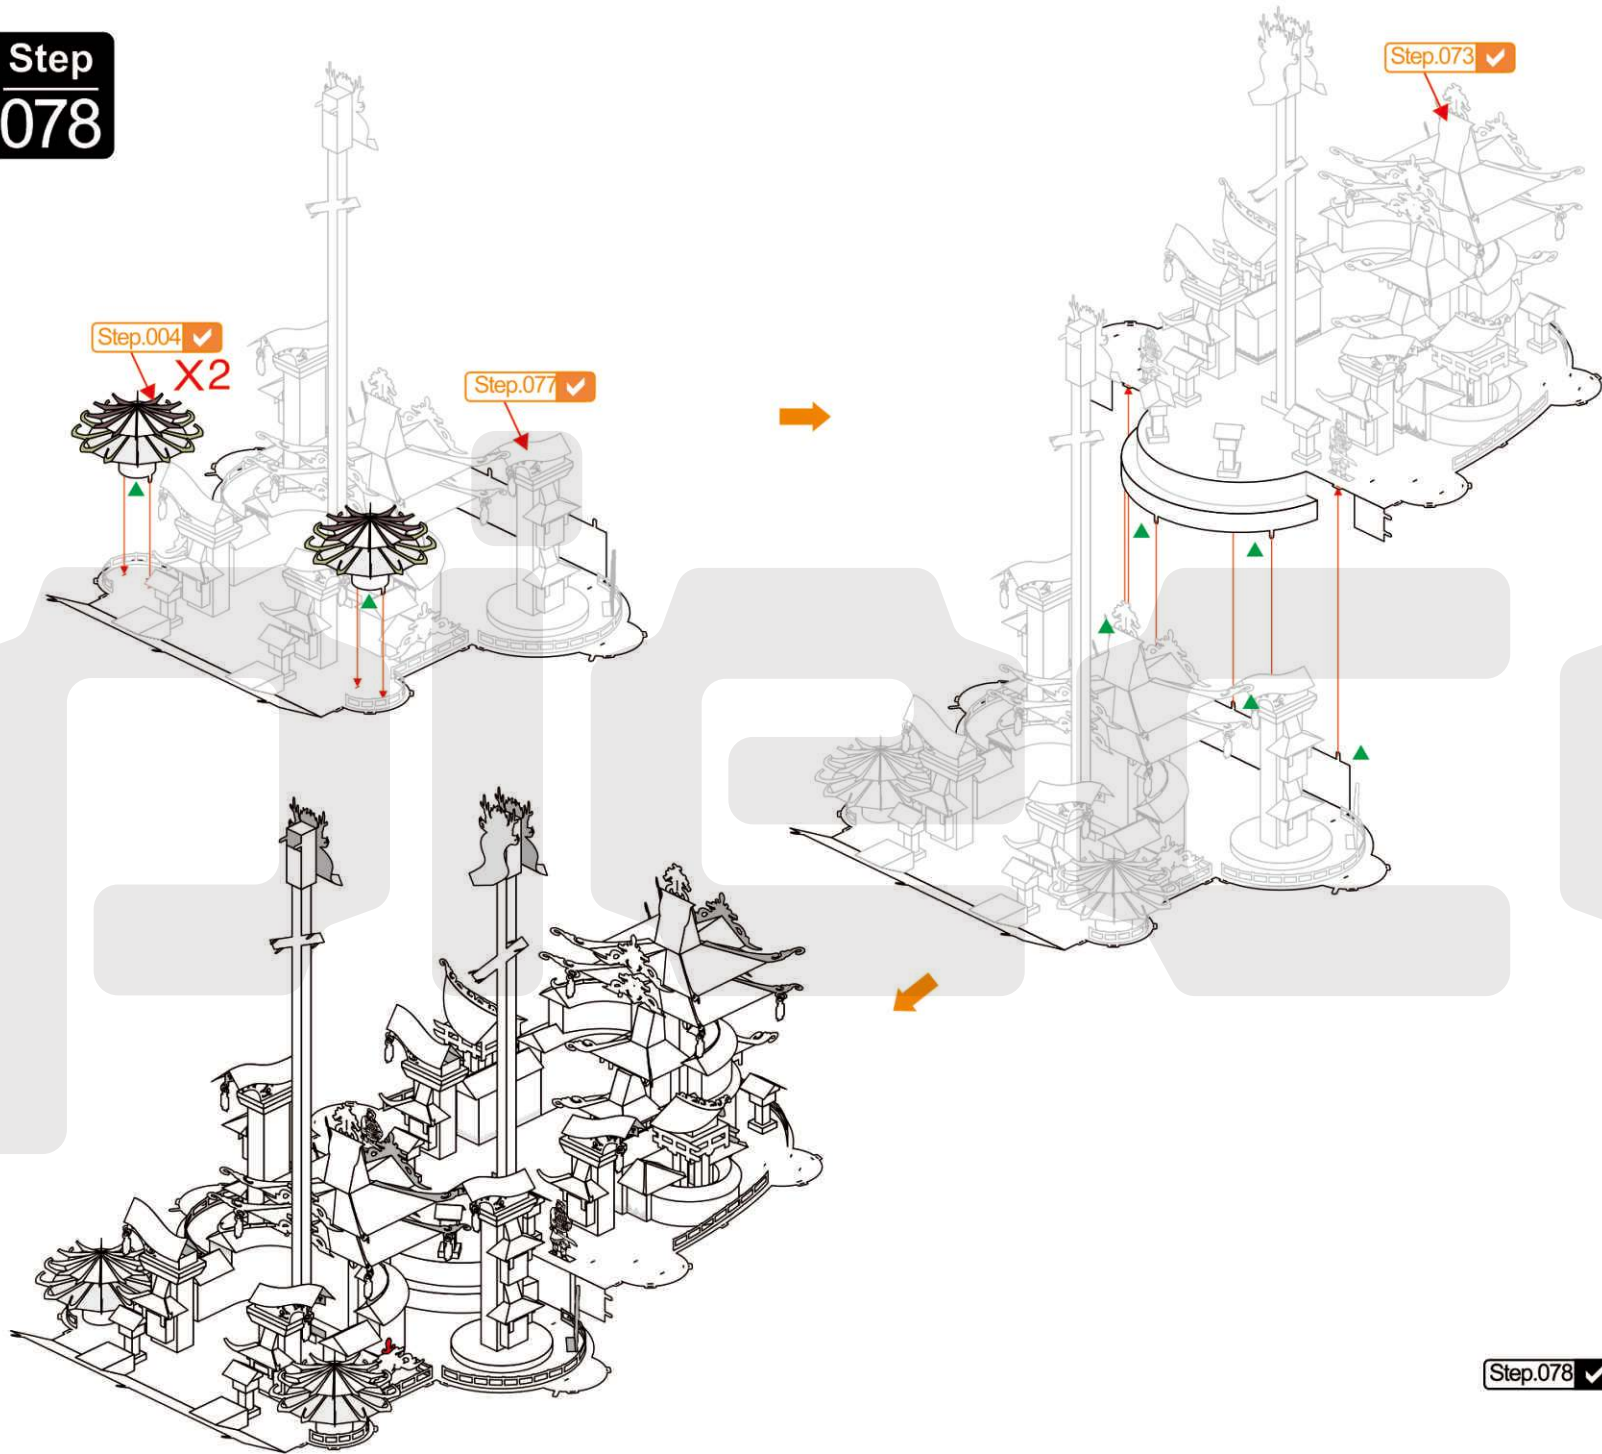


Step 079

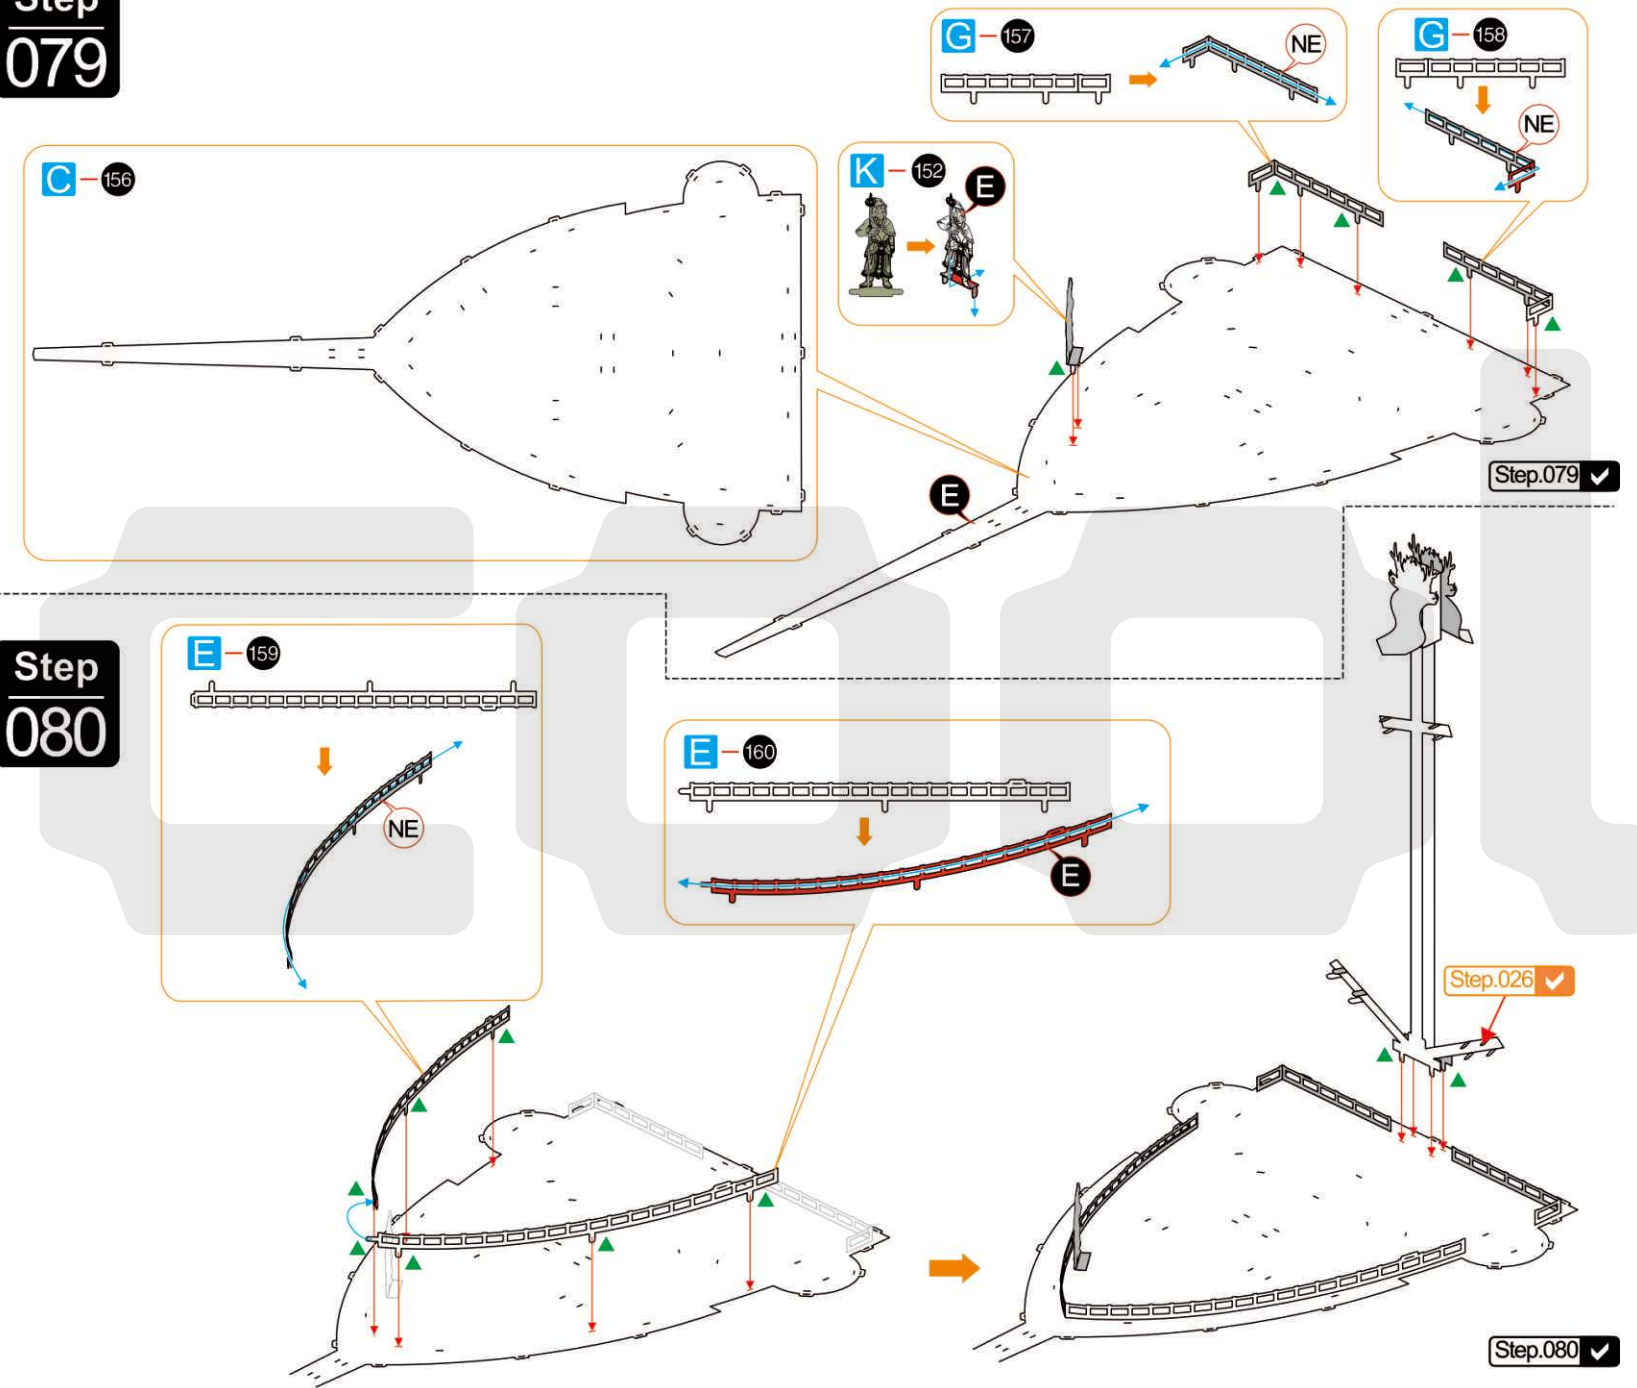


Step 081

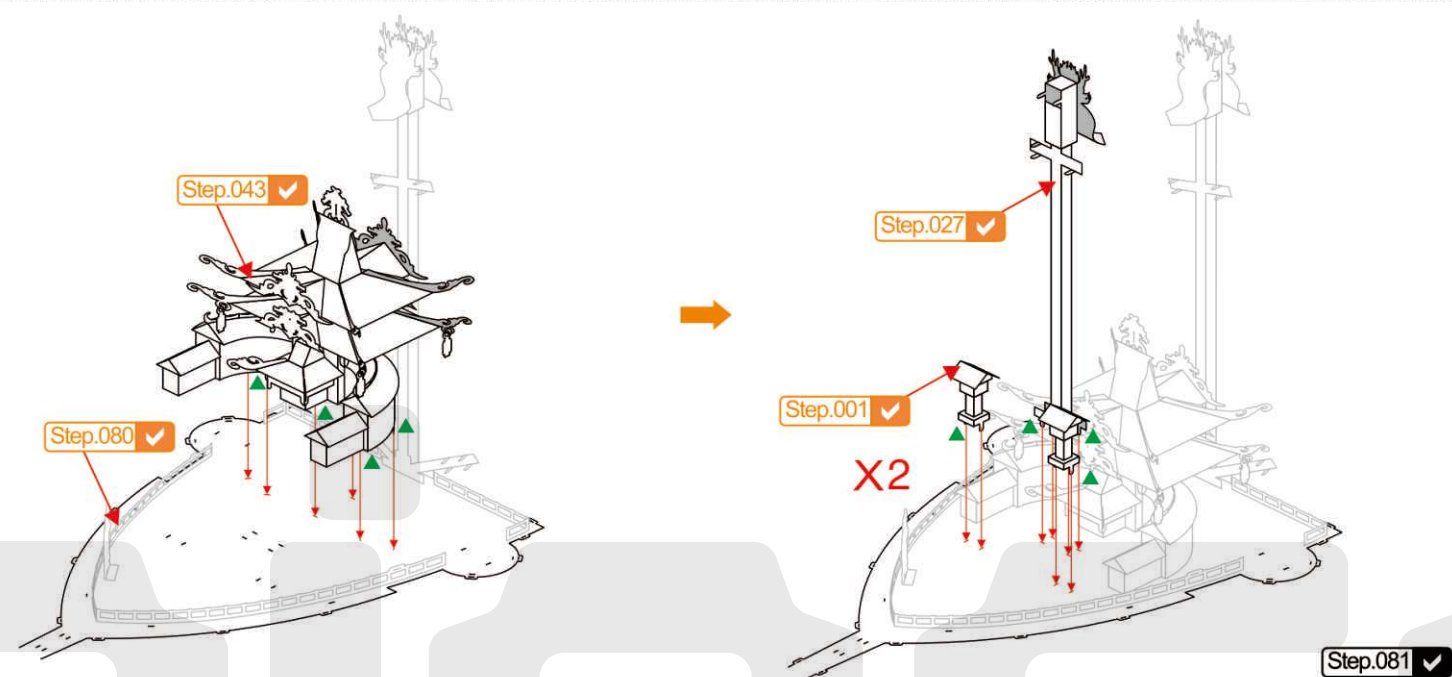


Step 082

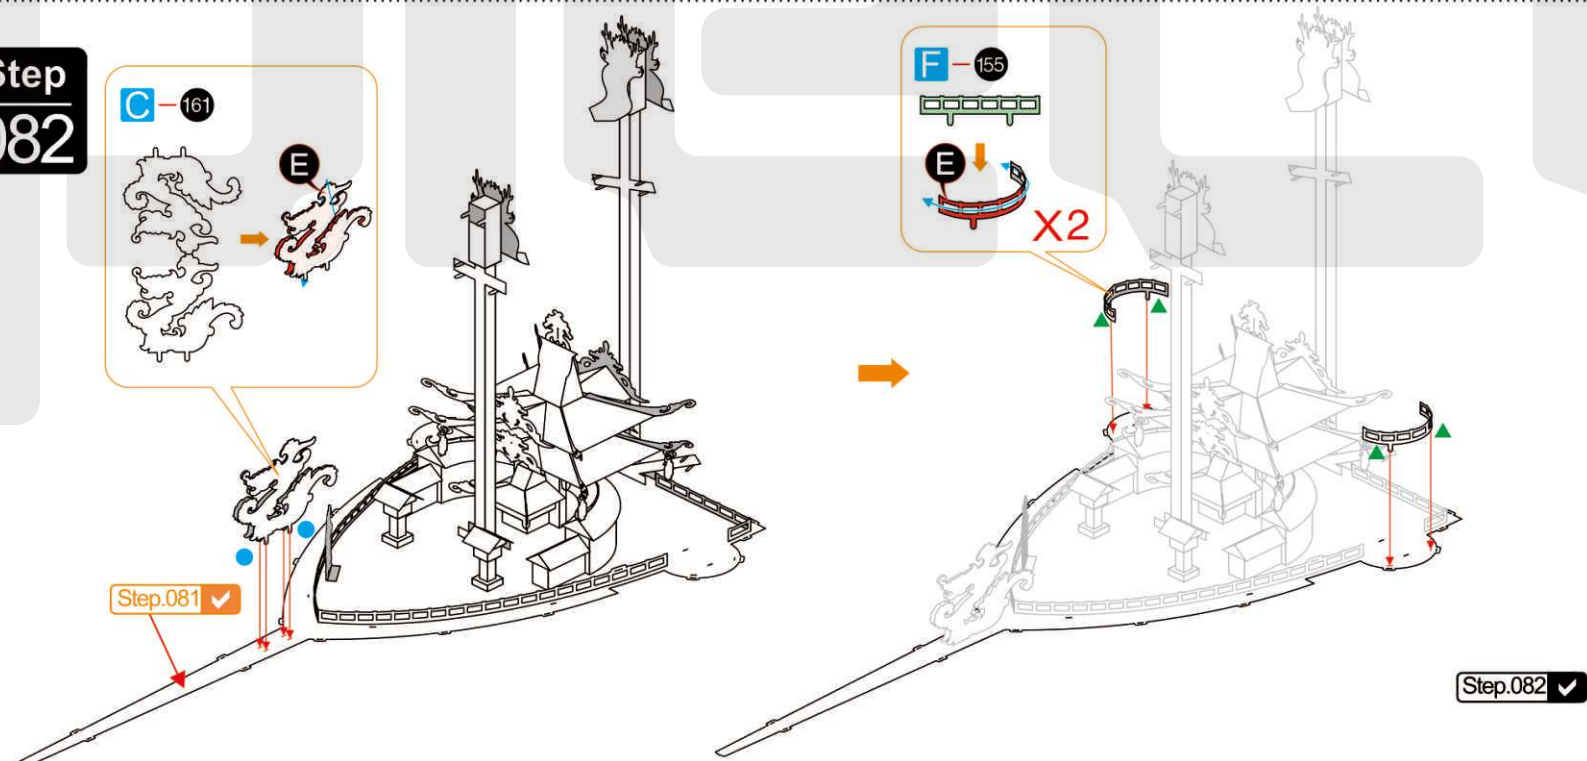


Step 083

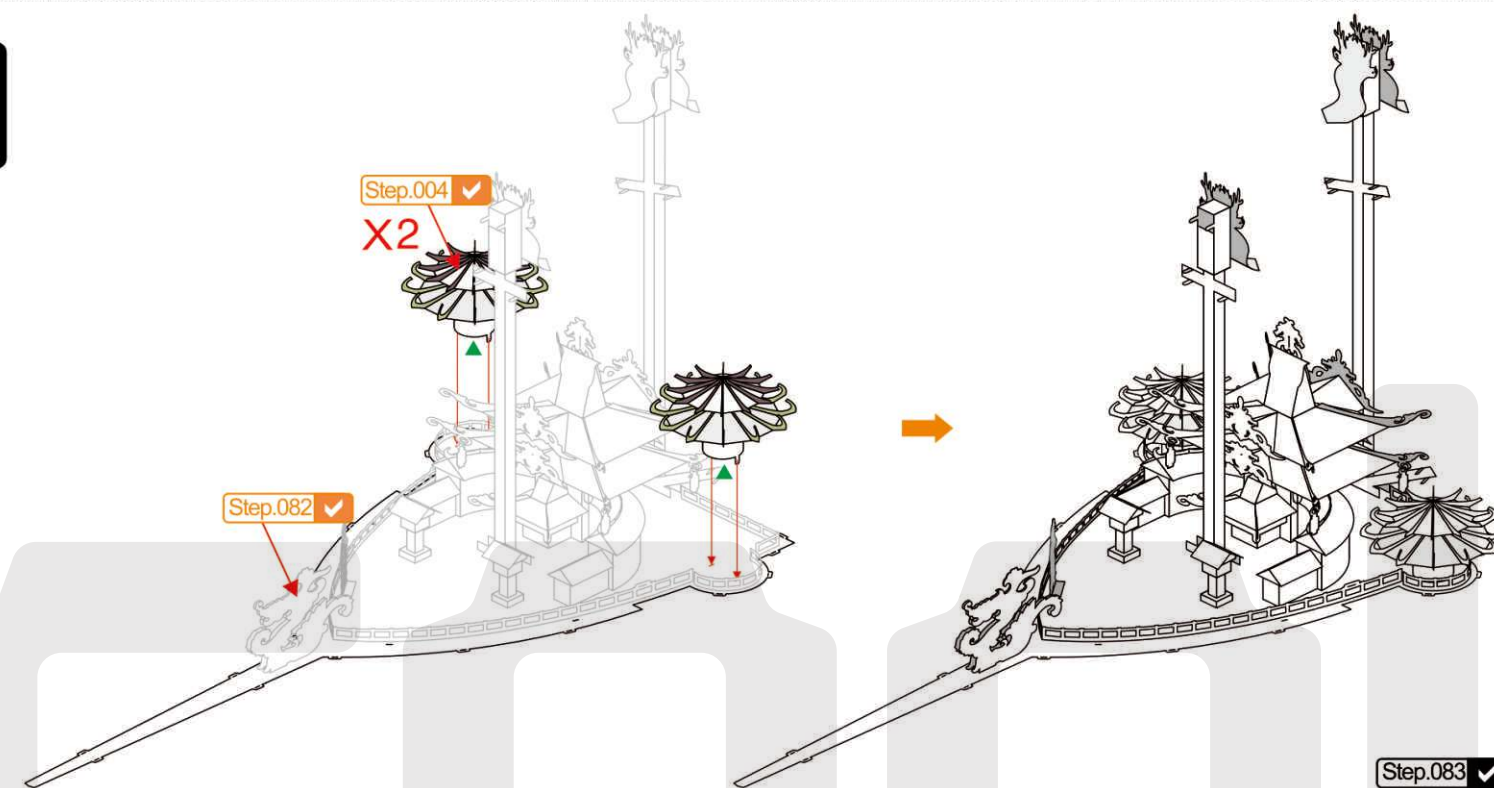


Step 084

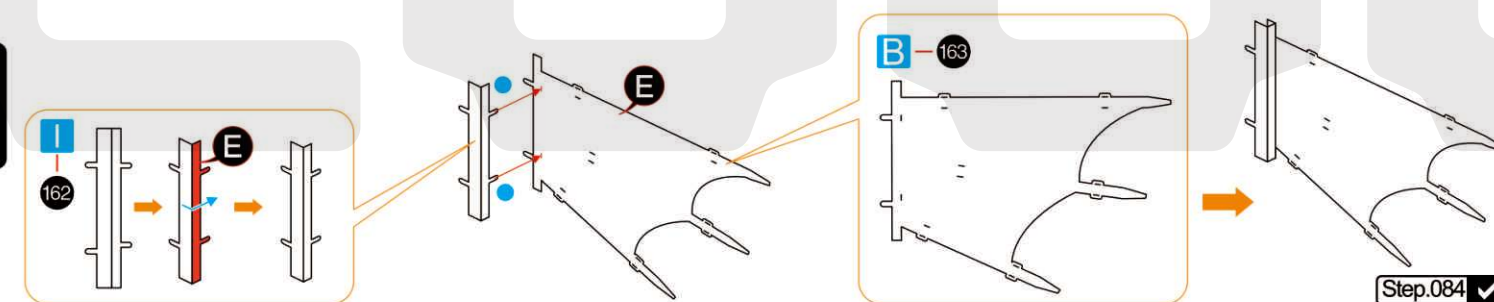


Step 085

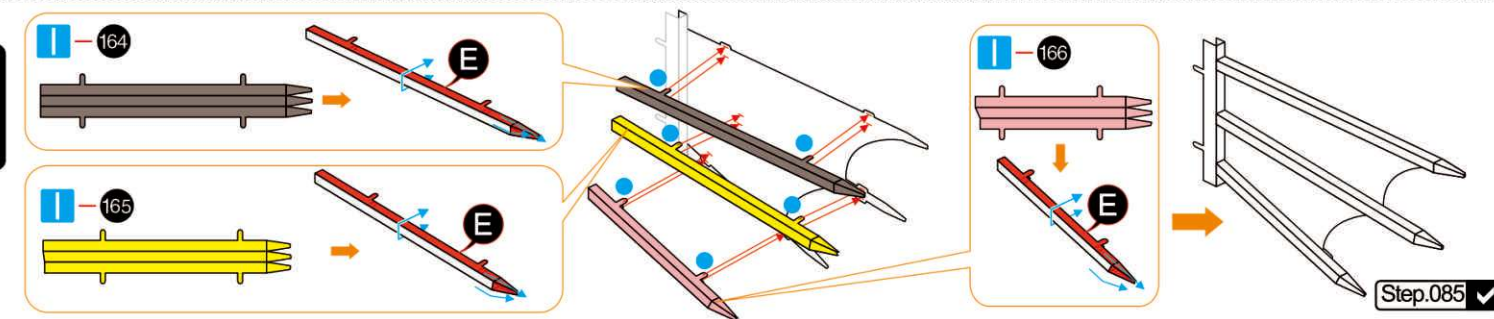


Step
086

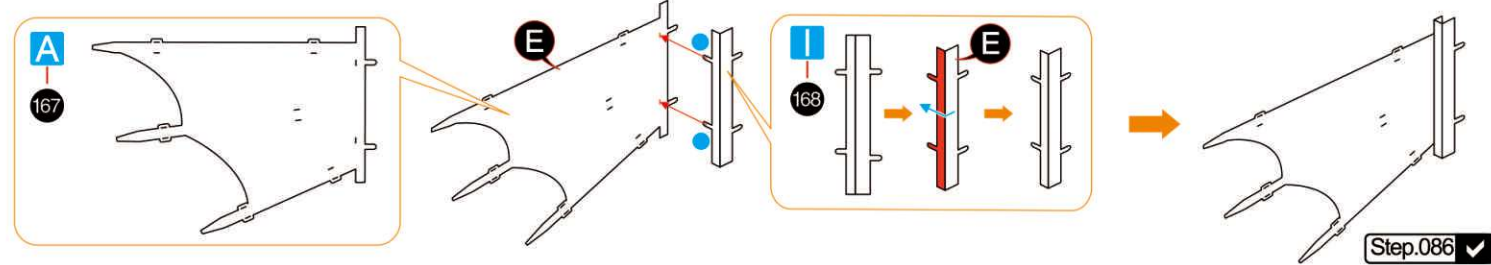


Step
087

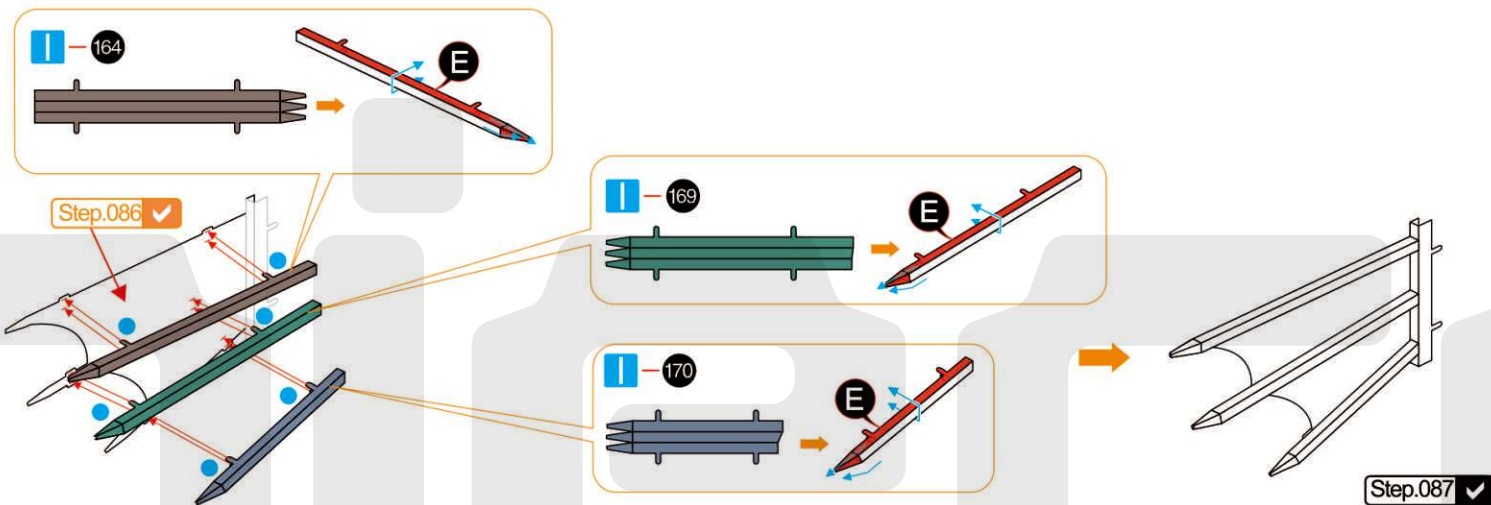


Step
088

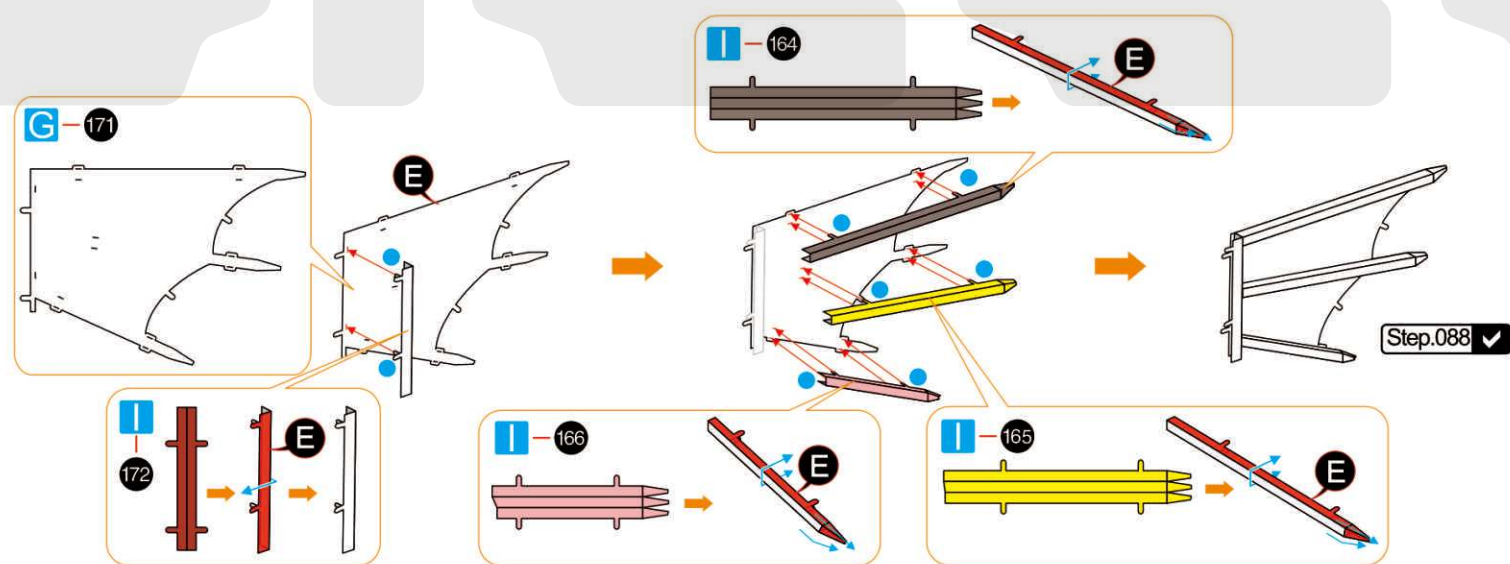


Step
089

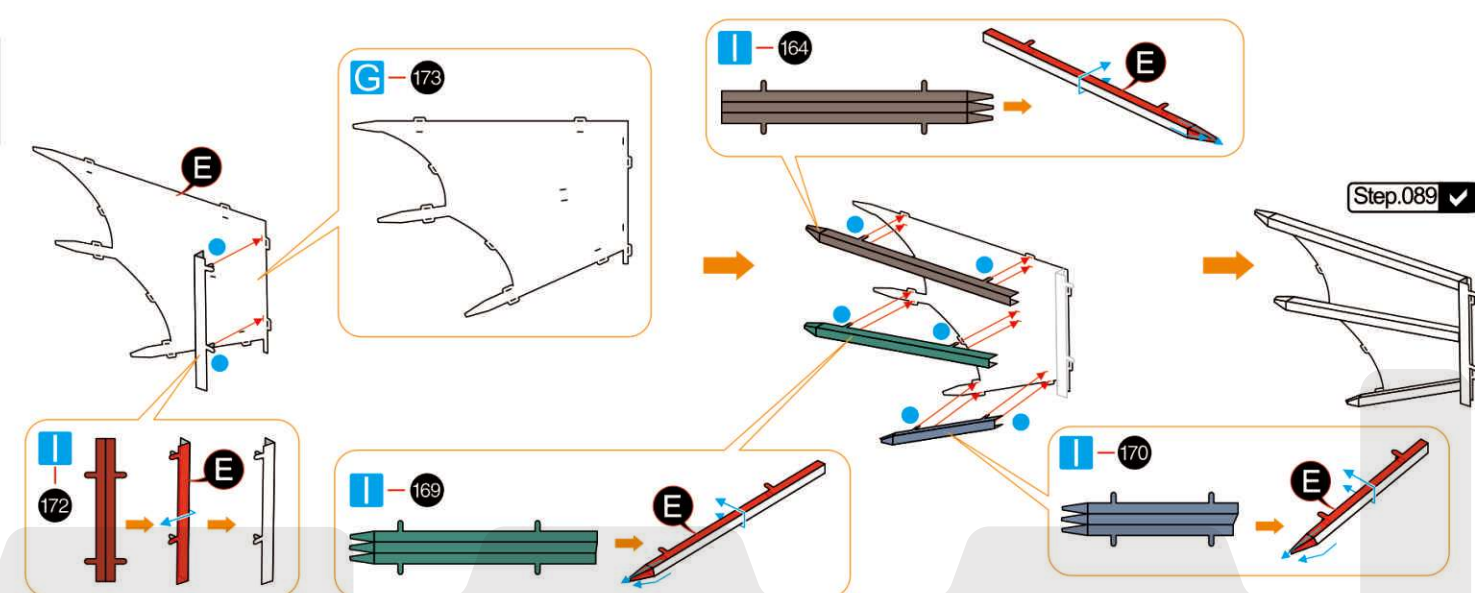


Step
090

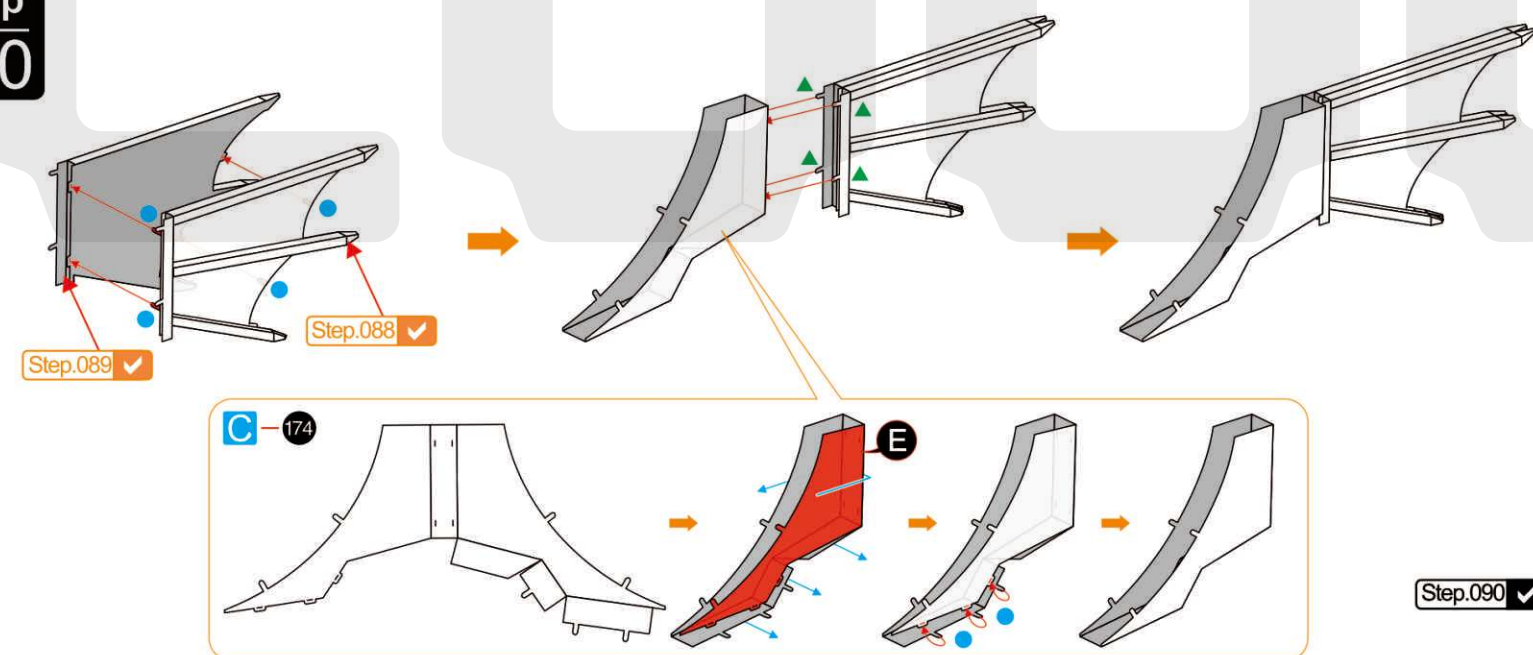


Step
091

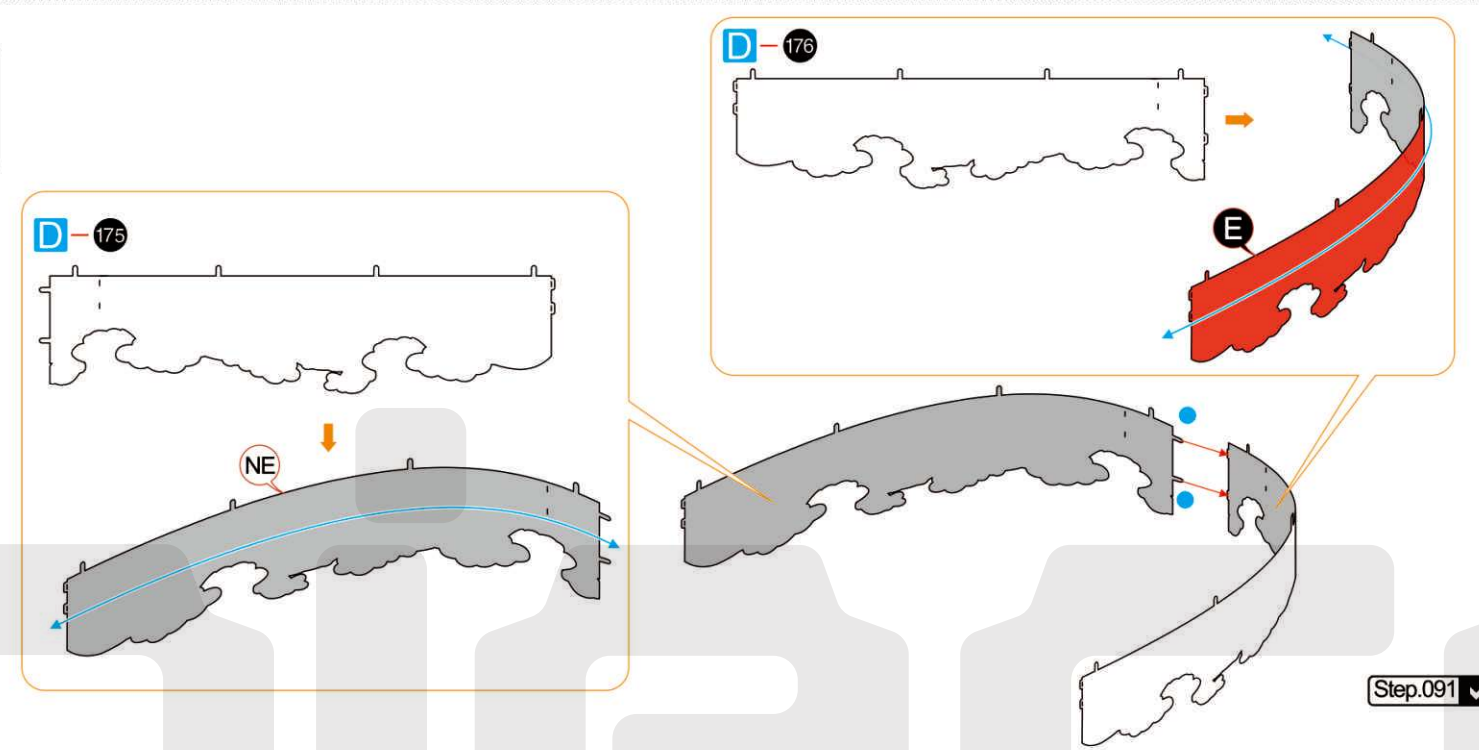

Step
092

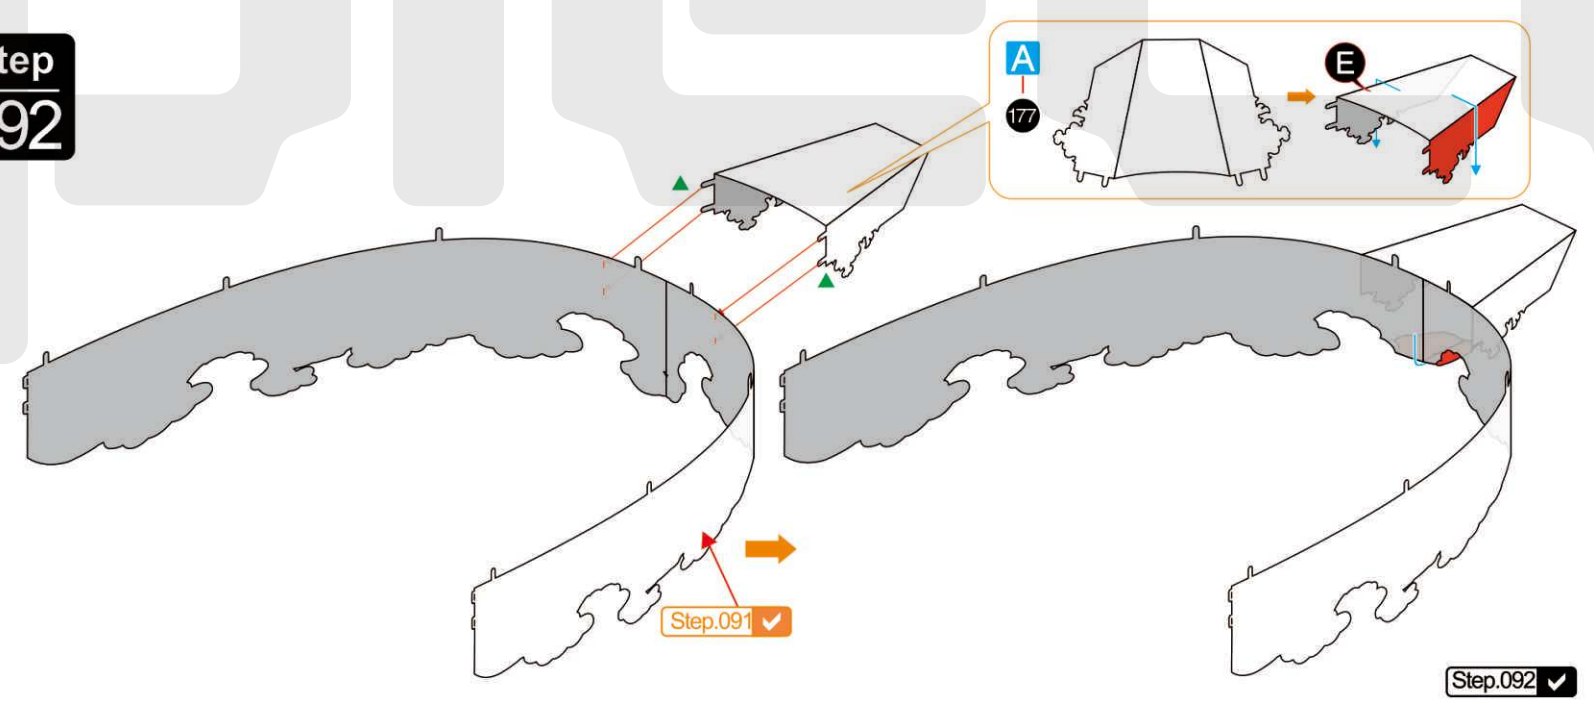



Step
093

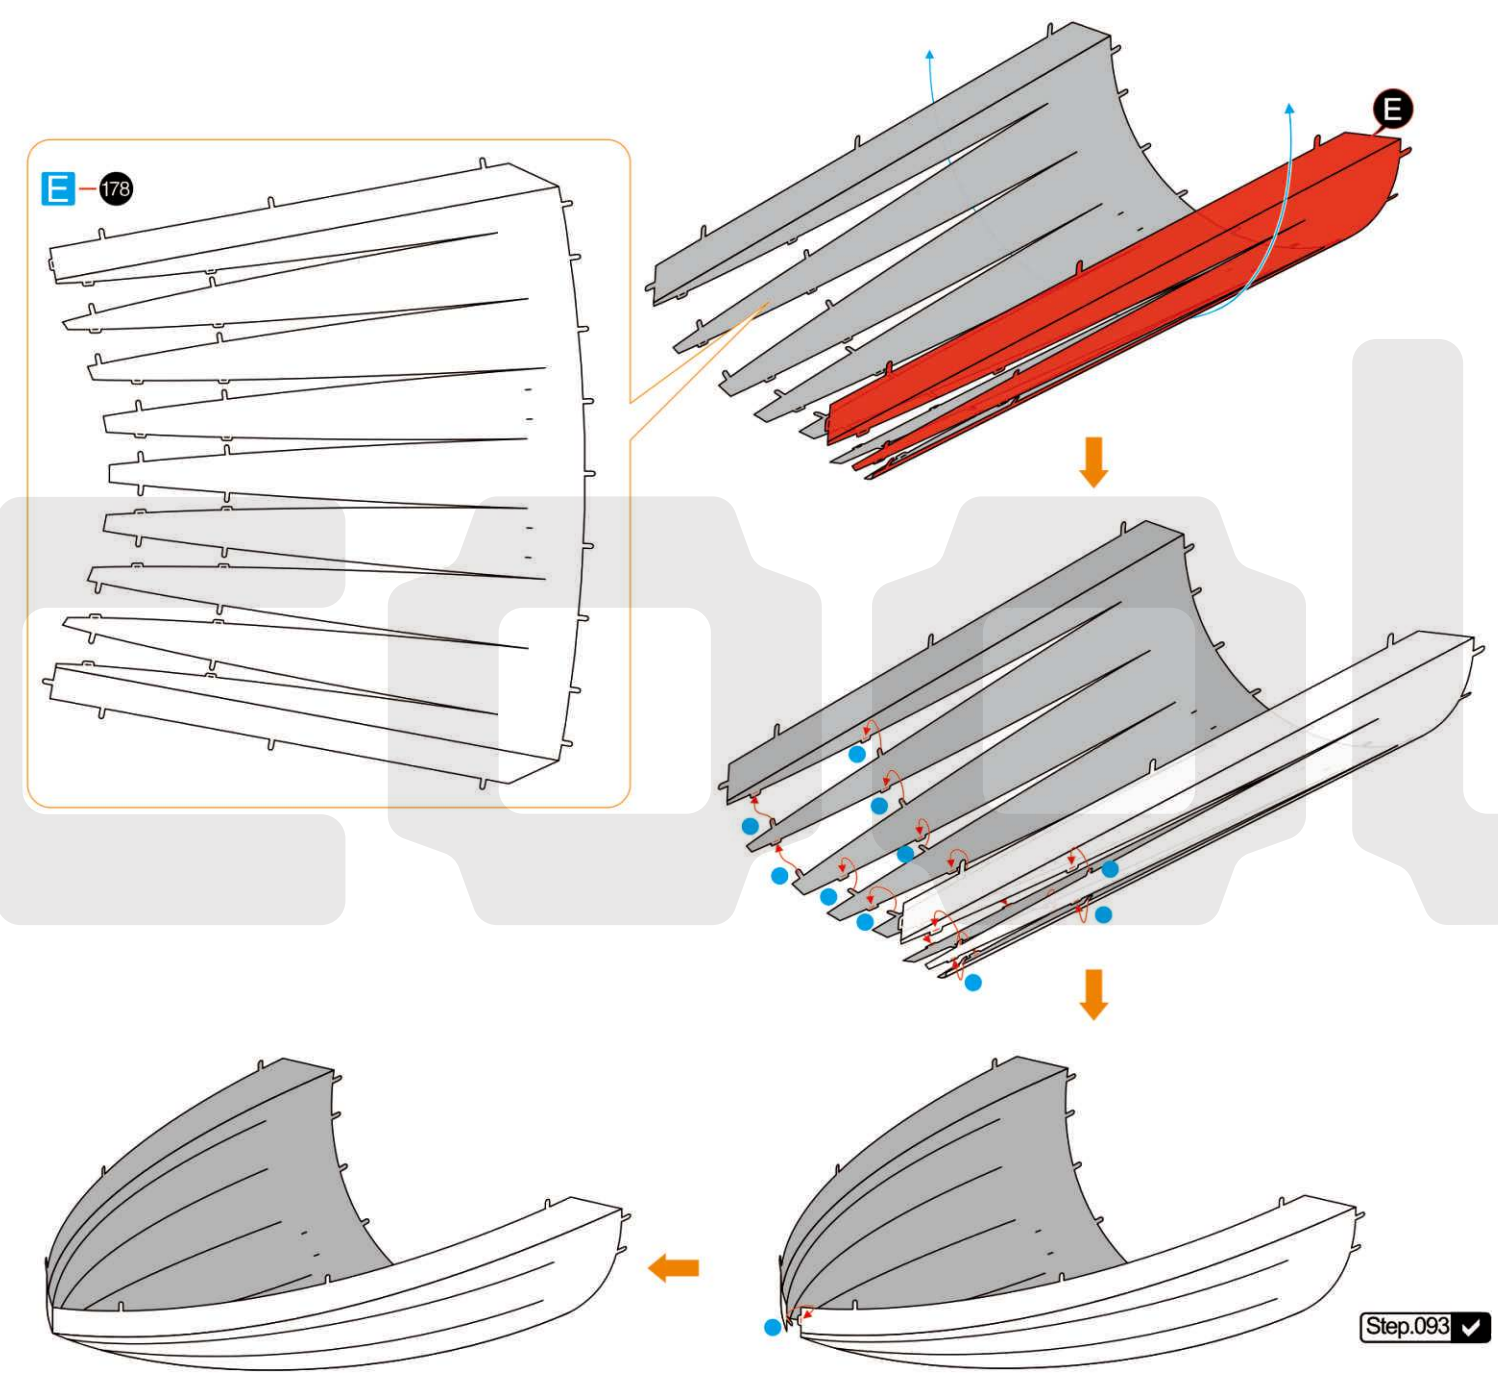

Step
094

F

179


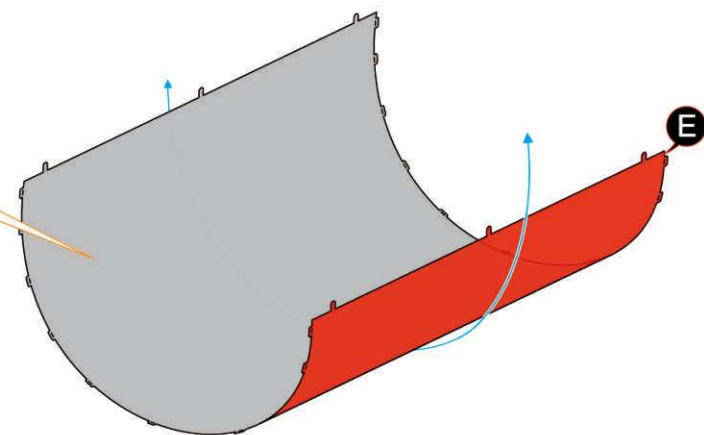
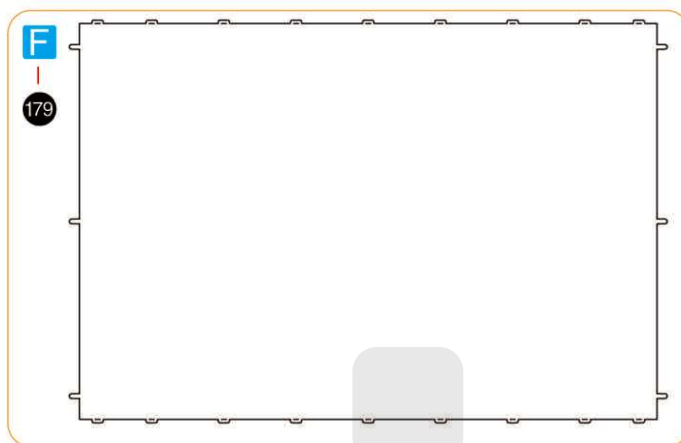


Step.094 ✓

Step
095

C


180

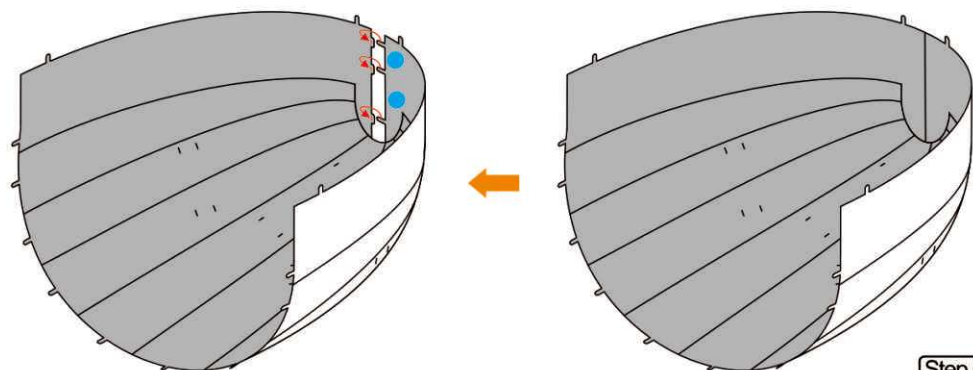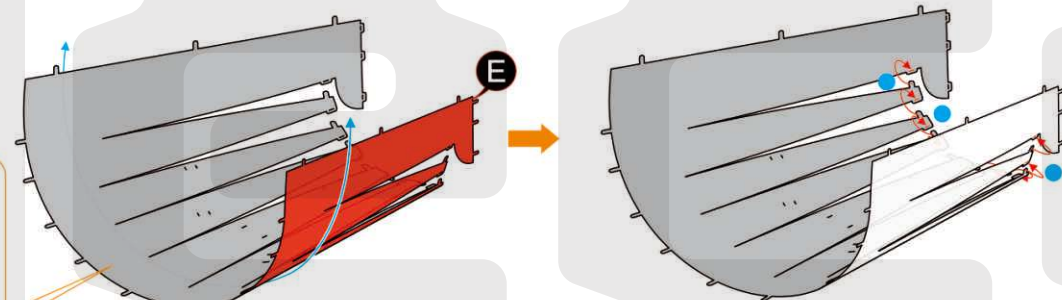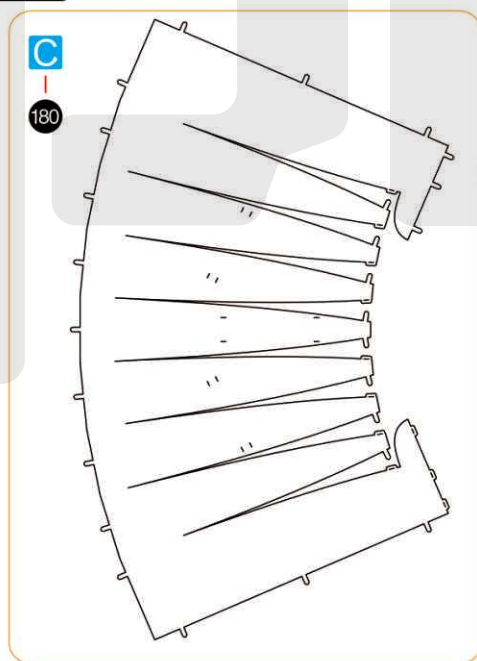


Step.095 ✓

Step
096

Step.094 ✓

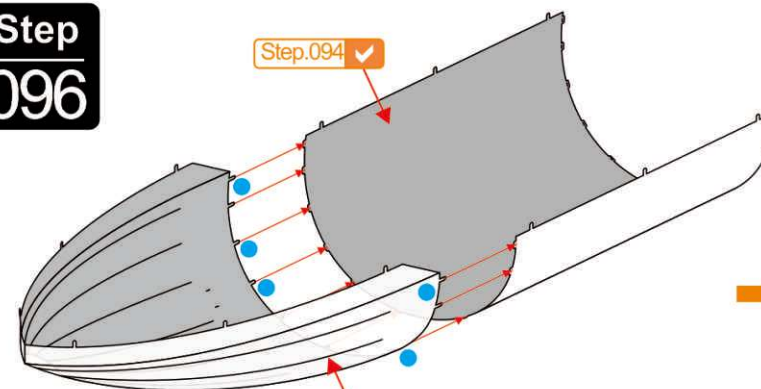


Step.093 ✓

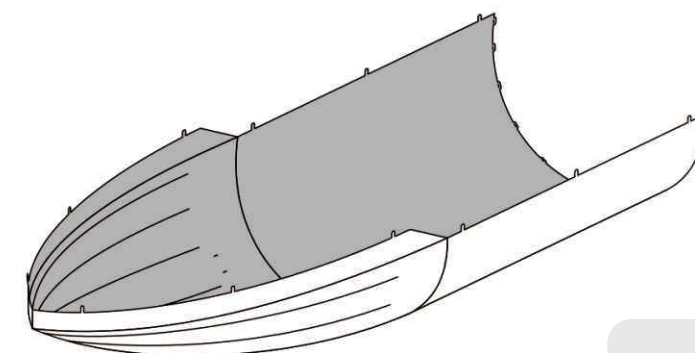


Step.096 ✓

Step
097

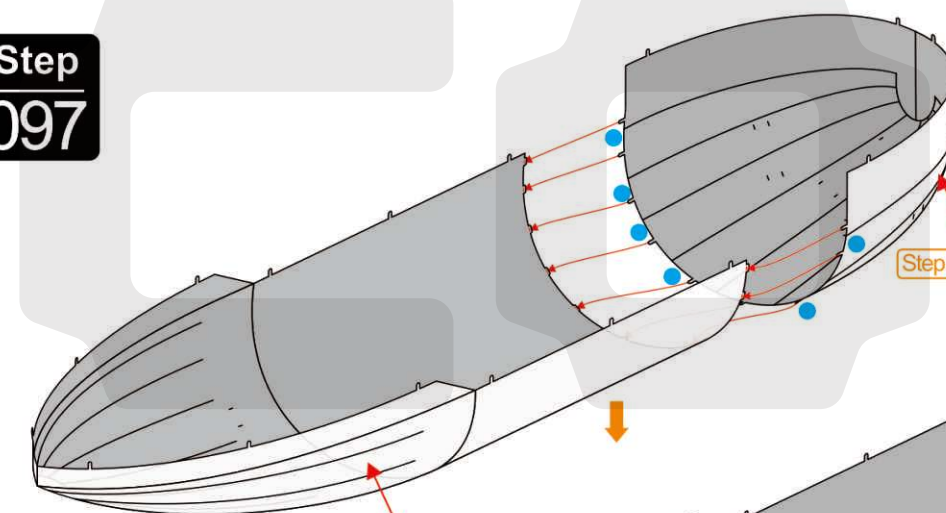

Step.096 ✓


Step.095 ✓

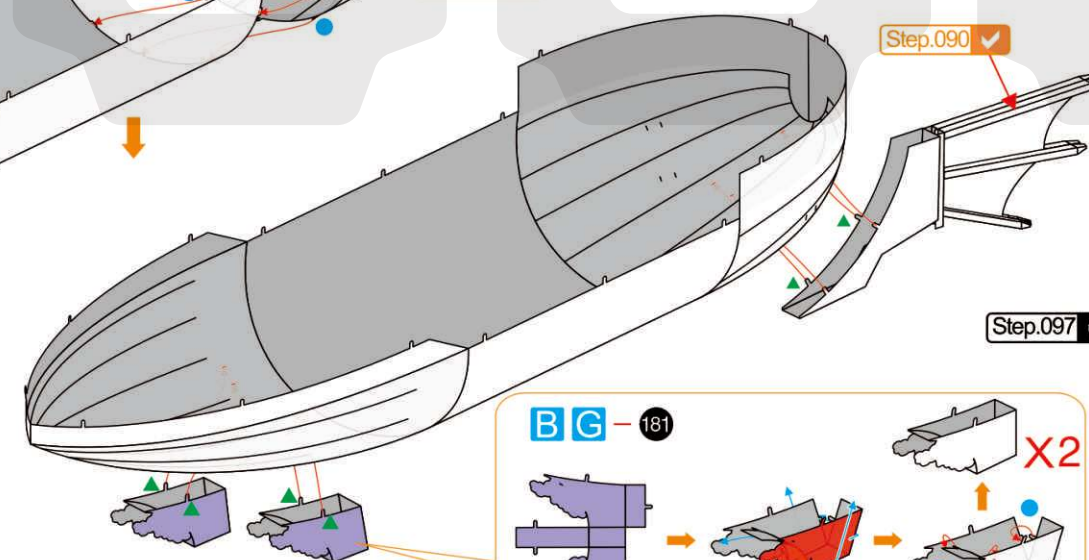

Step.090 ✓


Step.097 ✓

B G - 181

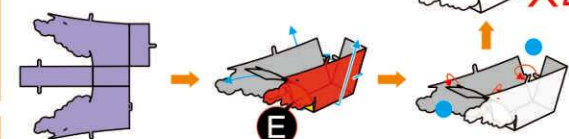


X2


Step
098

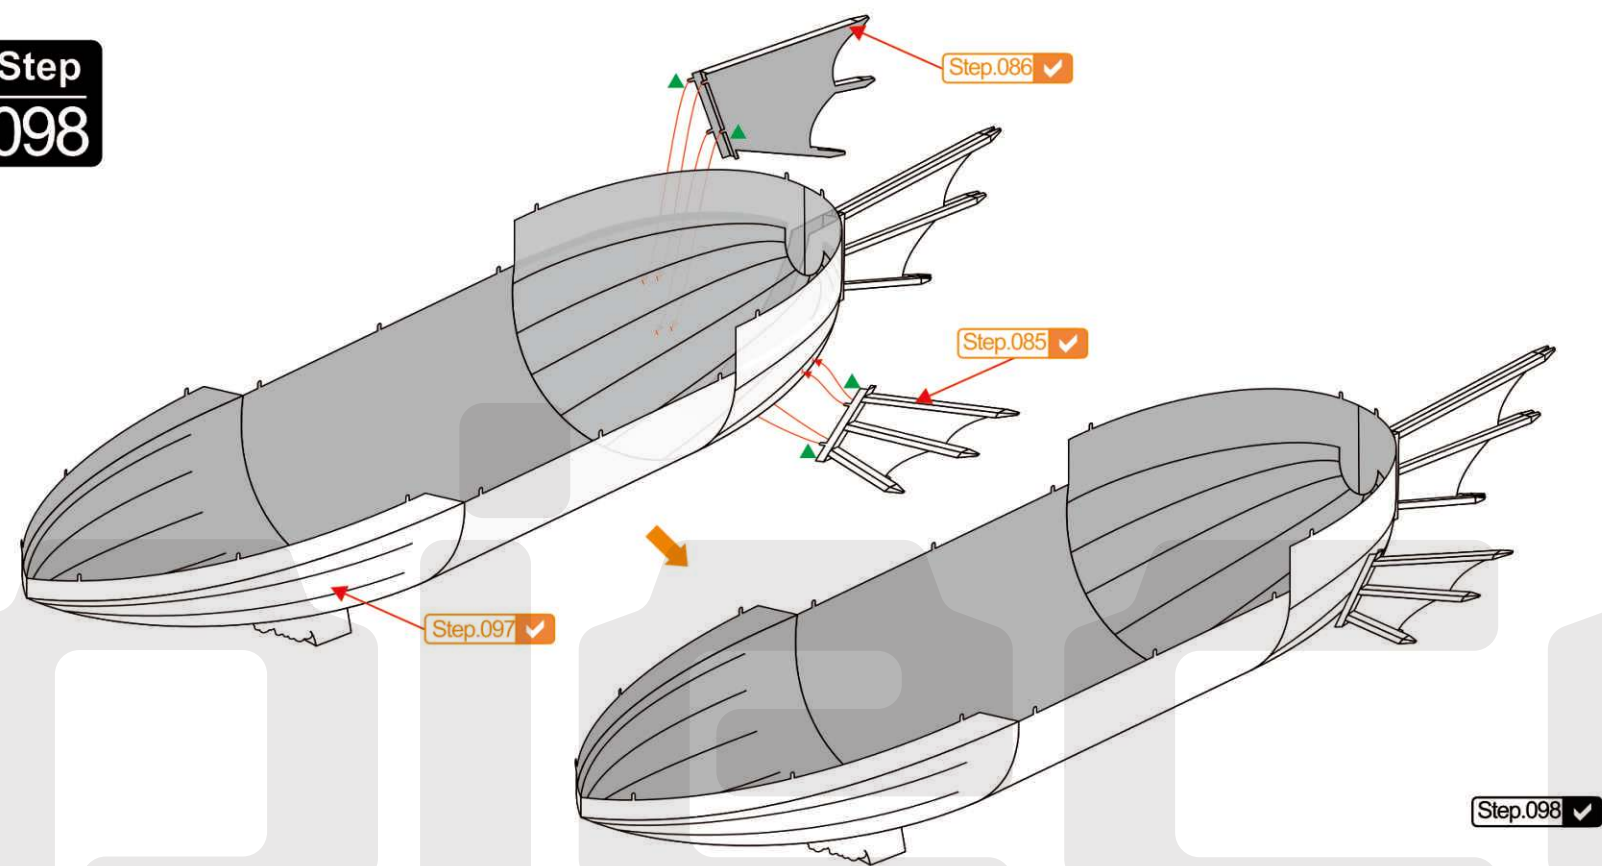


Step
099

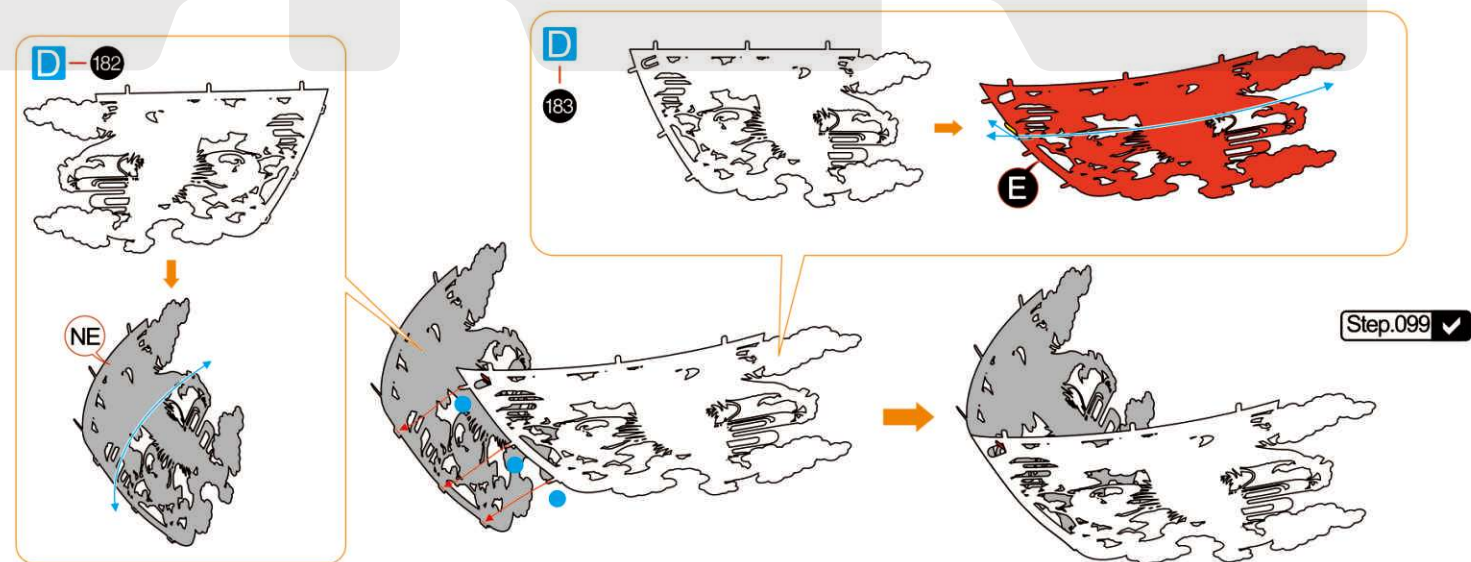


Step
100

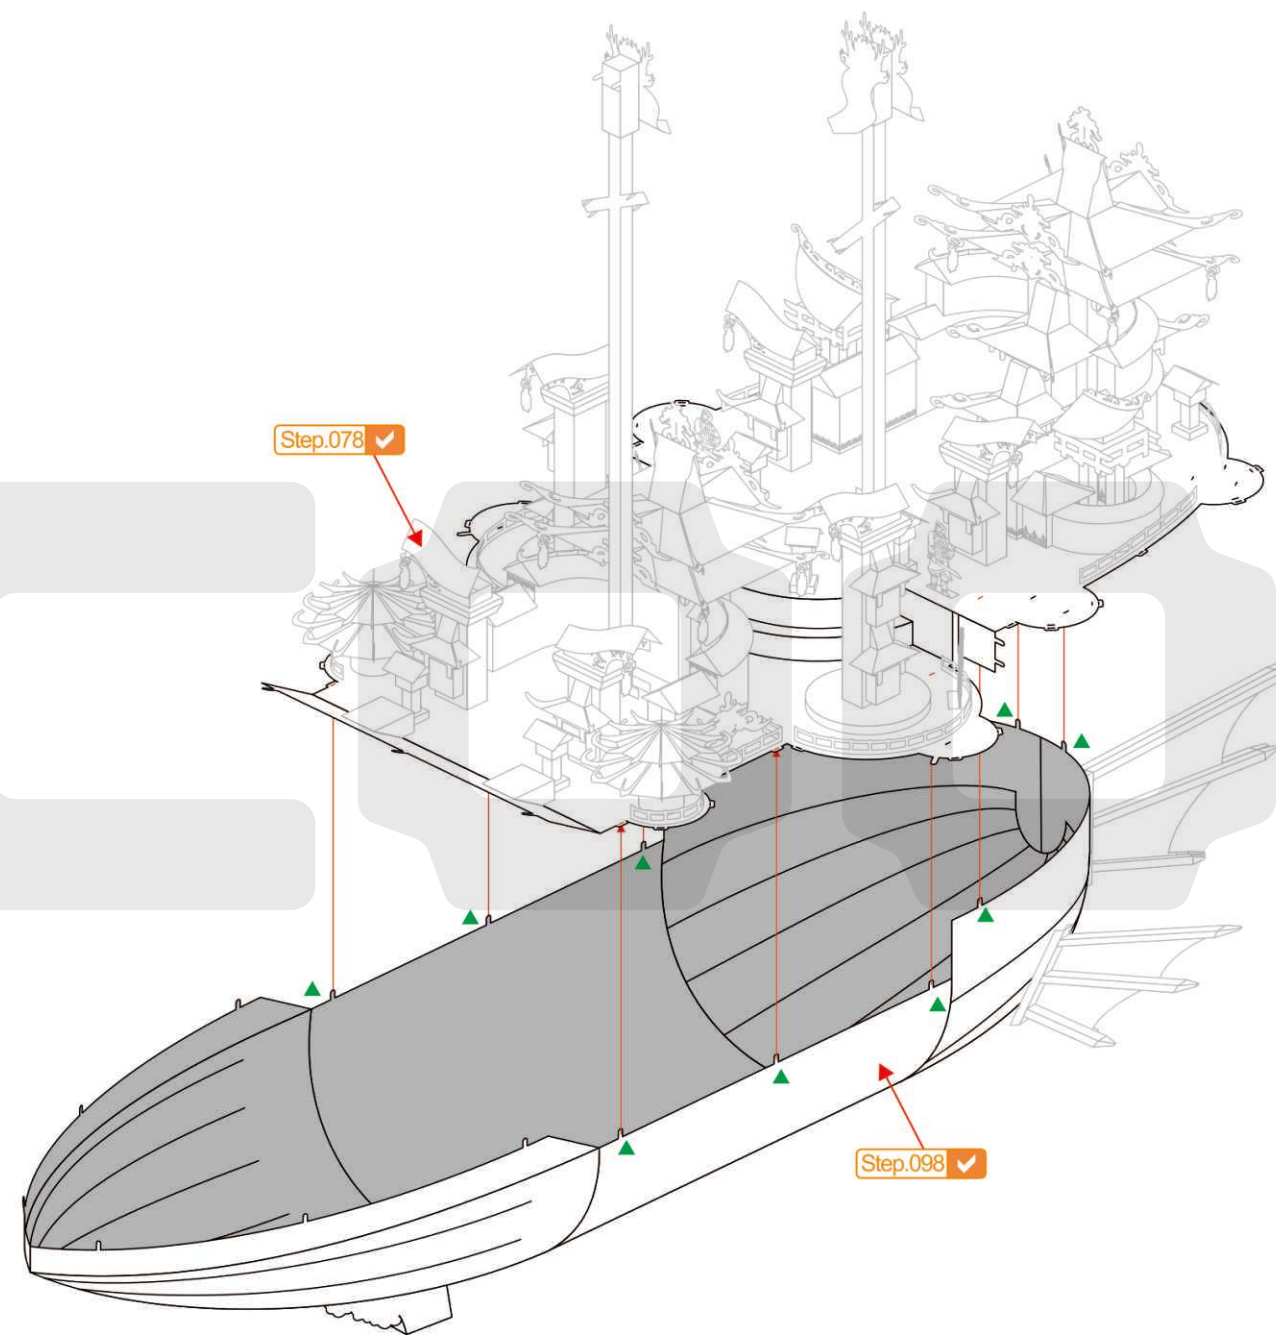


Step
101

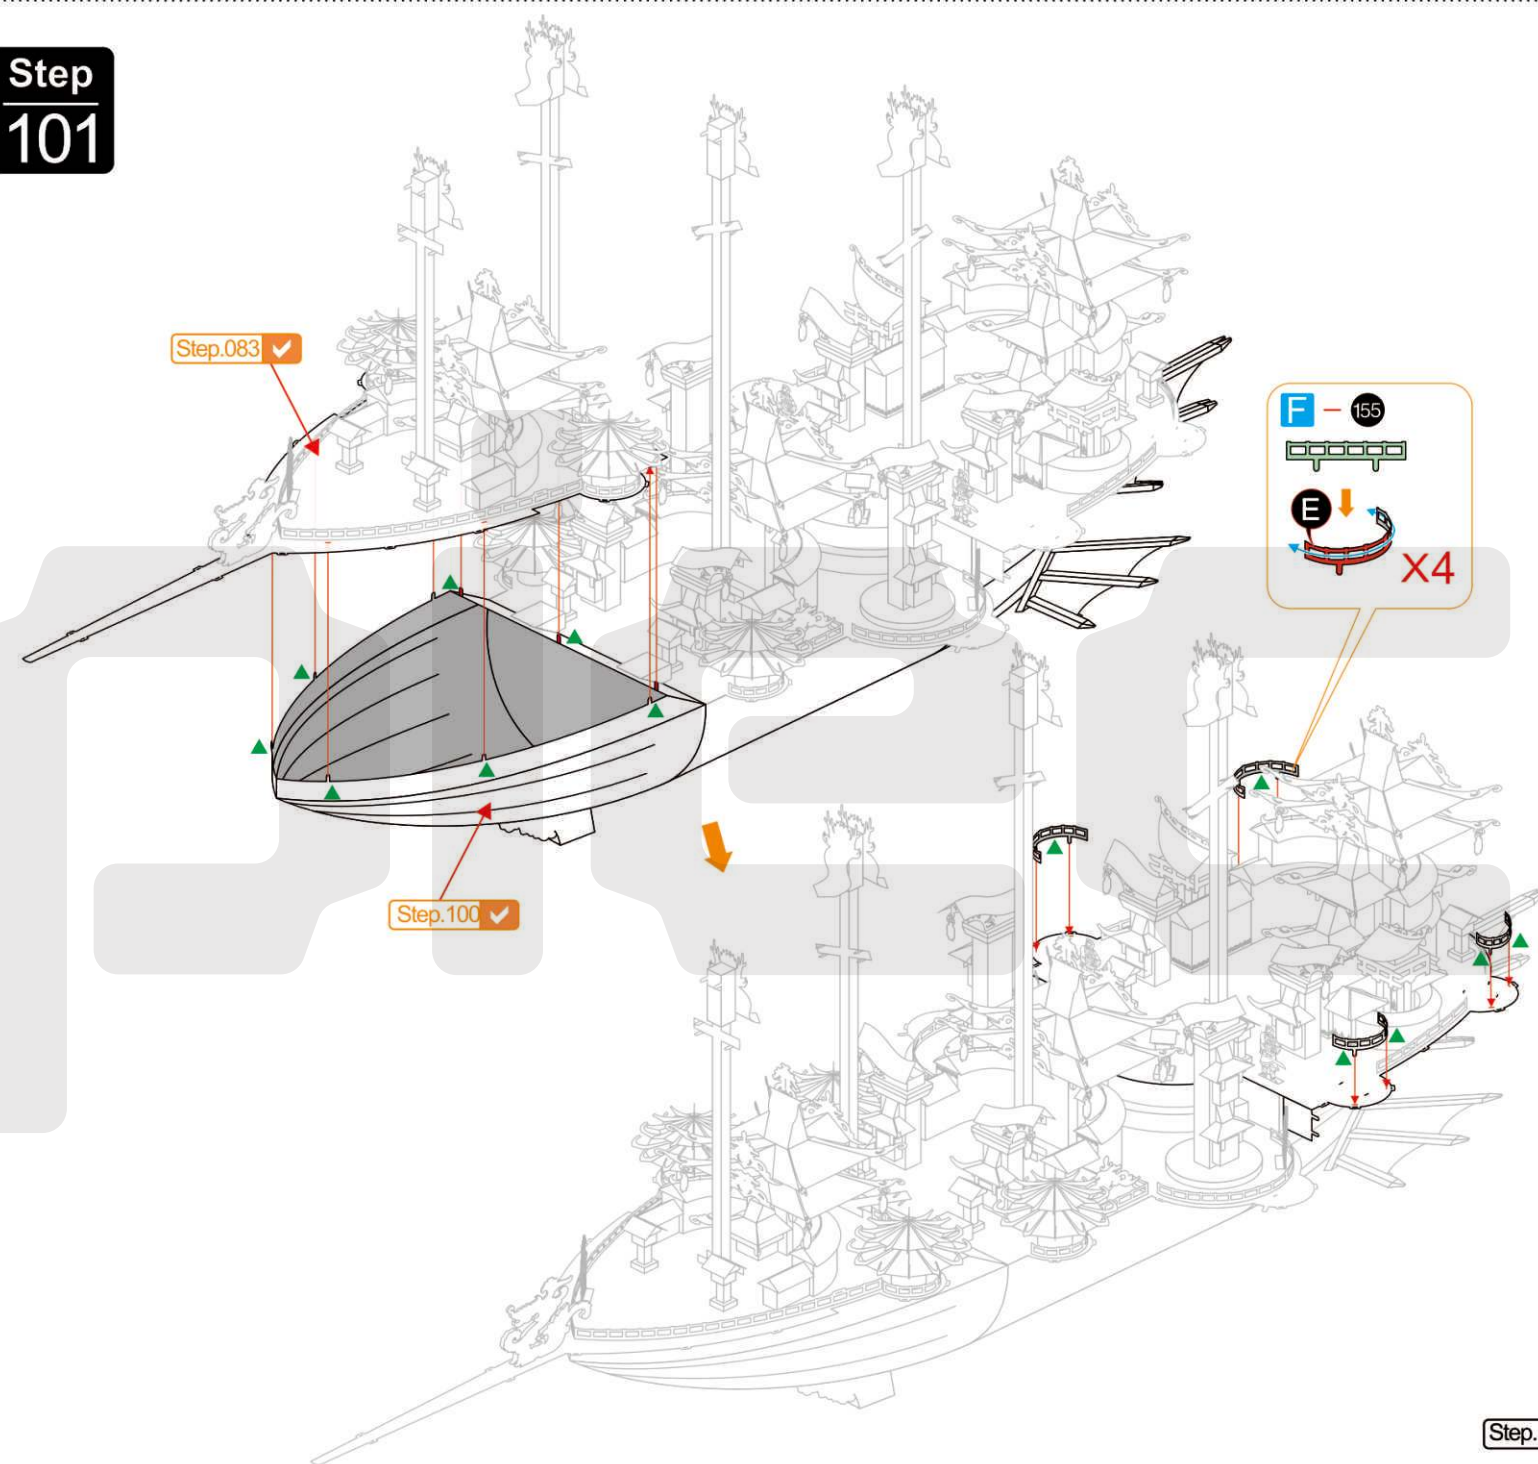

Step
102

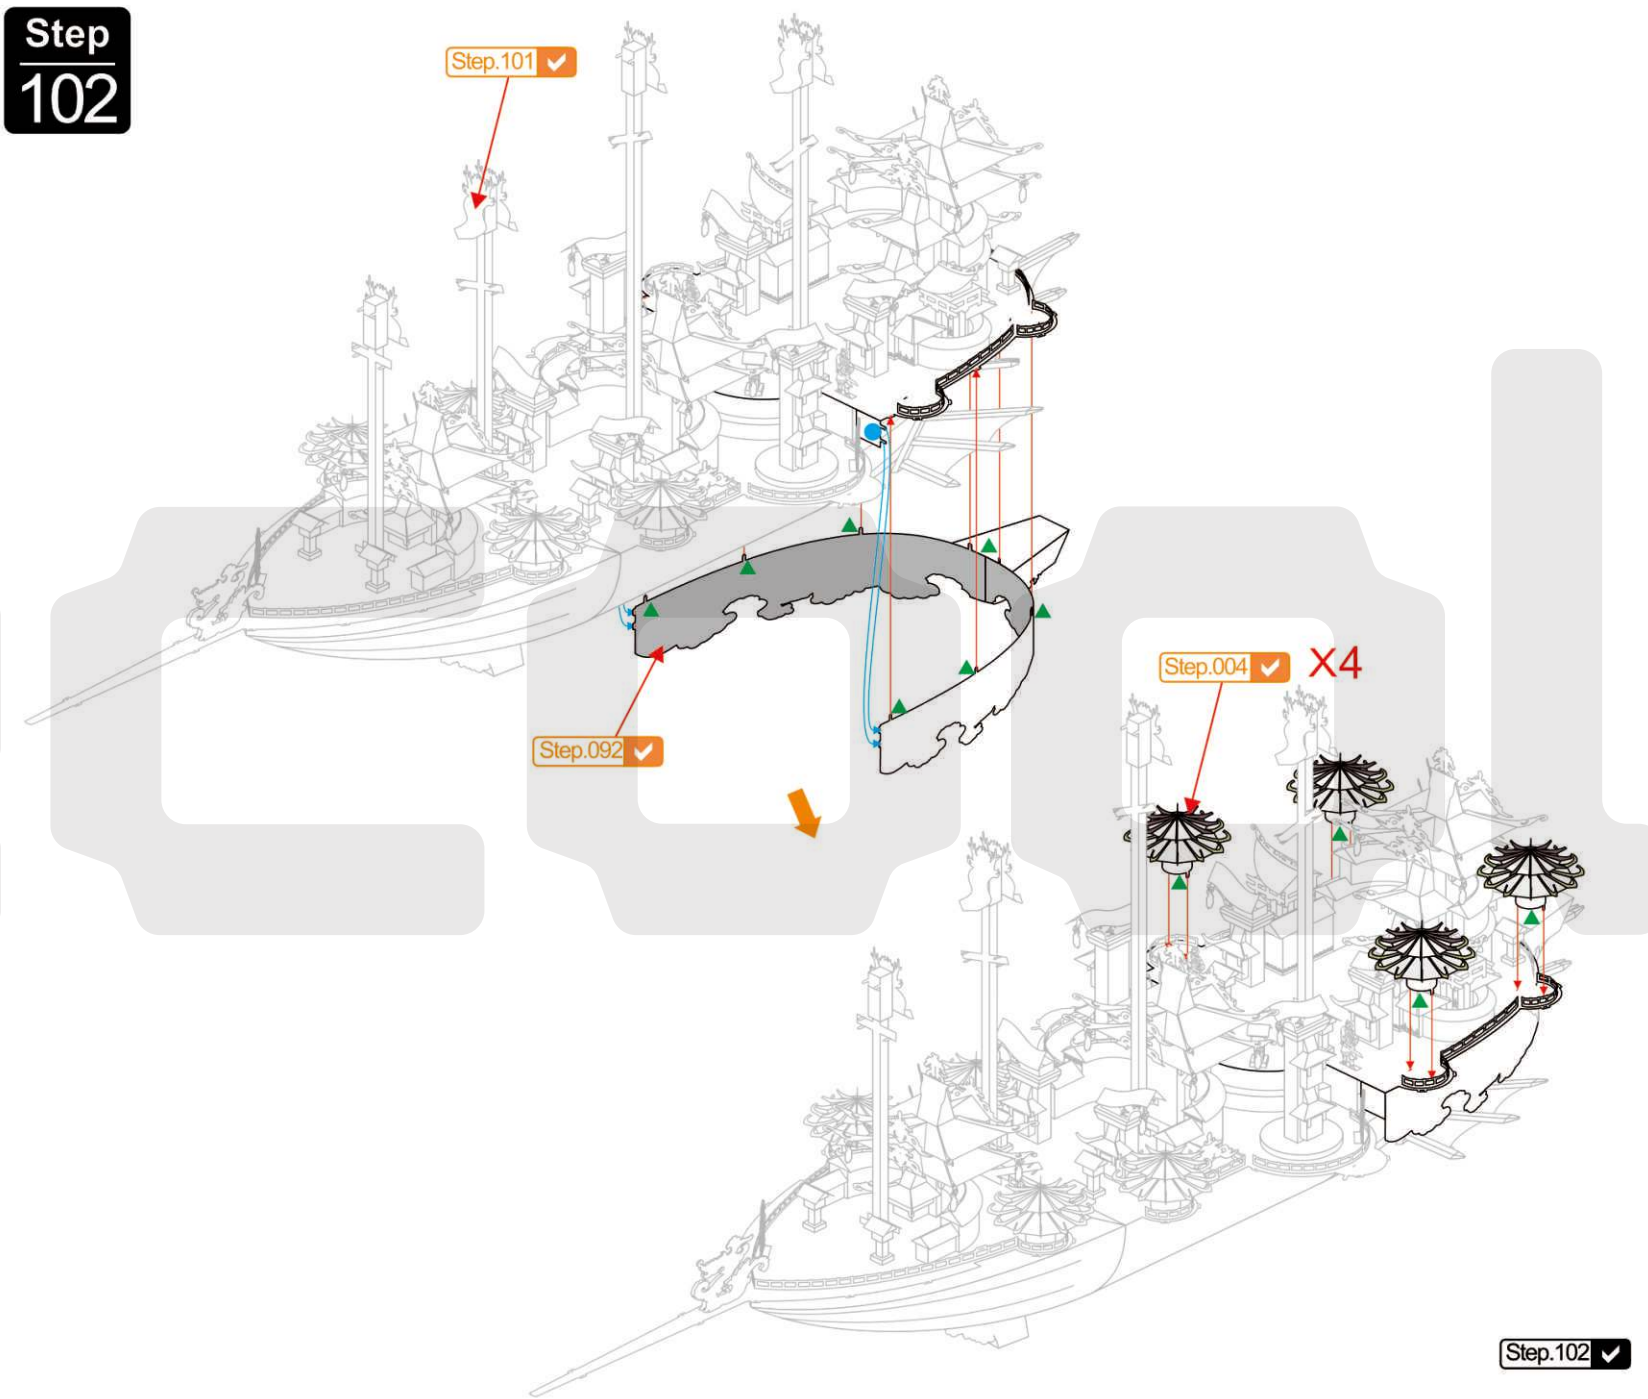


Step
103

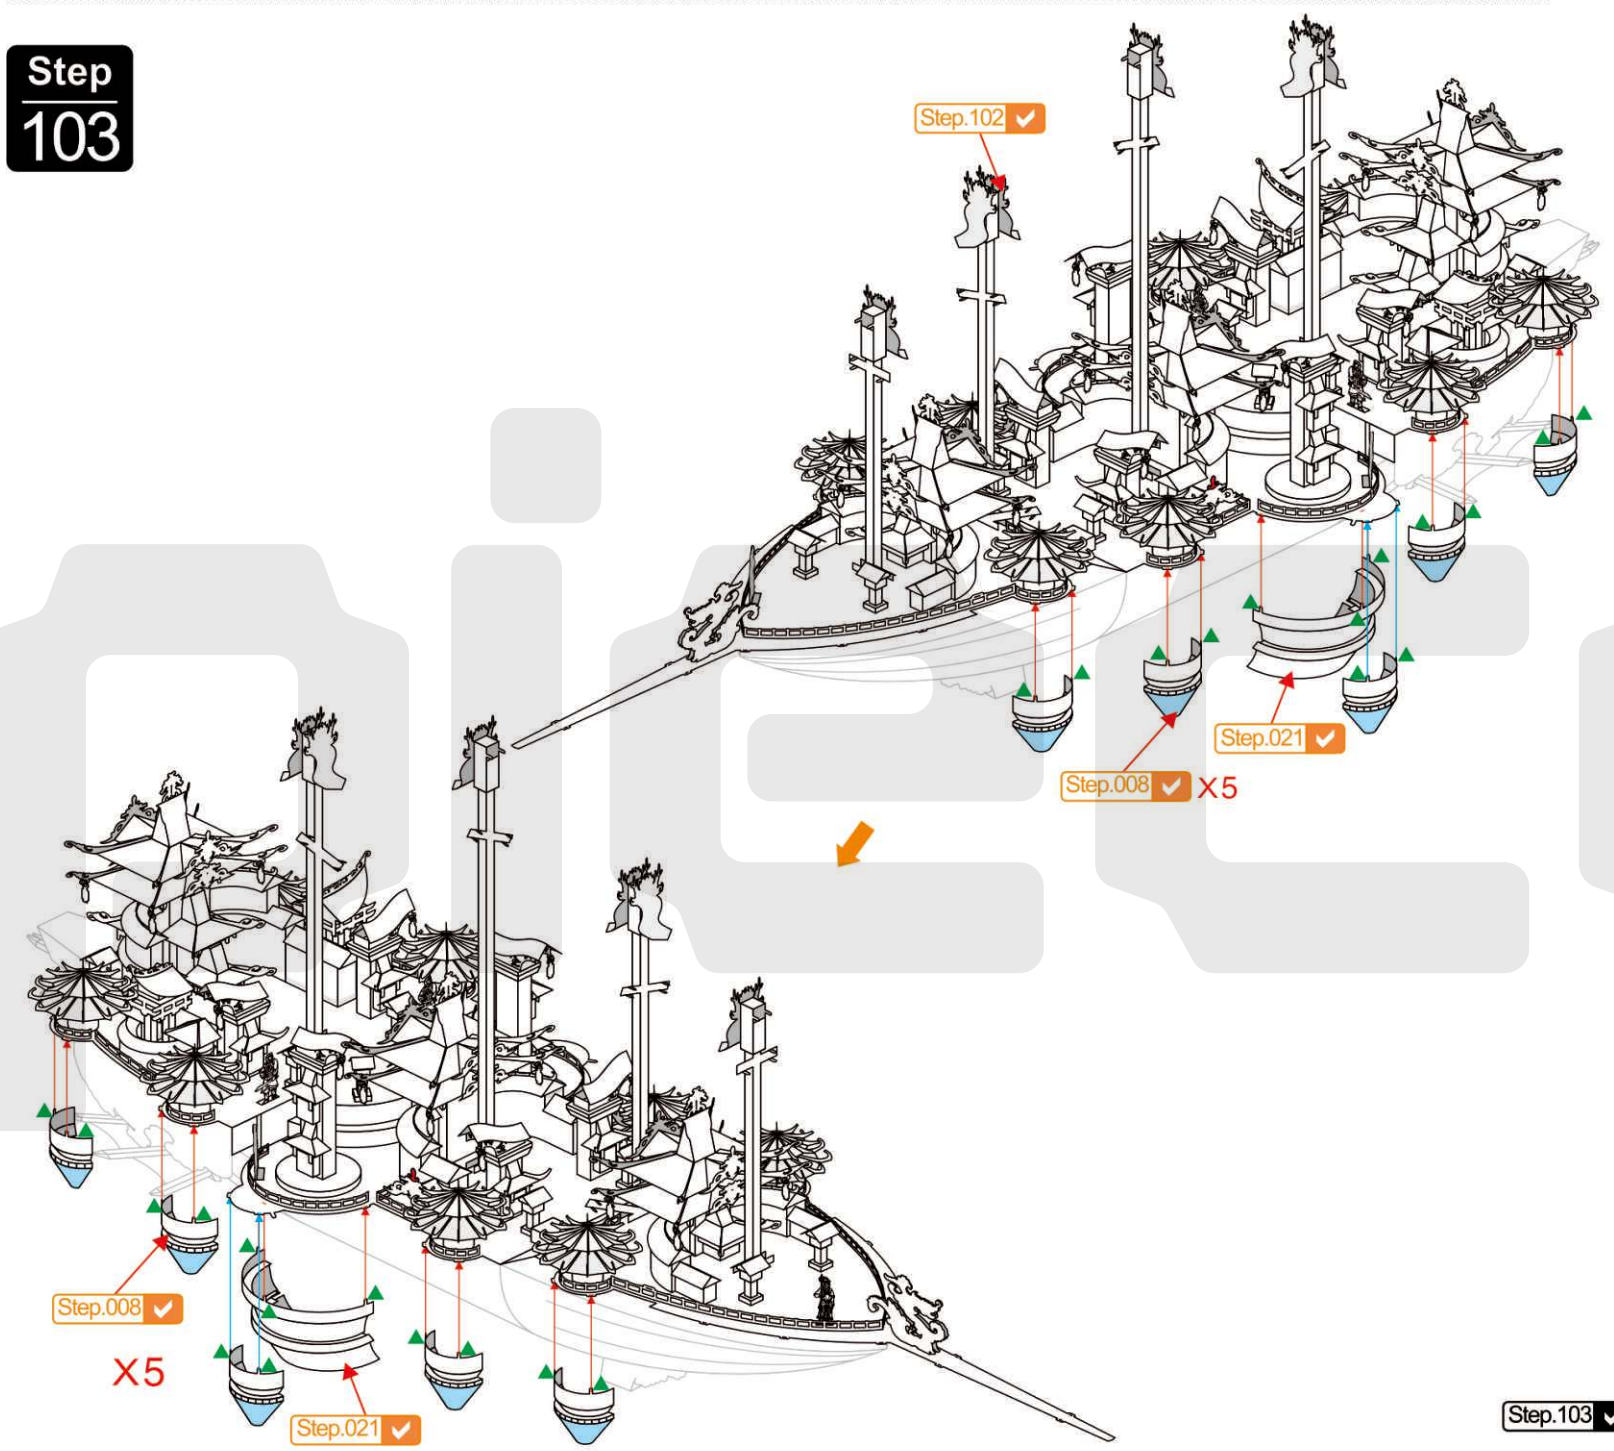


Step.103 ✓

Step
104

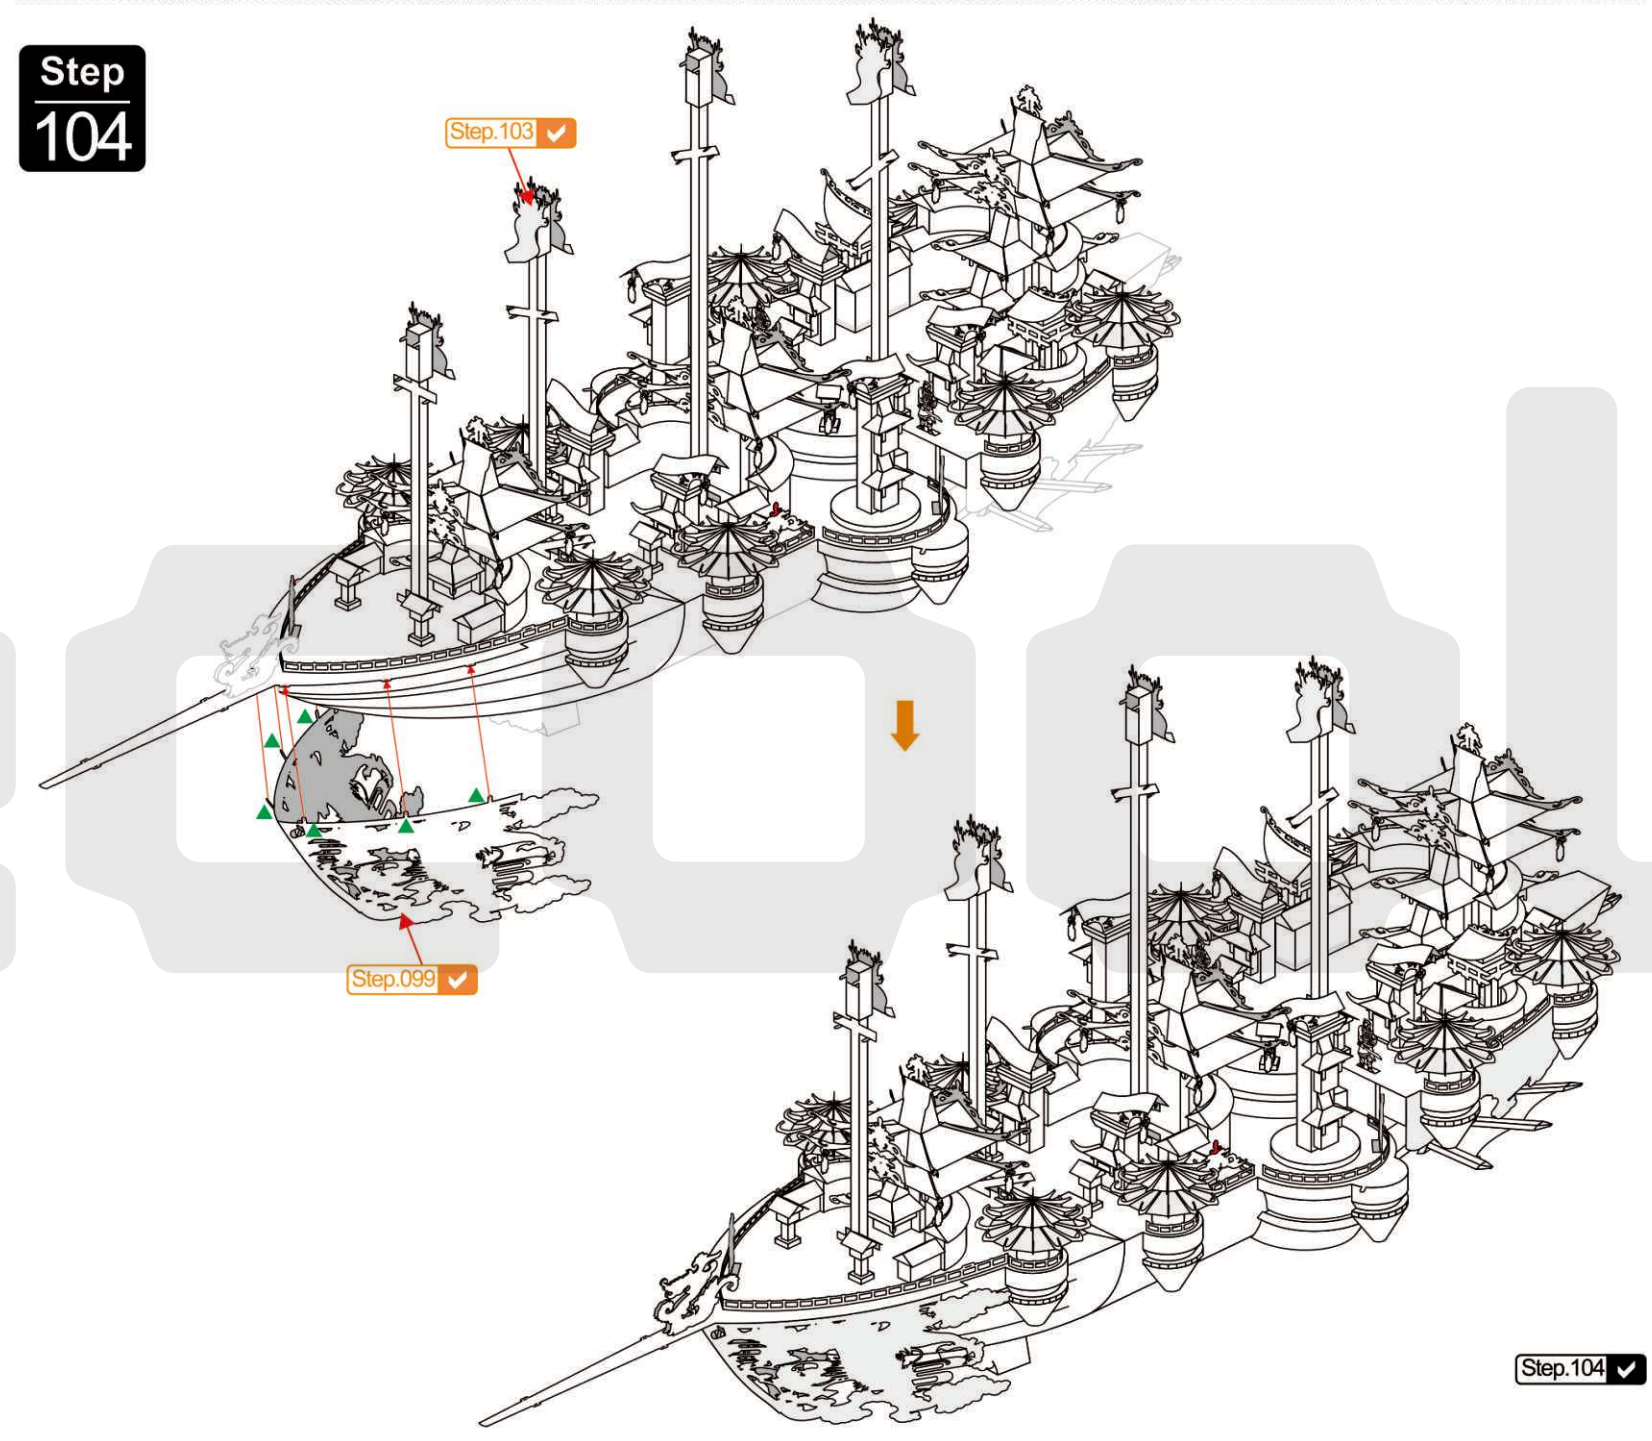


Step.104 ✓


Step
105

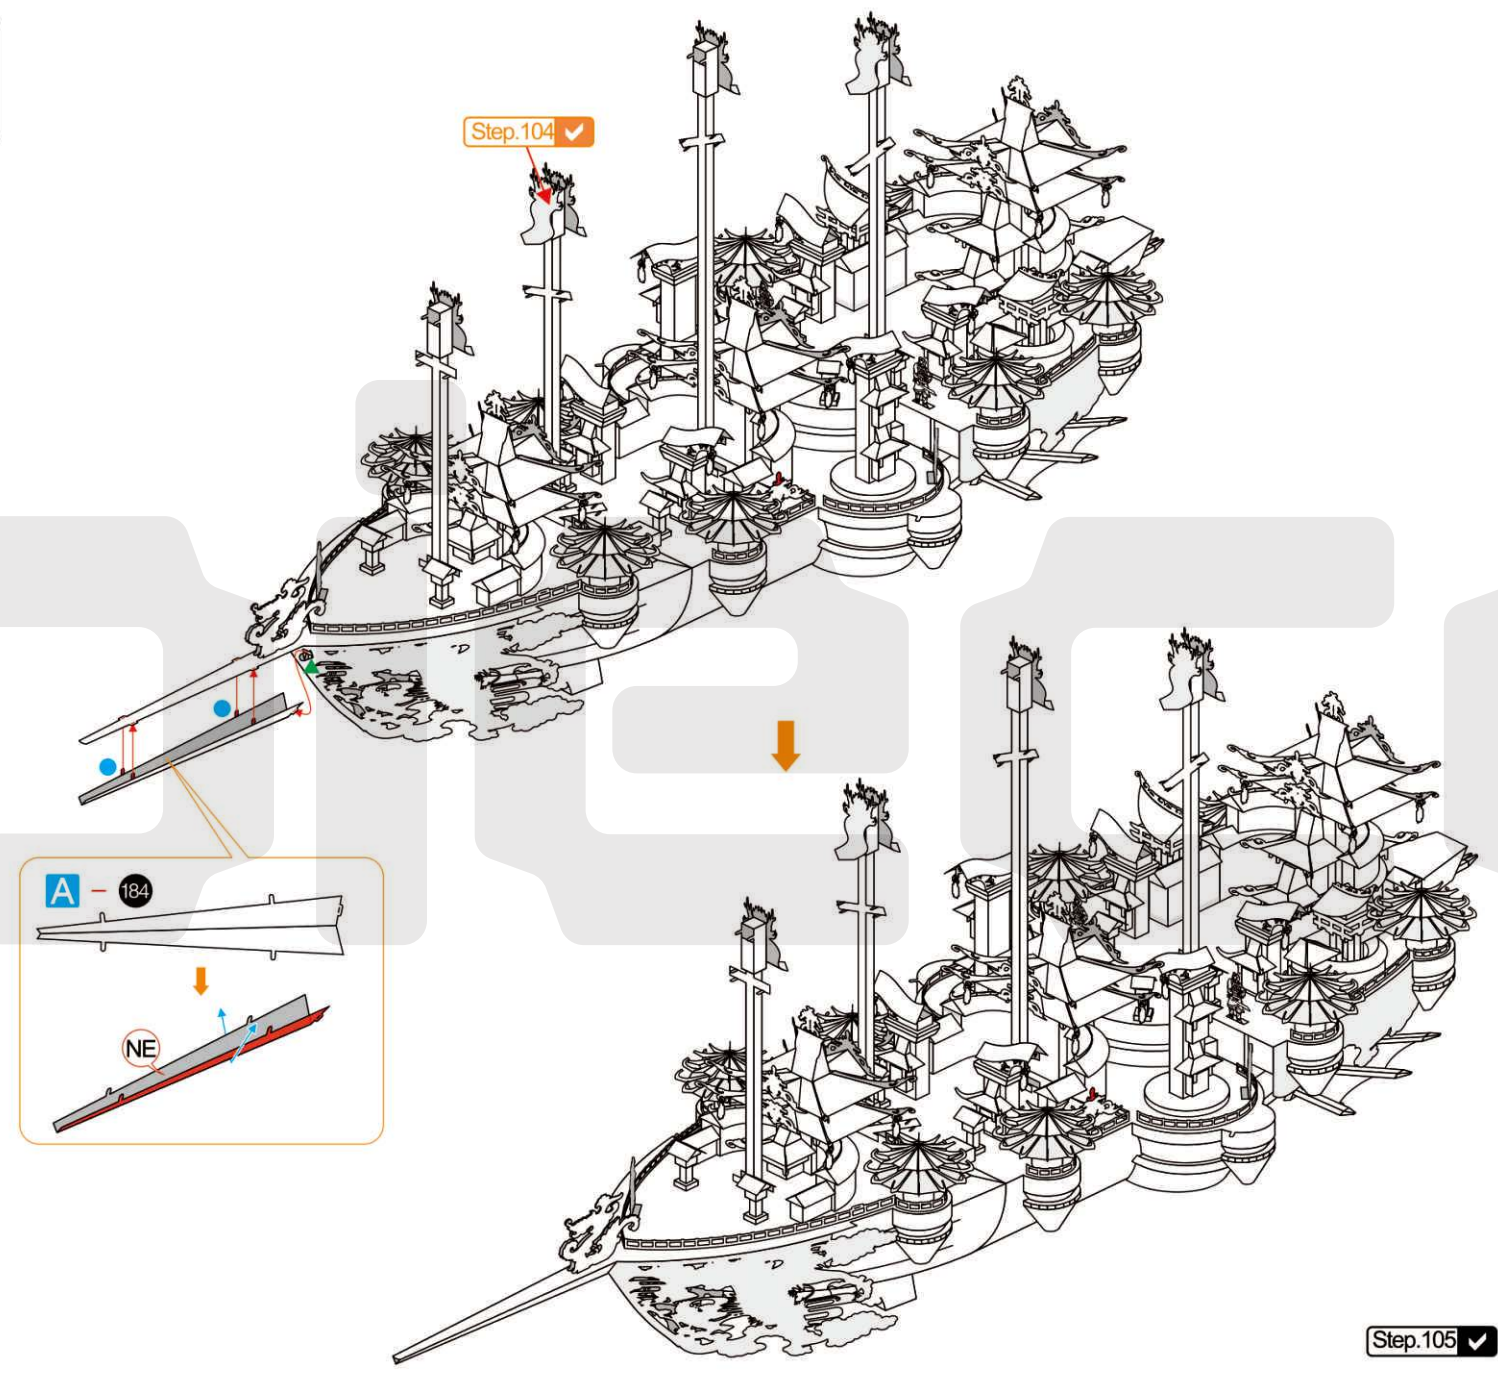


Step
106

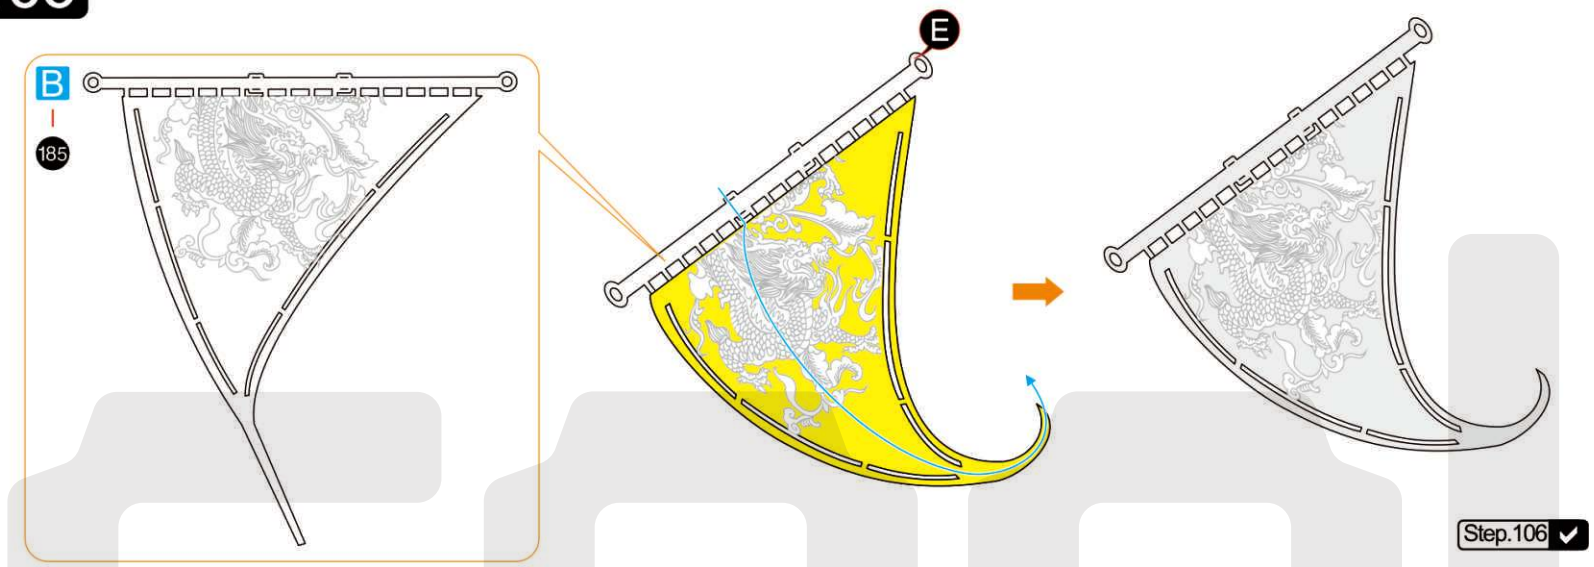


Step
107

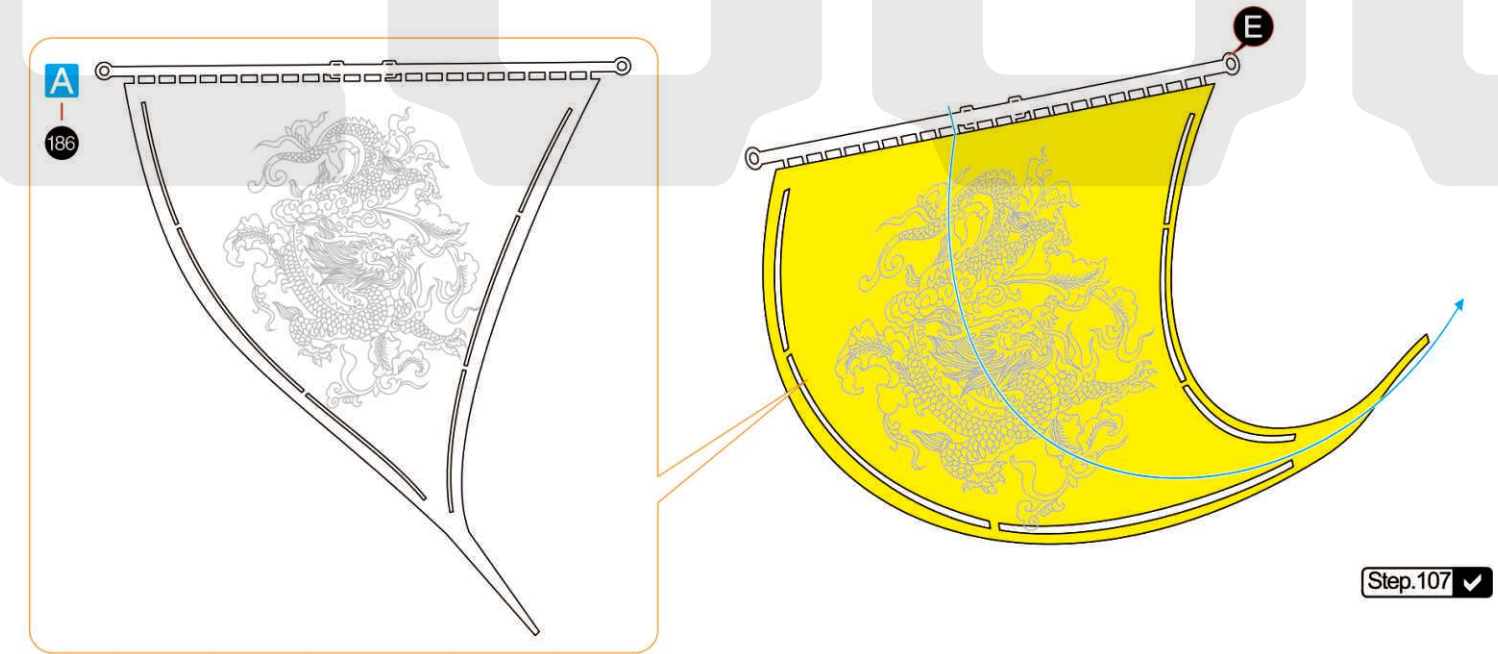


Step
108

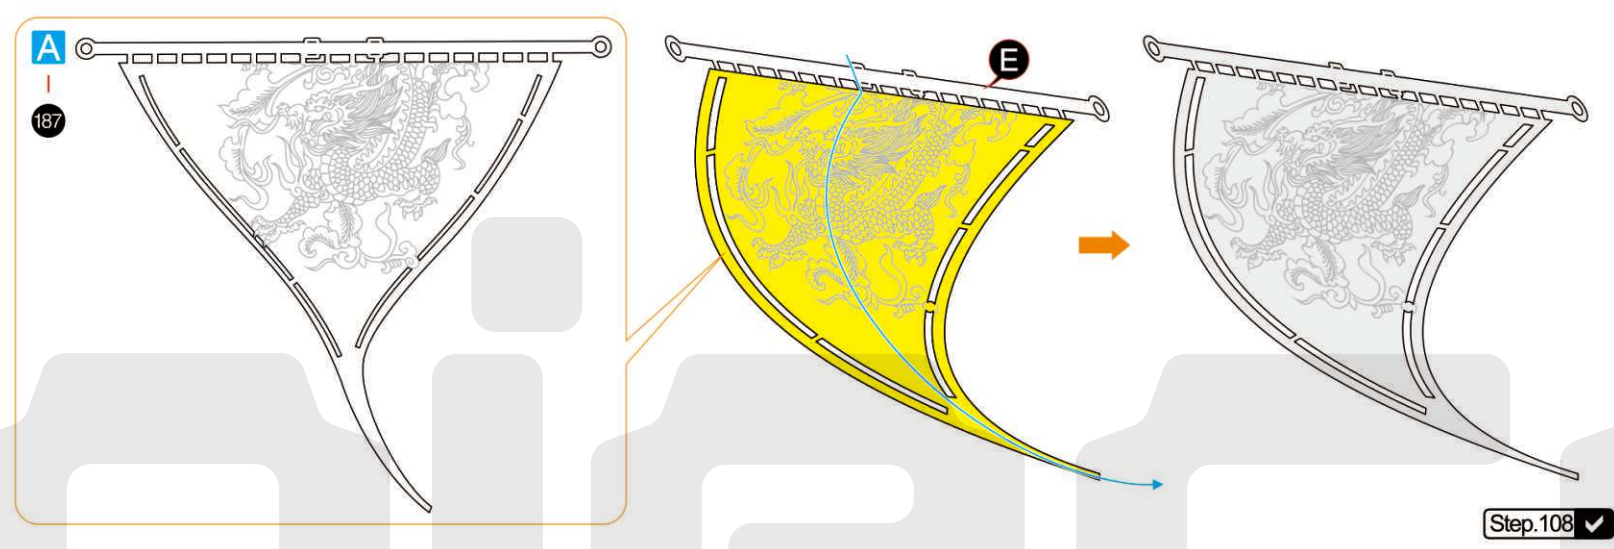


Step
109

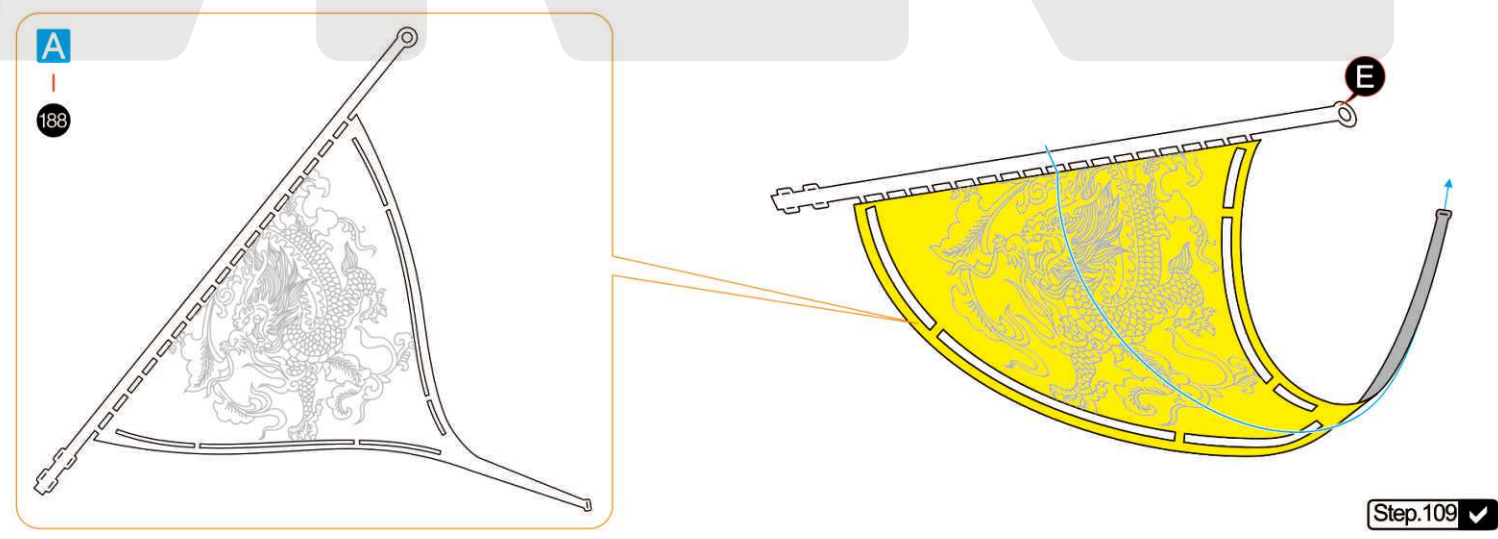


Step
110

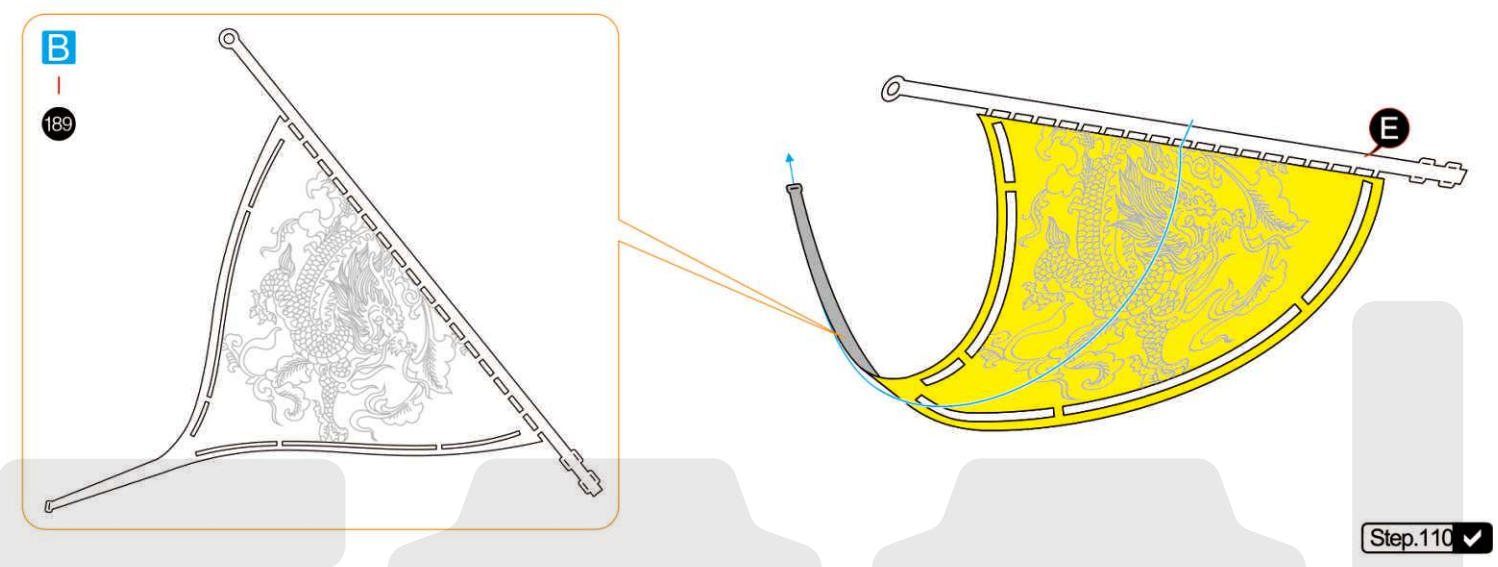


Step
111

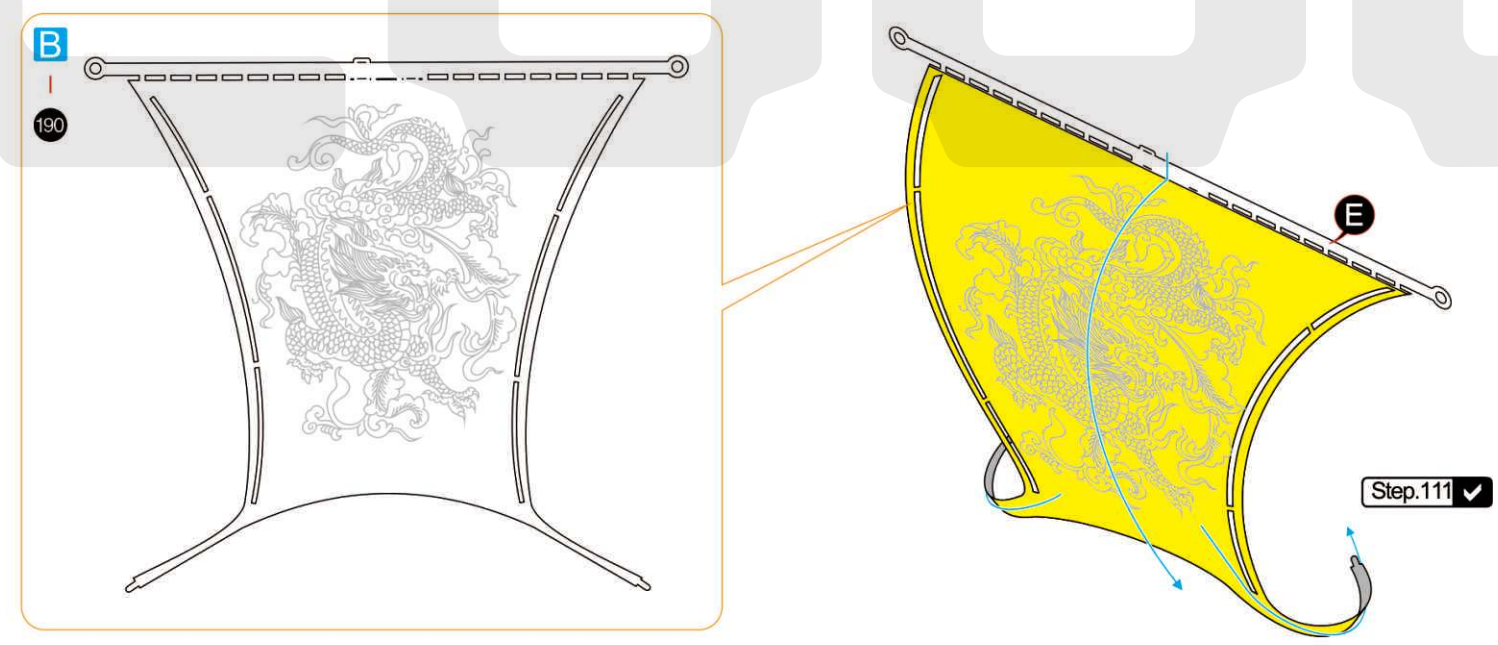


Step
112

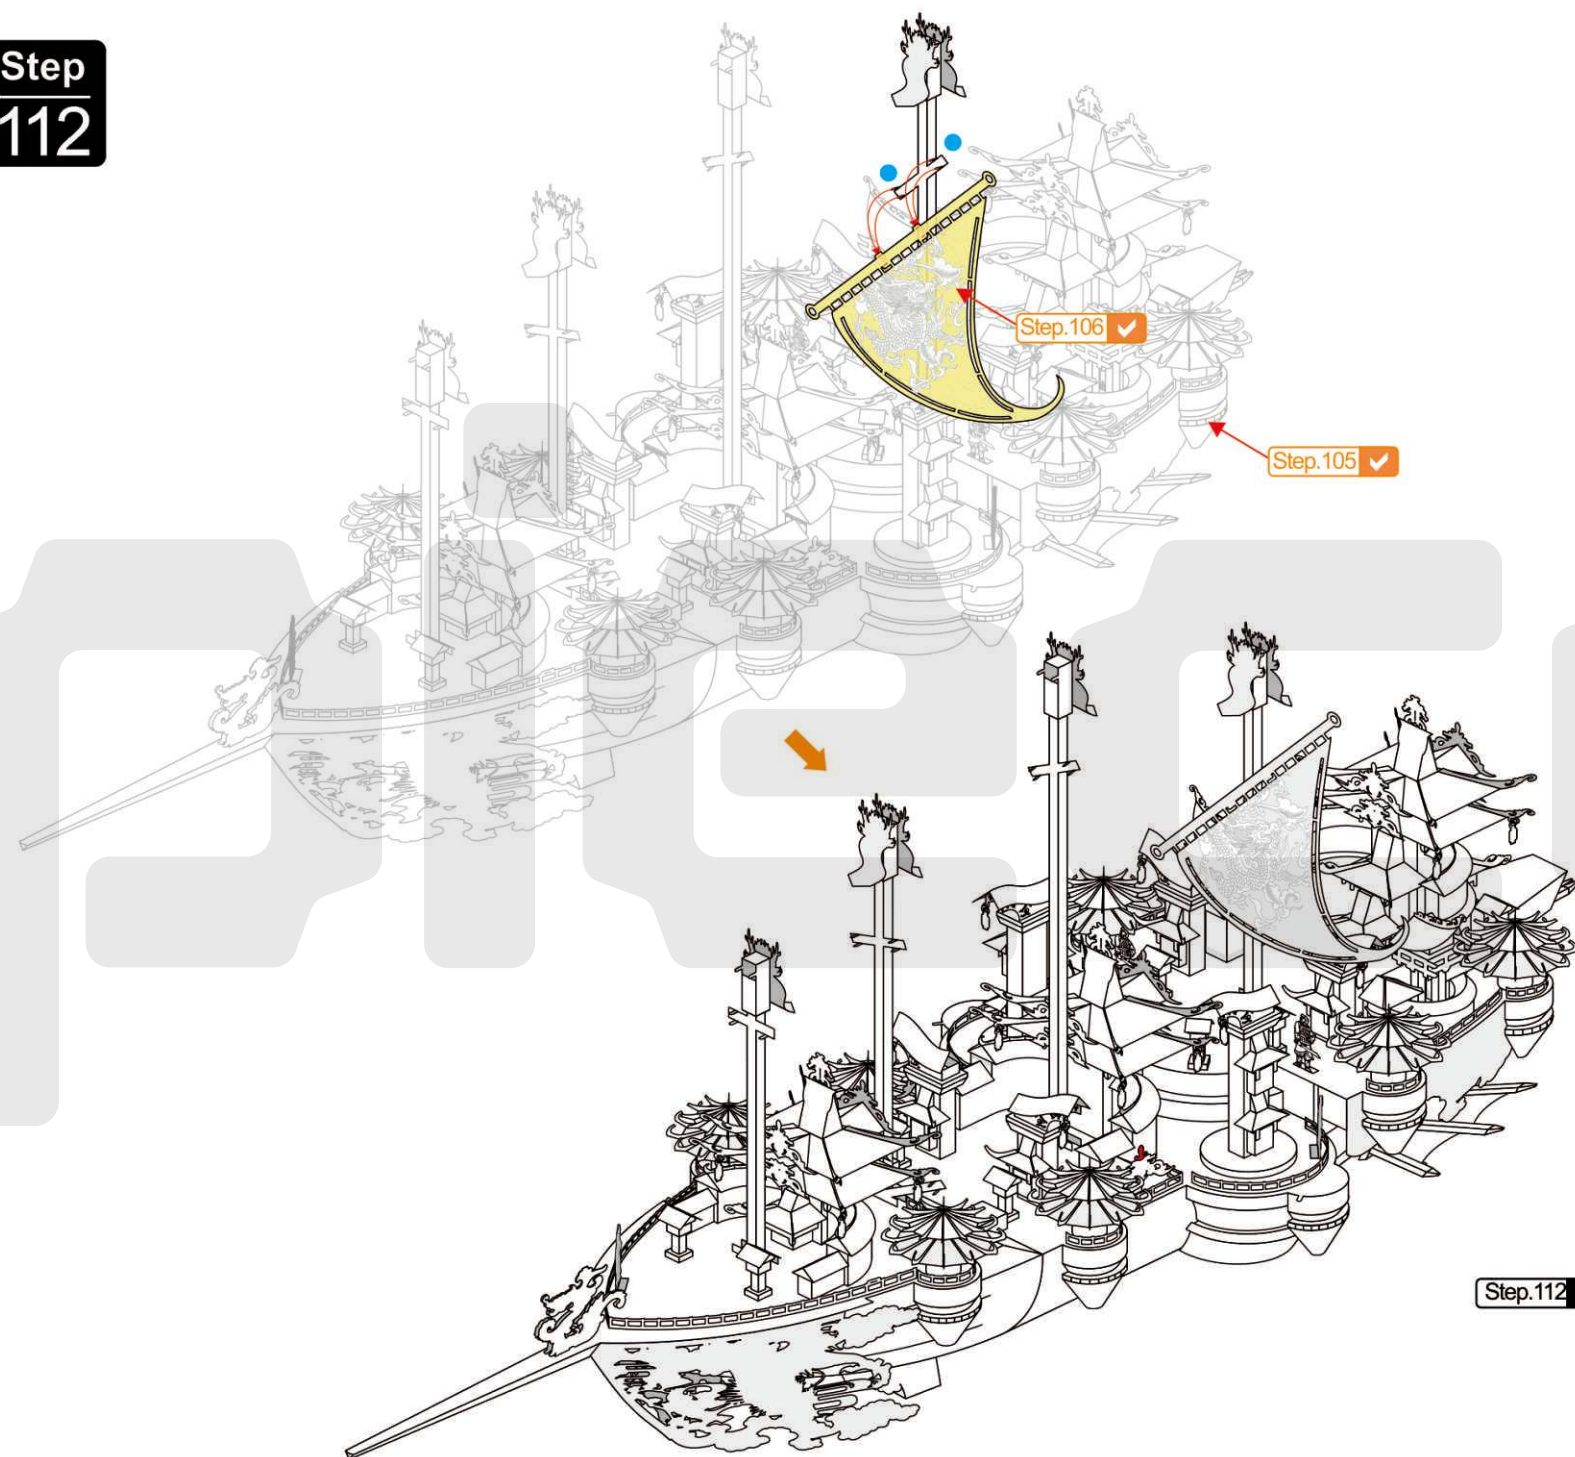


Step
113

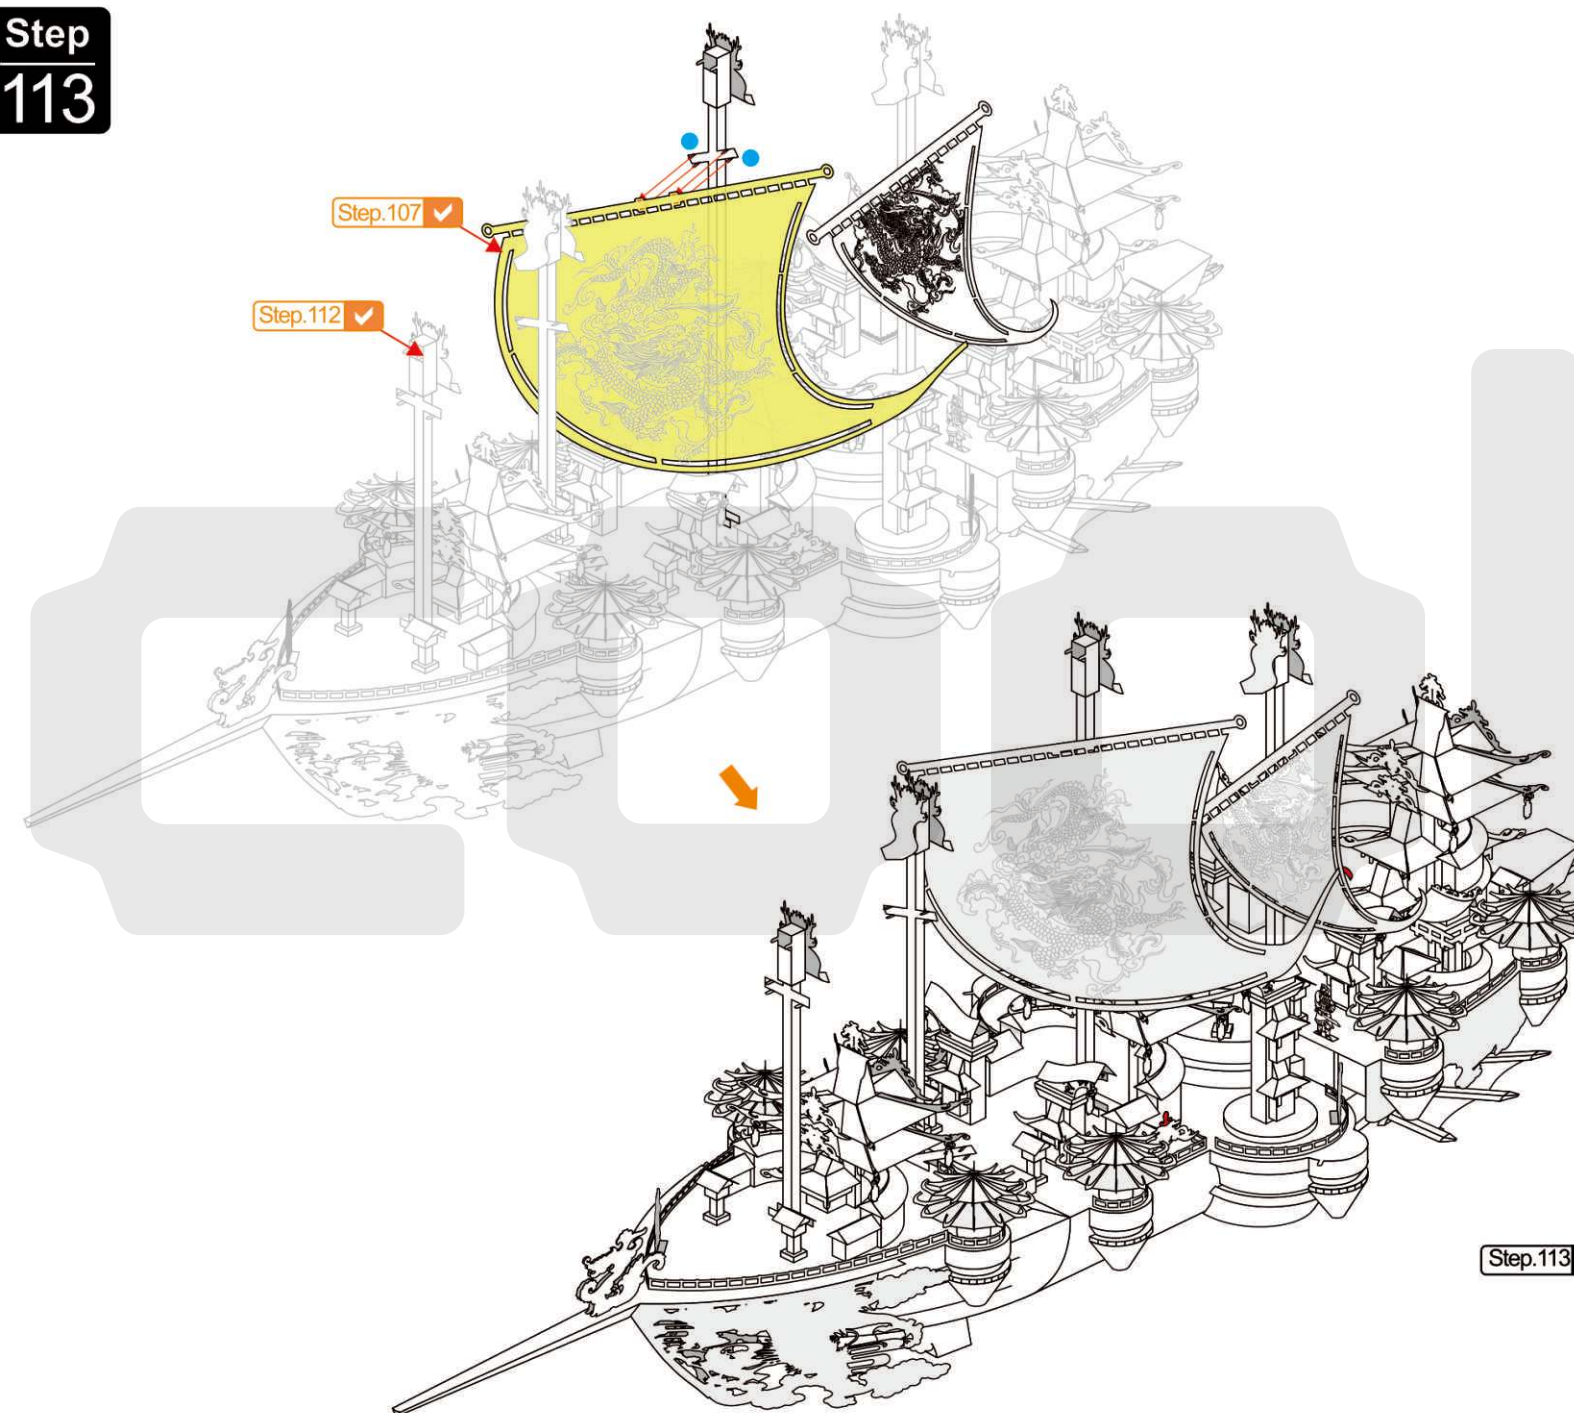


Step
114

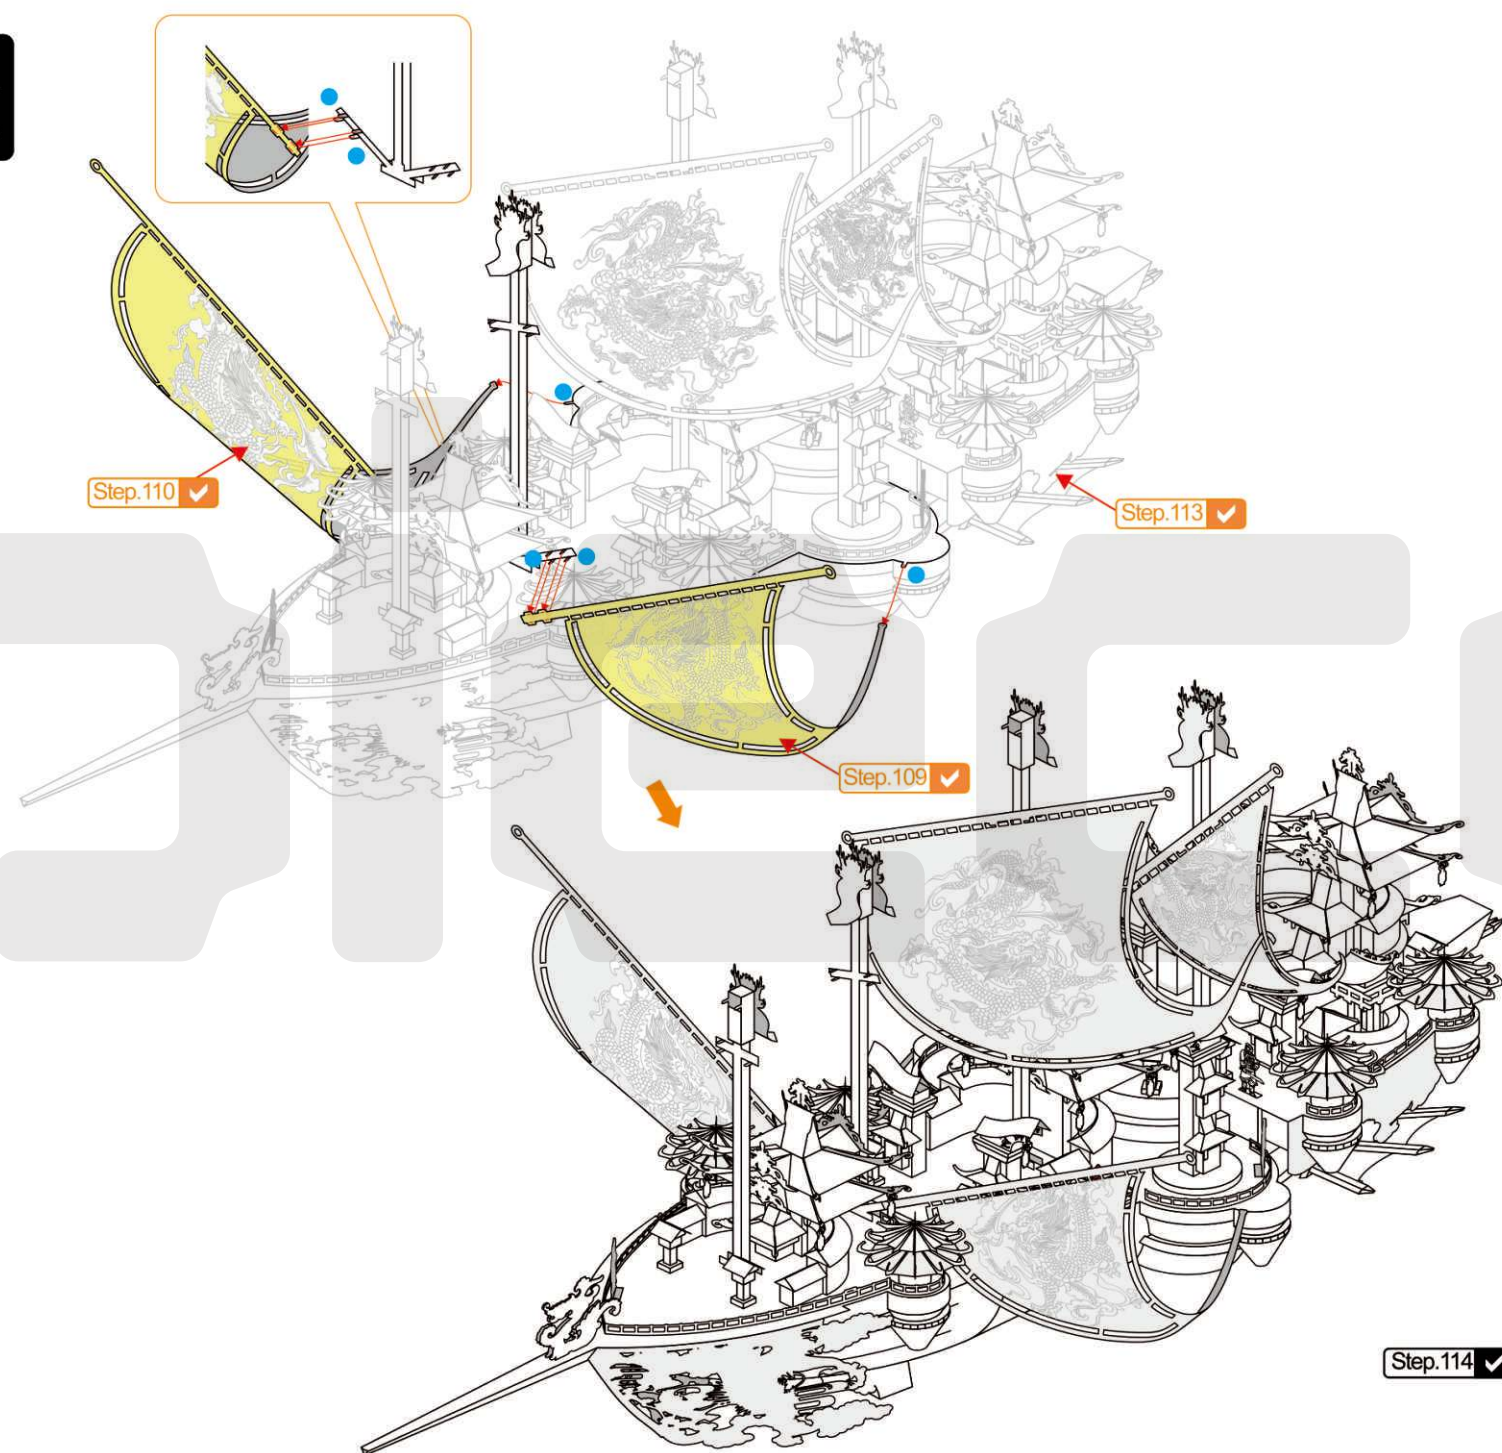


Step
115

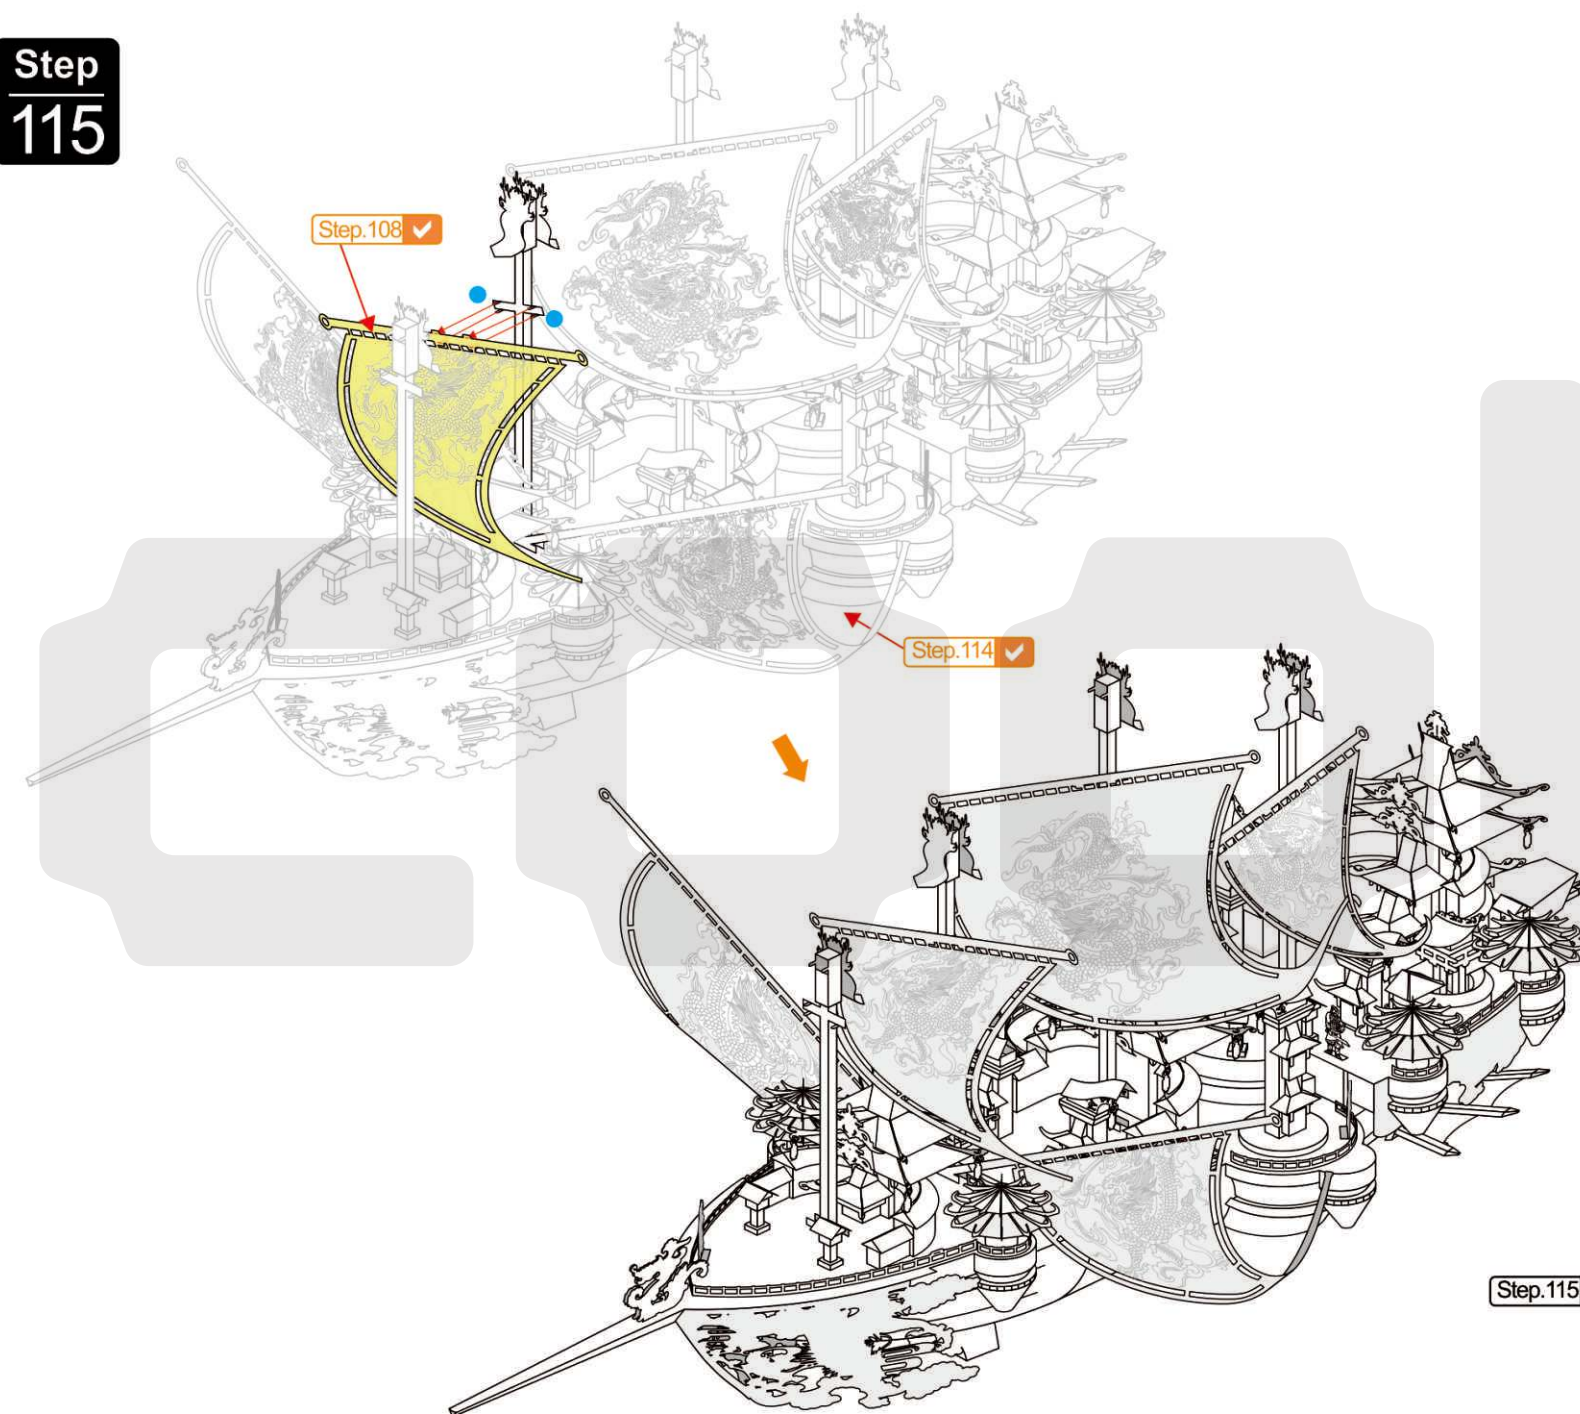

Step
116

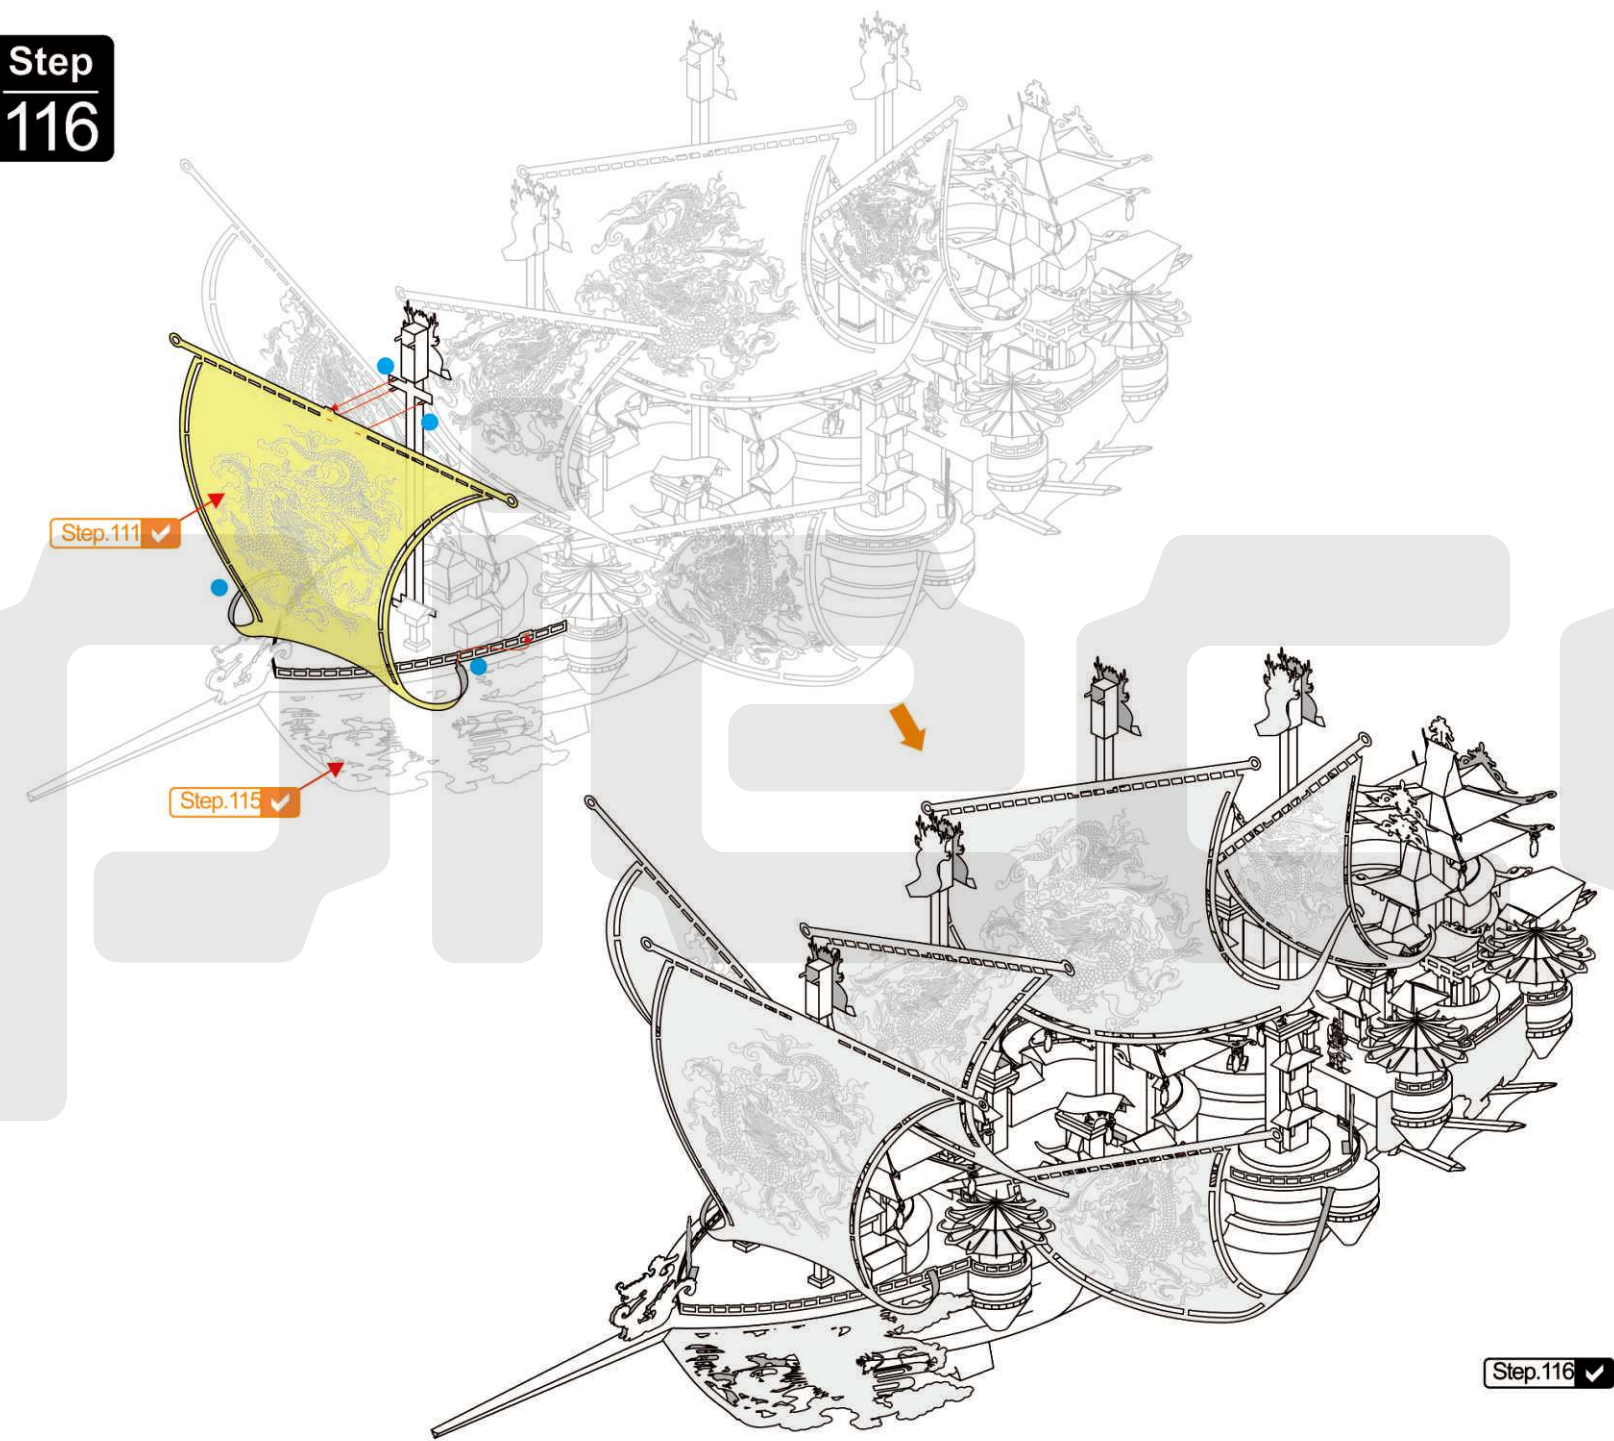


Step
117

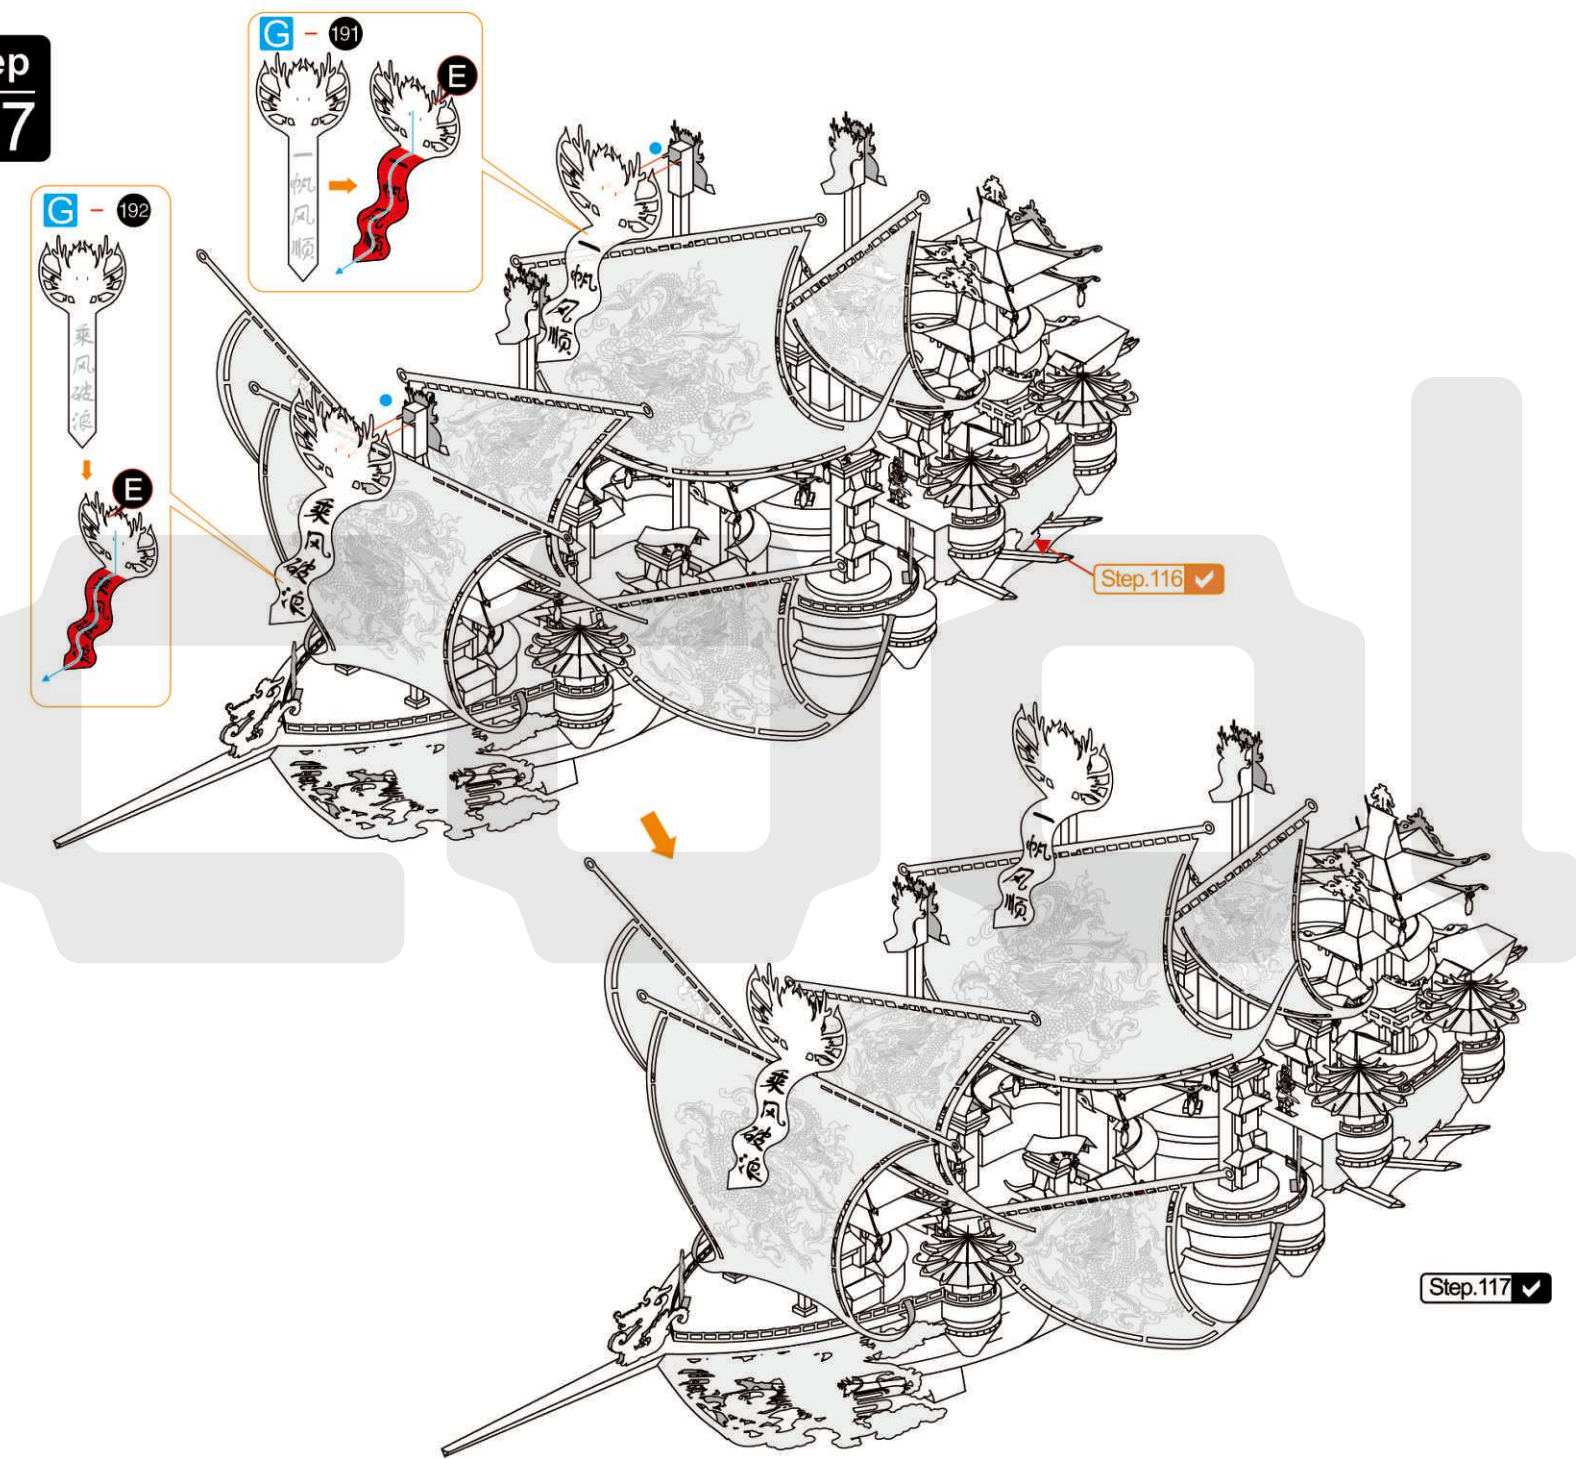

Step
118



Step
119

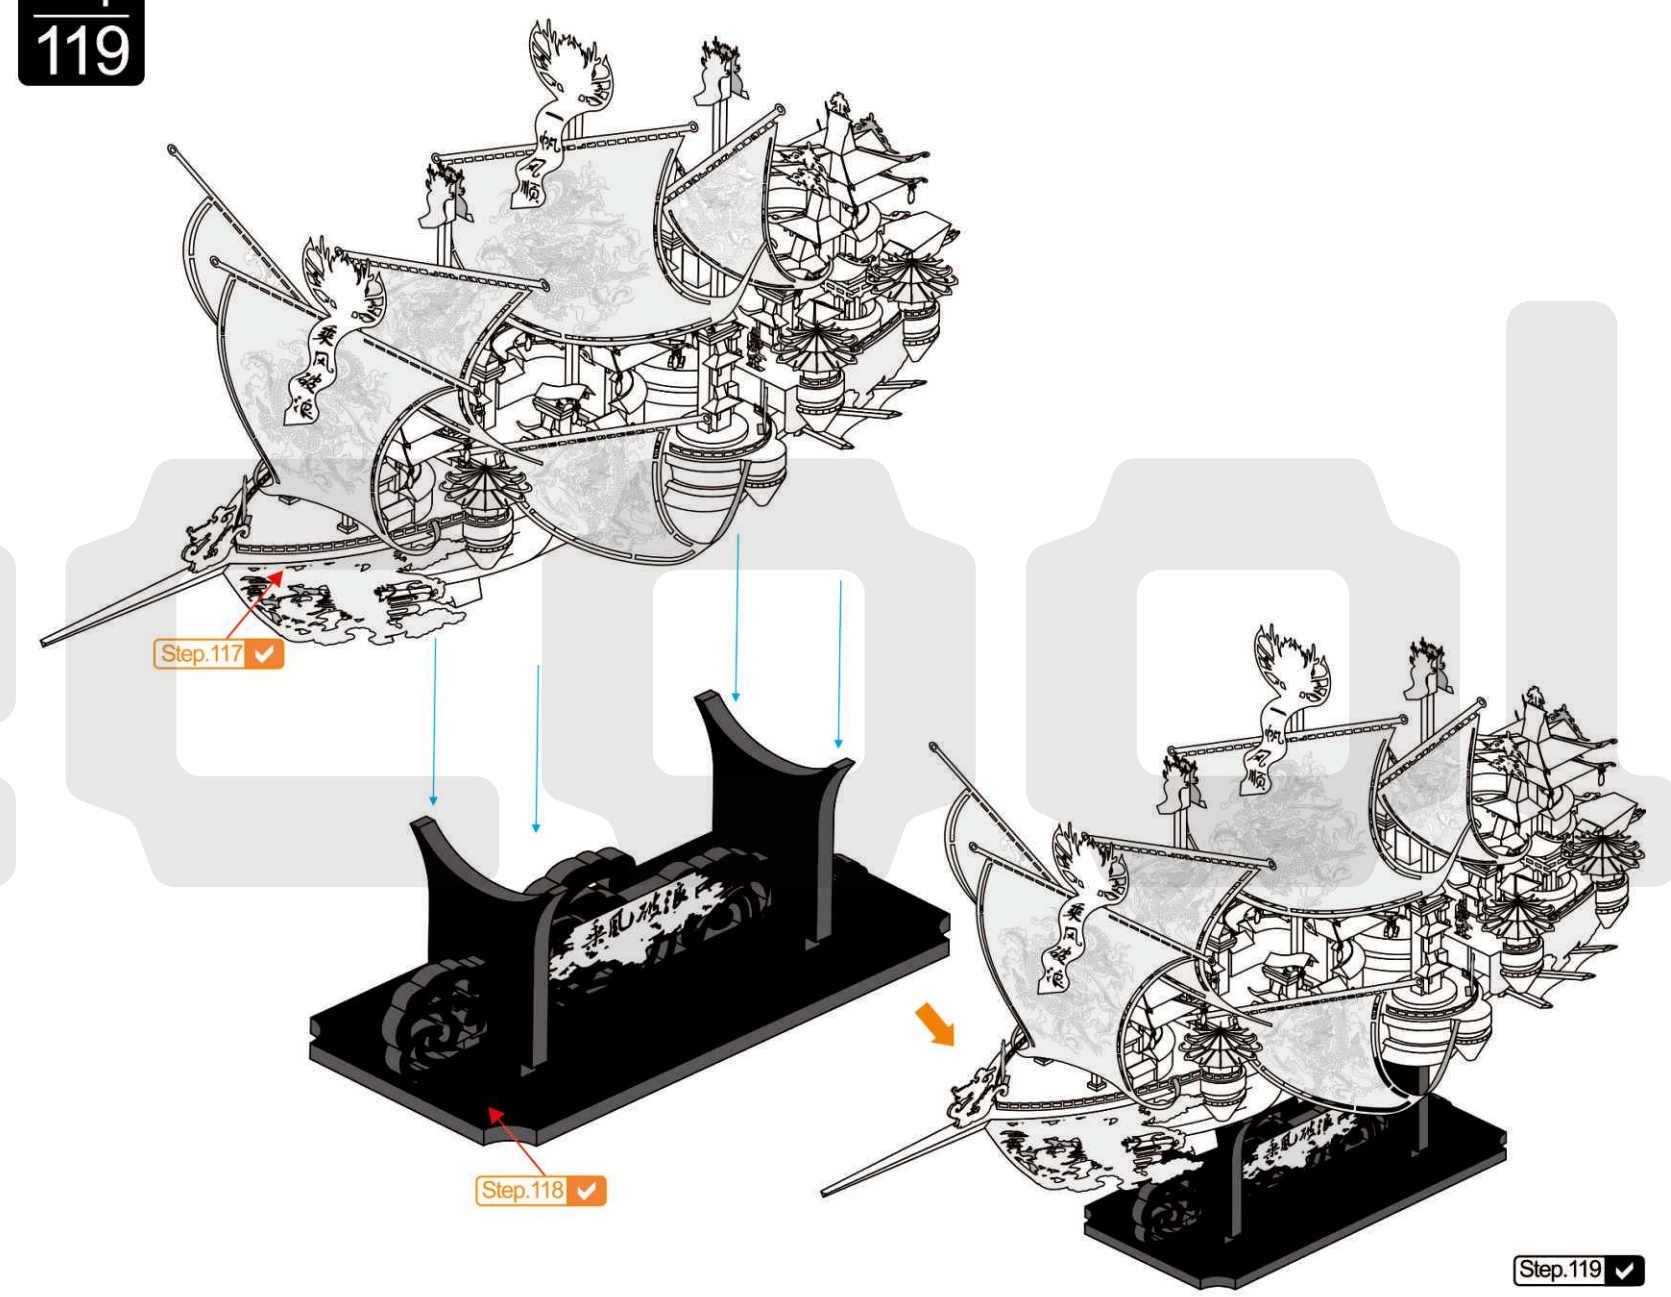



WIST PLASTIC & METAL TECHNOLOGY LIMITED

Address :2 Cunkou St,Xiangxi Industrial District,Liaobu Town,Dongguan City,
Guangdong Province,China. Postcode: 523408

Email: kf@wist-group.com

Service Hotline: 0769-8119 2243

© 2022 Wist Plastic & Metal Technology Limited.

CP-ASSY-HP171#-A3-20220412