


## Flamingo HP256



CP-ASSY-HP256#-A1-20220527


### Installation Reminder

- Prepare tools:

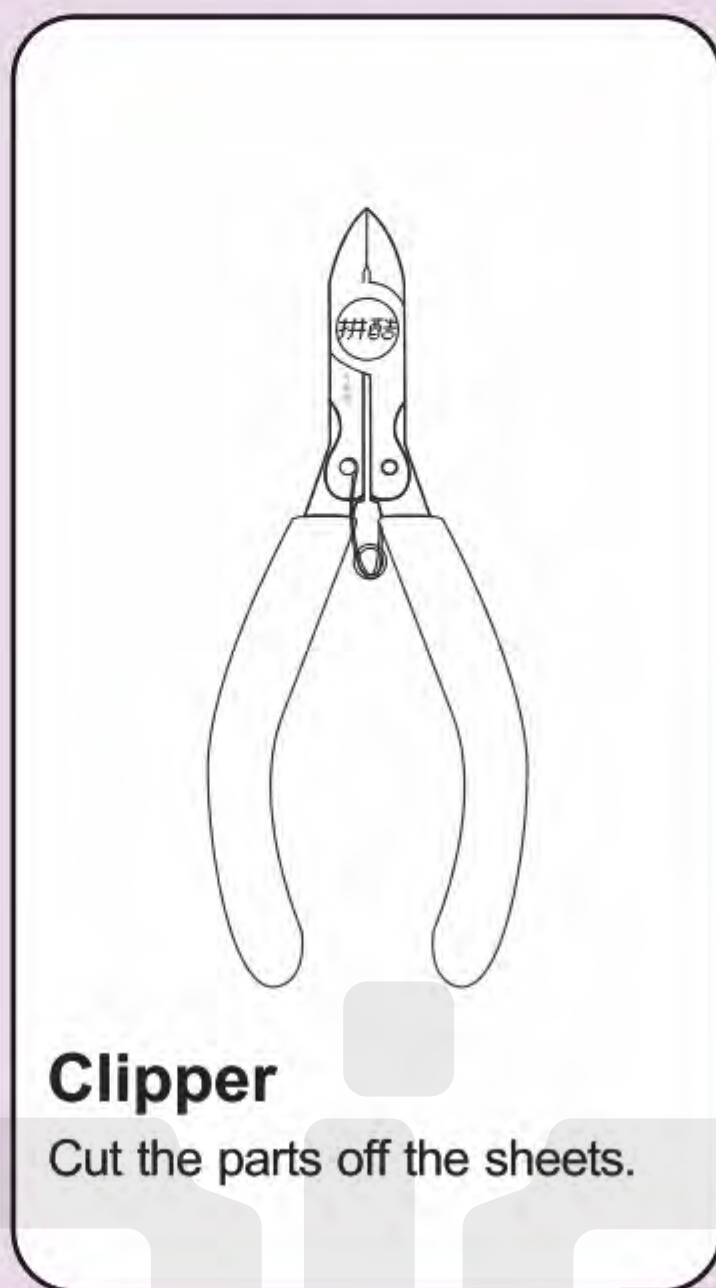

#### Clipper

Cut the parts off the sheets.

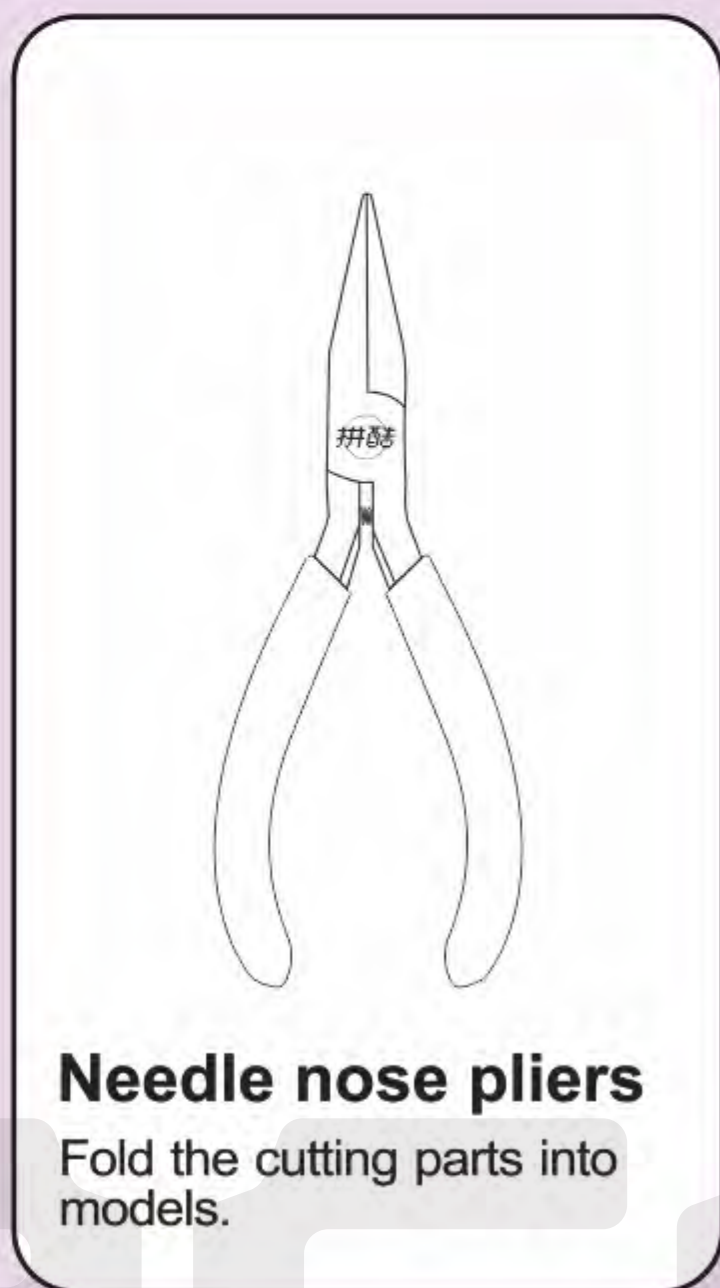

#### Needle nose pliers


Fold the cutting parts into models.

It is recommended to use piececool authentic assembly tools to build or fix the design. It is tailor made for the metal pieces and user friendly.

**WARNING** – Please handle metal sheets with care. The parts may have sharp edges that could cut or scratch skin. Keep away from children.


### • Installation Method:

#### a. Remove the parts

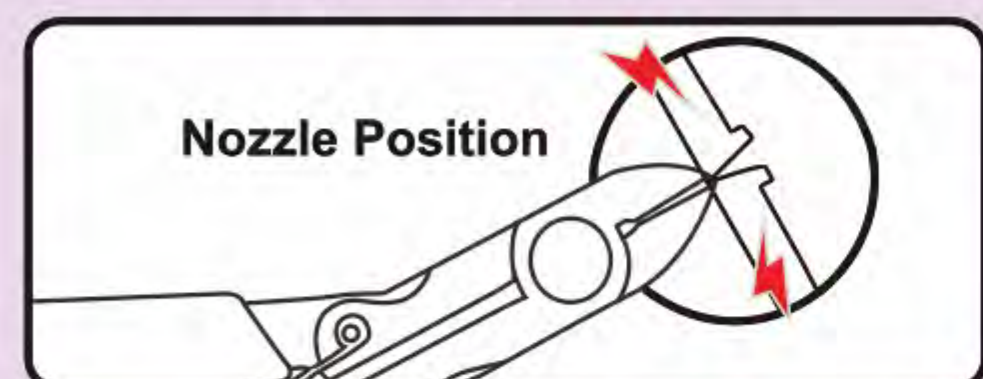


Please use the clipper to cut the nozzle position and remove the parts.

#### b. Identify the parts

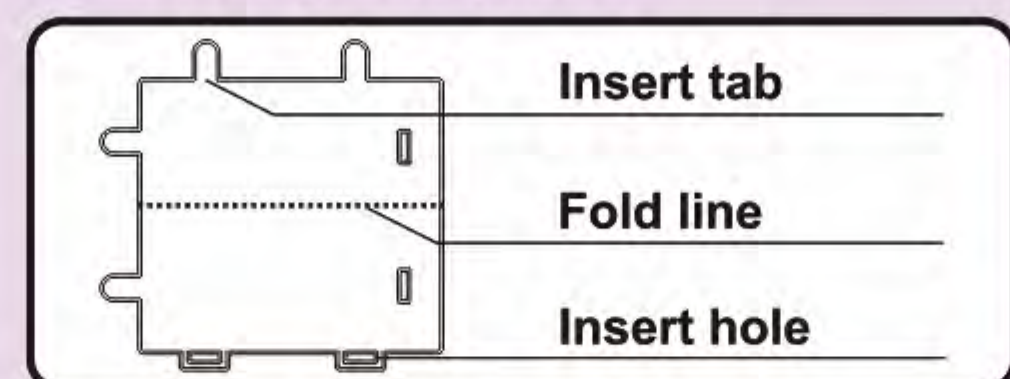


Identify the insert tab, fold line and the insert hole.

#### c. Folding the parts

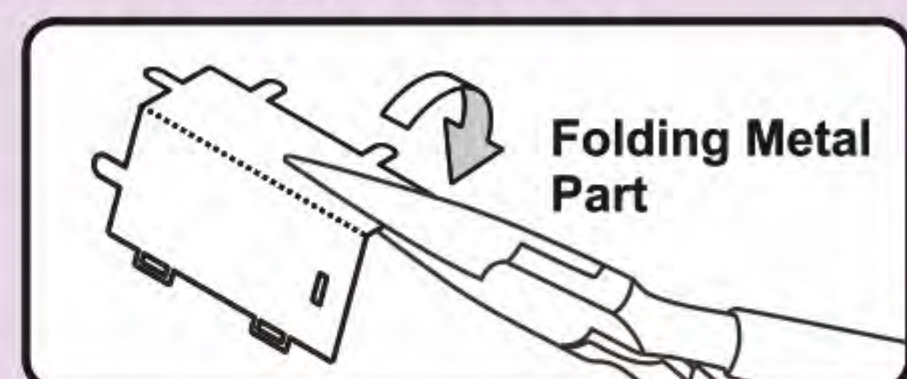


Please use the needle nose pliers to fold the cutting parts into models.

#### d. Retaining the parts

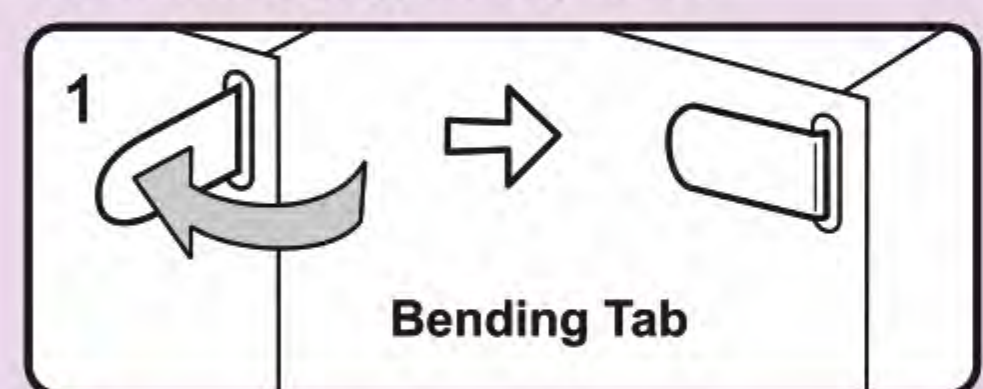

Insert the hole, bending tab with angle 90°

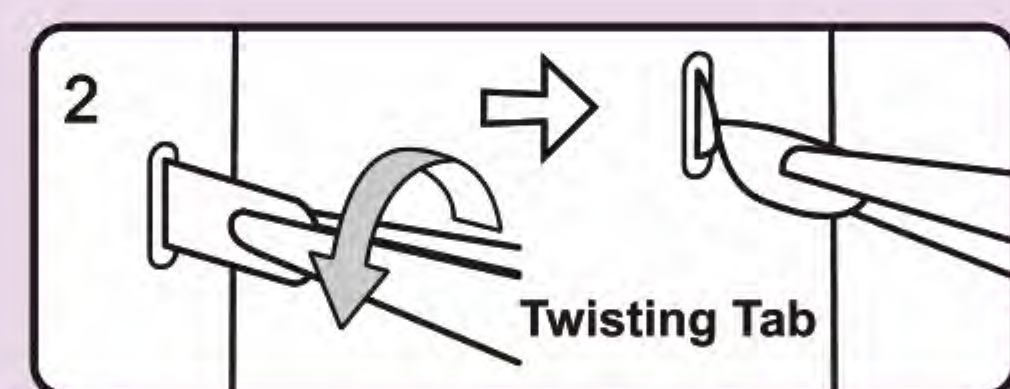

Insert the hole, twisting tab with angle 90°

### • Attention:


- E** Engraved / Color side
- NE** Non-engraved / Silver side
- !** Attention Point
- |** Keep the parts symmetrical

When cutting metal parts, please do not cut the "insert tab" as "nozzle position". Only cut the parts of the current step when cutting the parts. Do not cut all the parts at one time to avoid loss.



When encountering the parts of the folding line, please pay attention to the front and back of the metal sheet and the direction of the folding. According to the direction indicated in the instruction, cut lightly and fold slowly. It is best to fold it once. Do not fold it repeatedly to avoid damage to the parts.

### Assembly Guide


## Step 01

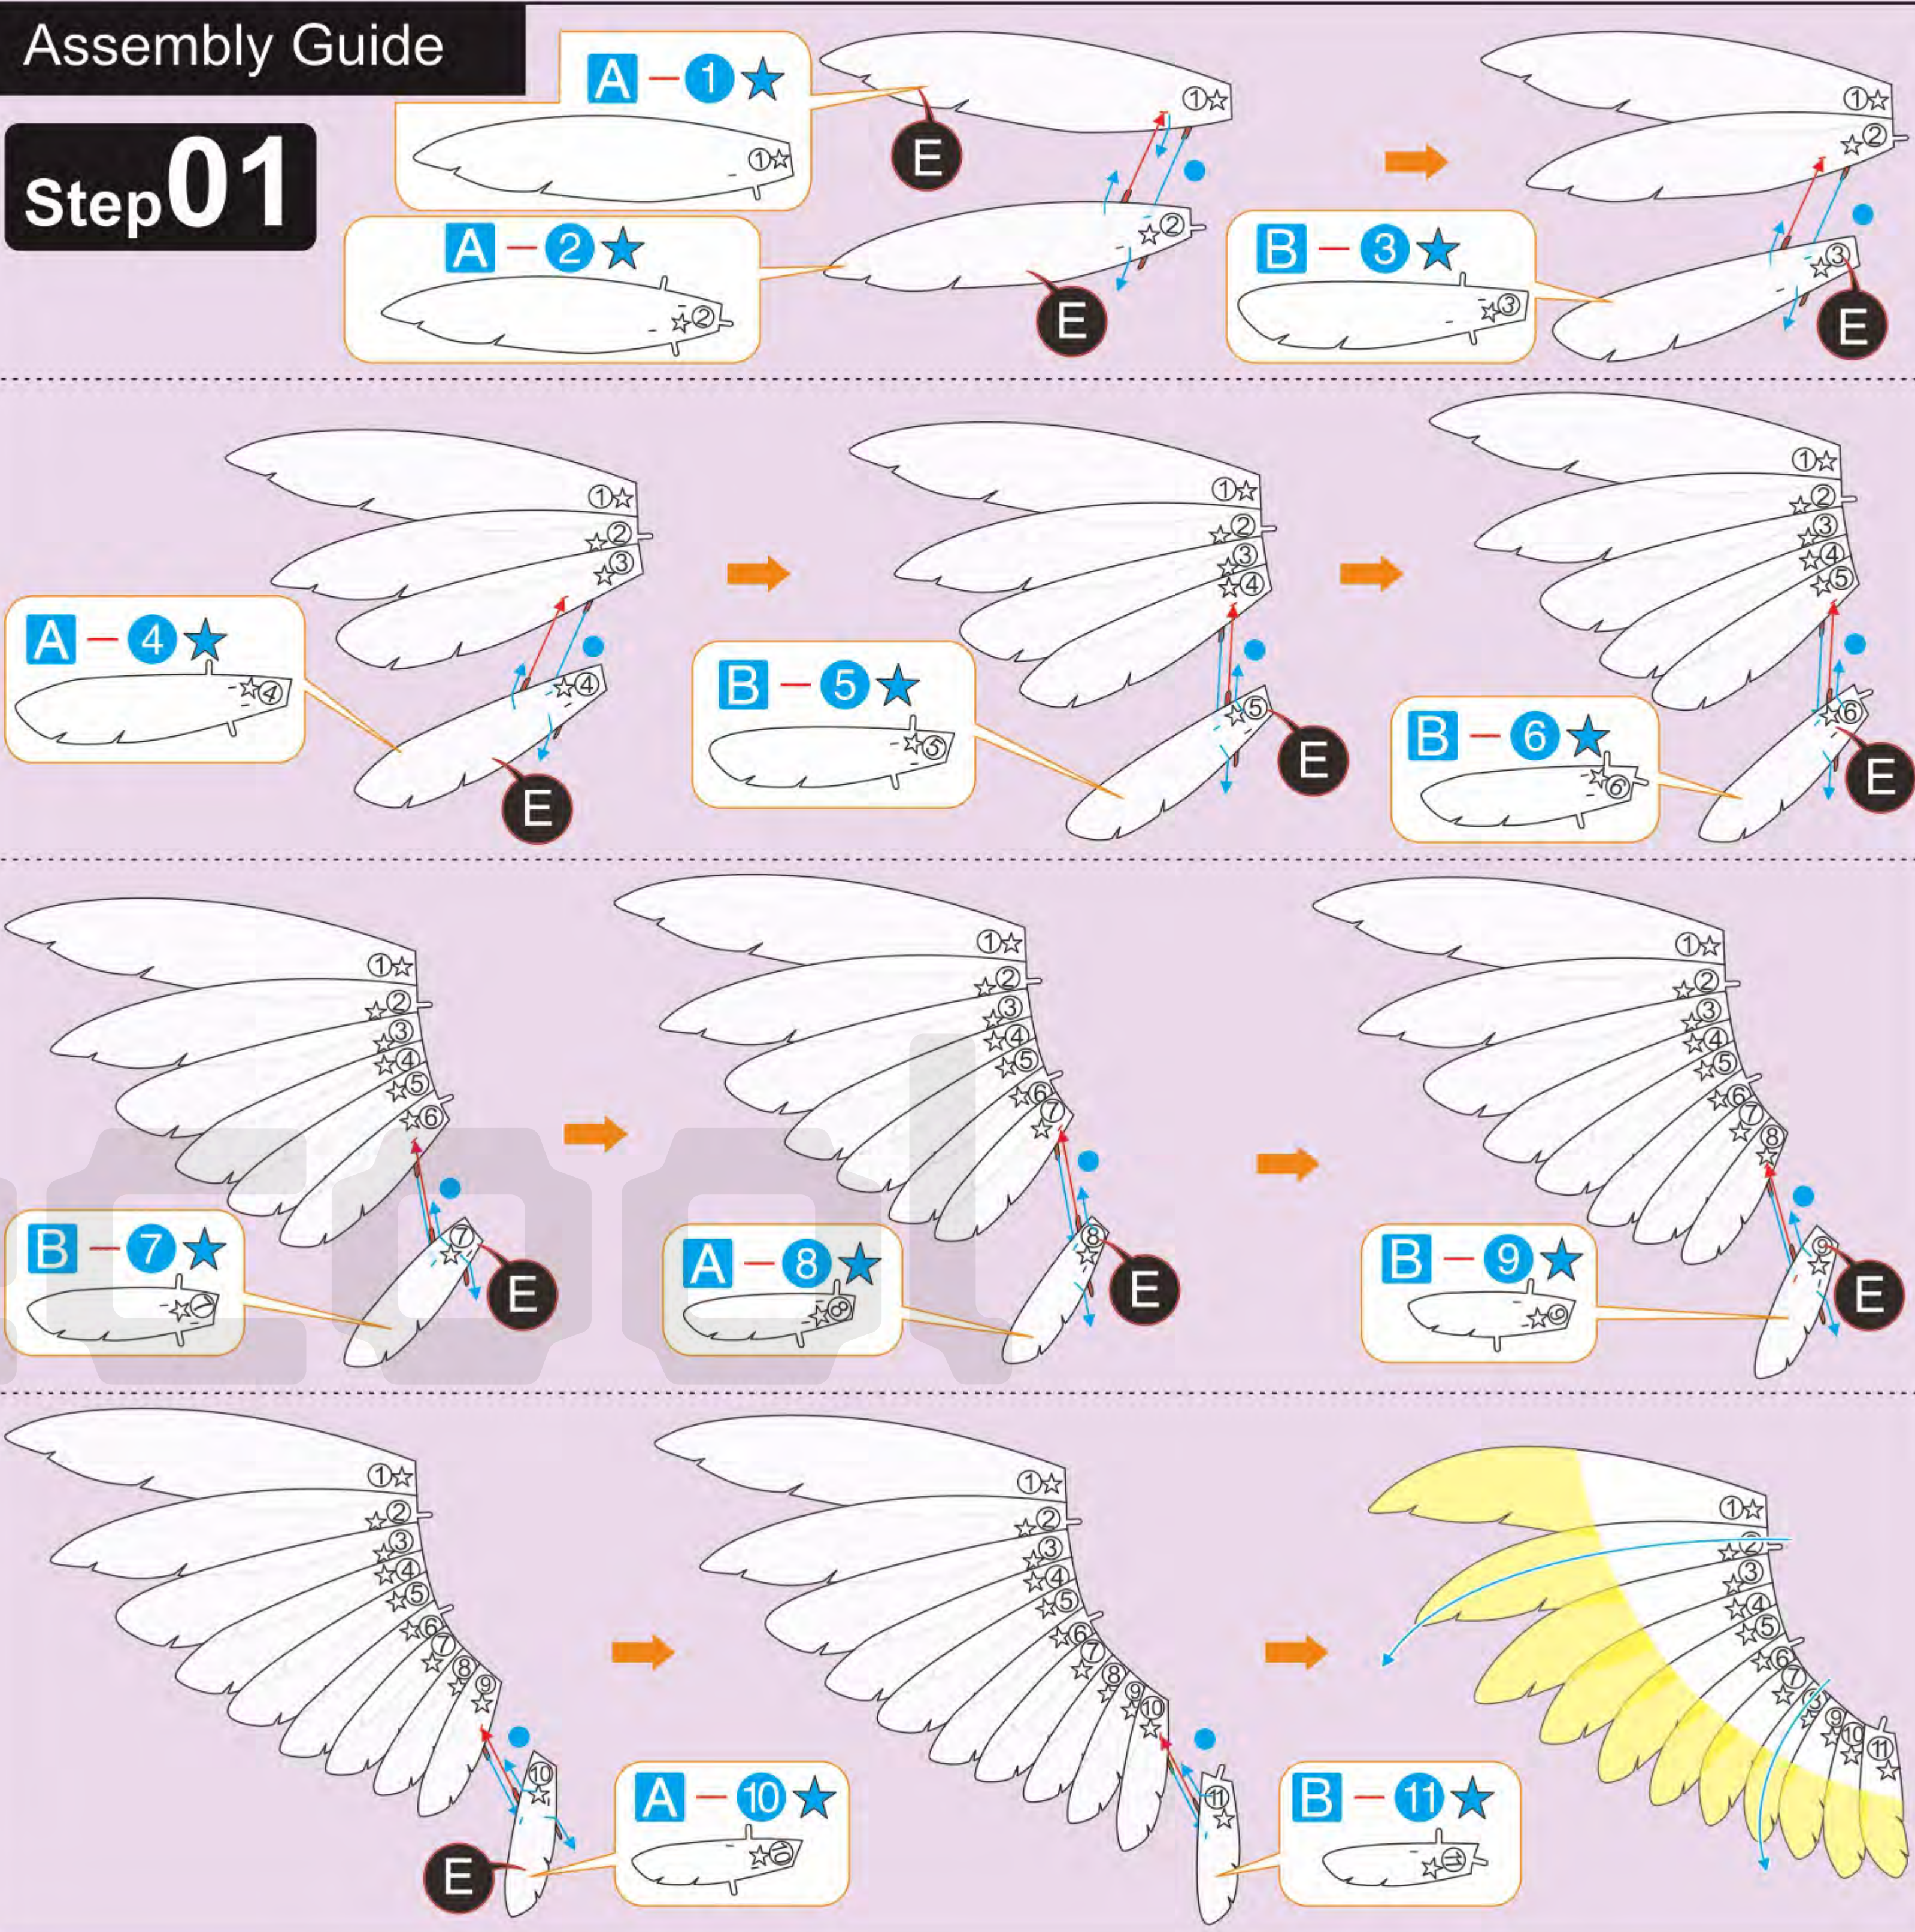


## Step 02

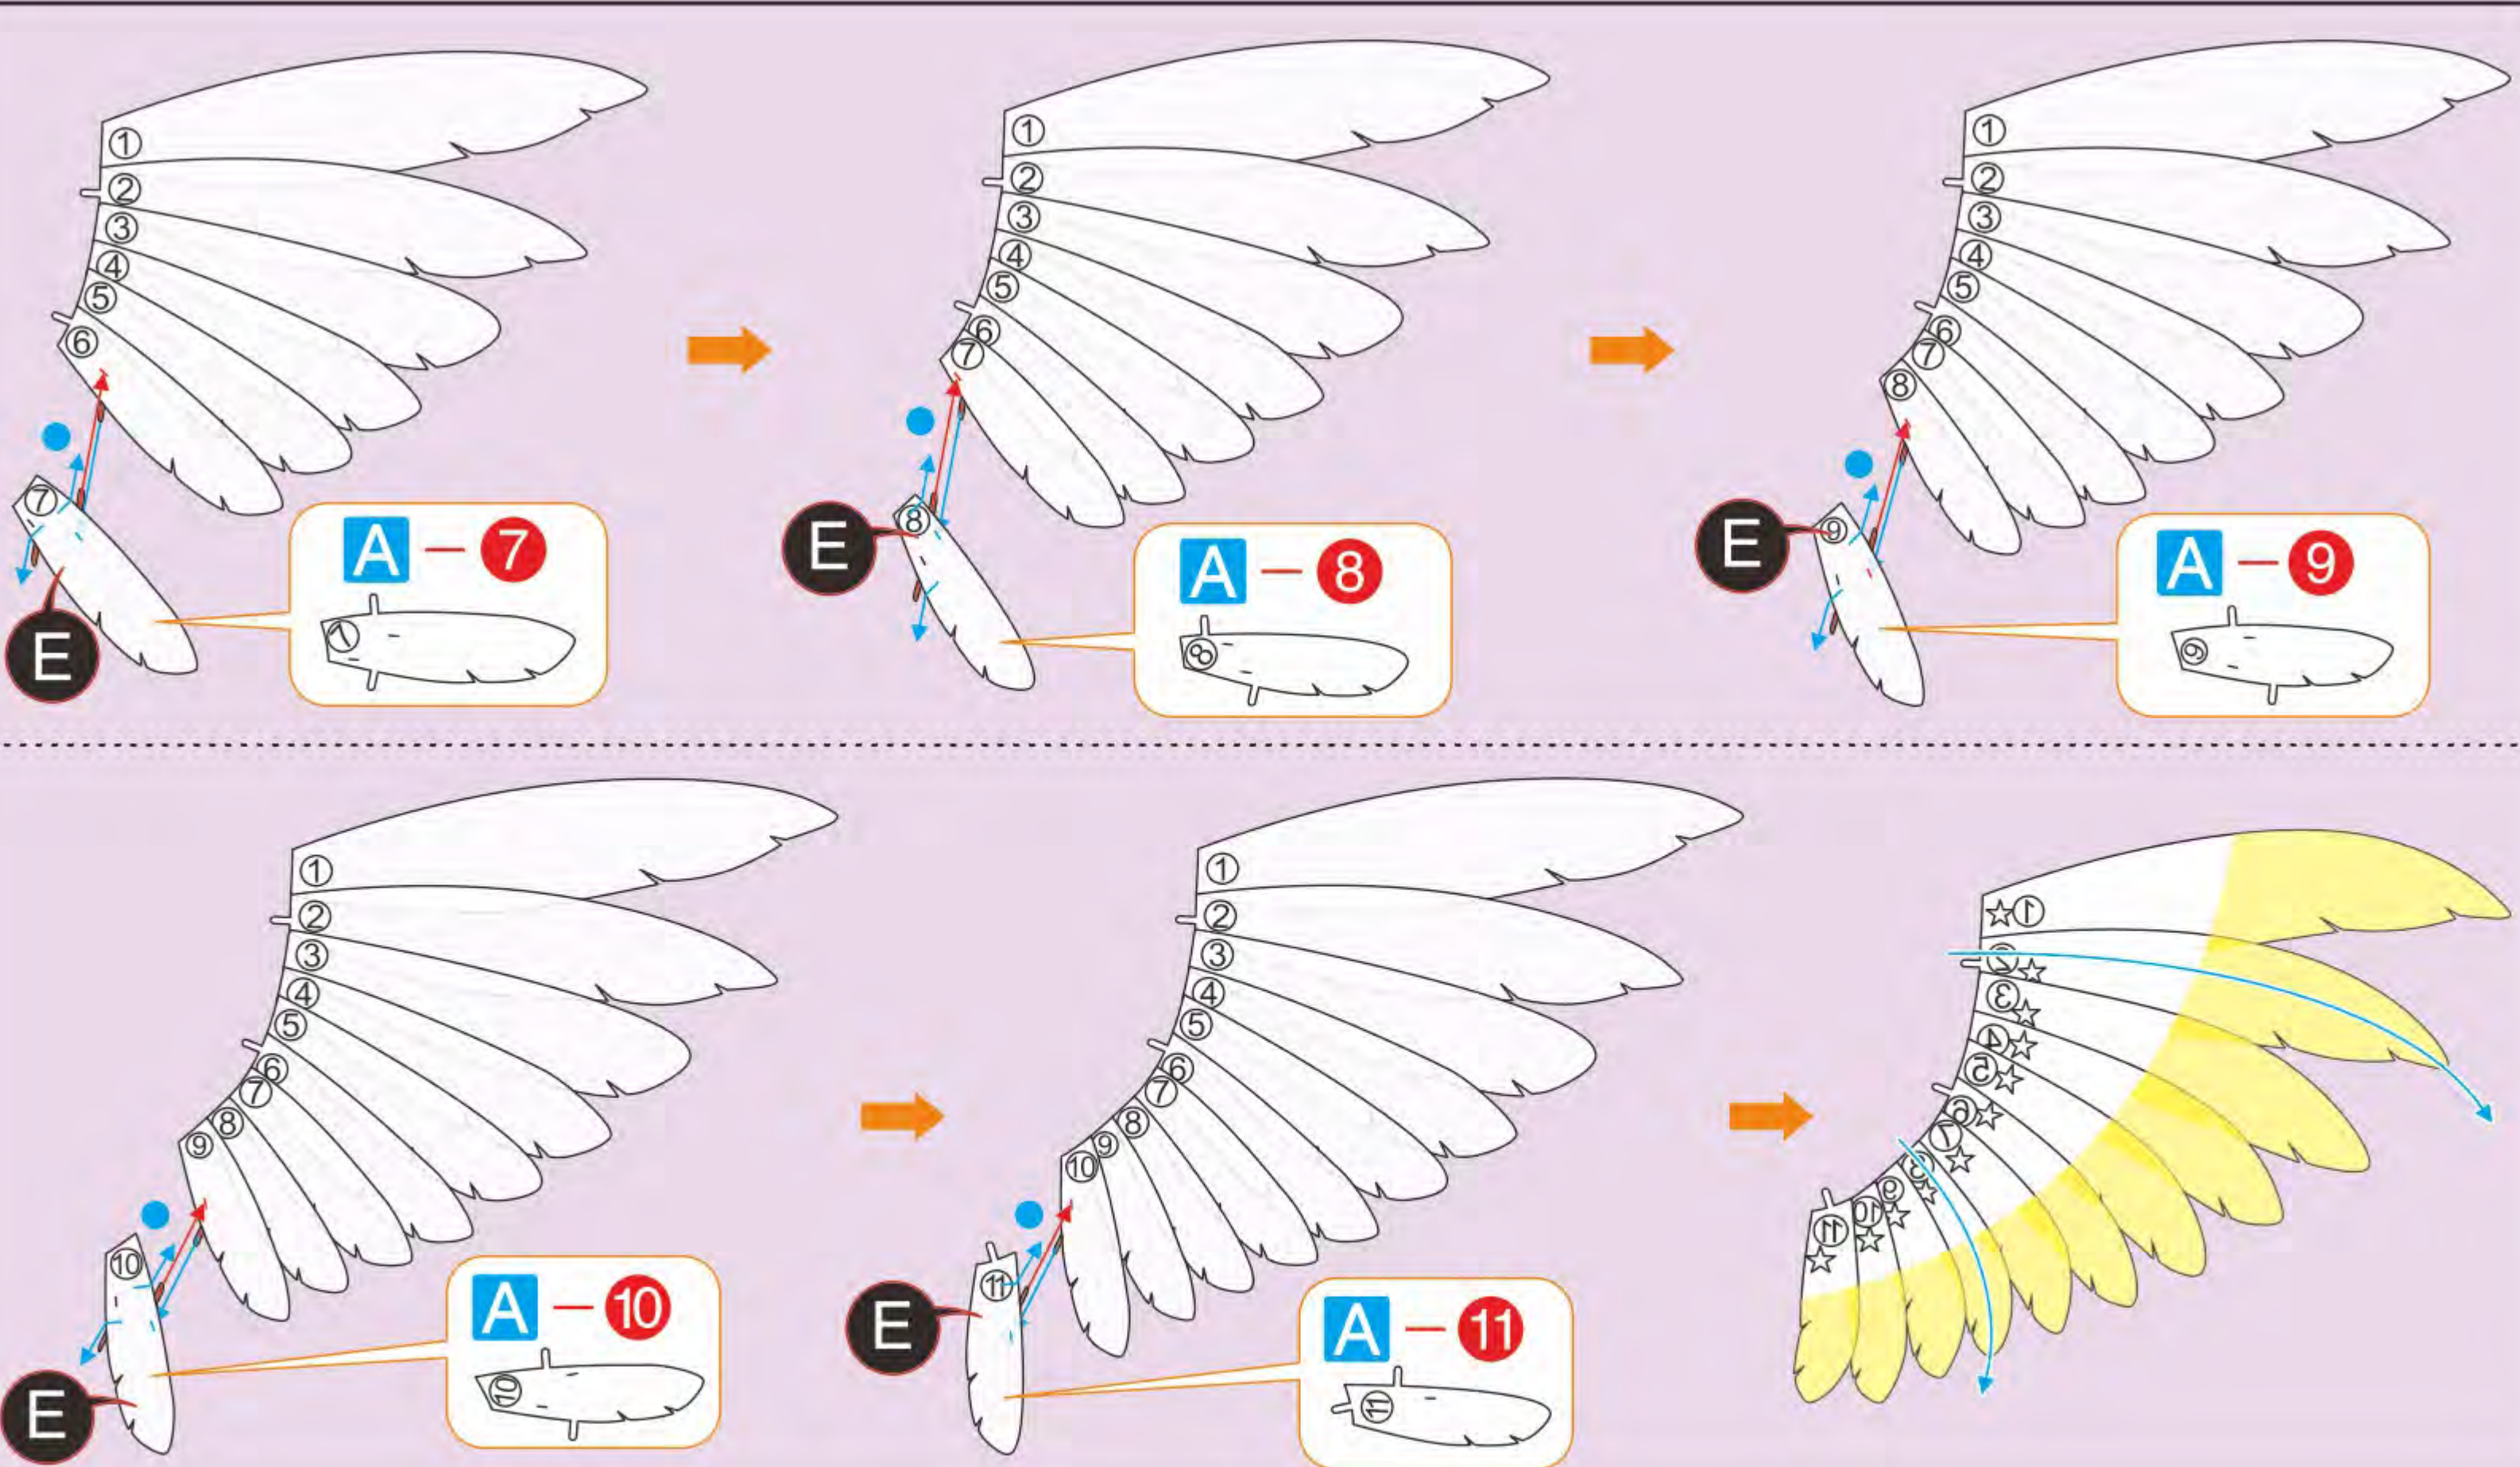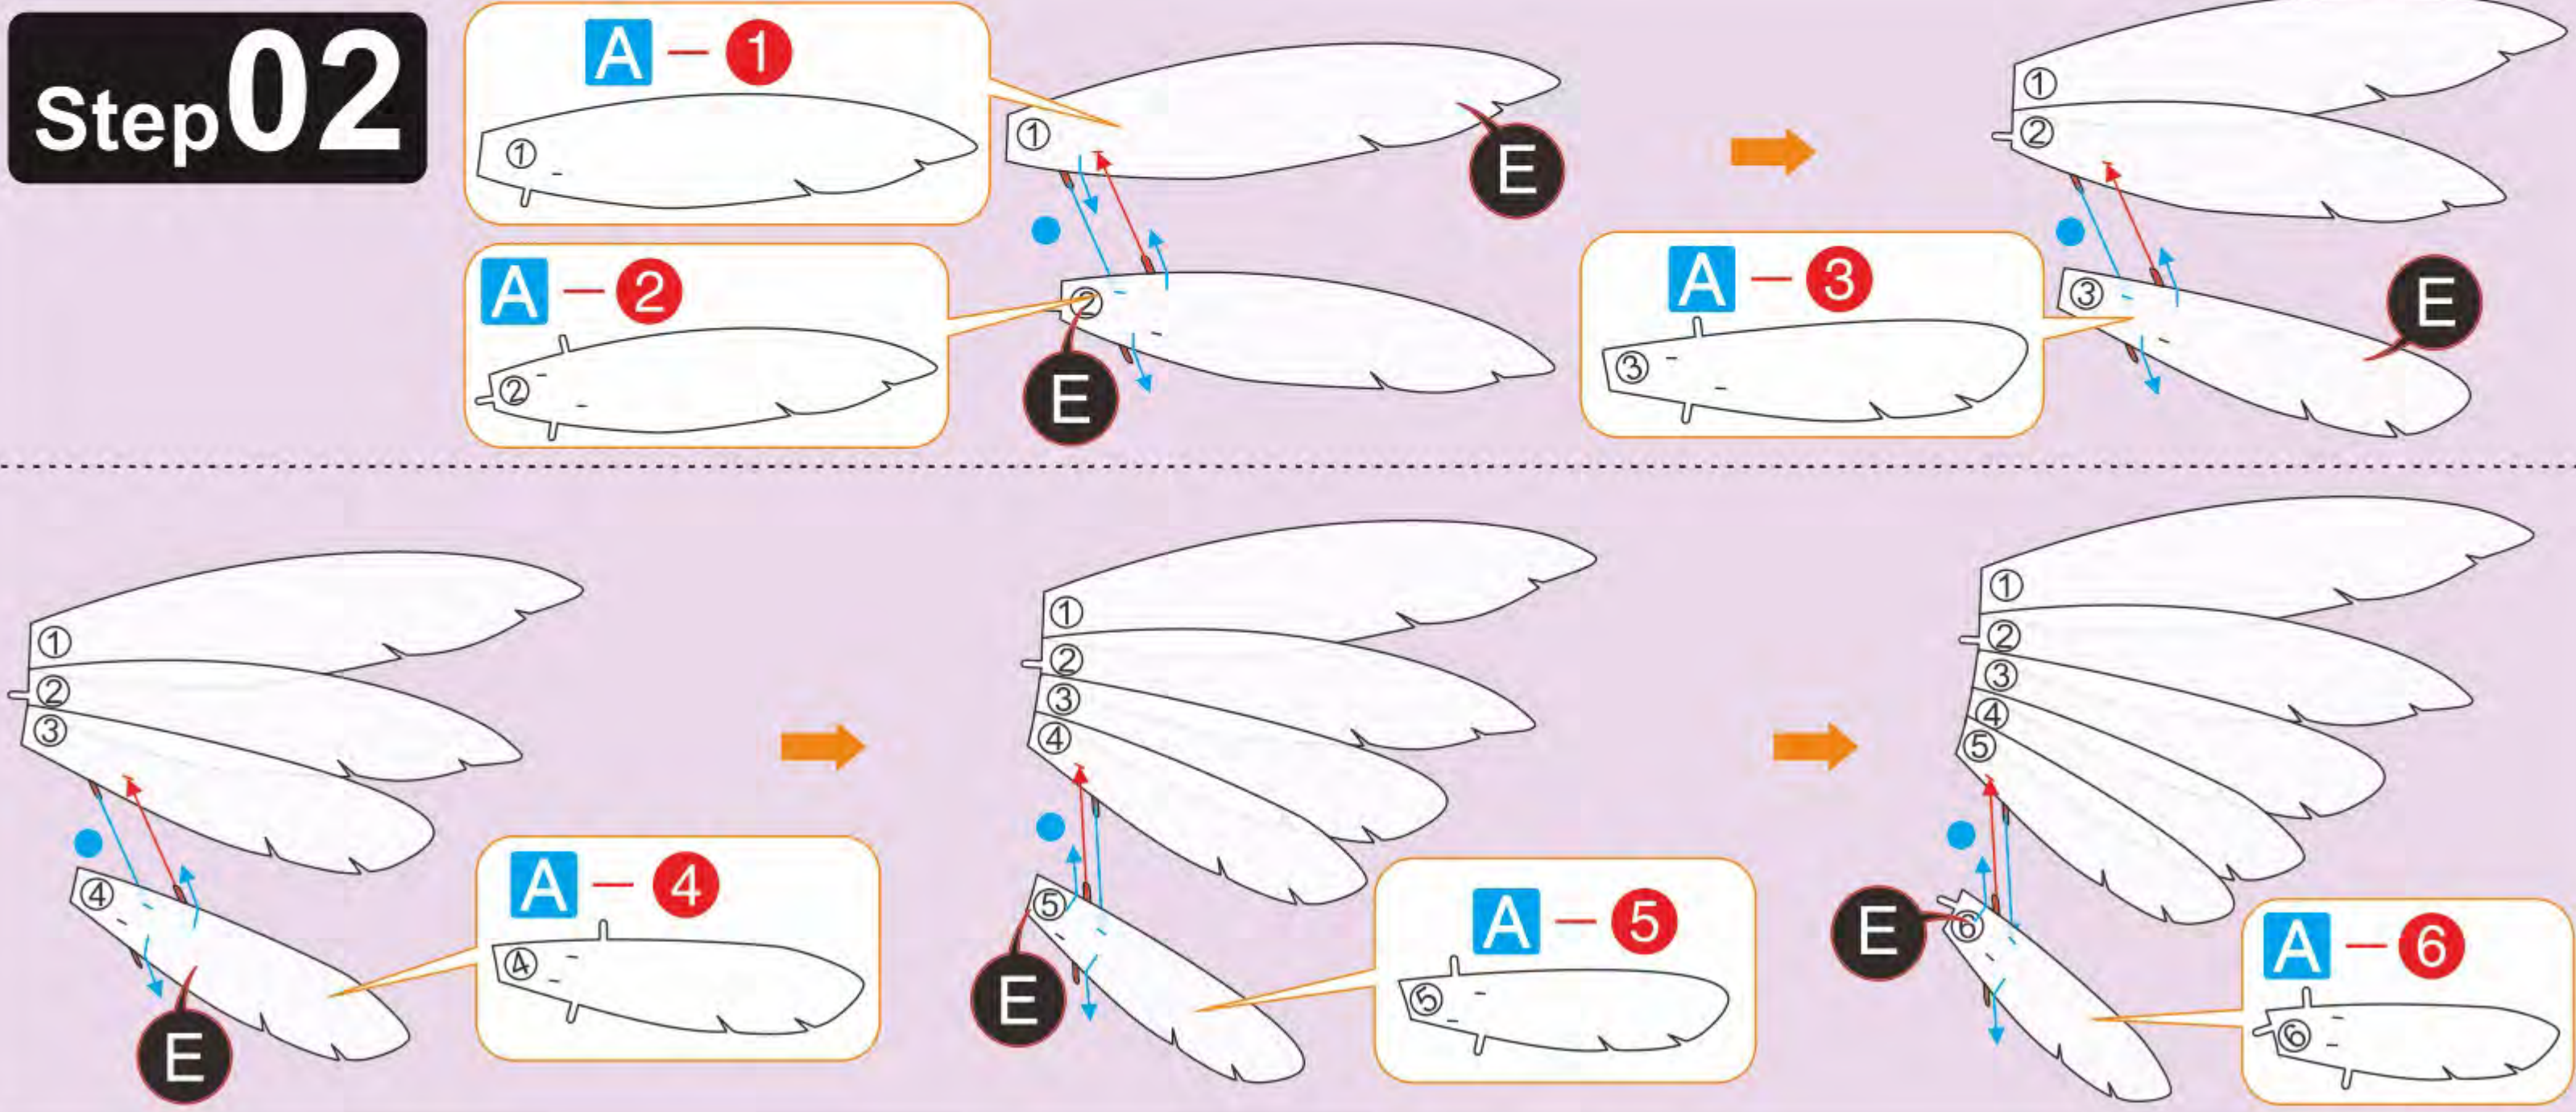


## Step 03

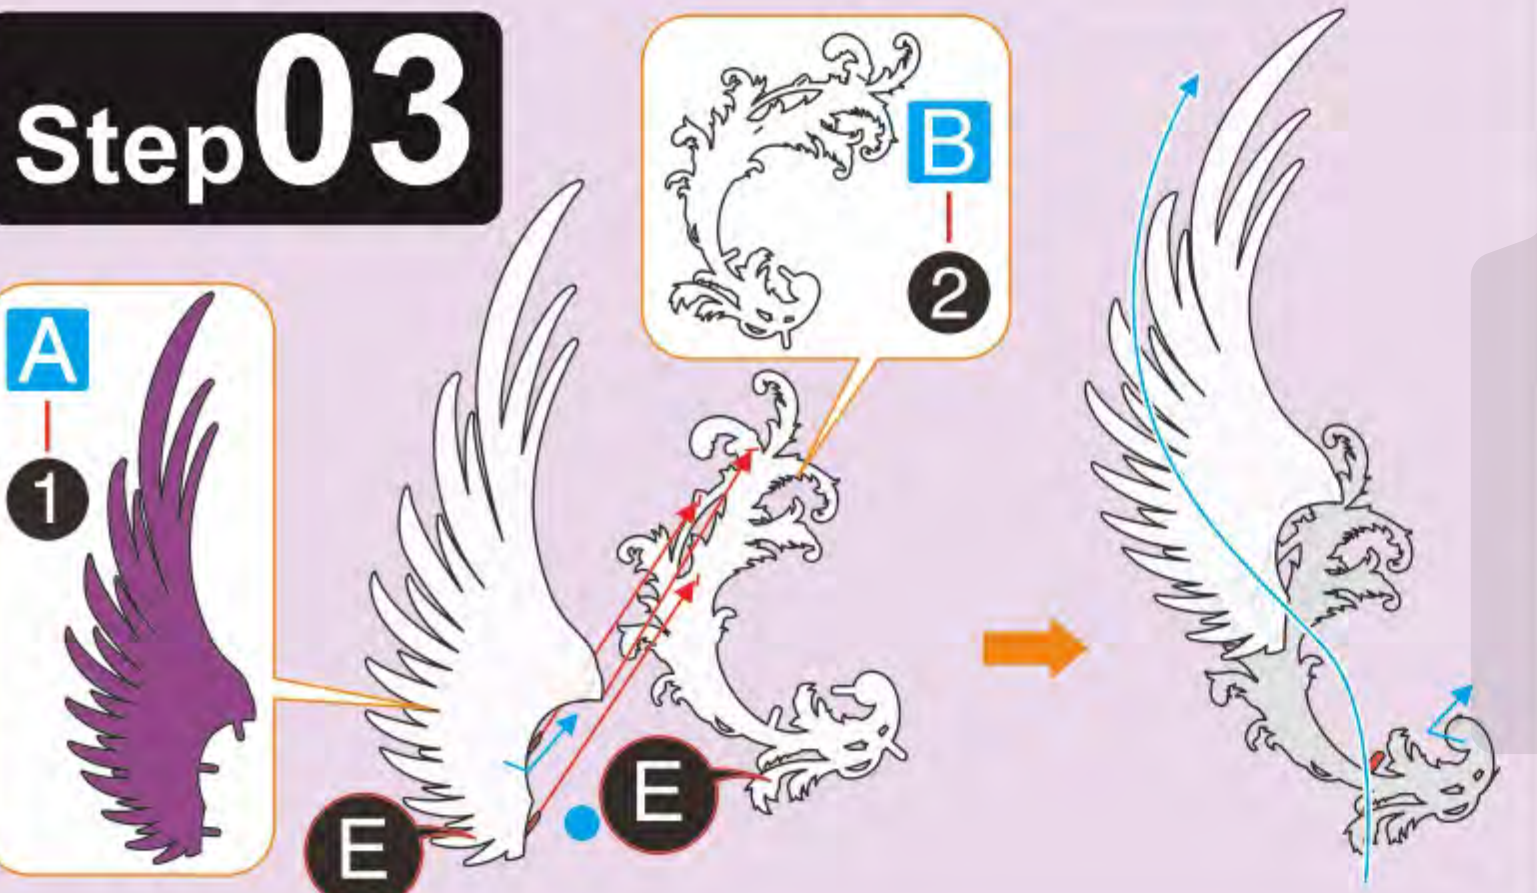

## Step 04

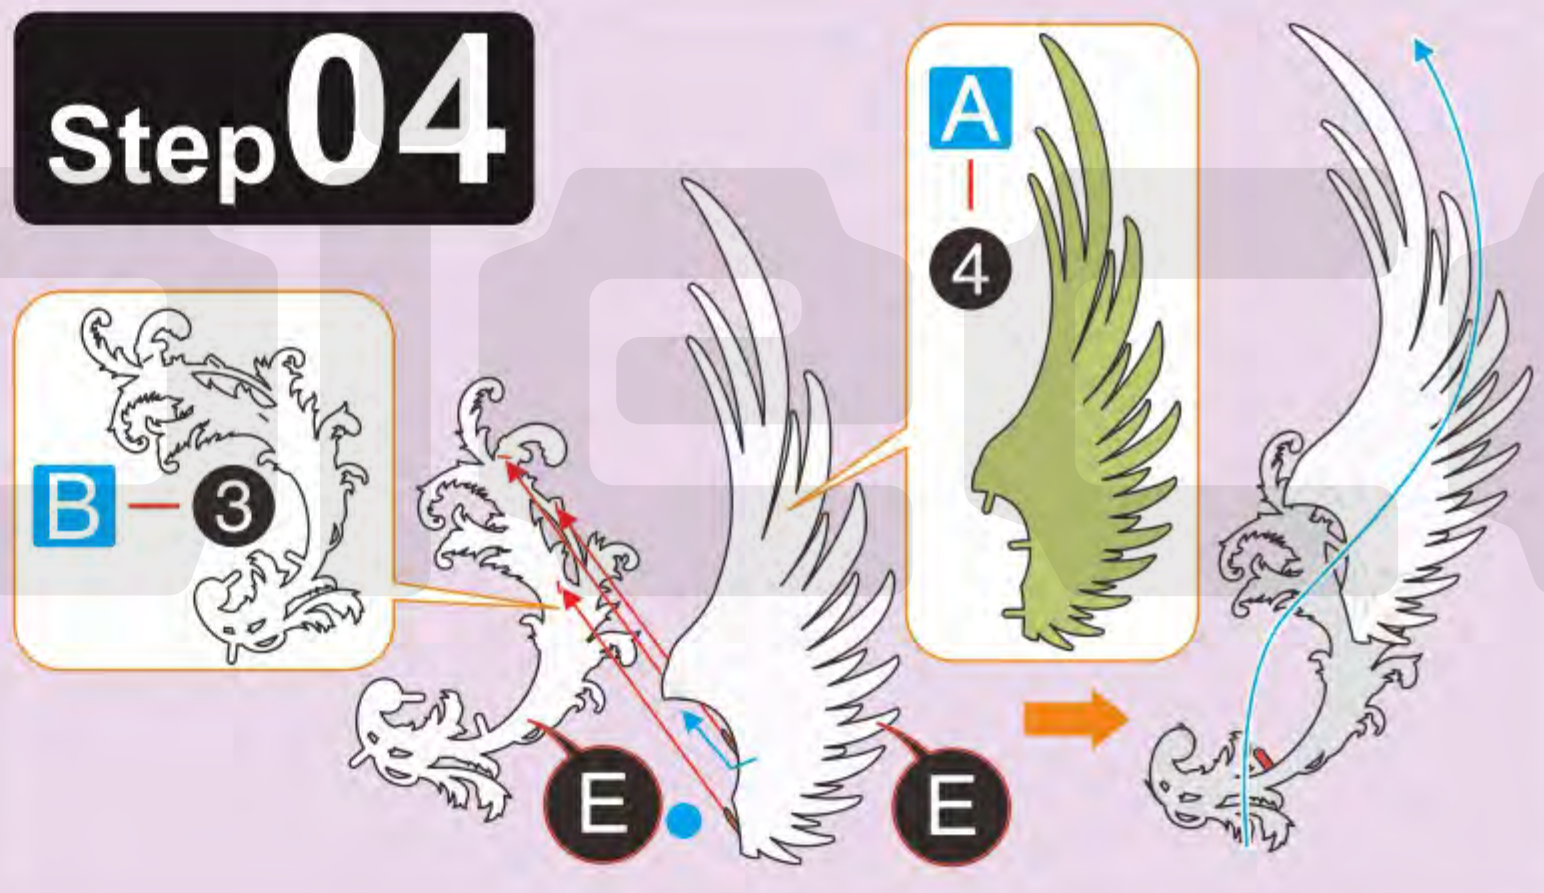


## Step 05



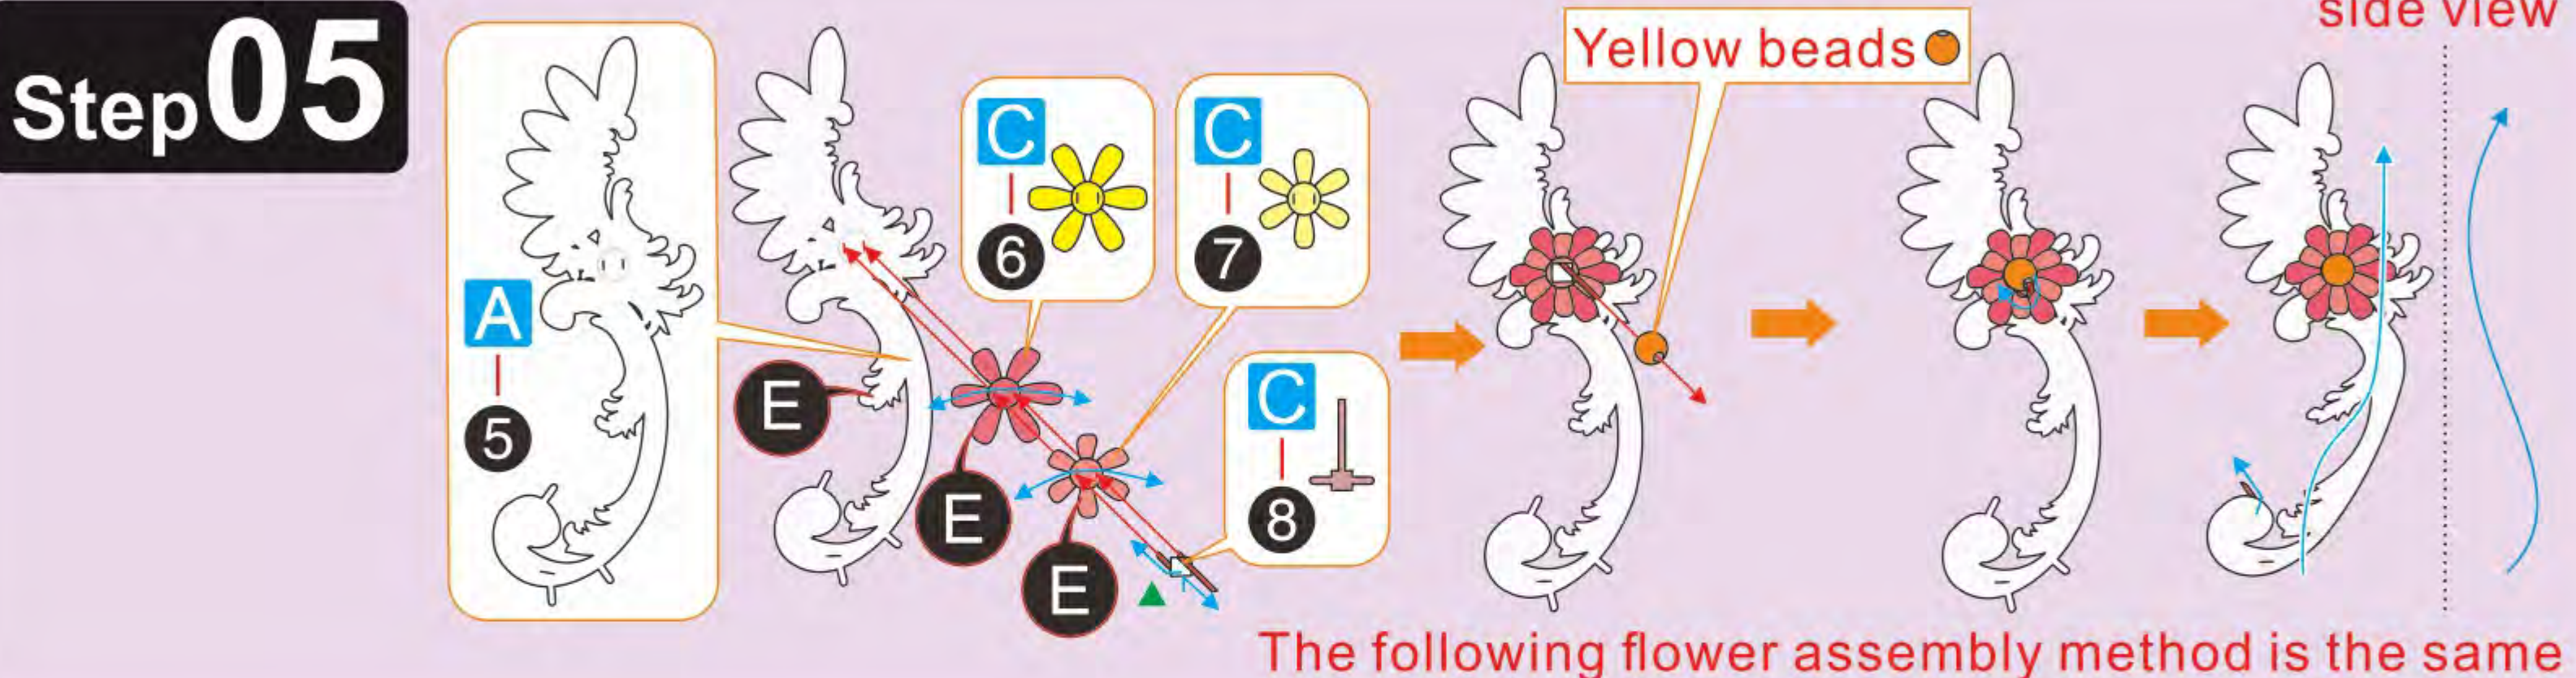


The following flower assembly method is the same

## Step 06

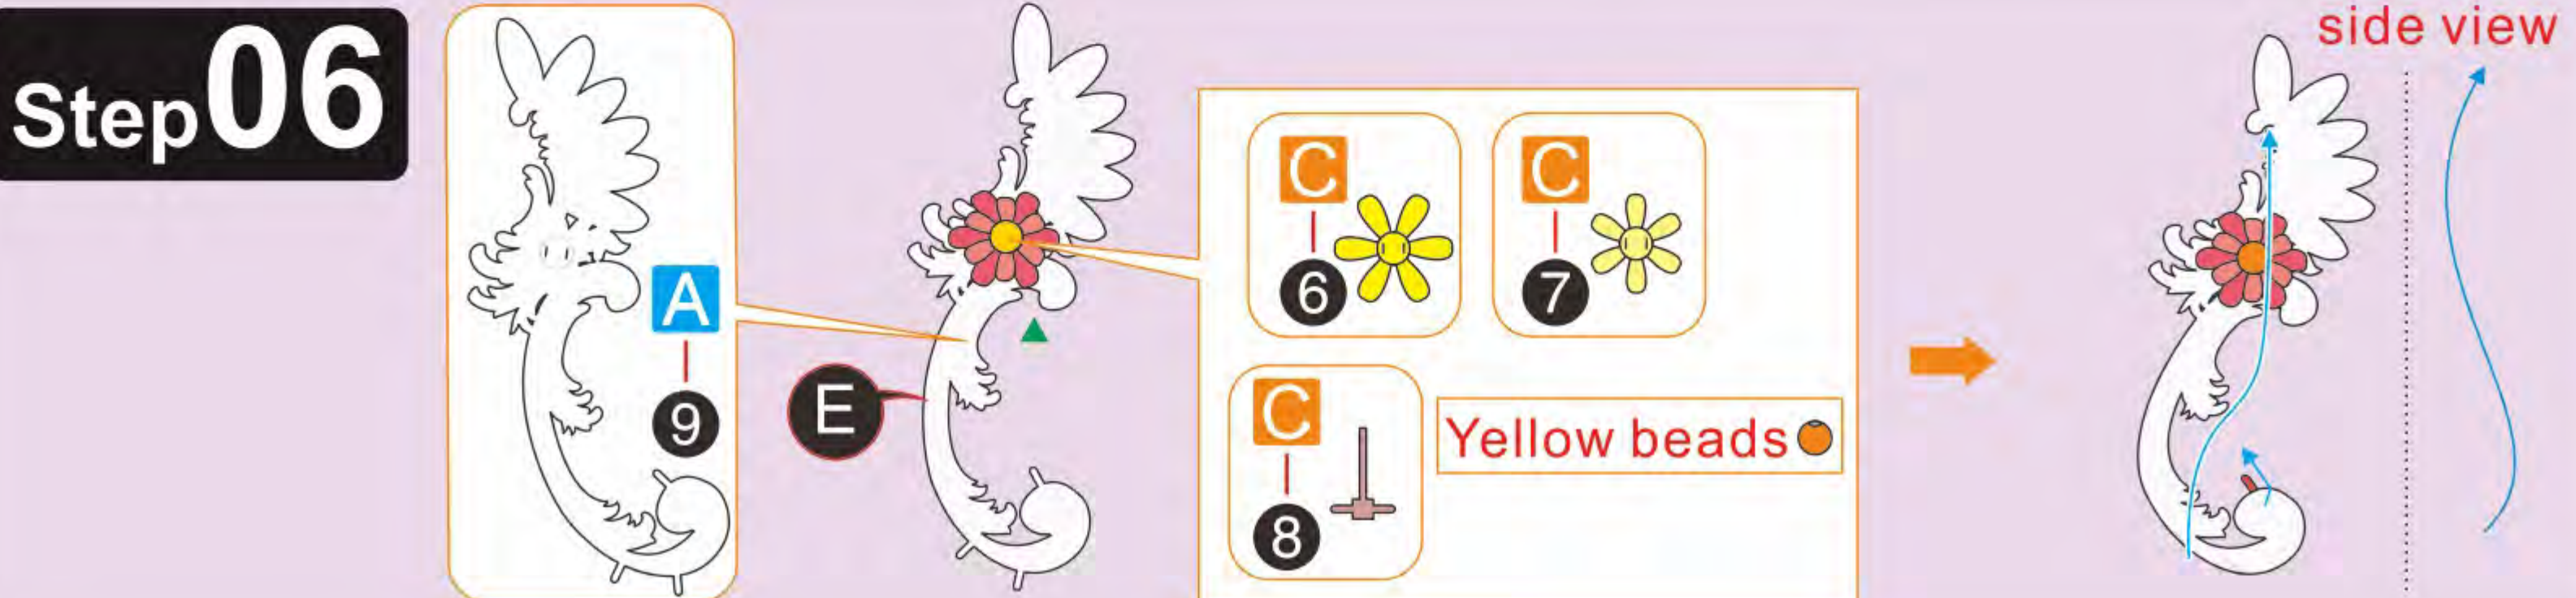


## Step 07

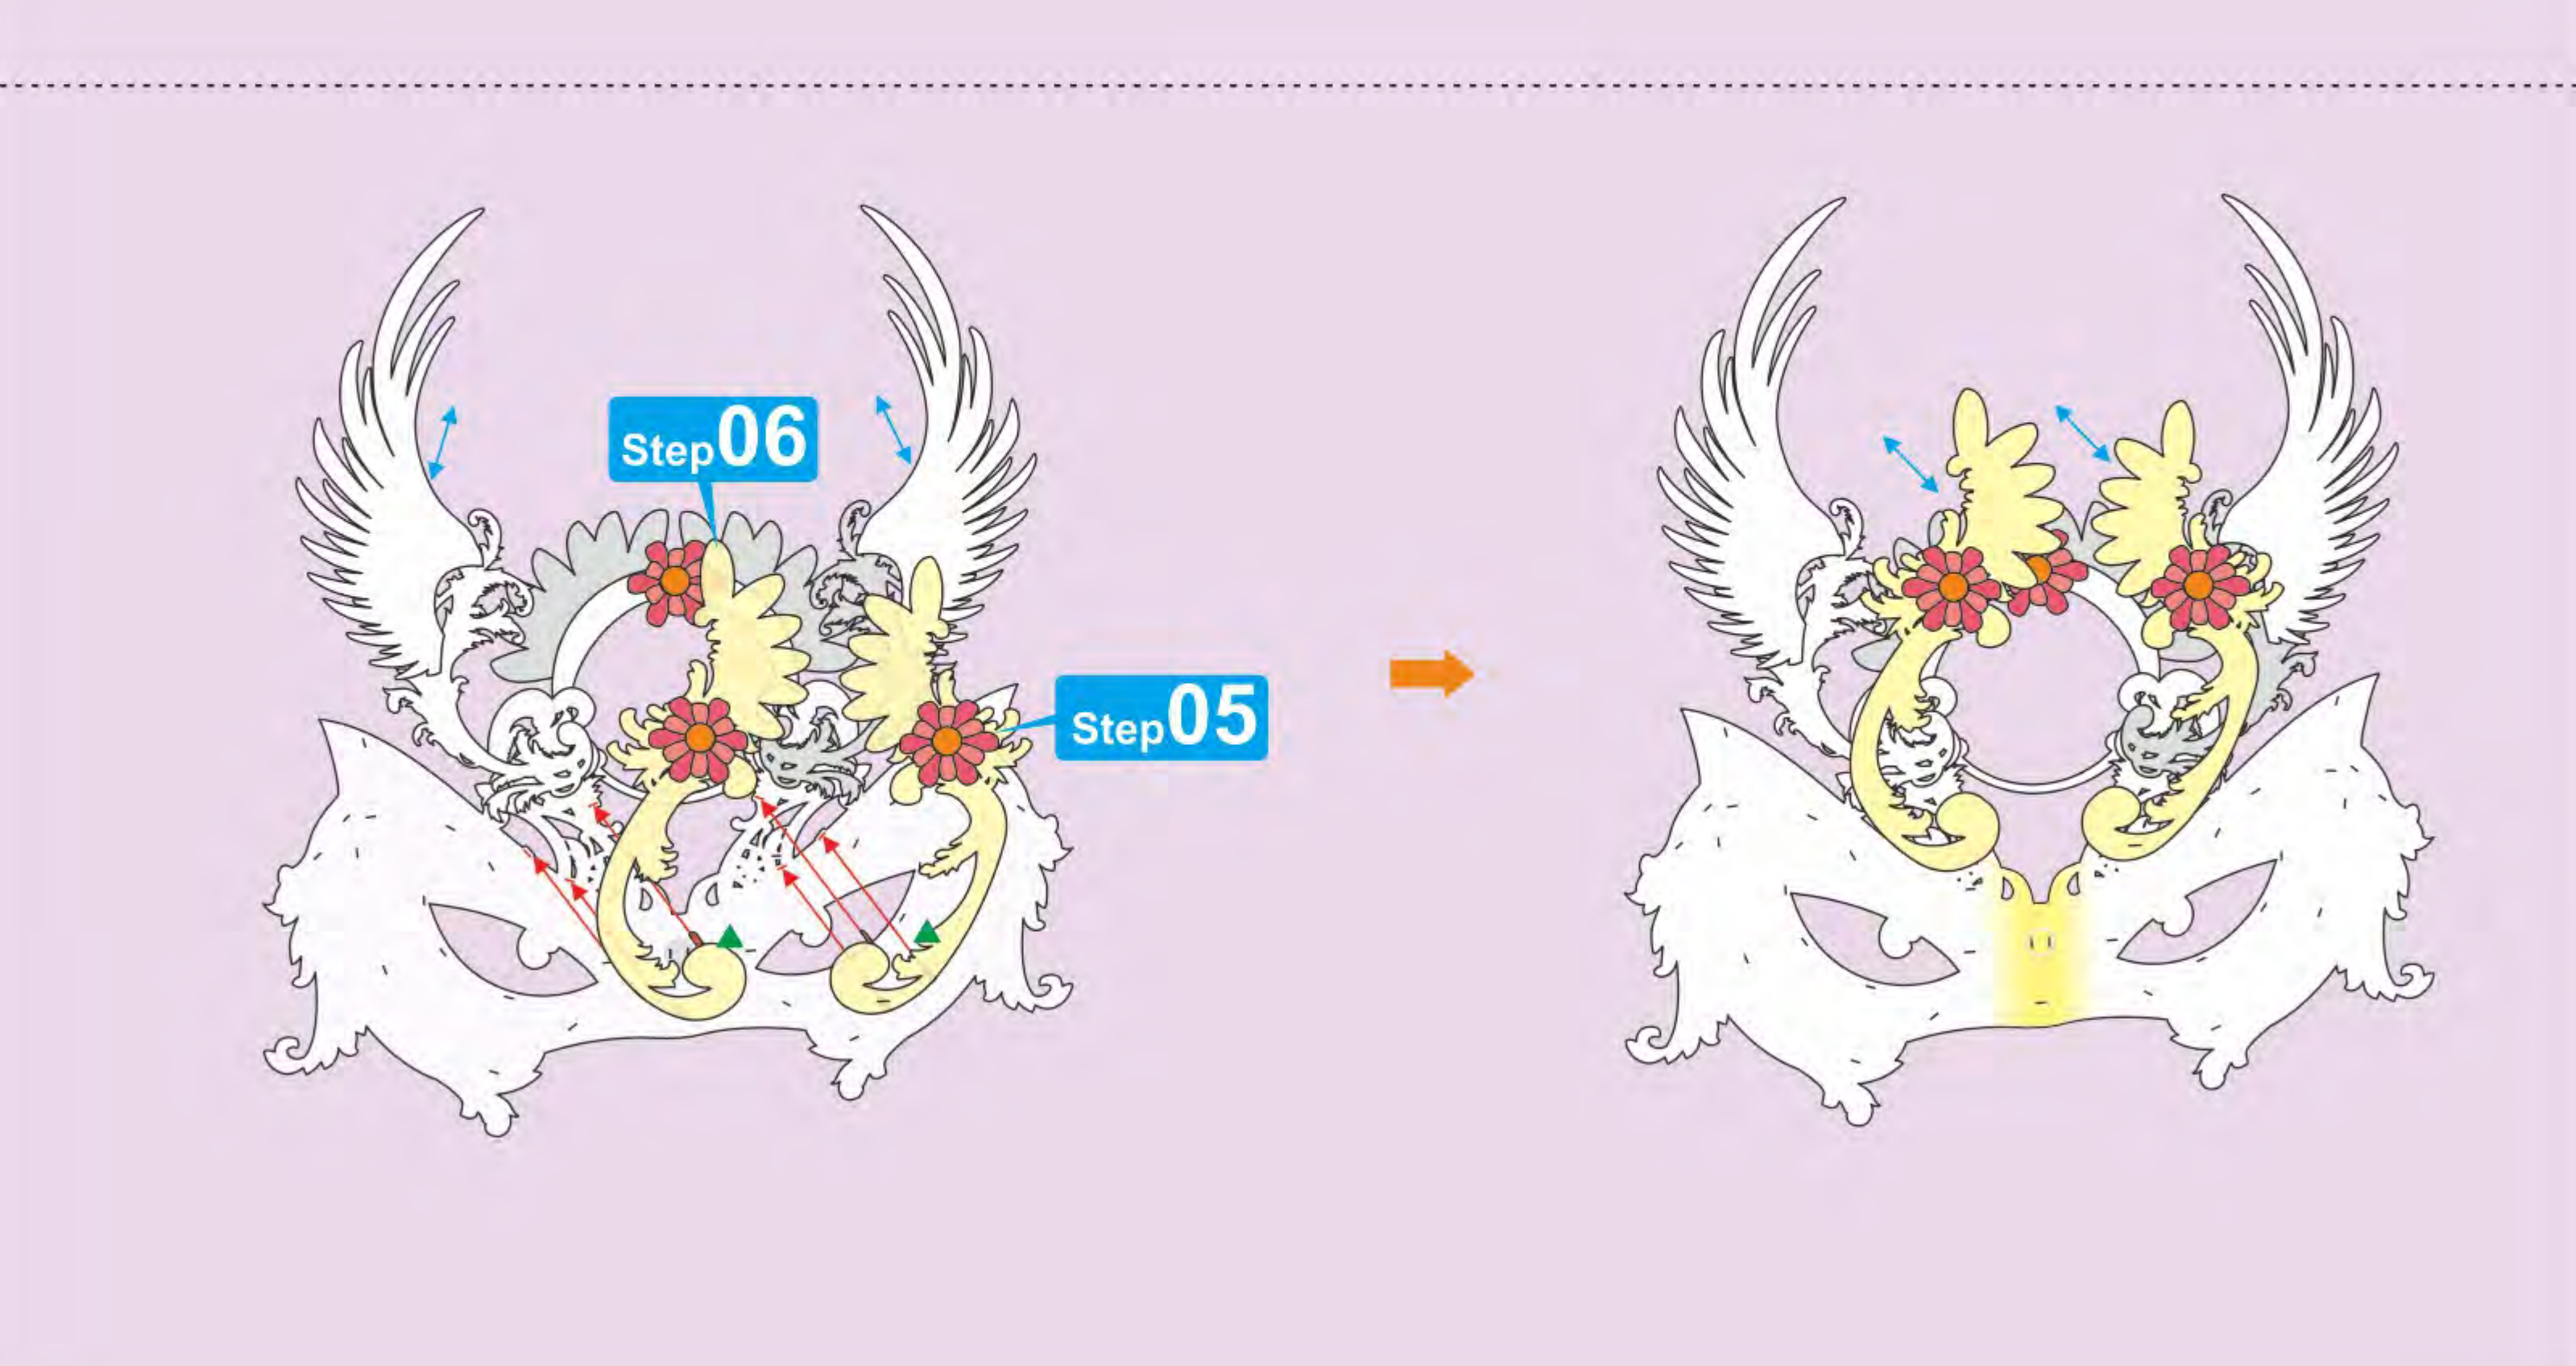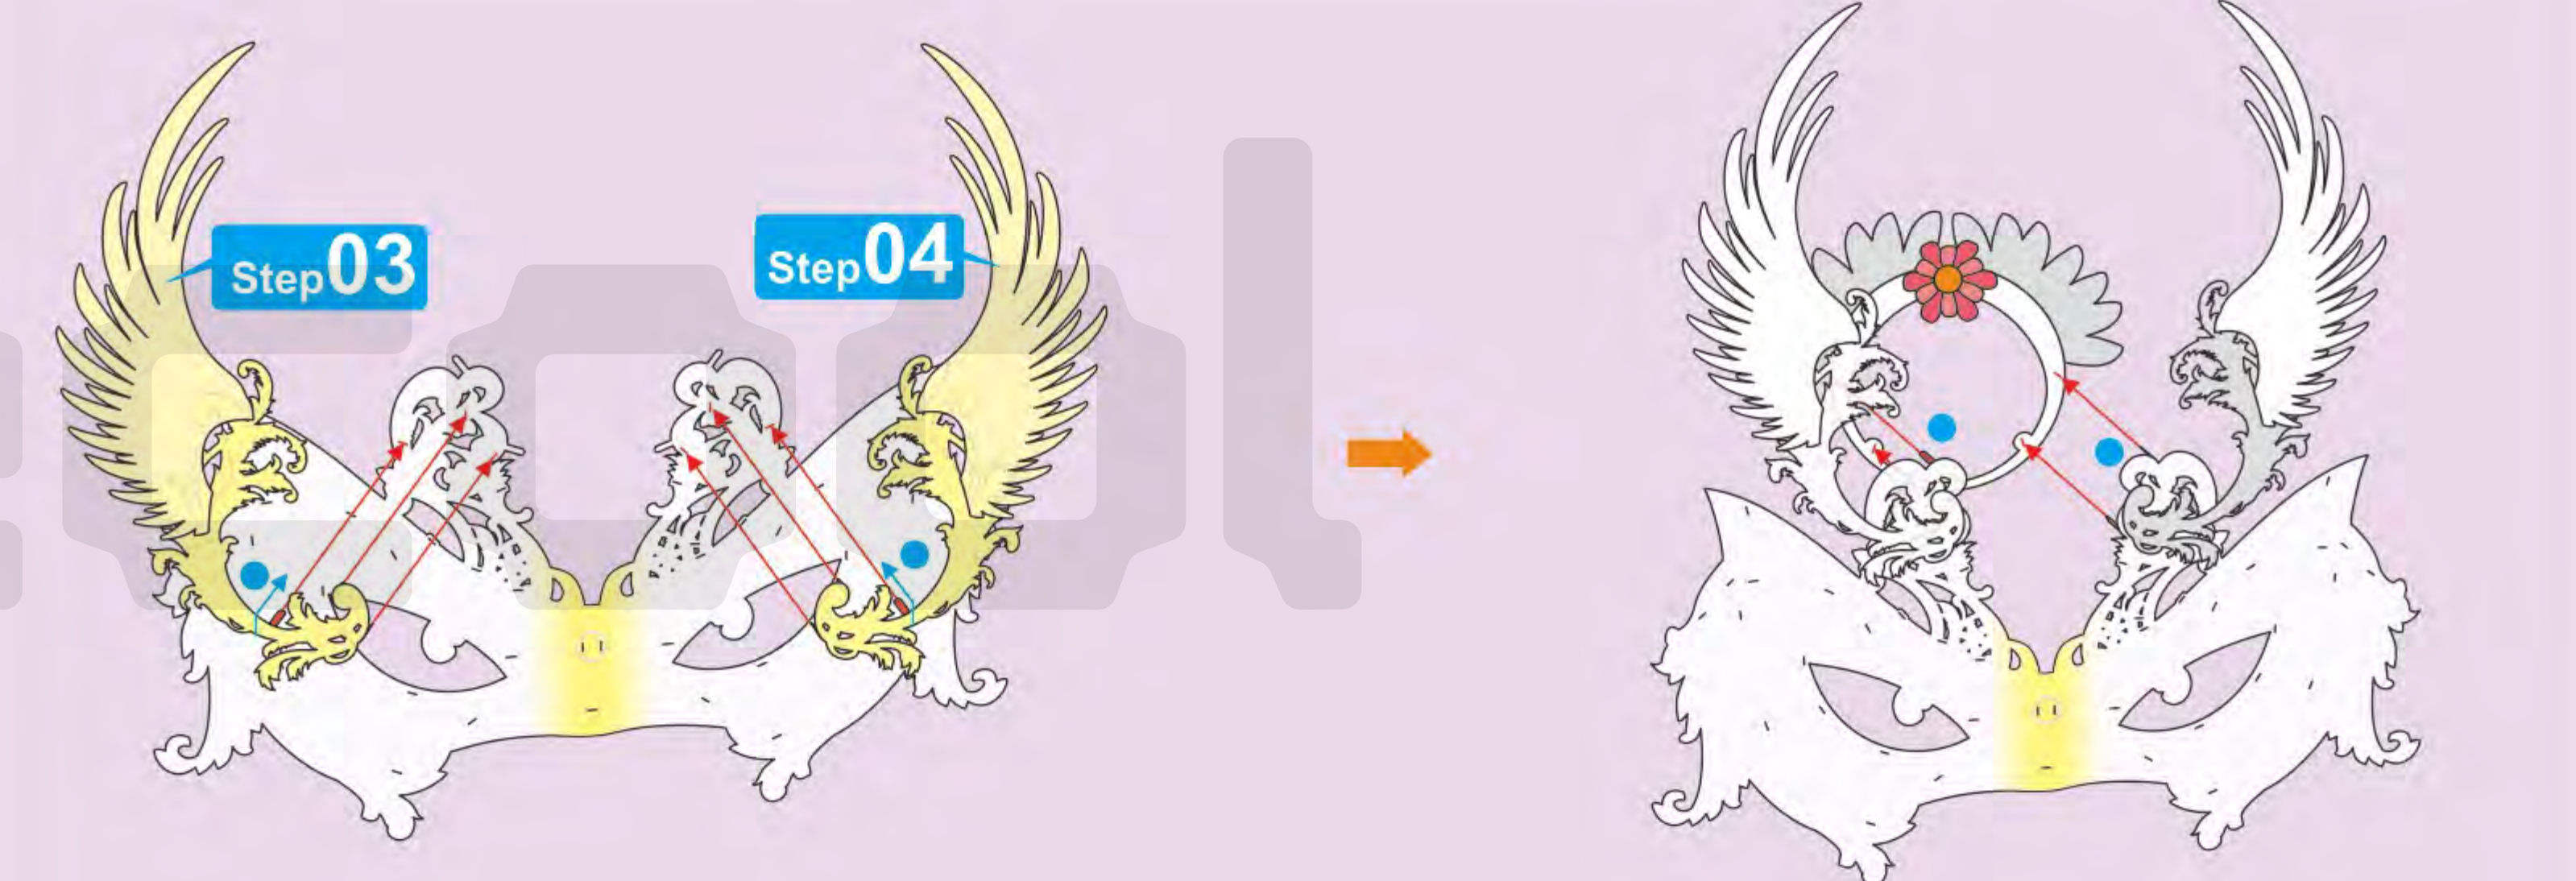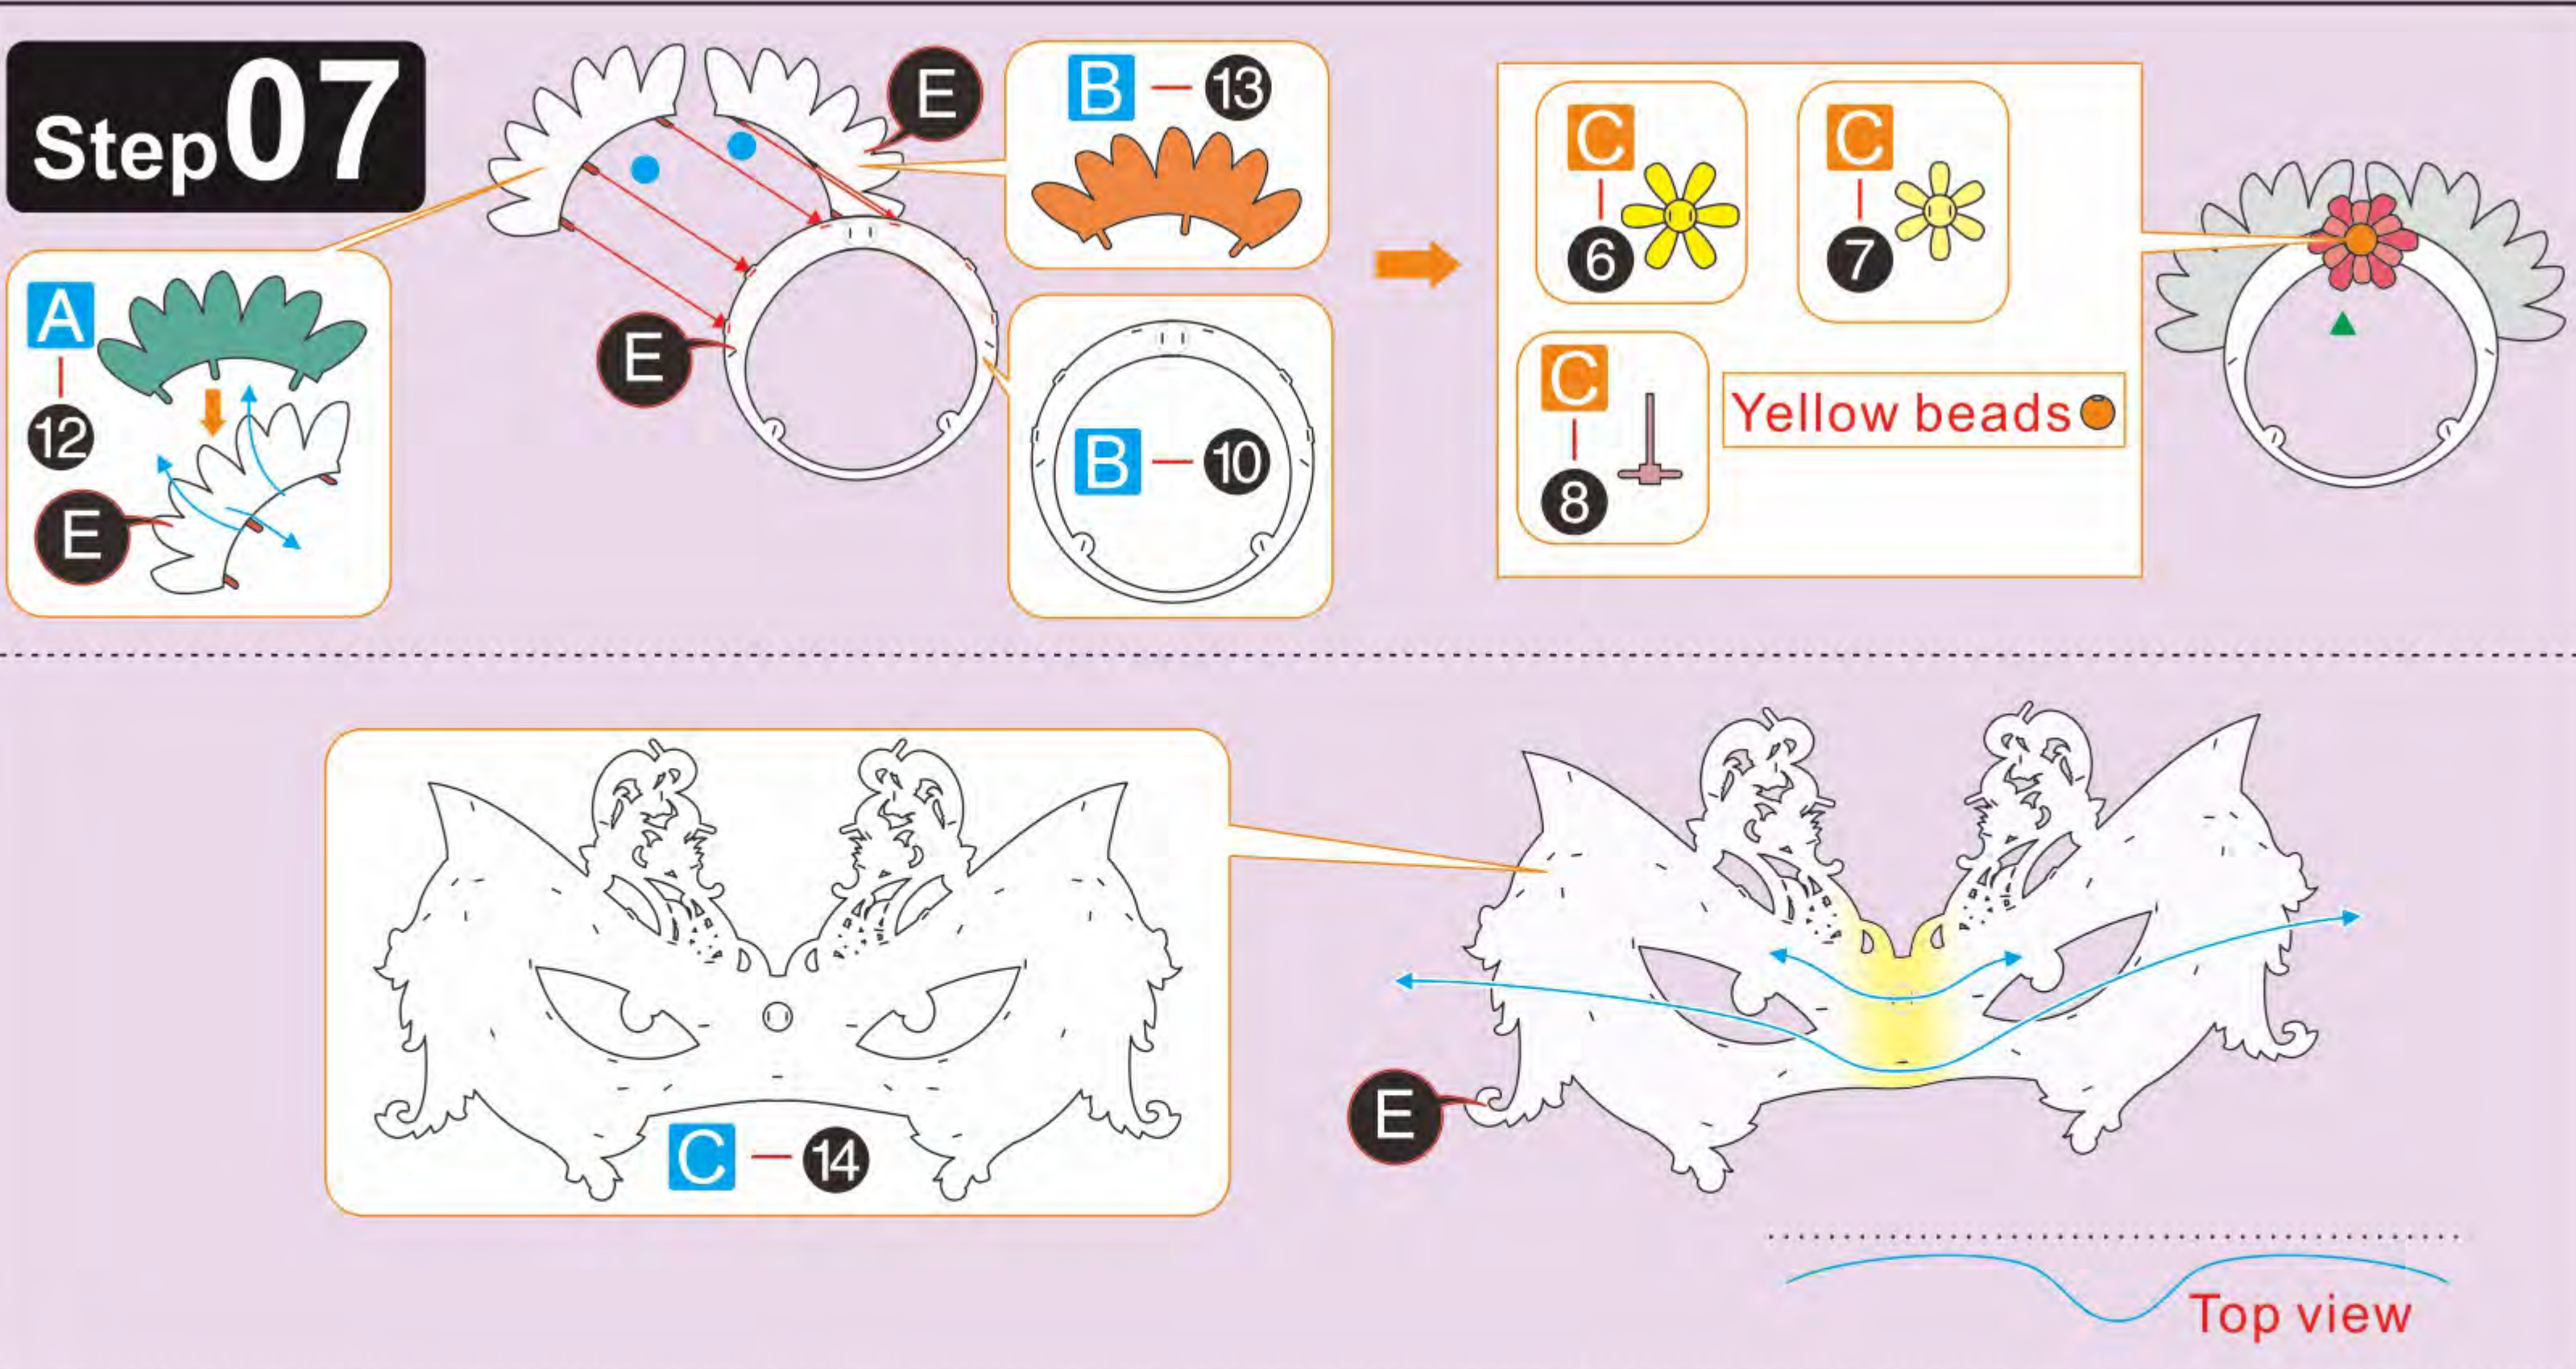



# Step 08

Top view

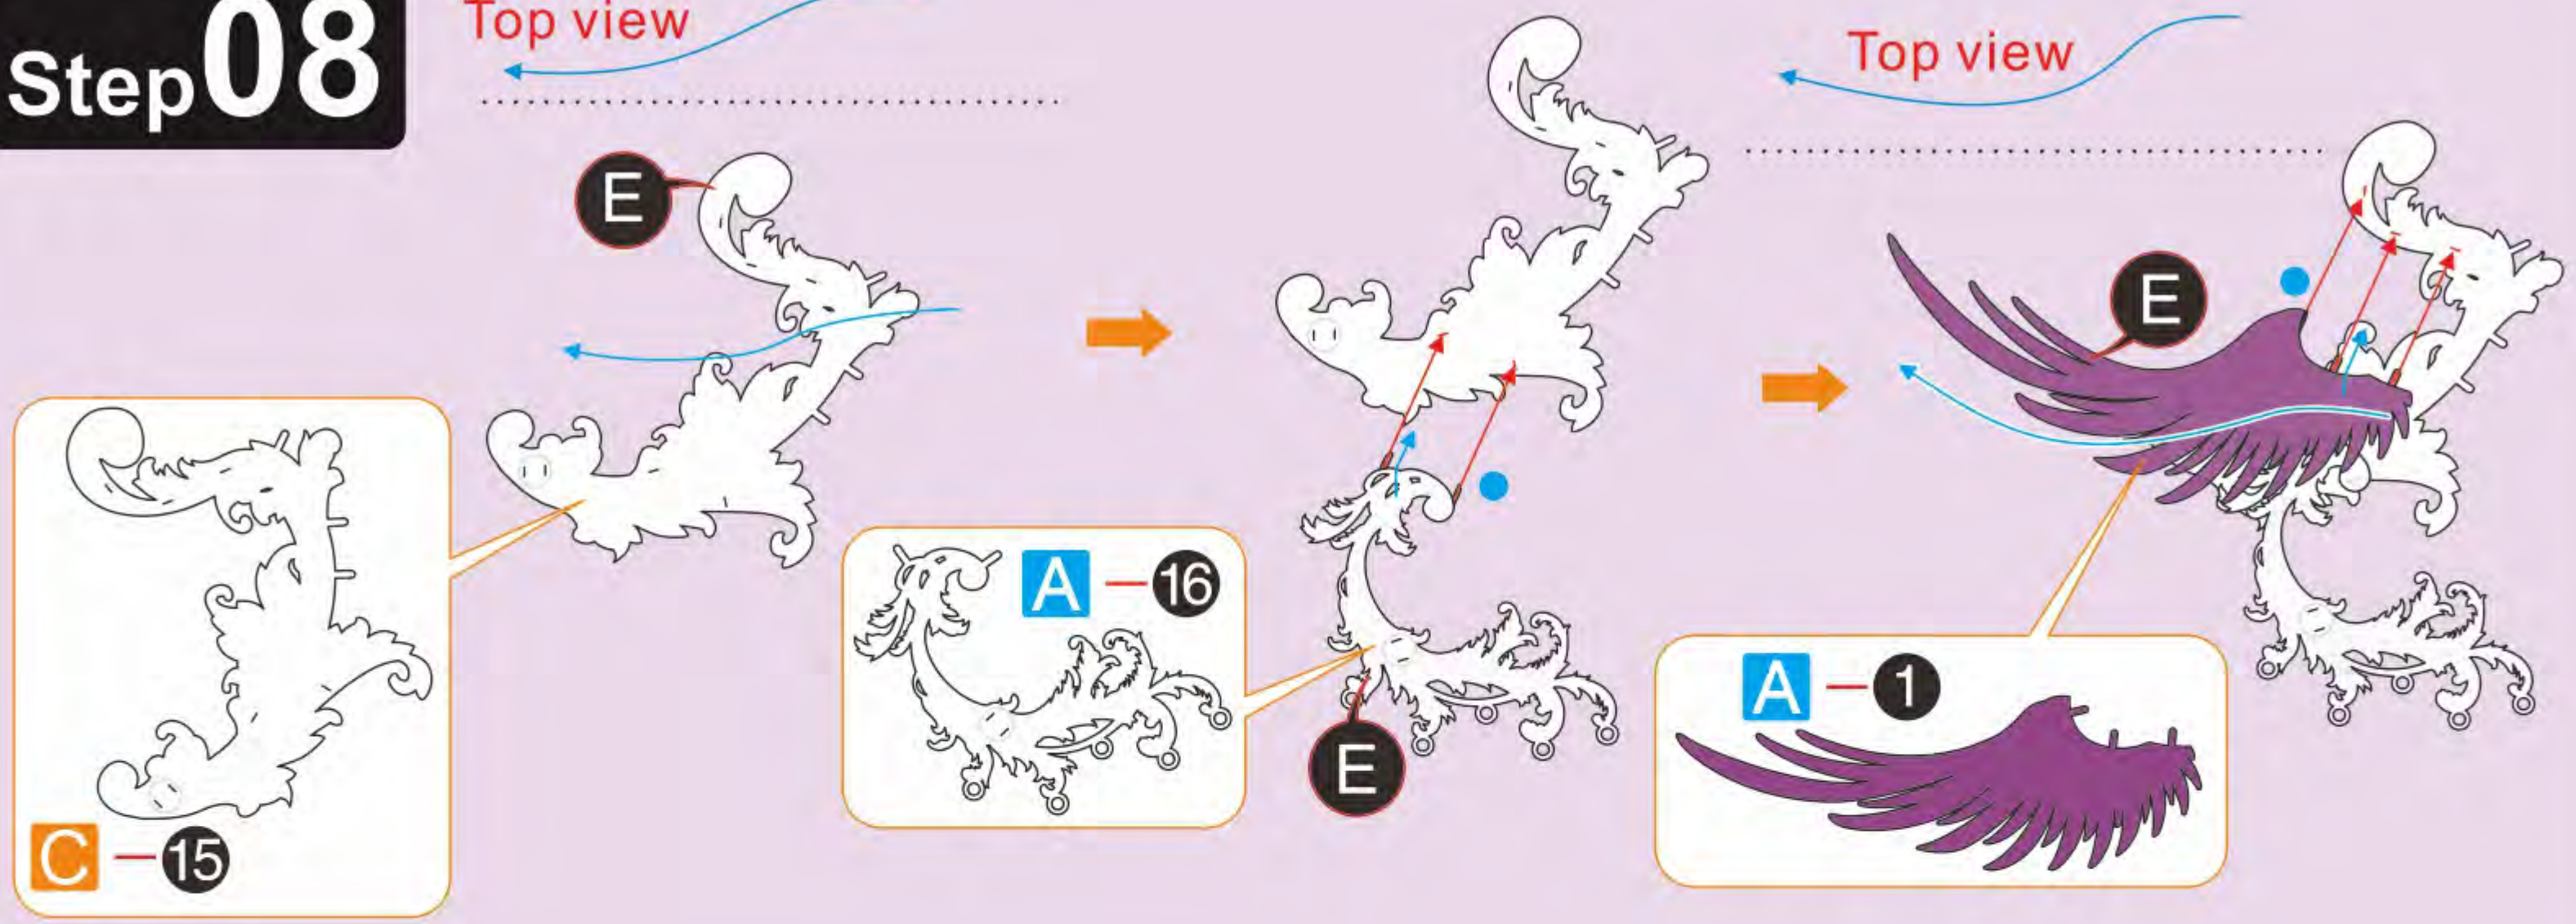



# Step 09

Top view

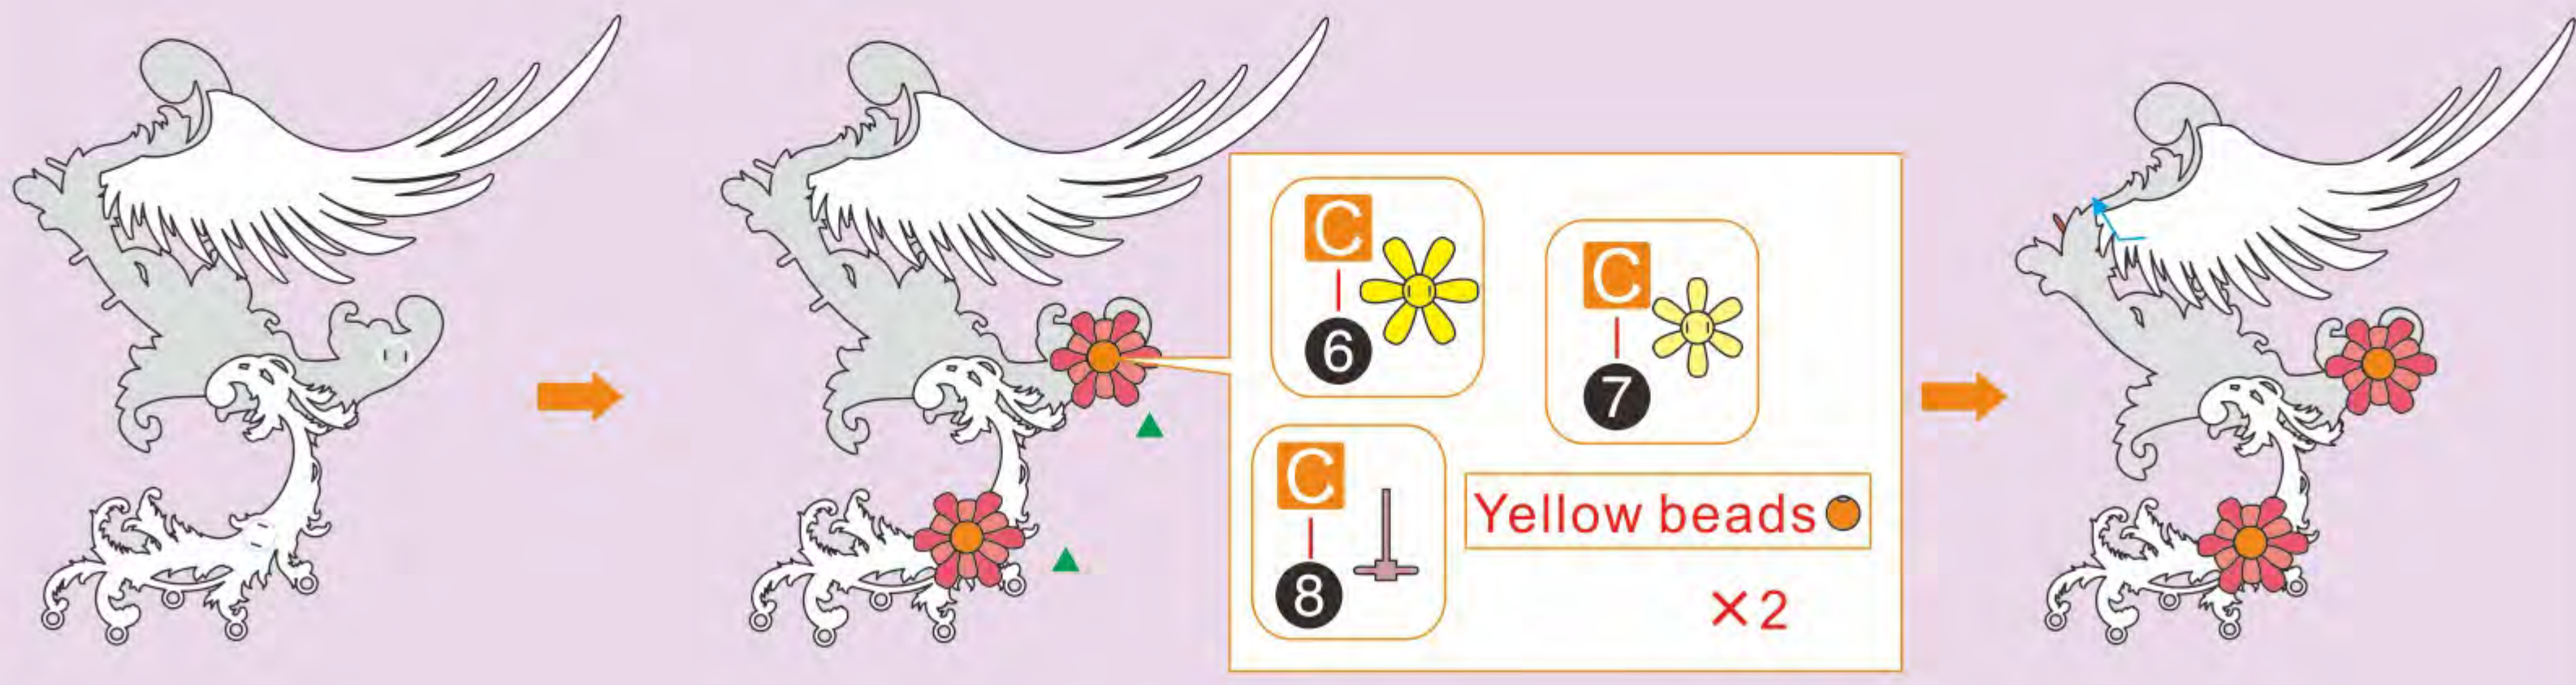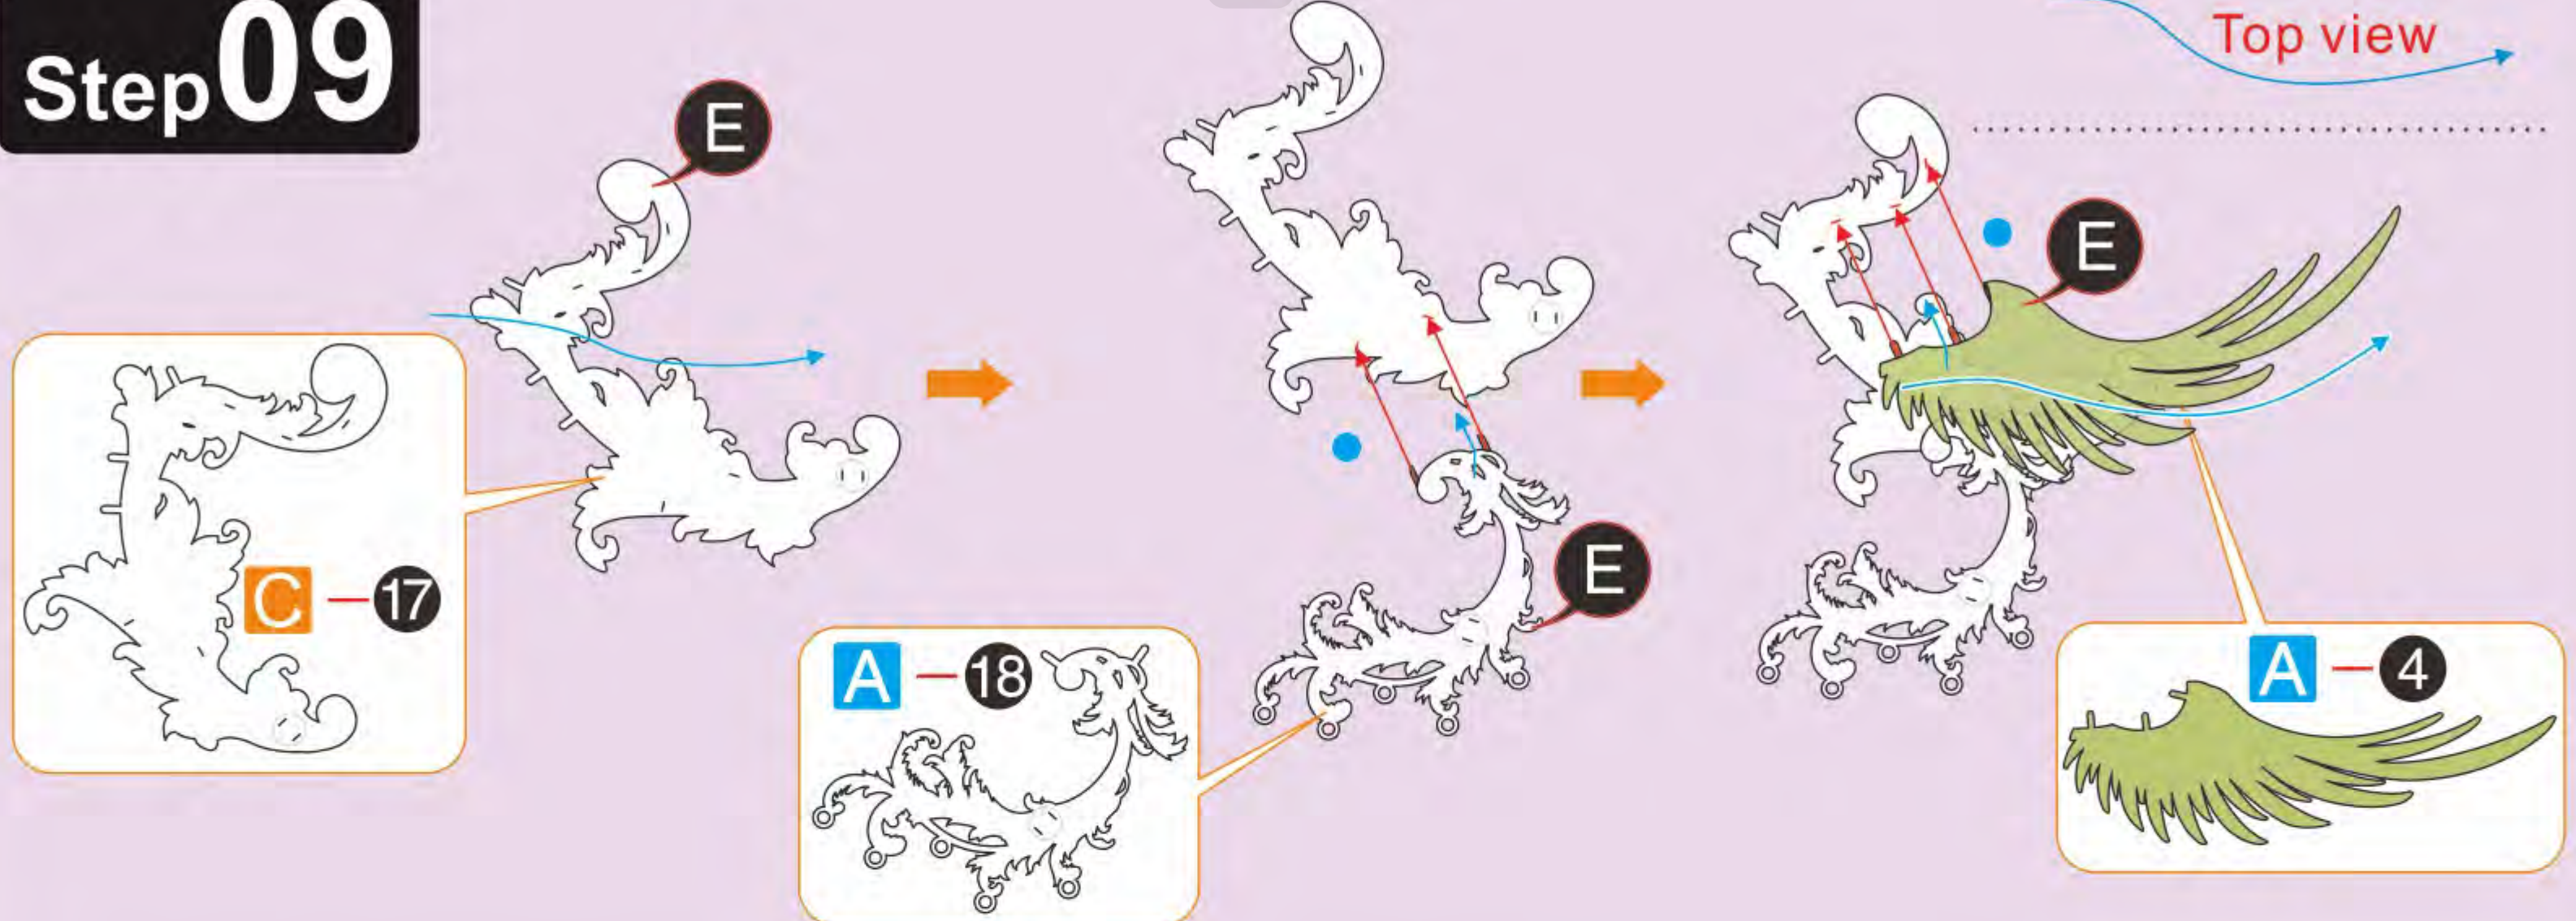



# Step 10

Top view

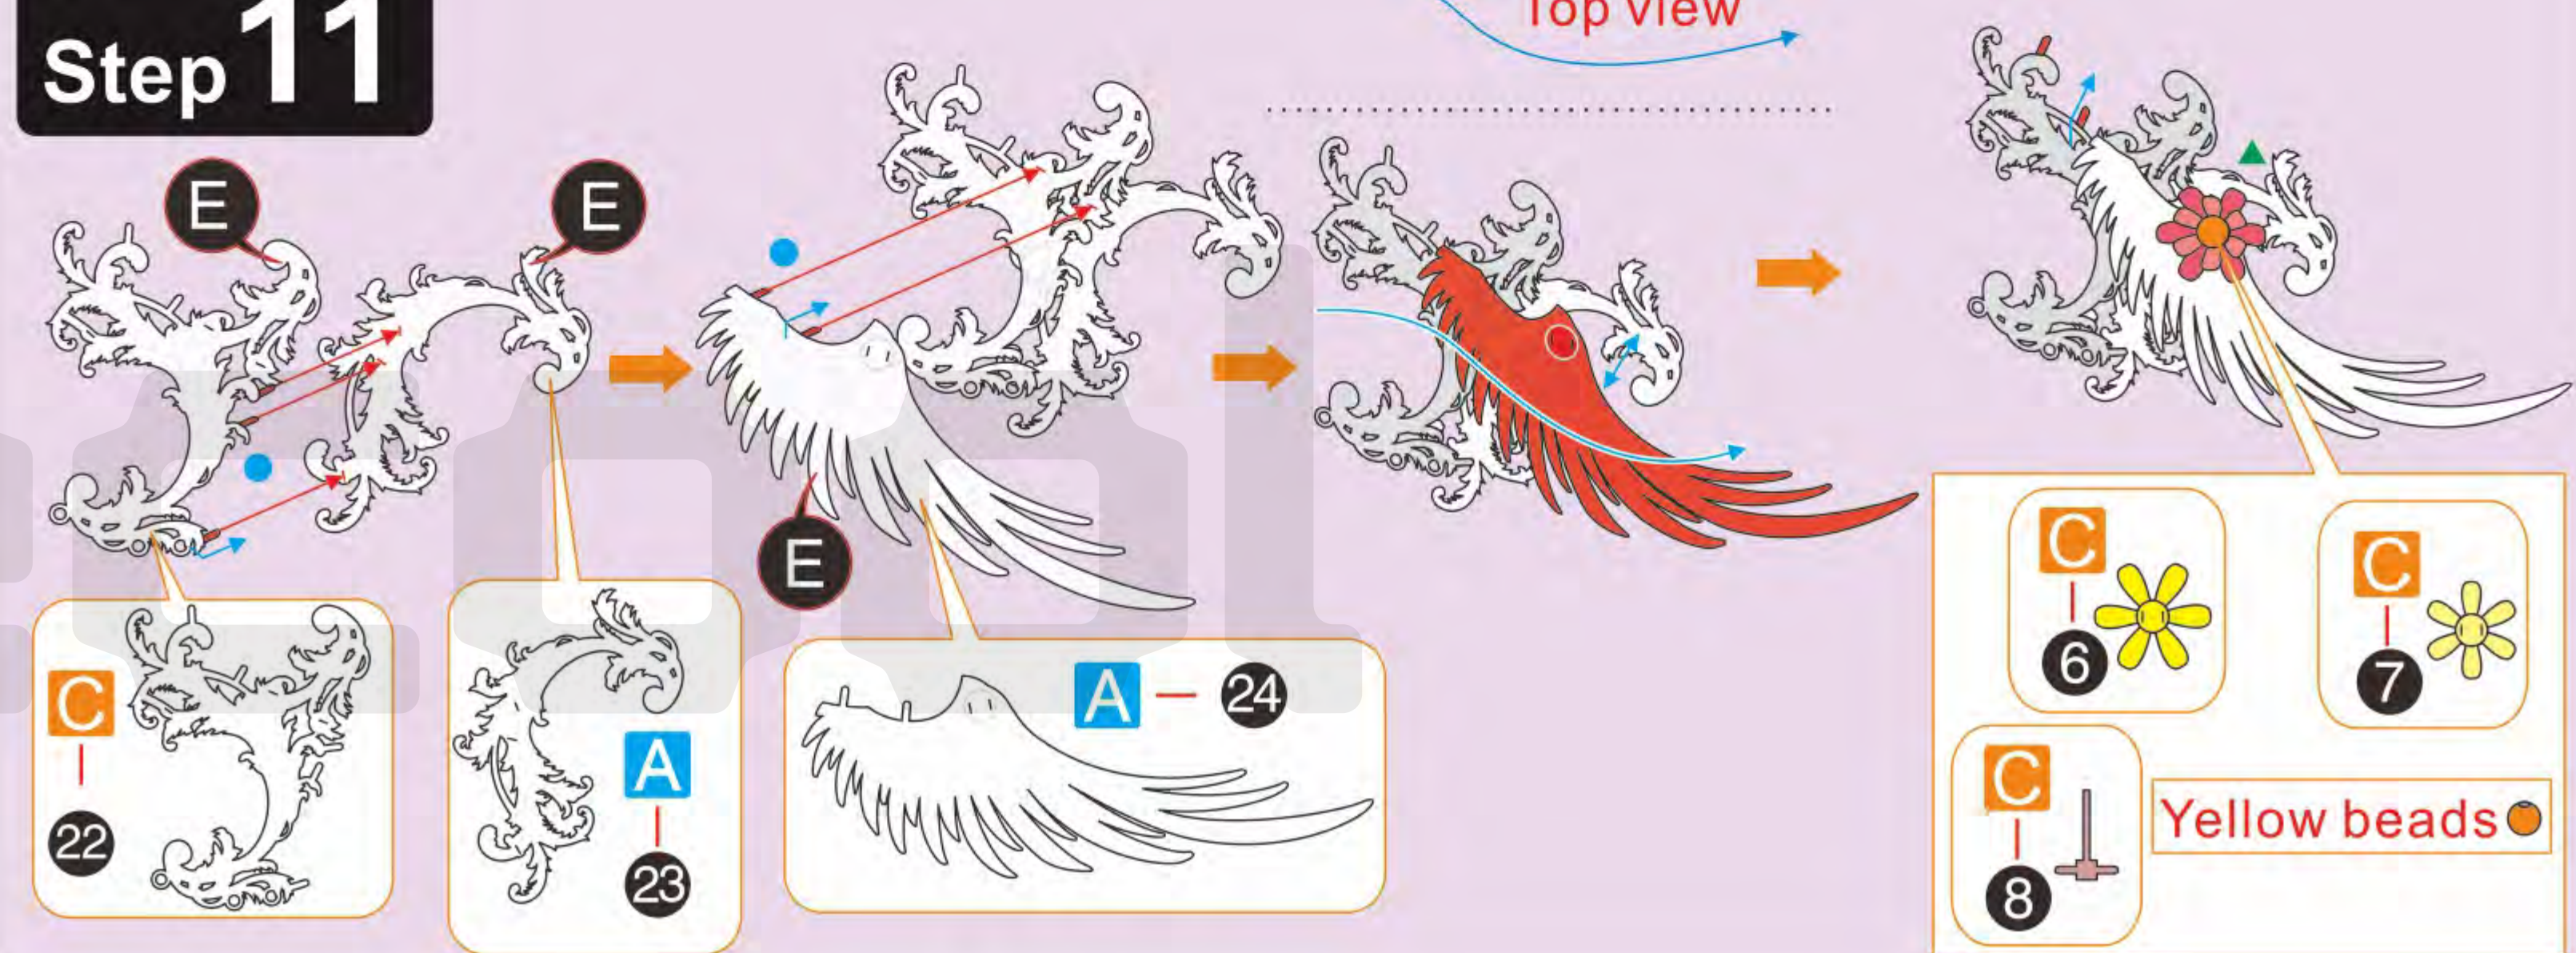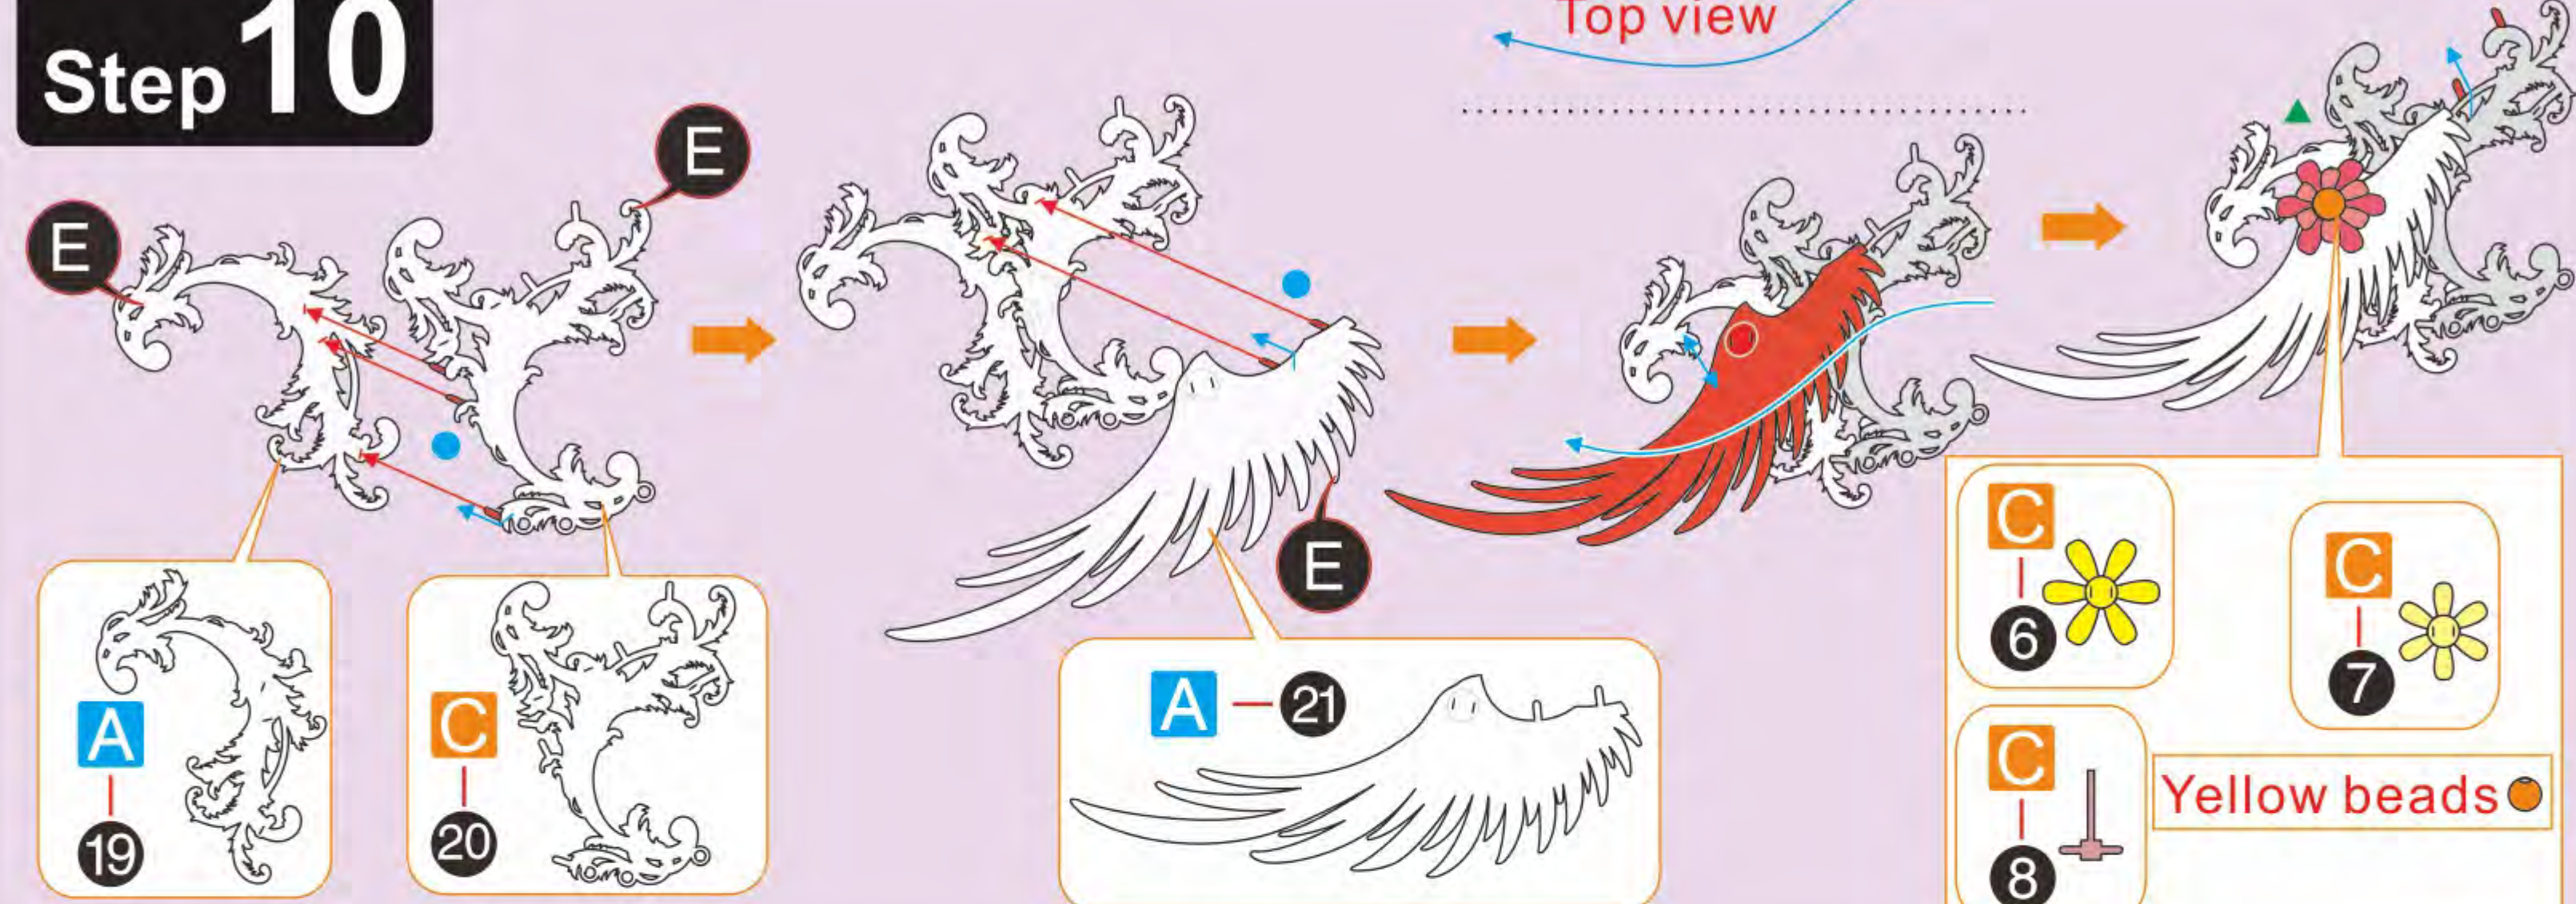


# Step 11

Top view



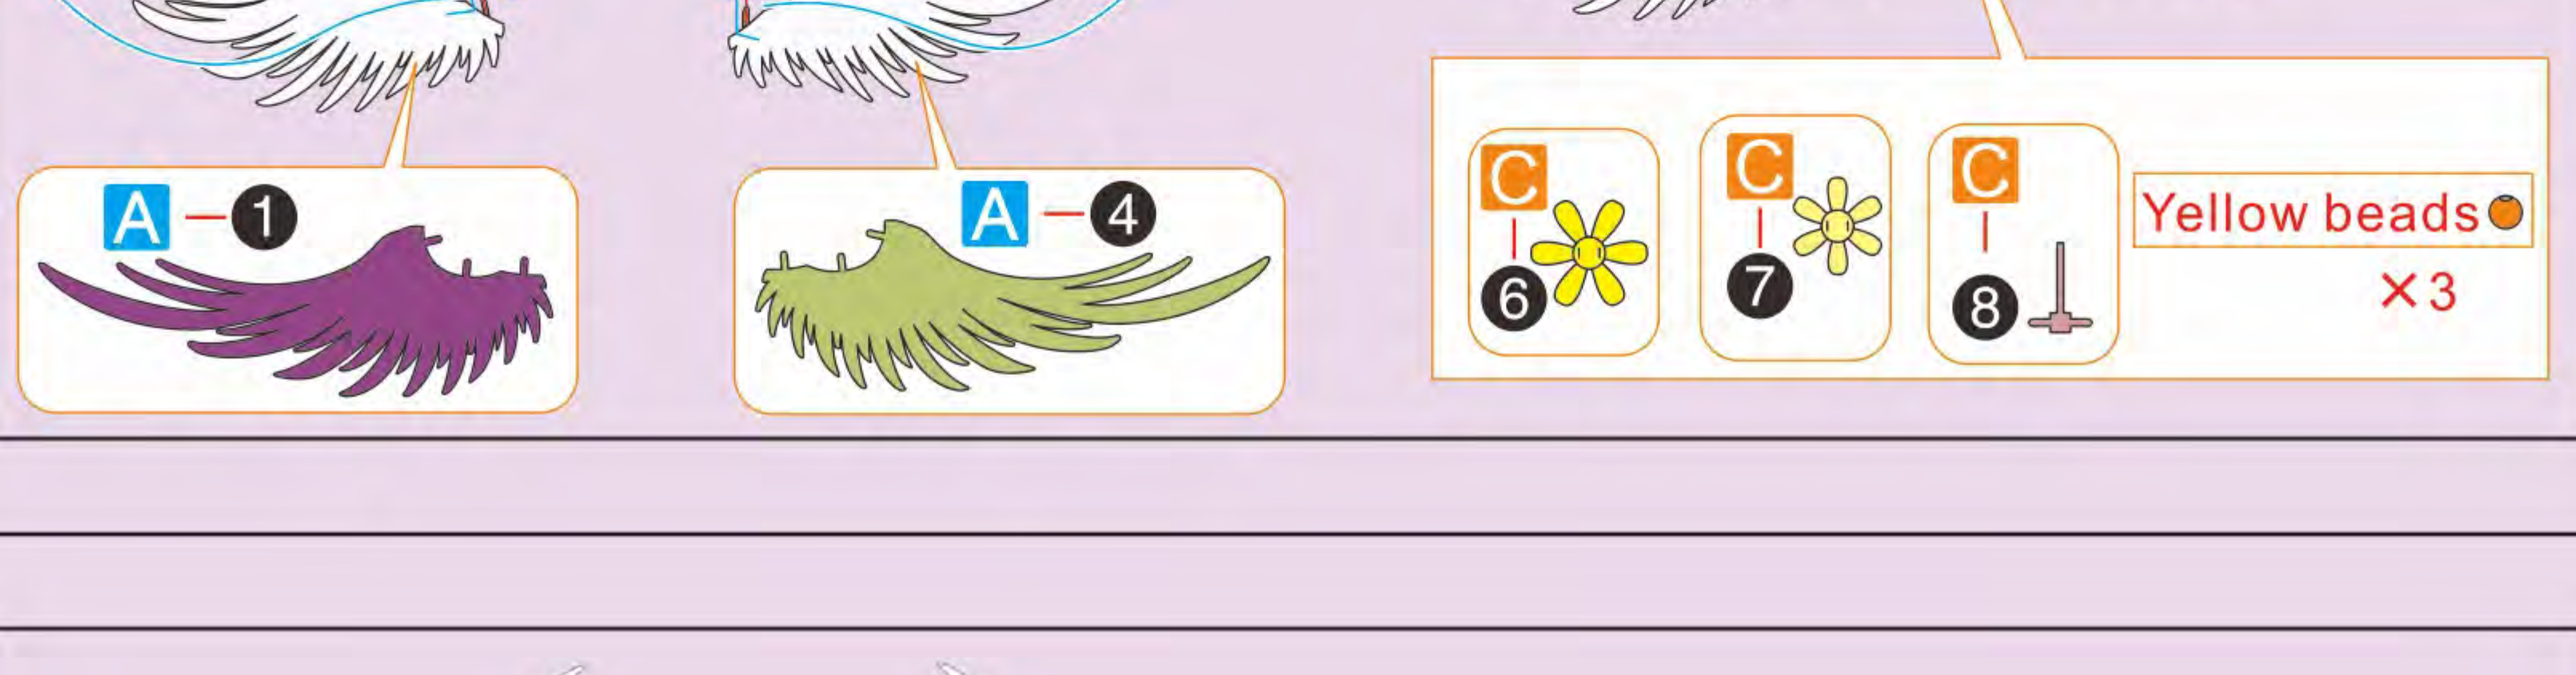
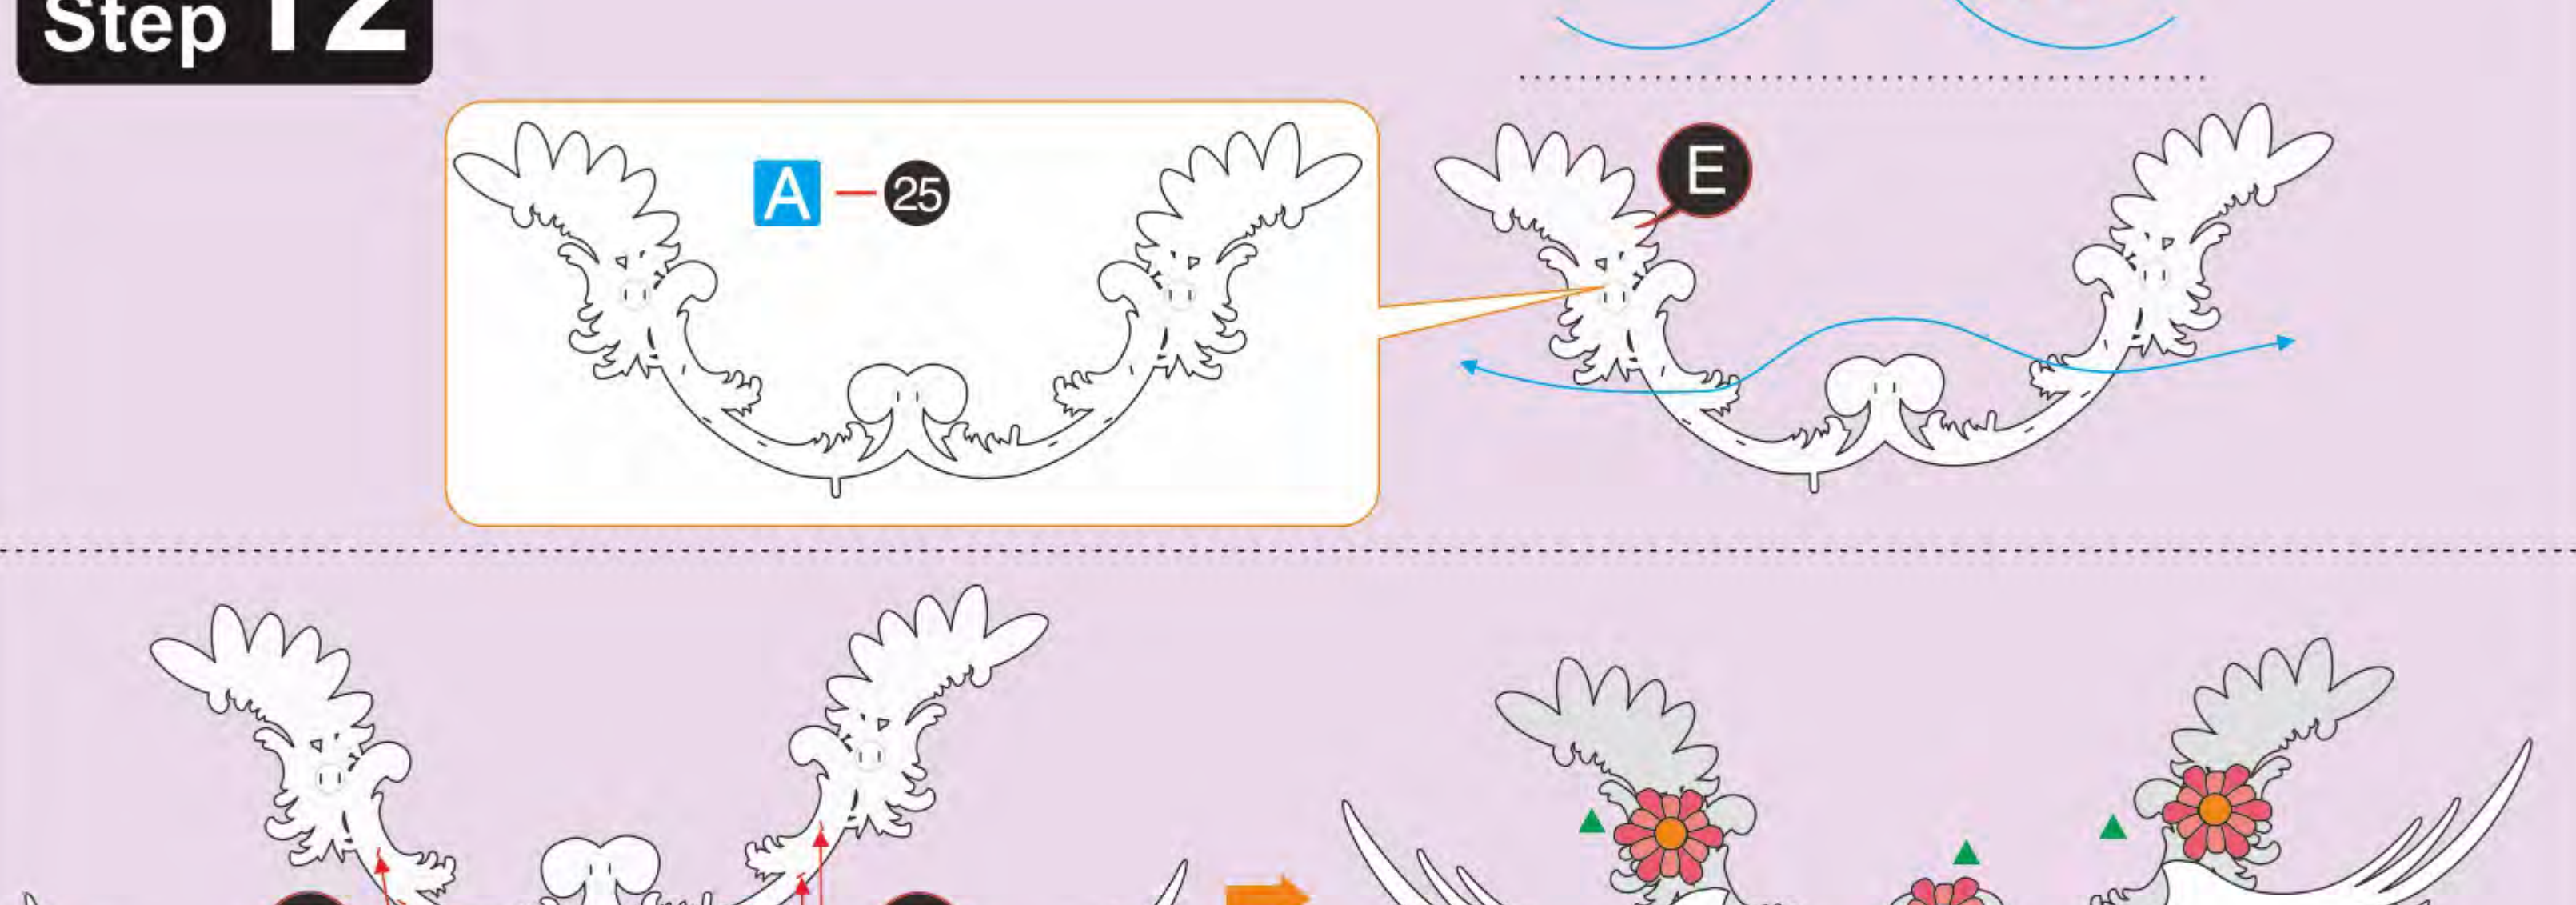


# Step 12


Top view

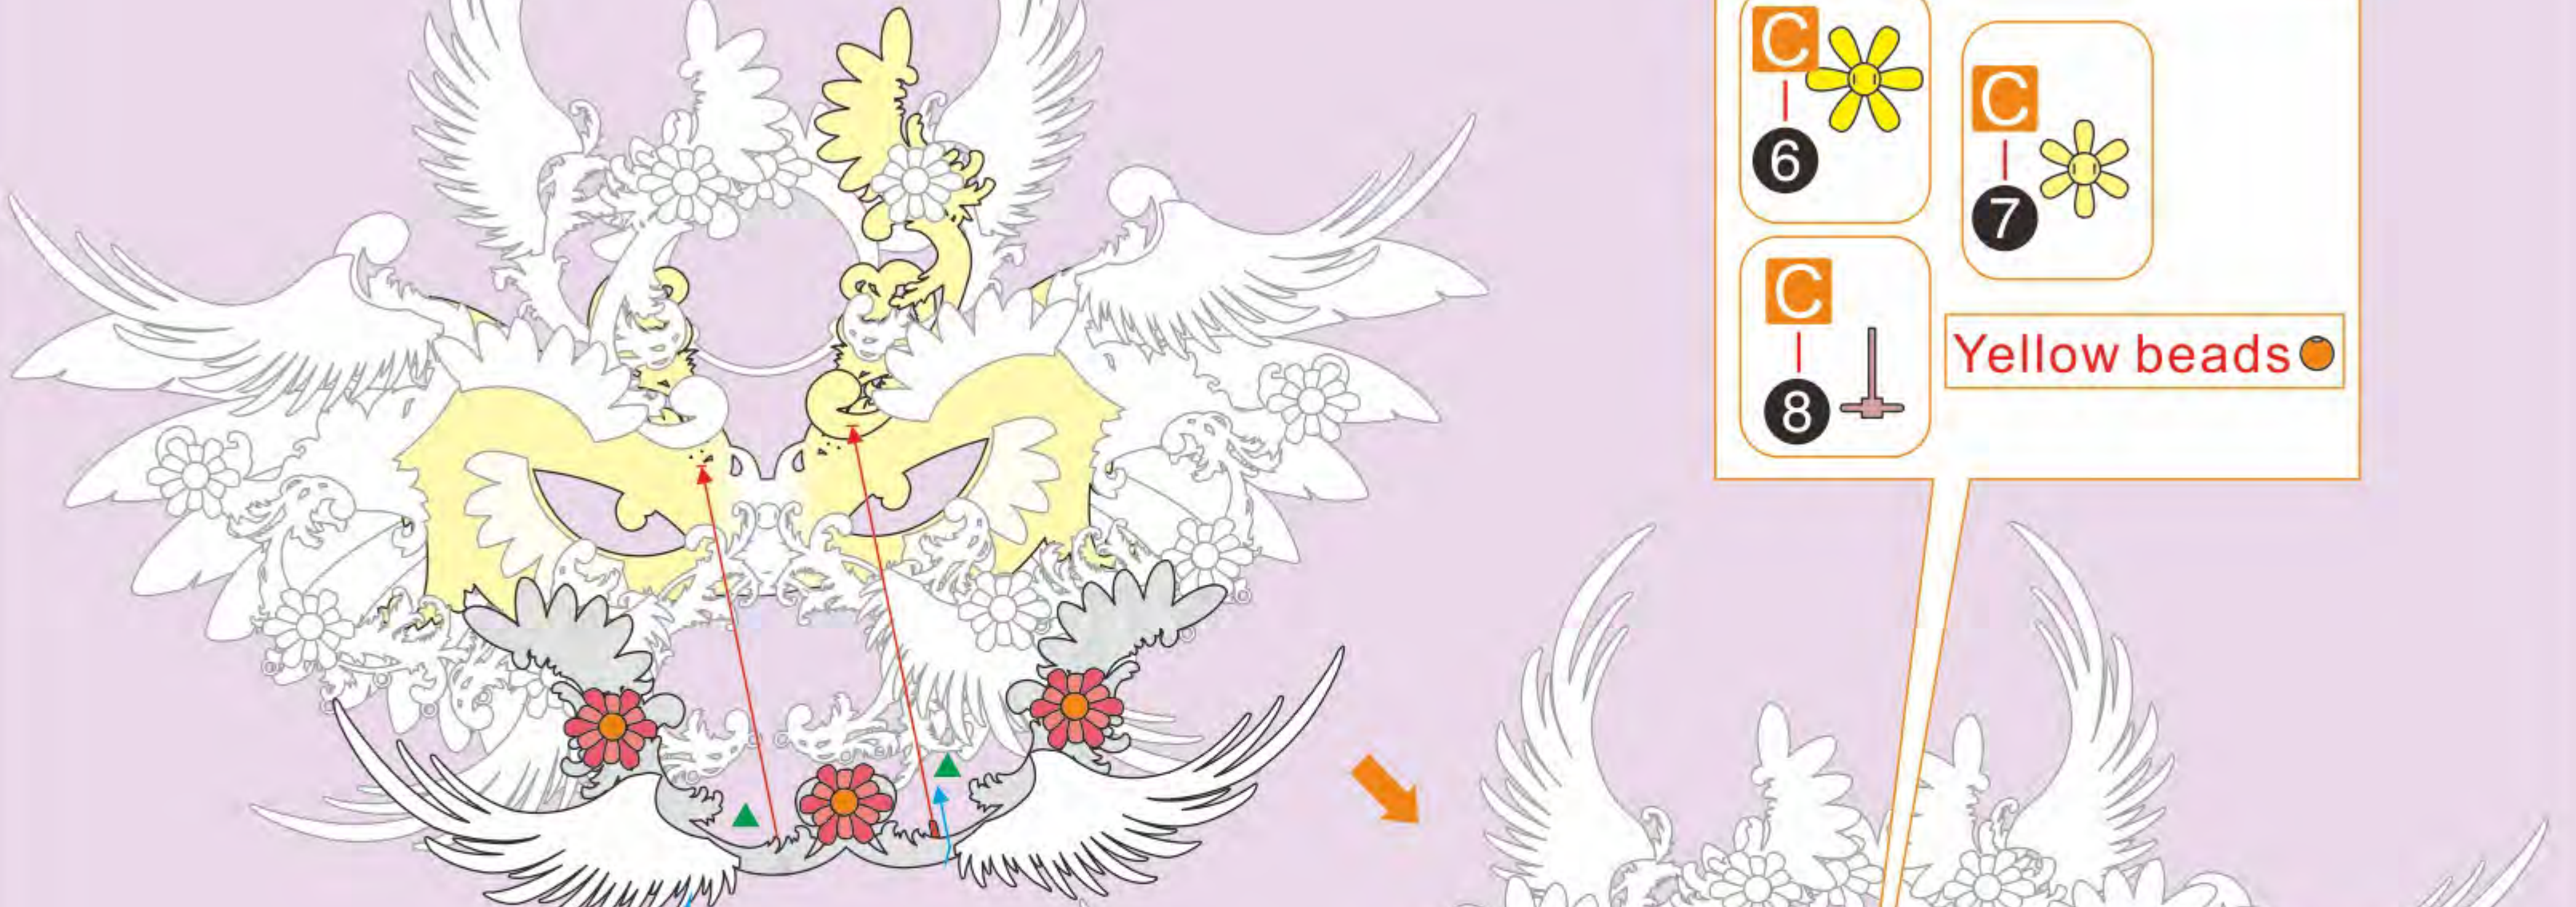



# Step 13

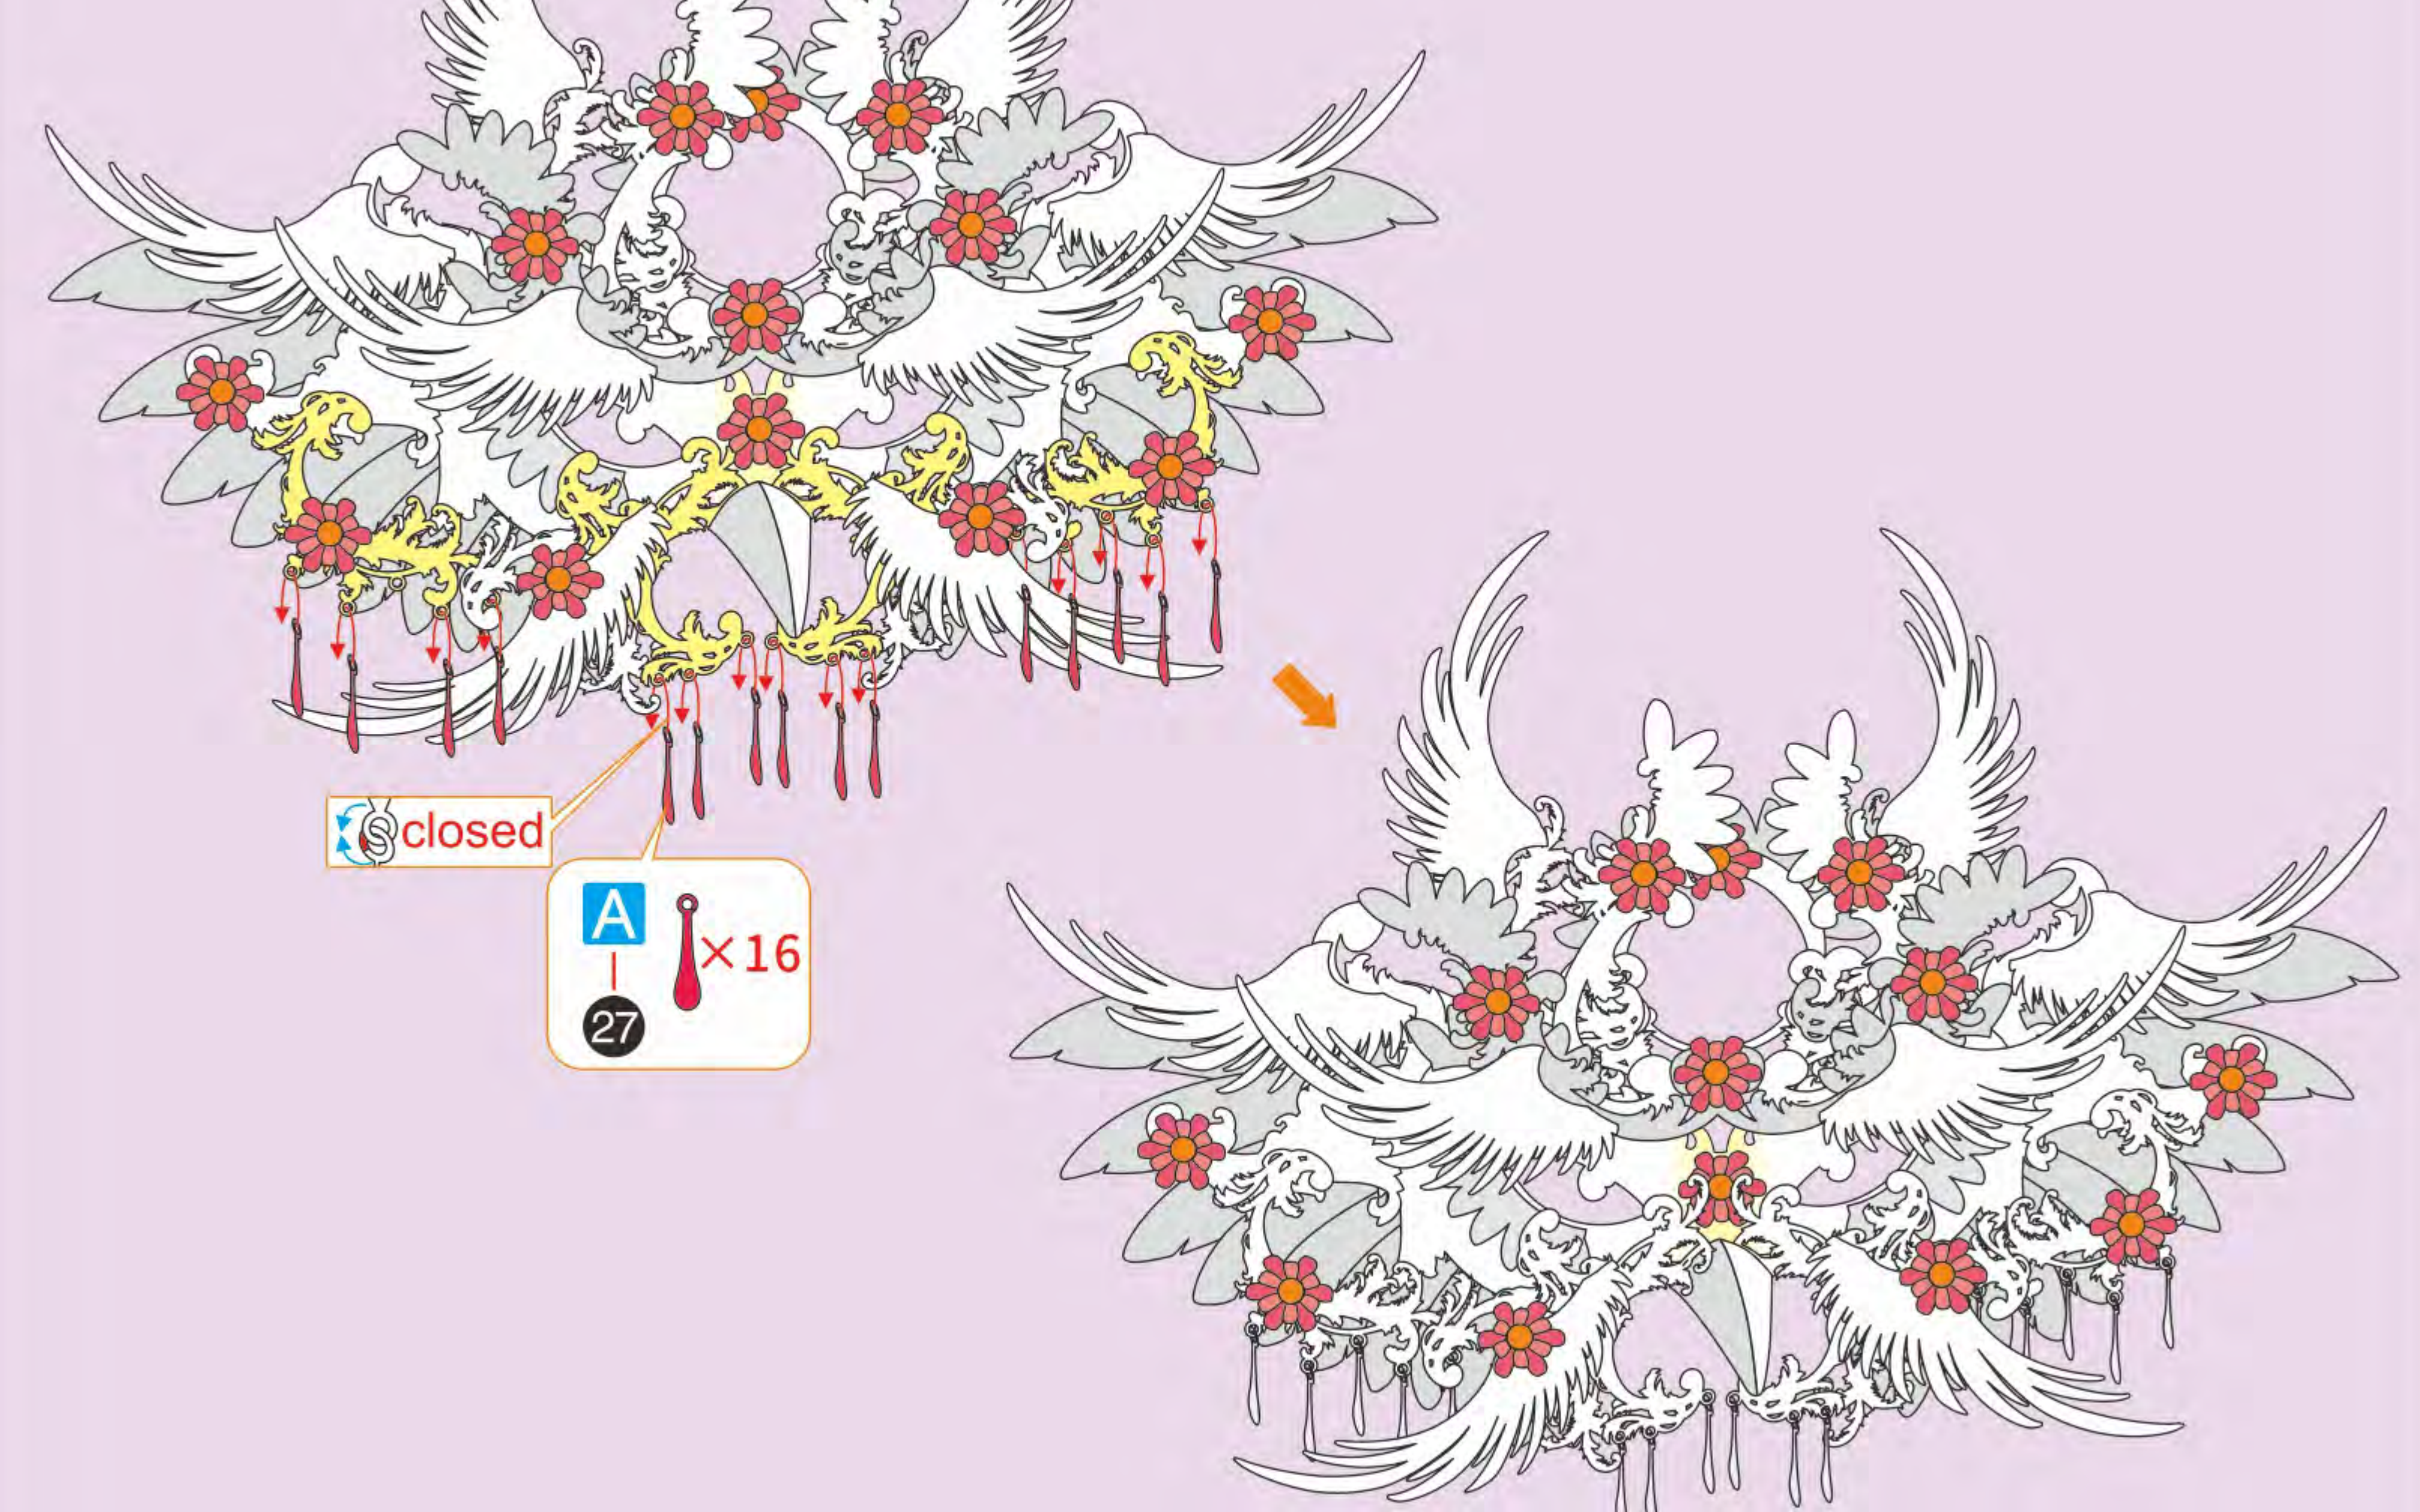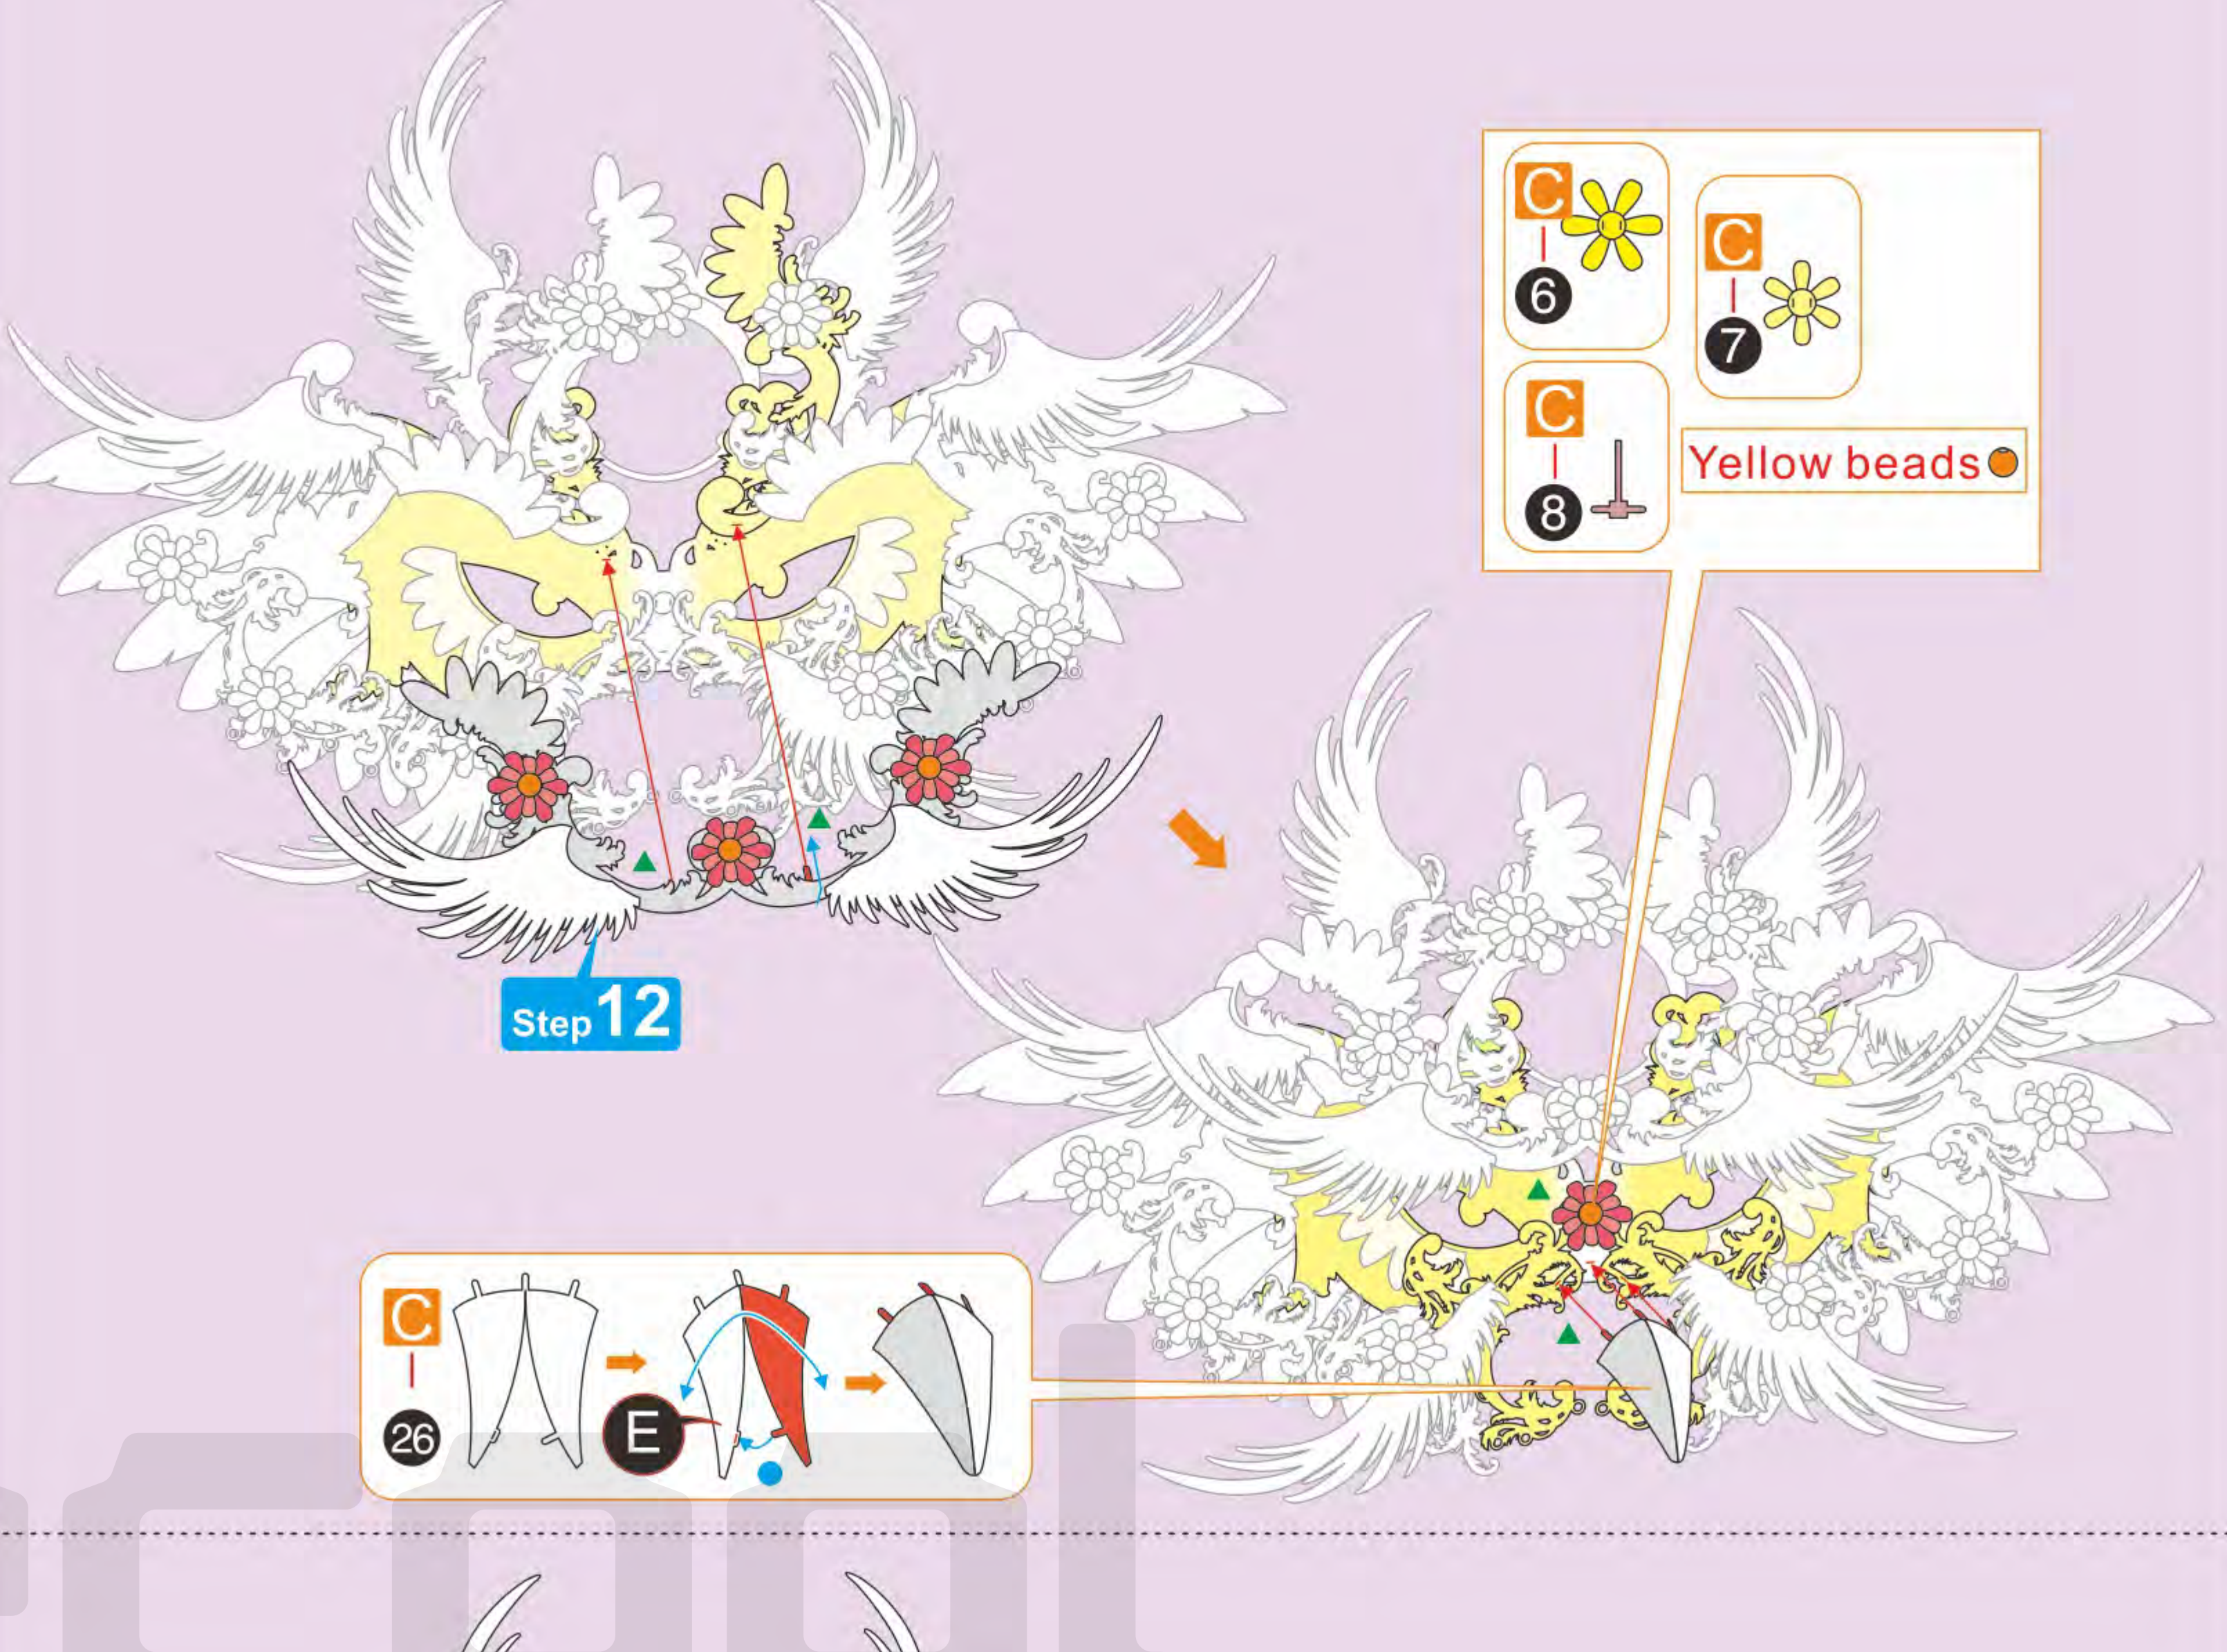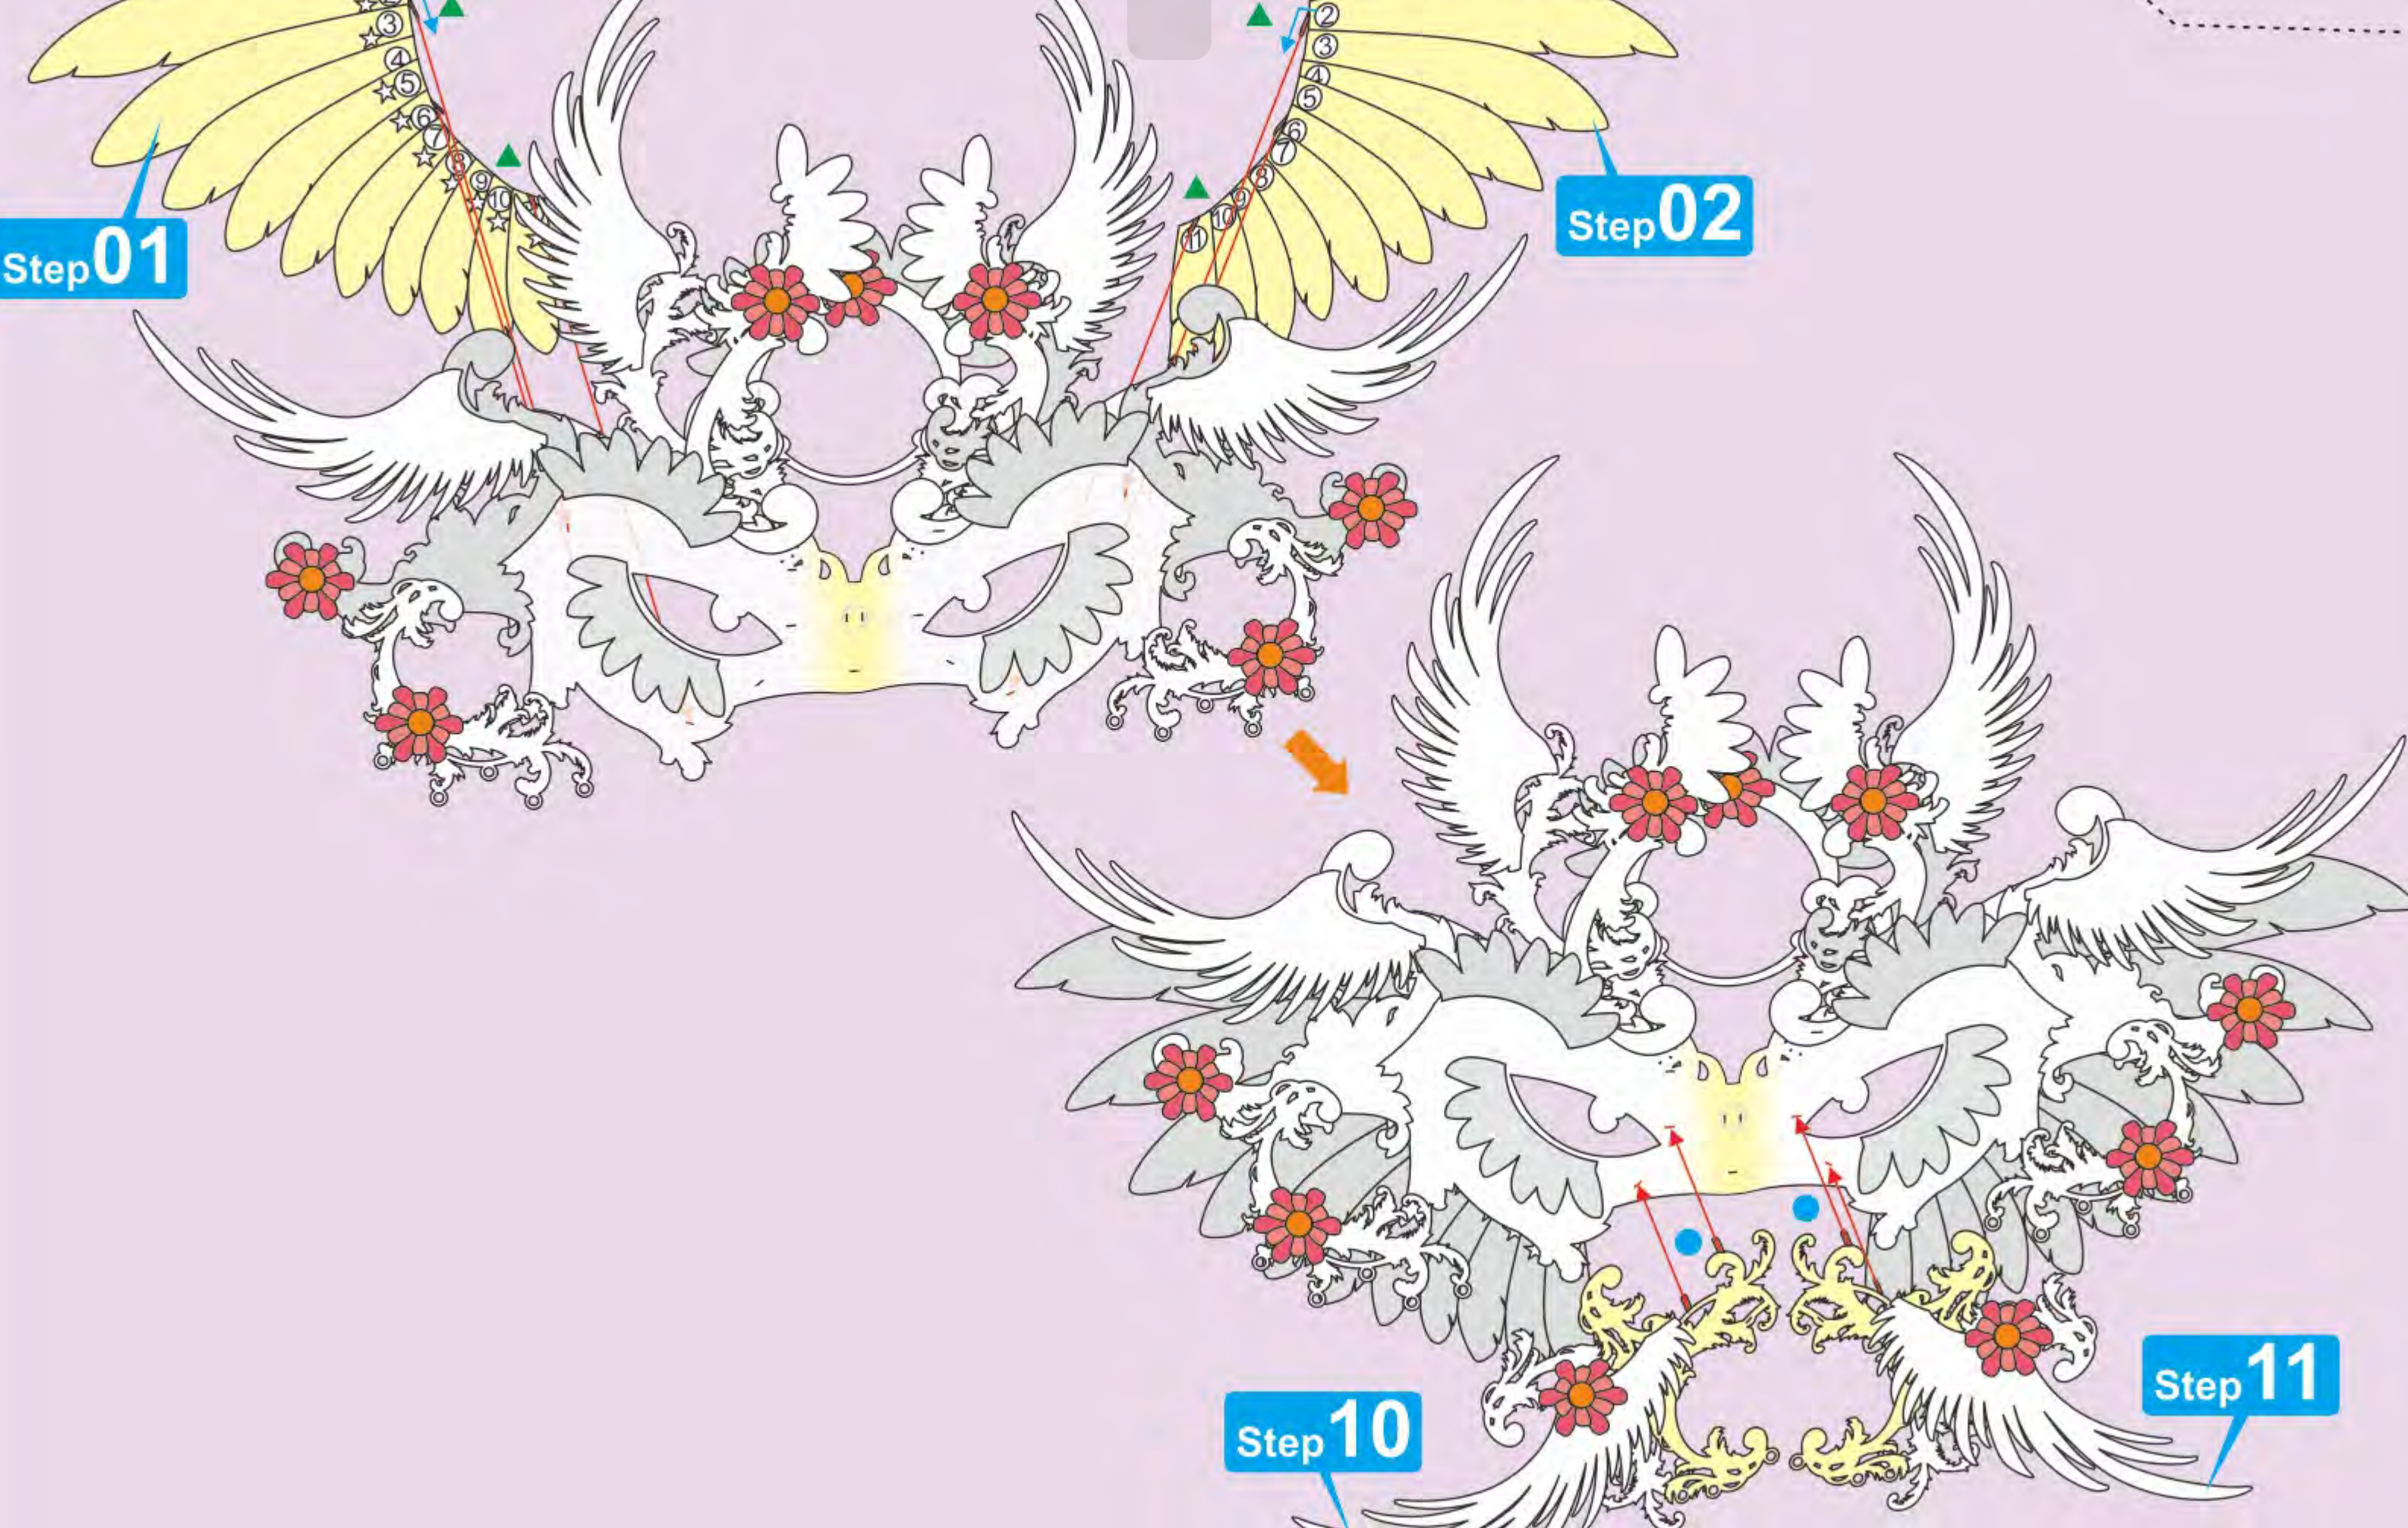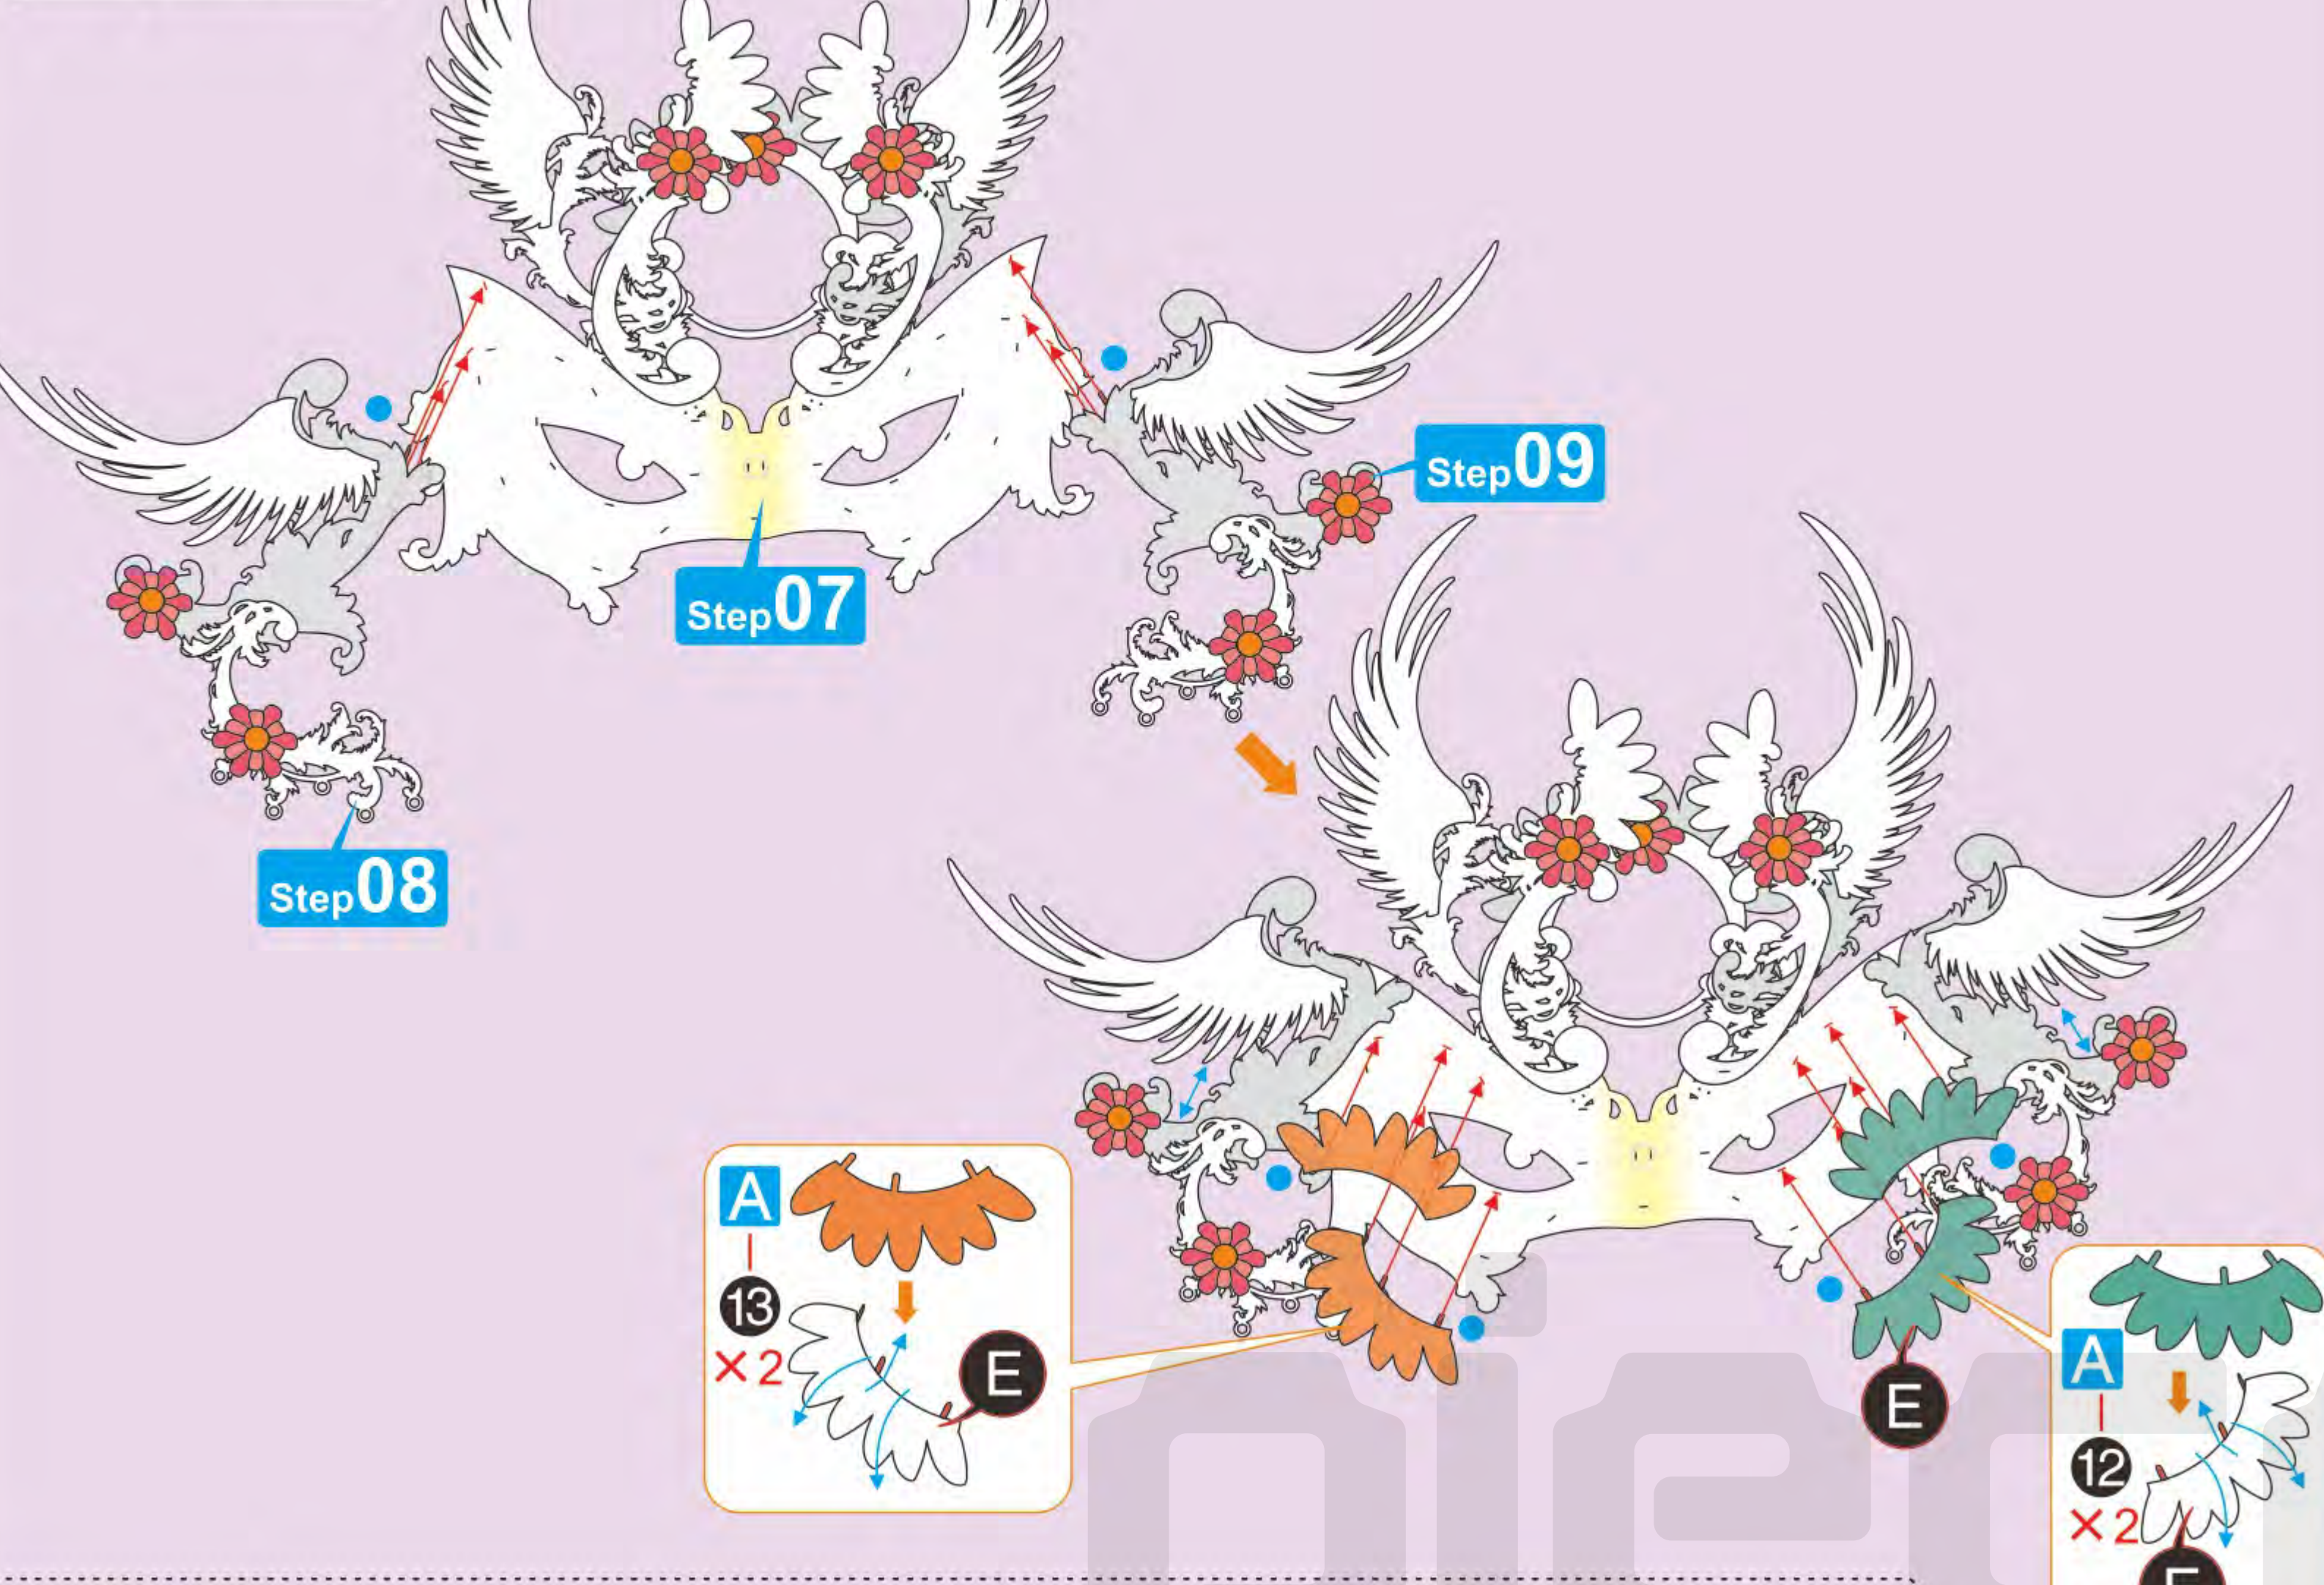


# Step 14

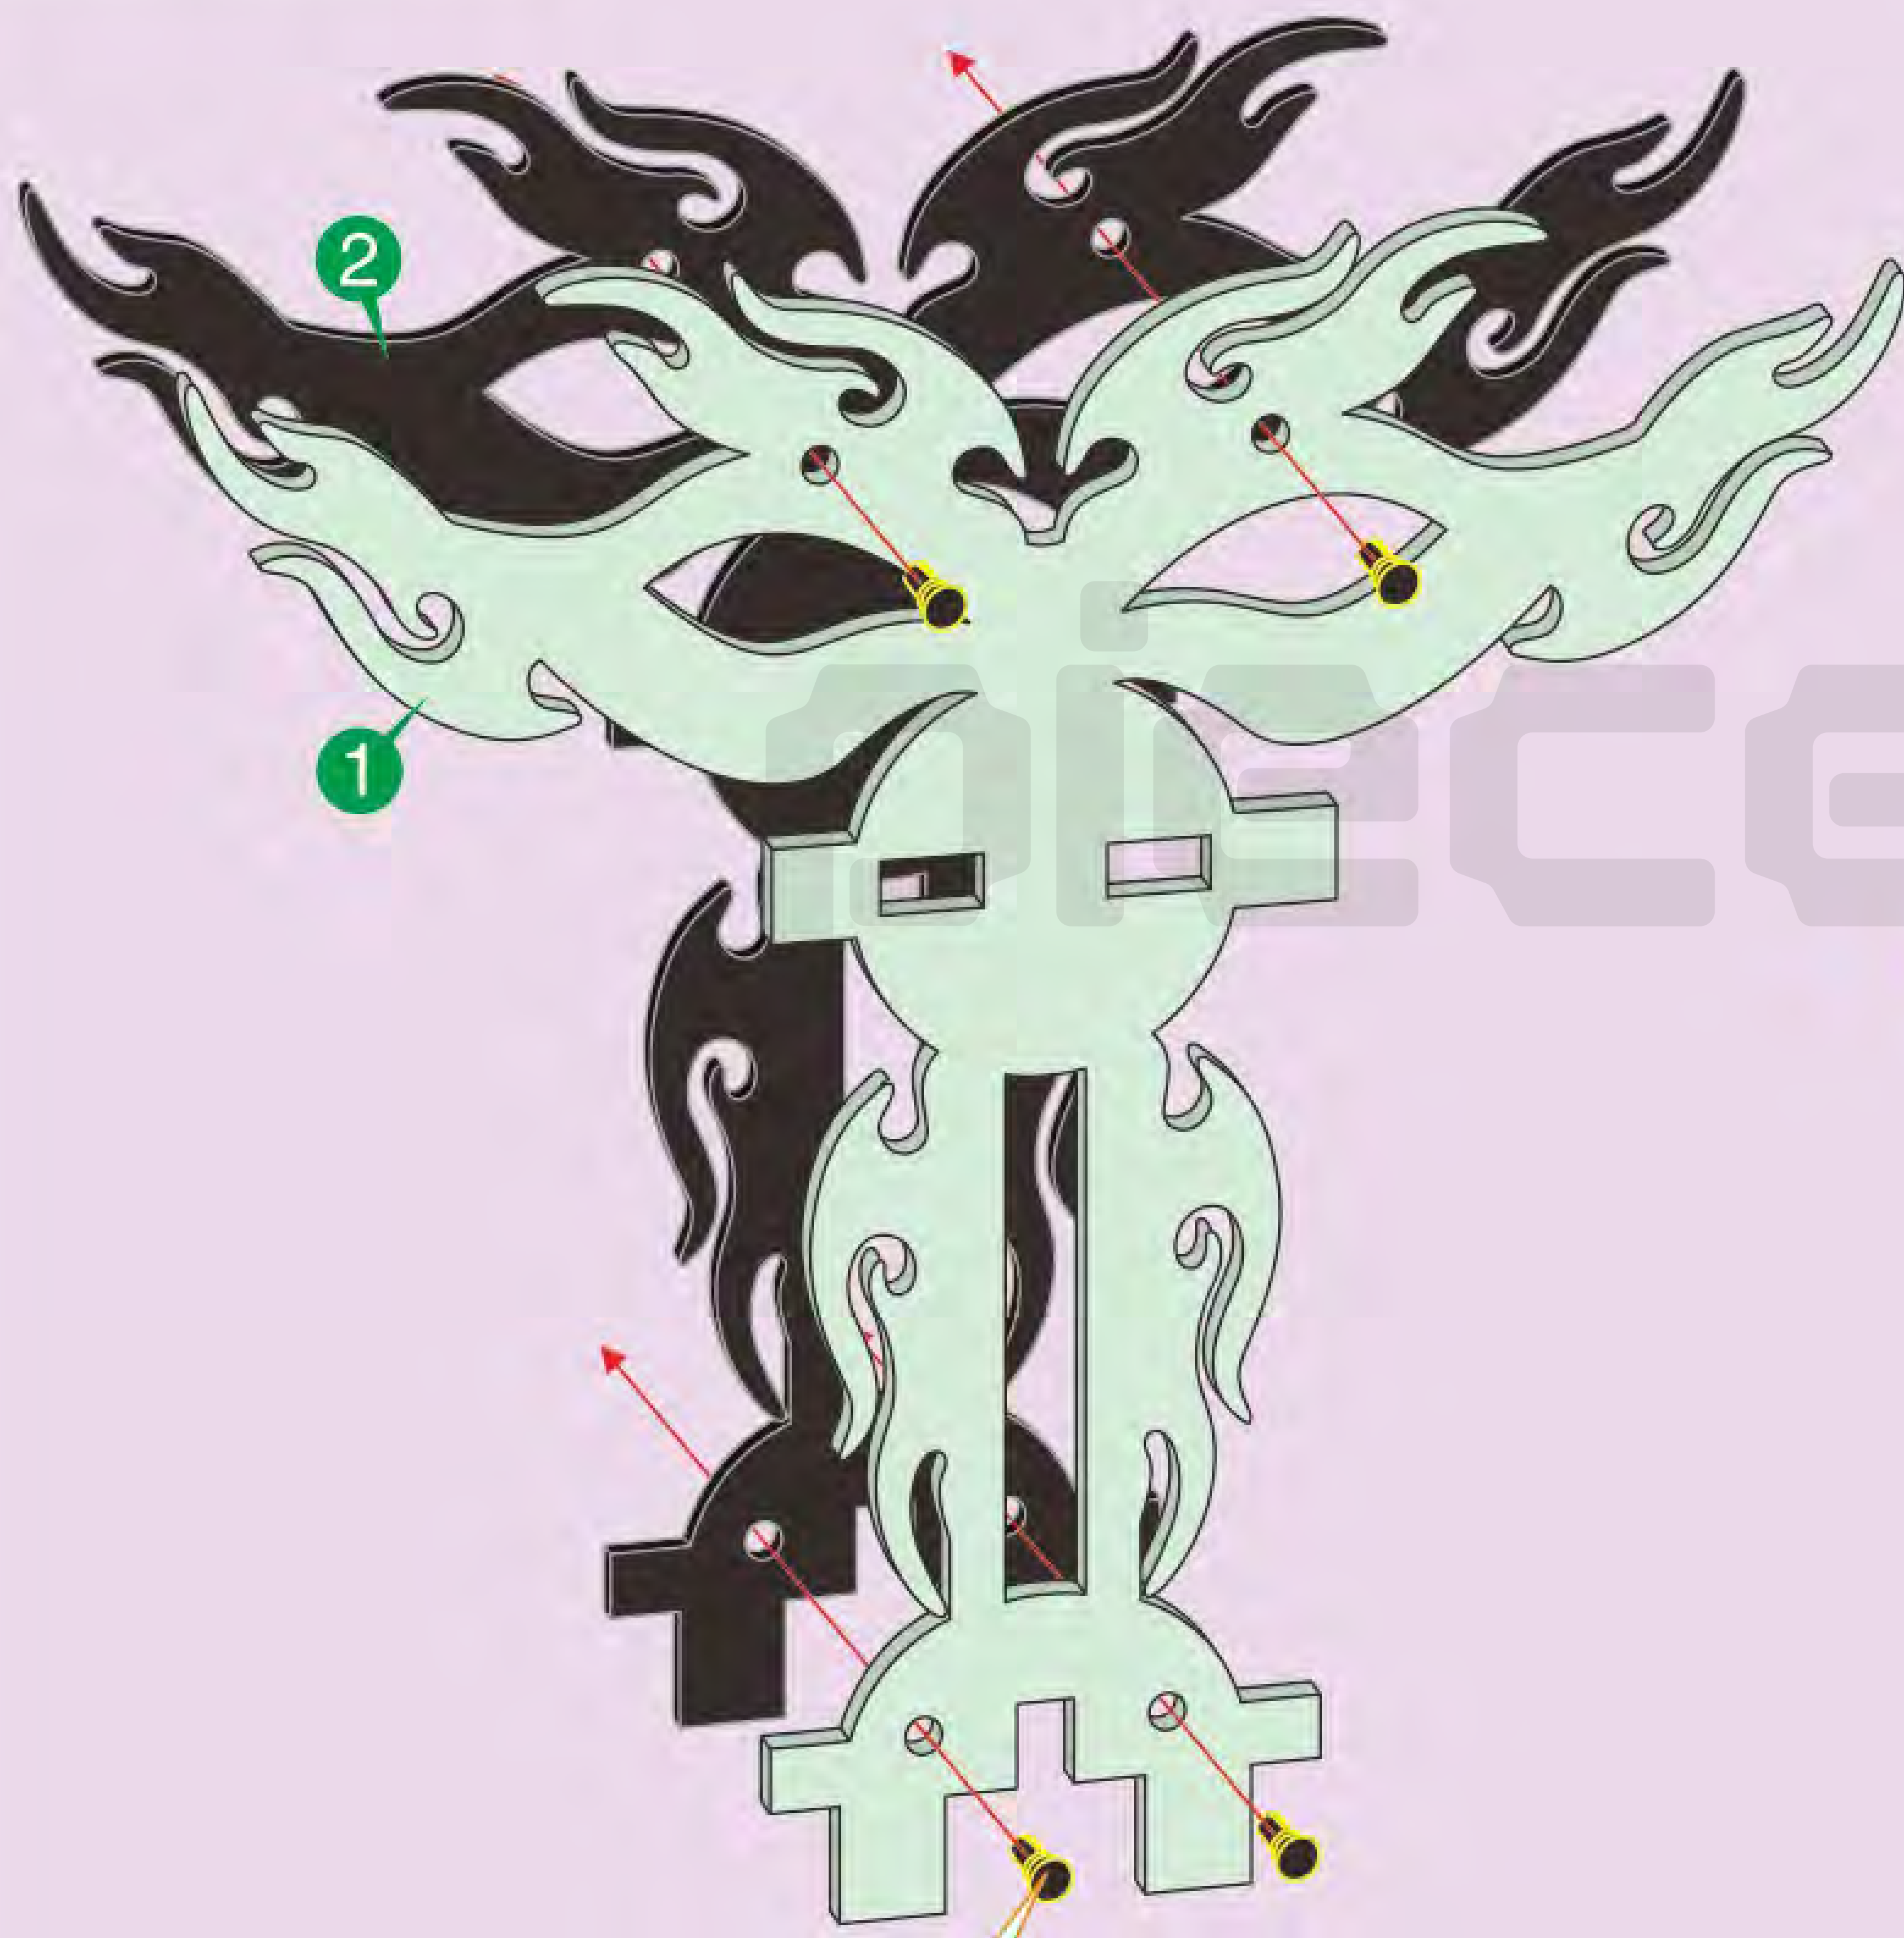

Black Nylon Rivets X4

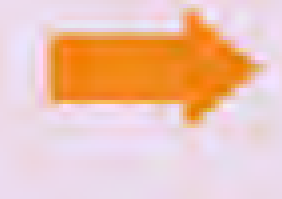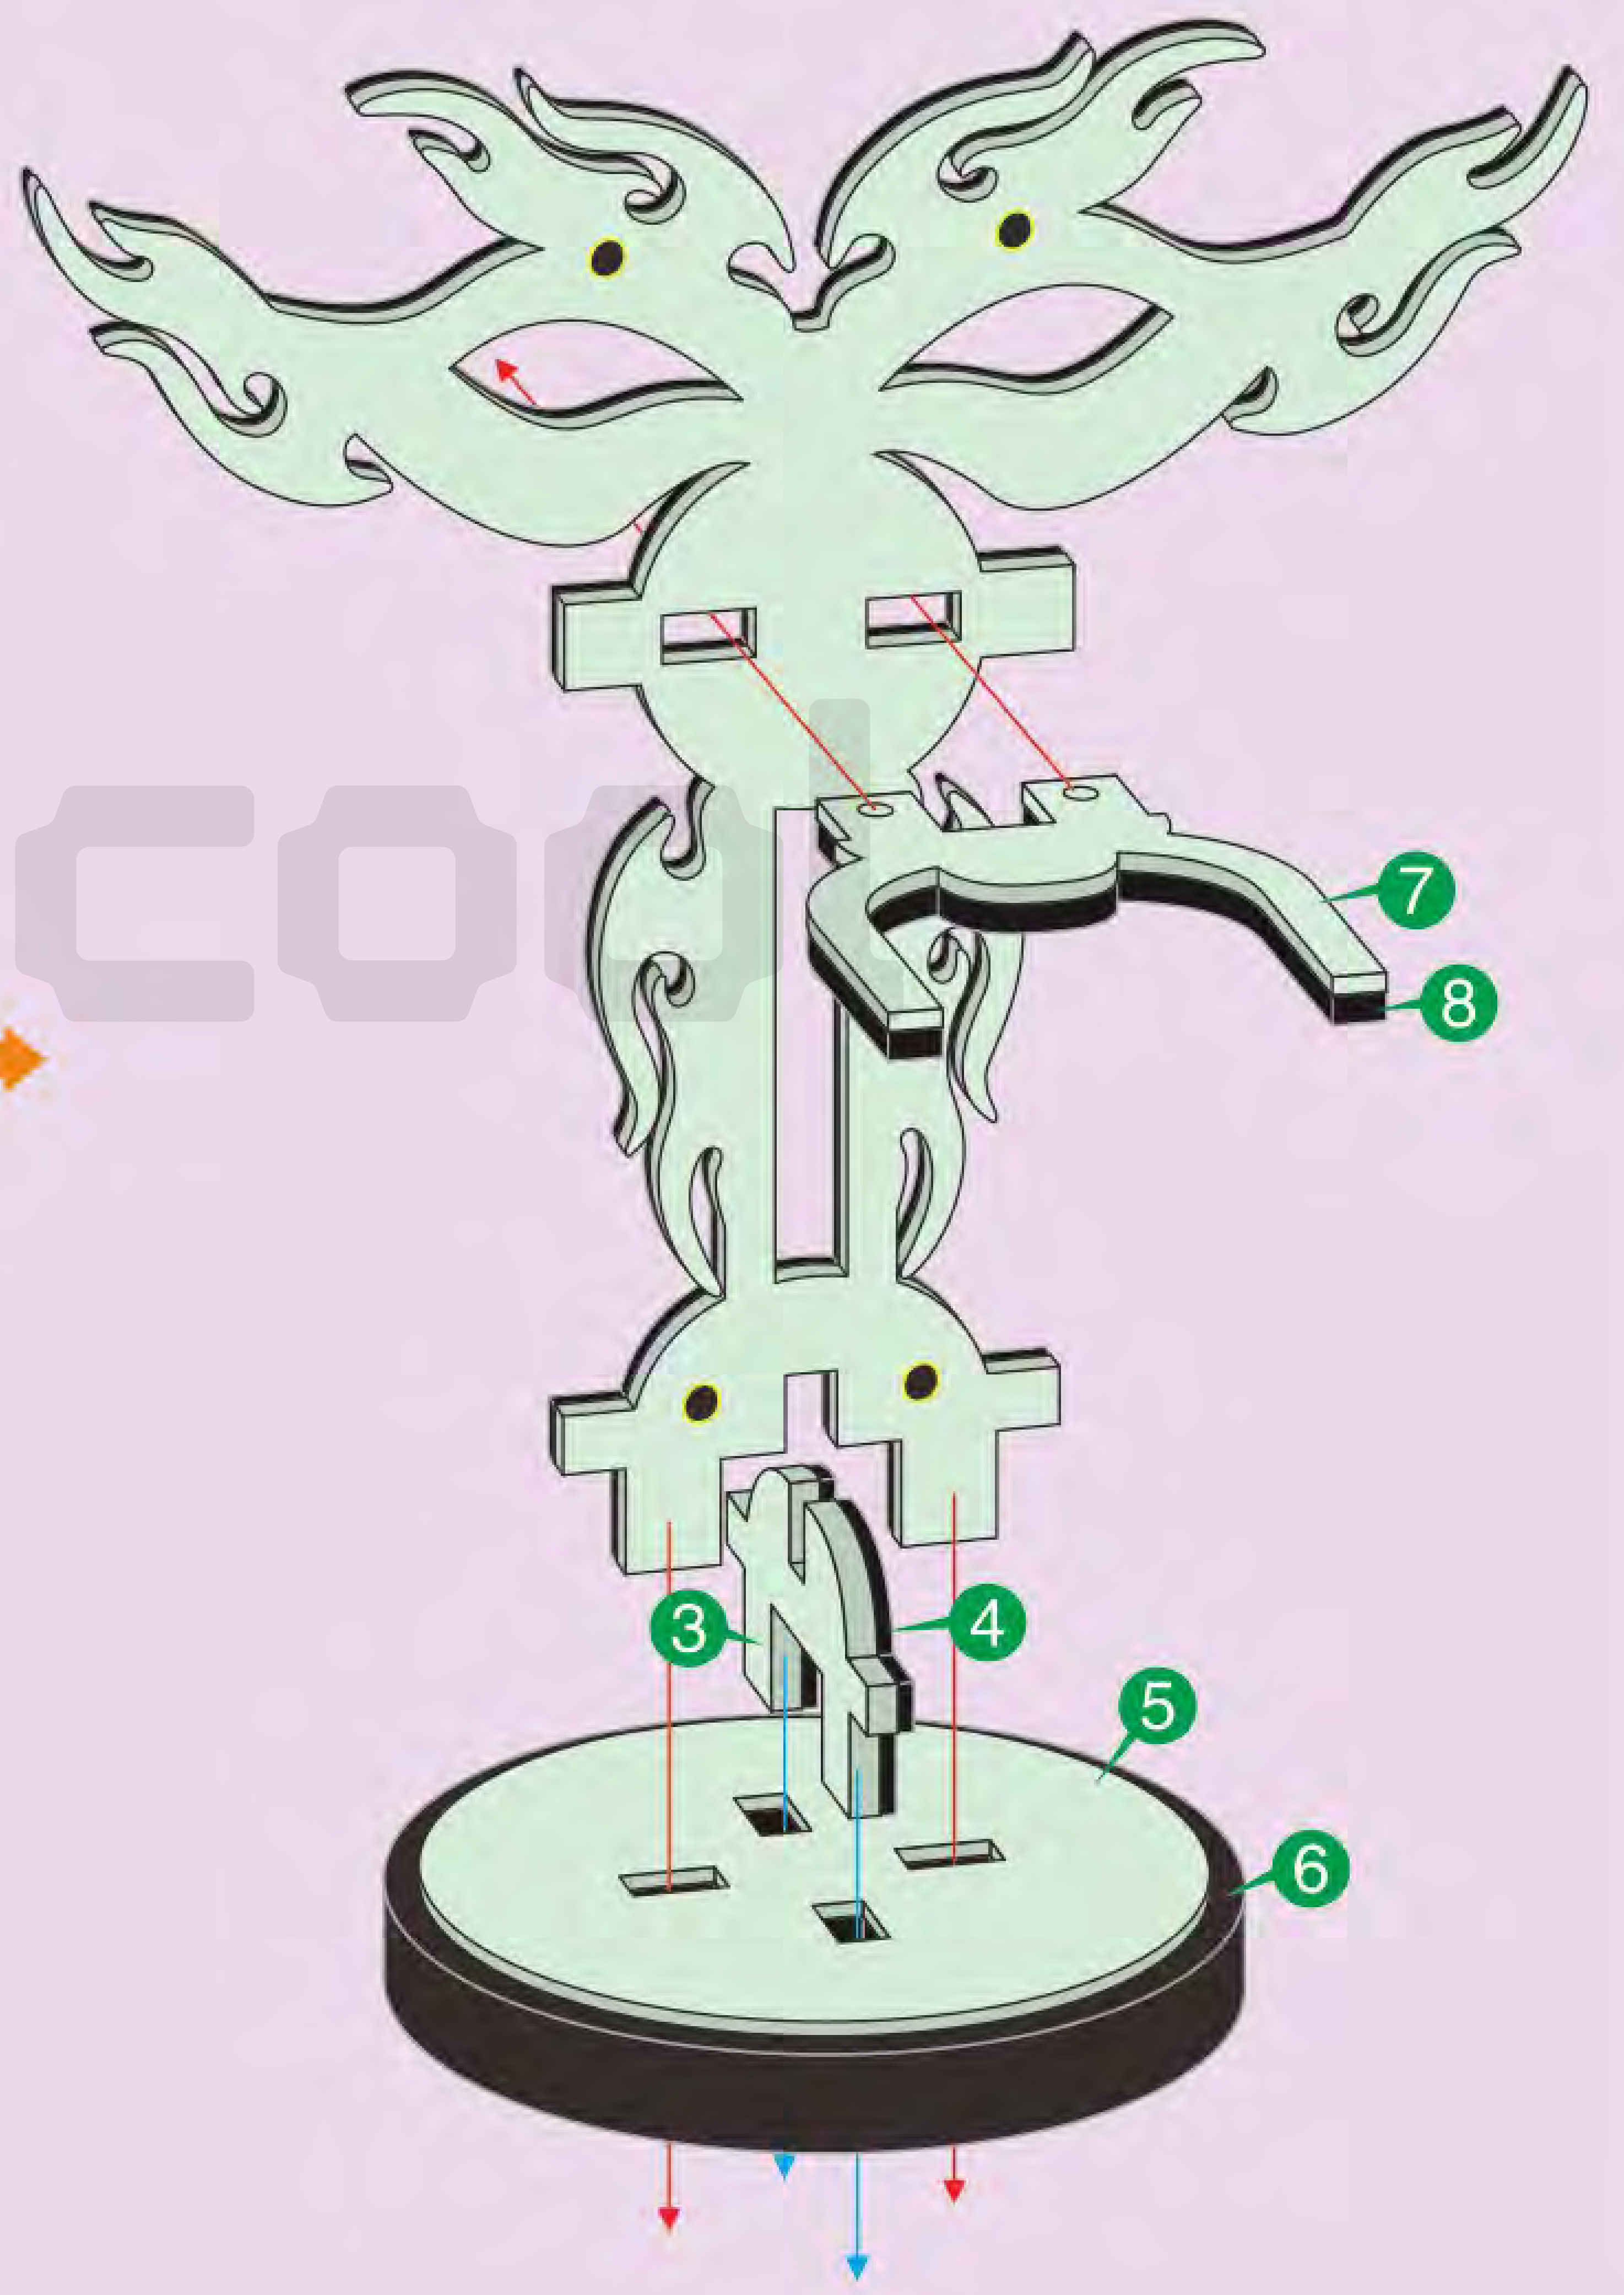

Black Nylon Rivets X2

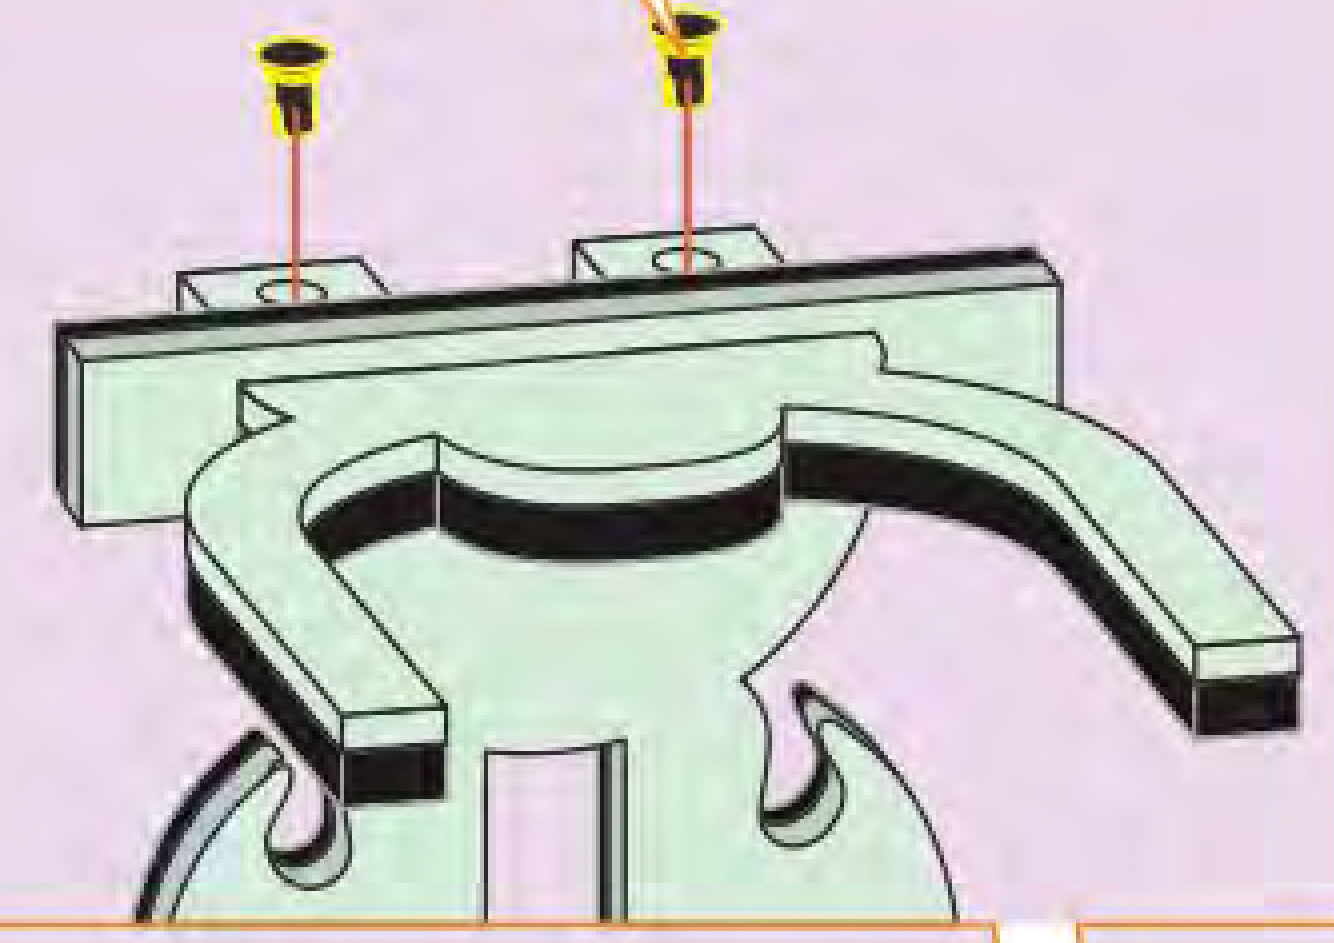

# Step 13

